




IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.

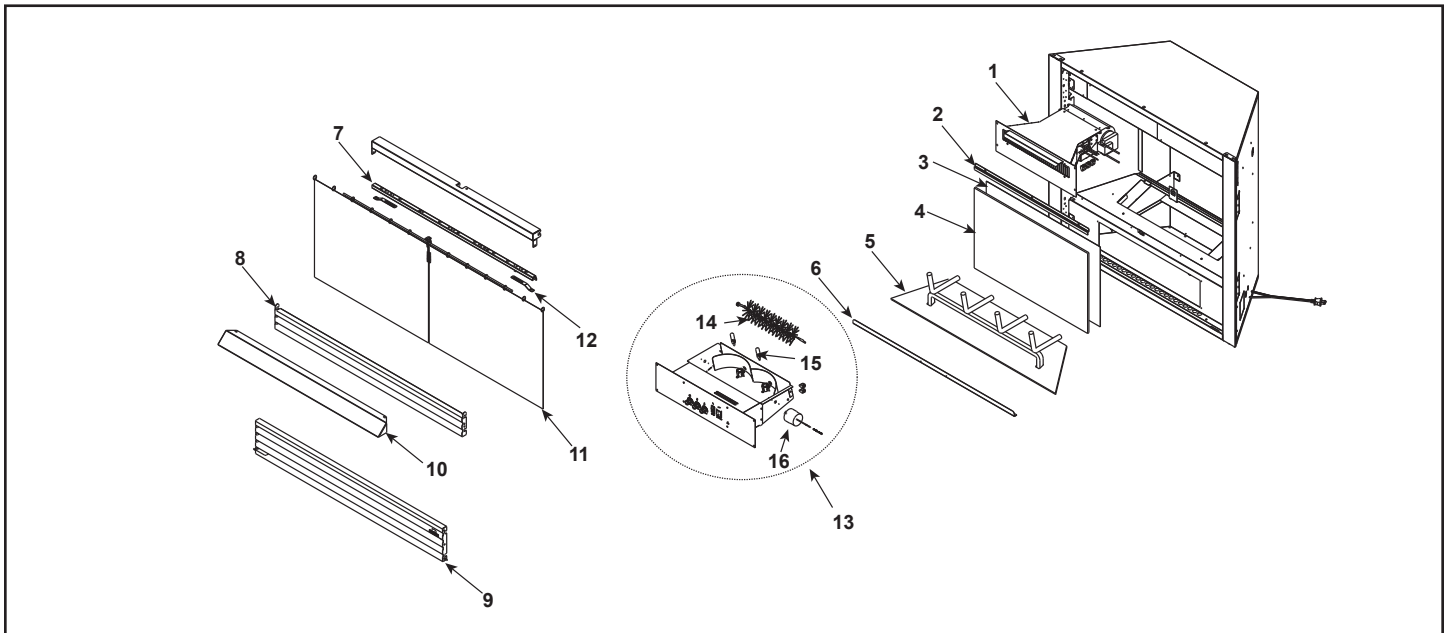

**Stocked
at Depot**

ITEM	DESCRIPTION	COMMENTS	PART NUMBER	
	Electric Log Assembly	No longer available	4030-055	
1	120VAC Heater Assembly	No longer available	SRV4030-541	
	240VAC Heater Assembly	No longer available	SRV4030-539EV	
2	Upper Glass Retainer	No longer available	4030-218	
3	Lenticular Lens	No longer available	4030-840	
4	Acrylic Panel	No longer available	4038-810	
5	Grate/Ember Bed Assembly	No longer available	4030-091	
6	Rock Retainer	No longer available	4030-219	
7	Door Track	No longer available	4030-321	
8	Top Grille Assembly	No longer available	4030-048	
9	Black Louver Assembly	No longer available	4030-047	
10	Hood	No longer available	4030-530	
11	Screen & Rod Assembly	No longer available	4030-050	
12	Door Pivot Clip		SRV31527	
13	Light Tray Assembly	No longer available	SRV-020	
14	Flame Element Kit	No longer available	4030-200	
15	Halogen Light	Qty. 2 req.	33961	Y
16	Motor w/Vinyl Cover Assembly	No longer available	4030-883	
	Light Shield	No longer available	4030-108	
	ON/OFF Switch Assembly	No longer available	4030-847	
	Reflective Flame Decal	No longer available	4021-190	
	Shoulder Screw	Pkg of 25	501-836-25	Y
	Installation Manual		4030-155	