



MOBILE SHOTBLASTER ELEPHANT OWNER'S MANUAL AND PARTS BOOK




SPECIFICATIONS

ELEPHANT	
Dimensions	
Working Width, mm (in)	200 (8)
Overall Width, mm (in)	40 (16)
Overall Length, mm (in)	70-115 (28-45)
Overall Height, mm (in)	64-90 (25-35)
Weight	
Weight, kg (lb)	120 (264)
Power Source	
Power kw (HP)	3.6 (5)
Volts (V)	230
Frequency (Hz)	60
Amperage (A)	22

PARTS LIST - ELEPHANT SHOT BLASTER

ELEPHANT 230 V, 60 Hz, USA
(c) Contec GmbH 2016

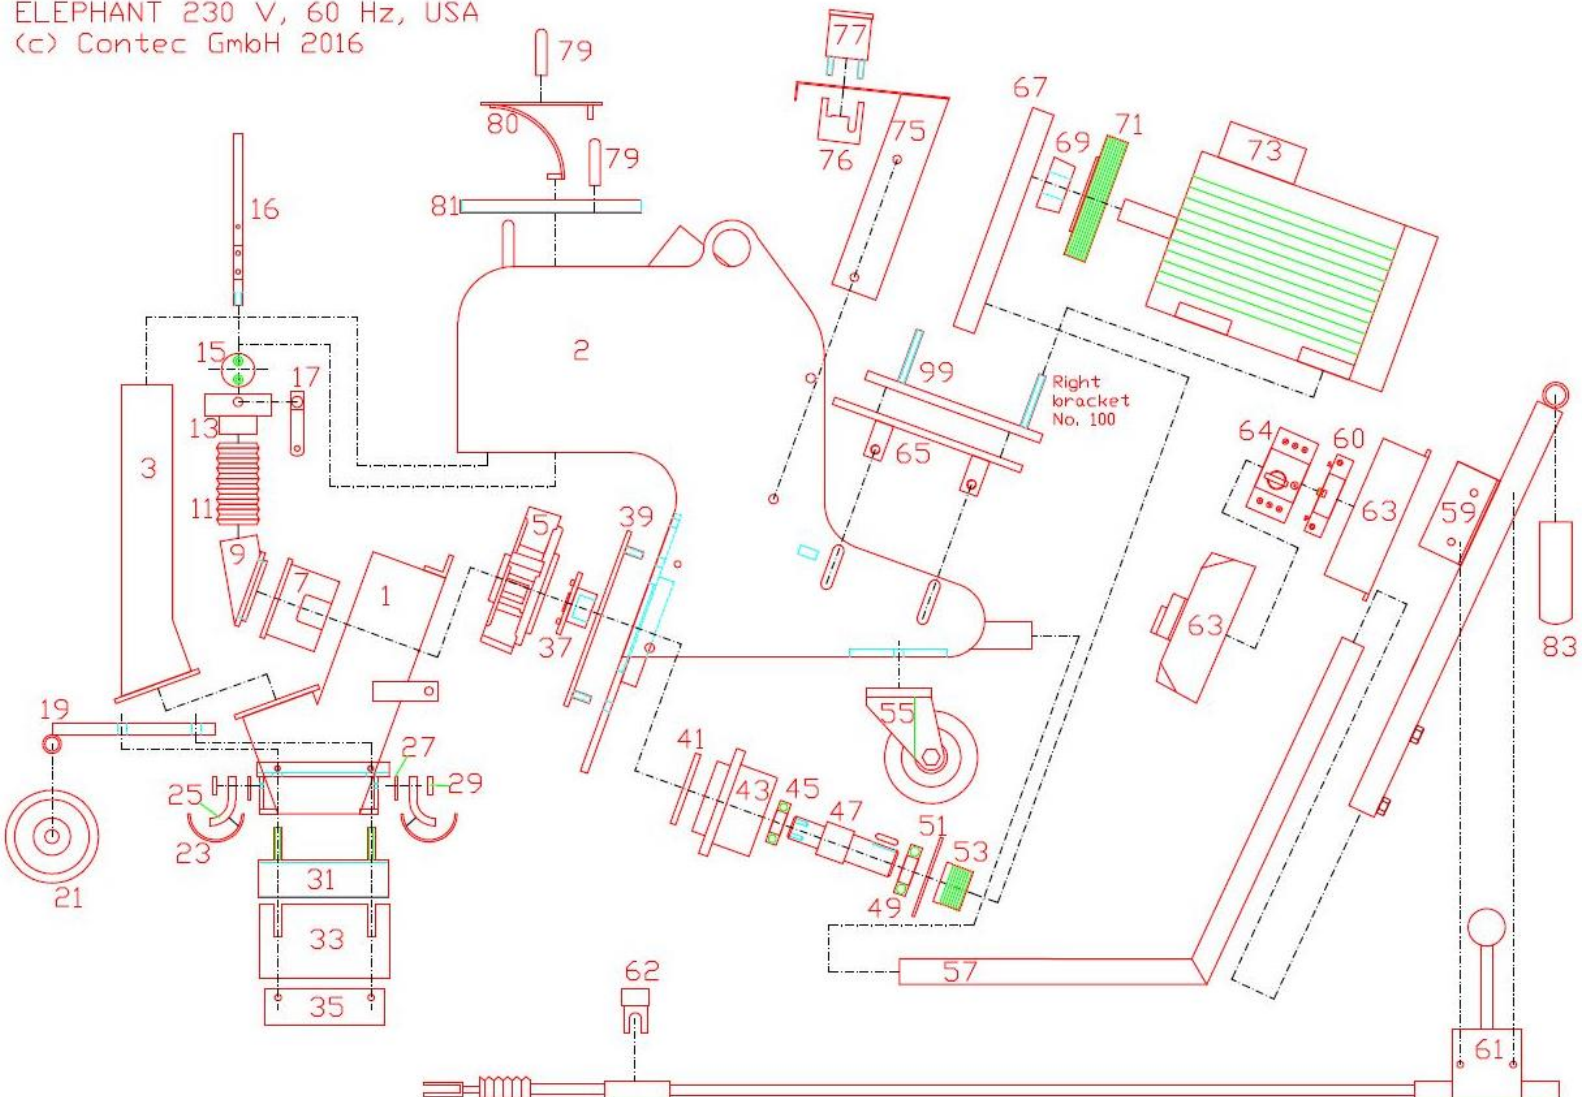

ELEPHANT SHOT BLASTER – PARTS LIST

Item #	Part #	Description	QTY	Remarks
1	8712100100	Blast Chamber	1	
2	8711100000	Machine Frame	1	
3	8712120100	Reclaim Chamber	1	
5	8730151900	Blast Wheel	1	
7	8730151702	Shot Cage	1	
9	8731100300	Shot Enter Pipe	1	
11	8770254001	Shot Hose	1	
13	8731140302	Shot Valve Pipe with Magnets	1	
15	8731100307	Shot Valve Lid	1	
16	8731100306	Shot Valve Axis	1	
17	8731100301	Shot Valve Lever	1	
19	8731201332	Front Wheel Axis	1	
21	8780201040	Front Wheel	1	
23	8731100801	Back or Front Skirt half Pipe	2	
25	8771230801	Back Skirt Rubber front/rear	2	
27	8771230802	Rubber for Skirt front/rear	2	
29	8731100702	Bracket for Skirt front/back	2	
31	8731100600	Magnetic Frame Left/Right	2	
33	8772238006	Rubber Sealing Magnets	2	
35	8731100901	Bracket for Rubber Sealing	2	
37	8731171005	Blast Wheel Socket	1	
39	8712120200	Lining Blast Chamber	1	
41	8731171002	Plate Bearing Housing Wheel	1	
43	8731171001	Bearing Housing	1	
45	8761206305	Bearing	1	
47	8731171004	Turbine Axis	1	
49	8761206306	Bearing	1	
51	8731171003	Plate Bearing Housing Belt Drive	1	
53	8790240044	Pulley	1	
55	8780206260	Rear Caster	1	
57	8731100401	Bracket for Handle	1	
59	8731100500	Handle	1	
60	8751203004US	Low Voltage Protective	1	
61	8790200010	Control Lever	1	
62	8790200001	Bracket for Control Lever	1	
63	8751101000	Switch Box	1	
64	875110025US	Motor Protective	1	
65	8731101200	Motor Plate	1	
67	8770240864US	Poly-V Belt	1	
69	879024161028	Taper Bush	1	
71	8790241125US	Pulley	1	
73	8755030350	Motor	1	



75	8731101000	Belt Drive Cover	1	
76	8751203000	Cover for Amp meter	1	
77	8751203025	Amp meter	1	
79	8790215016	Handle	2	
80	8731100100	Shot Compartment Lit	1	
81	8731100105	Sieve	1	
83	7870-1-6-0	Rubber Grip	2	
99	8731101101	Bracket left	1	
100	8731101102	Bracket right	1	

ELECTRICAL DIAGRAM – ELEPHANT SHOT BLASTER

