



SAFETY, OPERATION, MAINTENANCE, & PARTS MANUAL MC250 Curbilder



Parts Listing

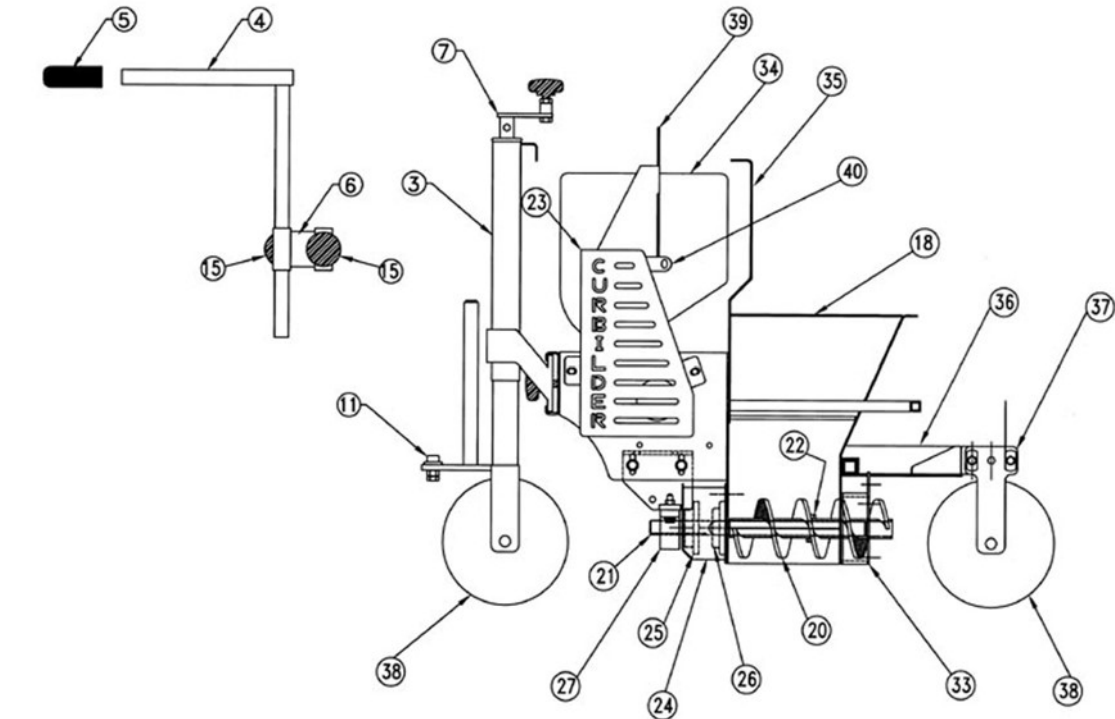

Side View

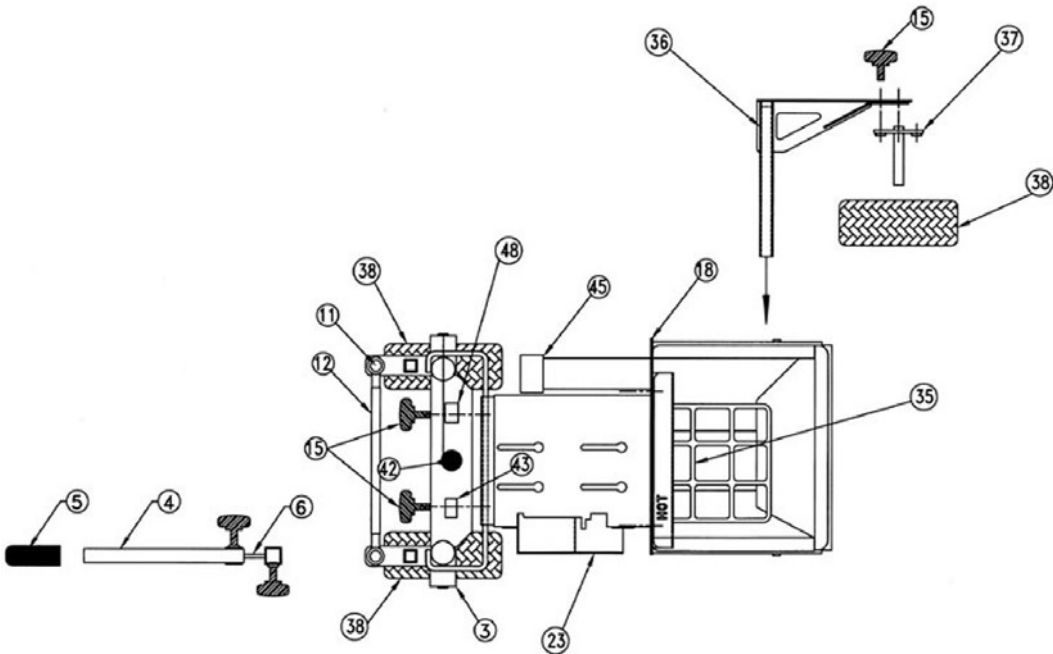

Top View

ITEM	PART DESCRIPTION	PART NO.	QTY
1	OPEN	OPEN	—
2	OPEN	OPEN	—
3	JACK ASS'Y WELDMENT	48202-2	1
4	STEERING HANDLE WELDMENT	48202-13	1
5	HAND GRIP	CG0100	1
6	STEERING HANDLE MOUNTING CLAMP	48202-18	1
7	CRANK ARM WELDMENT	48202-22	2
8	OPEN	--	—
9	OPEN	--	—
10	OPEN	--	—
11	TIE ROD ENDS	45059-04	2
12	TIE ROD	48202-28	1
13	OPEN	--	—
14	OPEN	--	—
15	KNOB	48200-26	7
16	OPEN	--	—
17	OPEN	--	—
18	MAIN FRAME WELDMENT	48201-1	1
19	OPEN	--	—
20	4" STEEL AUGER	48203-2	1
21	AUGER SHAFT	48203-7	1
22	SHEAR BOLT	48203-8	1
23	BELT GUARD WELDMENT	48204-2	1
24	CHAIN GUARD WELDMENT	48206-2	1
25	SPROCKET	48200-20	1
26	4-BOLT FLANGE BEARING	48200-19	1
27	2-BOLT PILLOW BLOCK BEARING	48200-23	1
28	TRANSMISSION MOUNT WELDMENT	48211-2	1
29	OPEN	--	—
30	OPEN	--	—

ITEM	PART DESCRIPTION	PART NO.	QTY
31	OPEN	OPEN	—
32	OPEN	OPEN	—
33	COMPACTION TUBE WELDMENT	48207-2	1
34	HONDA 4HP ENGINE	48200-21	1
35	ENGINE COVER WELDMENT	48209-2	1
36	REAR WHEEL ARM WELDMENT	48210-2	1
37	REAR WHEEL SUPPORT WELDMENT	48210-8	1
38	WHEEL	48200-14	3
39	LIFTING BAIL WELDMENT	48208-2	1
40	LIFTING BAIL ATTACHM'T BRACKET	48208-6	1
41	TIE ROD ENDS	45059-04	2
42	EMERGENCY STOP SWITCH ASS'Y	48200-2	1
43	HOURLY METER	48200-7	1
44	LANDSCAPE CURBER MANUAL	48200-8	1
45	MANUAL CANNISTER ASSEMBLY	44108-01	7
46	MANUAL CANNISTER PLUG	44108-05	2
47	MANUAL CANNISTER CLAMP	44108-06	2
48	LEVEL ASS'Y	48200-28	1
	BELT	48200-13	1
	INPUT SHEAVE	48200-15	1
	GEARBOX	48200-16	1
	OUTPUT SPROCKET	48200-18	1
	CHAIN	48200-27	1
	CLUTCH	48200-22	1
	HOURLY METER	48200-07	1
	WIRING HARNESS	48200-33	1
DECAL LIST			
	DESCRIPTION	PART NO.	QTY
	EMISSIONS DECAL	DE1700	1
	"MILLER" LABELS	40111-03	3
	"INSTRUCTIONS" LABEL	44103-24	1
	"DANGER AUGER" LABEL	DE0100	1
	"NO OIL" LABEL	DE2100	1

