



# HOMEOWNER'S CARE AND OPERATION INSTRUCTIONS



DR-500 MODEL SHOWN

RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE



OMNI-Test Laboratories, Inc.

OTL Report No. 116-F-13-4

**WARNING: IF THE INFORMATION IN THIS MANUAL IS NOT FOLLOWED EXACTLY, A FIRE OR EXPLOSION MAY RESULT CAUSING PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OF LIFE.**

**FOR YOUR SAFETY:** Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

**FOR YOUR SAFETY:** What to do if you smell gas:

- DO NOT light any appliance.
  - DO NOT touch any electrical switches.
  - DO NOT use any phone in your building.
  - Immediately call your gas supplier from a neighbor's phone.
- Follow your gas suppliers instructions.
- If your gas supplier cannot be reached, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.

## DIRECT-VENT 500/600/800 SERIES

VENTED GAS FIREPLACE HEATERS - DIRECT VENT MODELS  
P/N 725,032M REV. H 11/2004

### MODELS

#### Millivolt Models

D-500CMN	DT-600CMP
D-500CMP	DR-600CMN
DT-500CMN	DR-600CMP
DT-500CMP	D-800CMN
DR-500CMN	D-800CMP
DR-500CMP	DT-800CMN
D-600CMN	DT-800CMP
D-600CMP	DR-800CMN
DT-600CMN	DR-800CMP

#### Electronic Models

D-500CEN	DT-600CEP
D-500CEP	DR-600CEN
DT-500CEN	DR-600CEP
DT-500CEP	D-800CEN
DR-500CEN	D-800CEP
DR-500CEP	DT-800CEN
D-600CEN	DT-800CEP
D-600CEP	DR-800CEN
DT-600CEN	DR-800CEP

**AVERTISSEMENT: ASSUREZ-VOUS DE BIEN SUIVRE LES INSTRUCTIONS DONNÉ DANS CETTE NOTICE POUR RÉDUIRE AU MINIMUM LE RISQUE D'INCENDIE OU POUR ÉVITER TOUT DOMMAGE MATÉRIEL, TOUTE BLESSURE OU LA MORT.**

**POUR VOTRE SÉCURITÉ:** Ne pas entreposer ni utiliser d'essence ni d'autre vapeurs ou liquides inflammables dans le voisinage de cet appareil ou de tout autre appareil.

**POUR VOTRE SÉCURITÉ:** Que faire si vous sentez une odeur de gaz:

- Ne pas tenter d'allumer d'appareil.
- Ne touchez à aucun interrupteur. Ne pas vous servir des téléphones se trouvant dans le bâtiment où vous vous trouvez.
- Evacuez la pièce, le bâtiment ou la zone.
- Appelez immédiatement votre fournisseur de gaz depuis un voisin. Suivez les instructions du fournisseur.
- Si vous ne pouvez rejoindre le fournisseur de gaz, appelez le service des incendies.

L'installation et service doit être exécuté par un qualifié installateur, agence de service ou le fournisseur de gaz.

## REPLACEMENT PARTS LIST

No.	DESCRIPTION	D, DT, DR-500		D, DT, DR-600		D, DT, DR-800	
		Part No.	Qty.	Part No.	Qty.	Part No.	Qty.
	Gas Fireplace Assembly	-	-	-	-	-	-
1.	Hood	LB-91941BZ	1	LB-91941CZ	1	LB-91941DZ	1
2.	Louver	LB-92400BZ	7	LB-92400CZ	7	LB-92400DZ	7
3.	Louver, (Base)	LB-92402BZ	1	LB-92402CZ	1	LB-92402DZ	1
4.	Enclosure, Glass Front (Complete)	LB-92534B	1	LB-92534C	1	LB-92534D	1
5.	Nameplate (Brand)	56L9301	1	56L9301	1	56L9301	1
6.	Latch	69L2101	2	69L2101	2	69L2101	2
7.	Catch, Door, Magnetic	69L3101	1	69L3101	1	69L3101	1
8.	Log Set (Complete)	69L6901	1	69L7701	1	74L3001	1
9.	Burner Assembly	69L0901	1	69L1001	1	69L1101	1
10.	Burner Bracket	LB-92357	3	LB-92357	3	LB-92357	3
11.	Ember Screen	LB-92438B	1	LB-92438C	1	LB-92438D	1
12.	Log Grate Assembly	LB-92406B	1	LB-92406C	1	LB-92406D	1
13.	Orifice, Main Burner - <b>Nat. Gas</b>	37L7001	1	18L4001	1	99K7701	1
13.	Orifice, Main Burner - <b>LP Gas</b>	99K9701	1	LB-55874D	1	74L8801	1
14.	Bag of Embers (Rockwool)	88L53	1	88L53	1	88L53	1
15.	Bag of Decorative Volcanic Stone	80L42	1	80L42	1	80L42	1
16.	Gas Line Flexible Connector	93L32	1	93L32	1	93L32	1
17.	Magnet	094326	1	094326	1	094326	1

### GAS CONTROLS — SIT MILLIVOLT

No.	DESCRIPTION	Natural		Propane	
		Part No.	Qty.	Part No.	Qty.
20.	Gas Valve - SIT	43K0701	1	88J5301	1
21.	Piezo Igniter	10K8601	1	10K8601	1
22.	Pilot Assembly	69L1701	1	69L1801	1
23.	Pilot Generator	60J7901	1	60J7901	1
24.	Thermocouple	74L5701	1	74L5701	1
25.	Pilot Tube	74L5601	1	74L5601	1
26.	Electrode And Cable	74L5801	1	74L5801	1
27.	Pilot Shield	LB-92706	1	LB-92706	1


### GAS CONTROLS — HONEYWELL MILLIVOLT

No.	DESCRIPTION	Natural		Propane	
		Part No.	Qty.	Part No.	Qty.
30.	Gas Valve	82L8601	1	82L8701	1
31.	Pilot Assembly	67L7001	1	67L7001	1
32.	Pilot Generator	60J7901	1	60J7901	1
33.	Thermocouple	67L6701	1	67L6701	1
34.	Pilot Tube	67L6801	1	67L6801	1
35.	Electrode And Cable	67L8701	1	67L8701	1
36.	Piezo Igniter	24M8901	1	24M8901	1
37.	Pilot Shield	LB-92706	1	LB-92706	1

### GAS CONTROLS — ELECTRONIC

No.	DESCRIPTION	Natural		Propane	
		Part No.	Qty.	Part No.	Qty.
40.	Gas Valve - Honeywell	62L1801	1	62L1901	1
41.	Pilot Assembly	62L1401	1	62L1501	1
42.	Transformer	42J3201	1	42J3201	1
43.	Ignitor Assembly (Kit)	87L54	1	87L54	1

REPLACEMENT PARTS

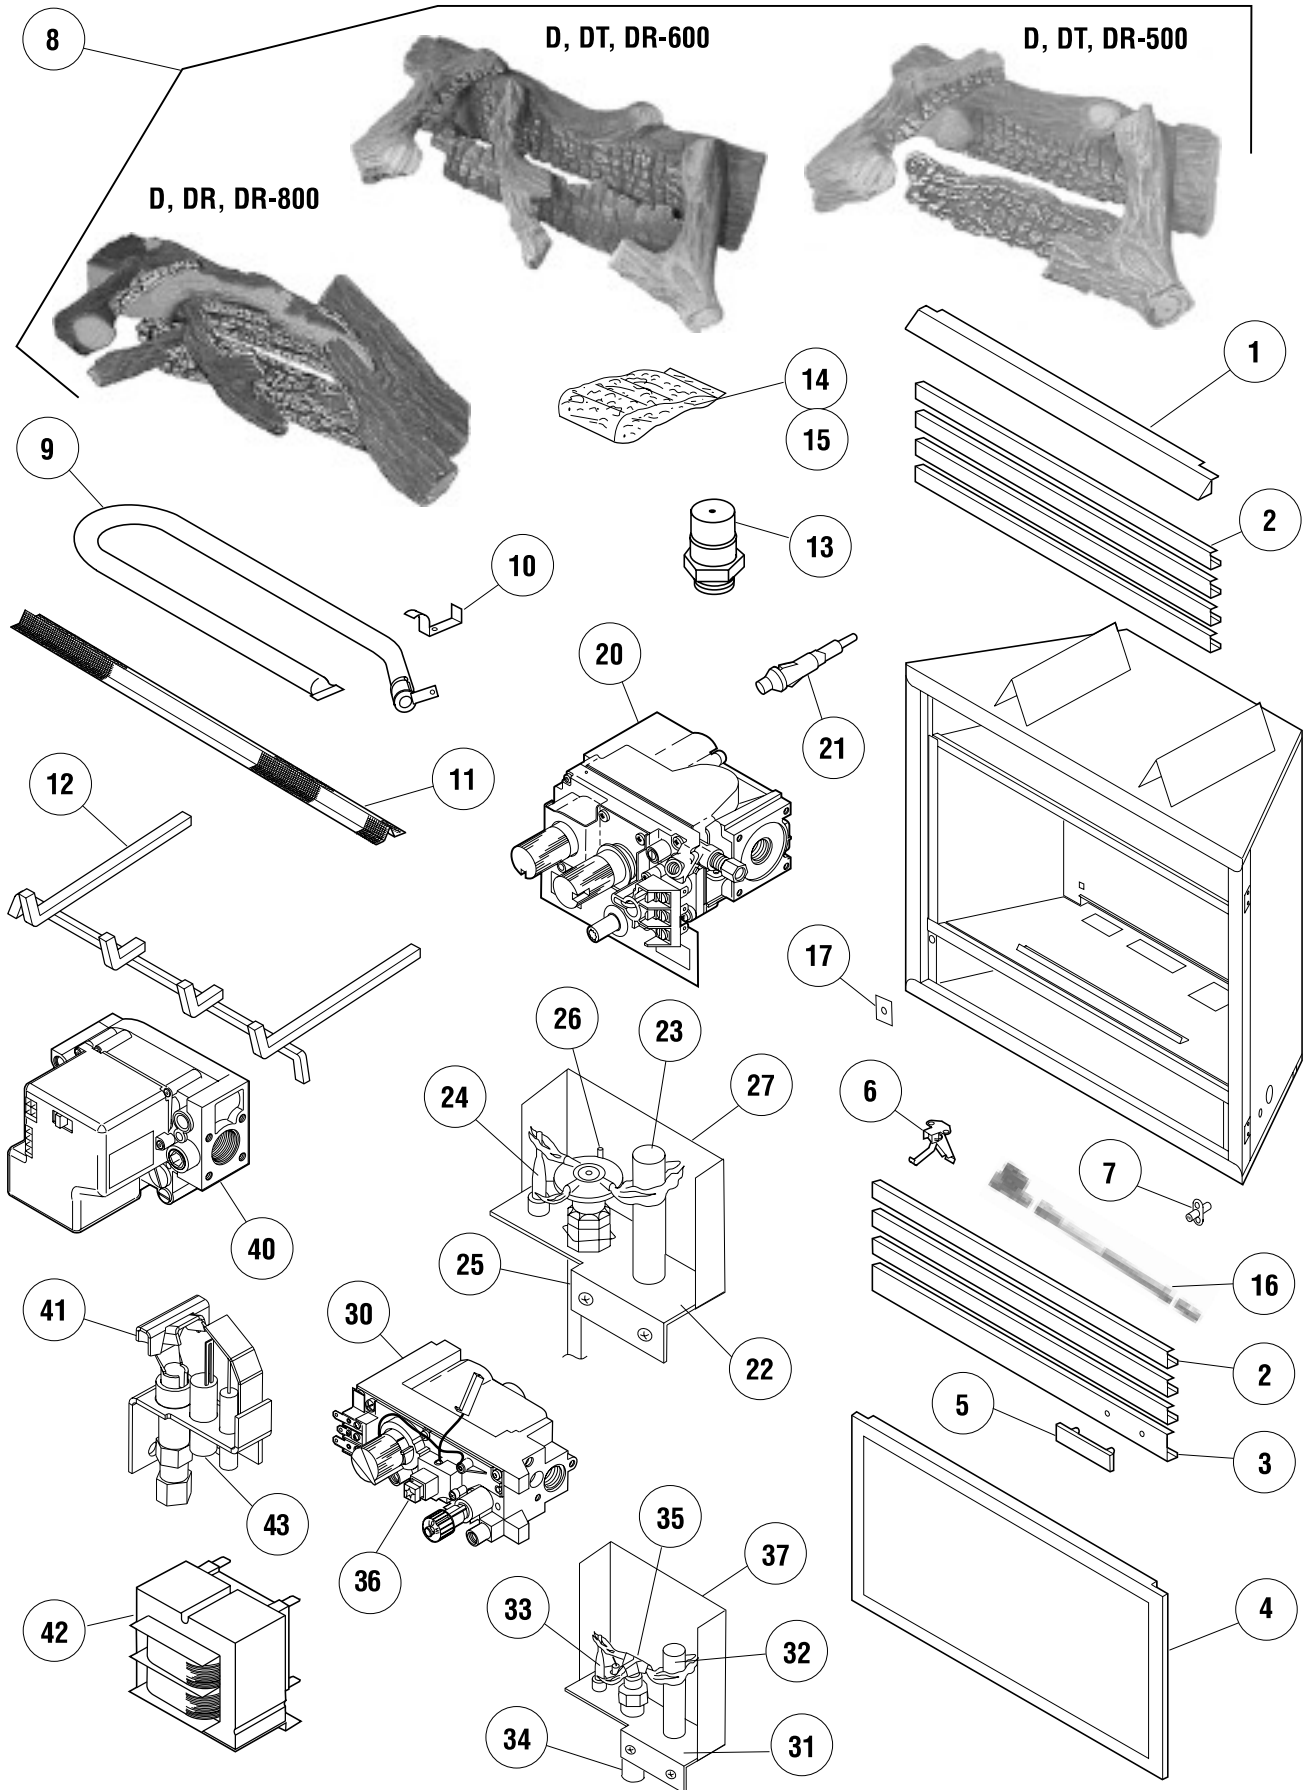

NOTE: DIAGRAMS & ILLUSTRATIONS NOT TO SCALE.