




IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.

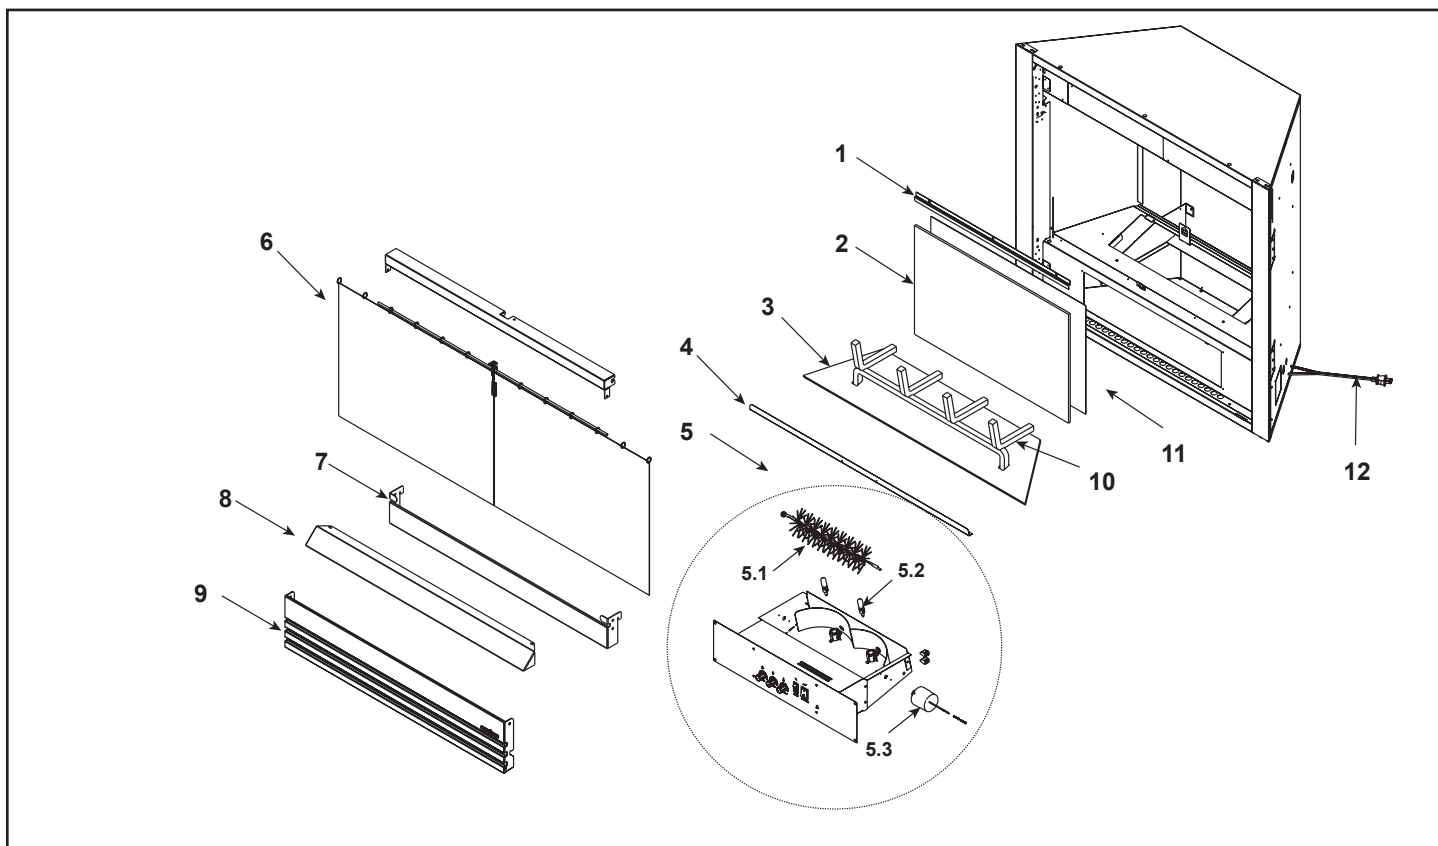

**Stocked
at Depot**

ITEM	DESCRIPTION	COMMENTS	PART NUMBER	
	Electric Log Assembly	No longer available	4030-258	
1	Upper Glass Retainer	No longer available	4030-218	
2	Acrylic Panel	No longer available	4038-810	
3	Molded Ember Bed	No longer available	4030-913	
4	Rock Retainer	No longer available	4030-219	
5	Light Tray Assembly	No longer available	SRV-020	
5	Flame Element Kit	No longer available	4030-200	
5	Halogen Light		33961	Y
5	Motor w/Vinyl Cover Assembly	No longer available	4030-883	
6	Screen & Rod Assembly	No longer available	4030-050	
7	Upper Grille Assembly	No longer available	4030-048	
8	Hood	No longer available	4030-530	
9	Lower Grille Assembly	No longer available	4030-047	
10	Grate	No longer available	4030-896	
11	Lenticular Lens	No longer available	4030-840	
12	Power Cord	No longer available	4030-018	
	Reflective Flame Decal	No longer available	4021-190	