


PARTNER

ConstructionParts.com

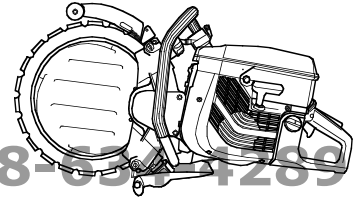

888-634-4289

IPL, K950 RING, 2006-07, 544 02 01-04

ConstructionParts.com

K950 RING

Reservdelar

Spare parts

Ersatzteile

Pieces de rechange

Piezas de repuesto

Ricambi

***Peças
sobresselente***

ConstructionParts.com

888-634-4289

544 02 01-04

PARTNER®


A

**506 28 11-01

K950 RING

ConstructionParts.com


888-634-4289

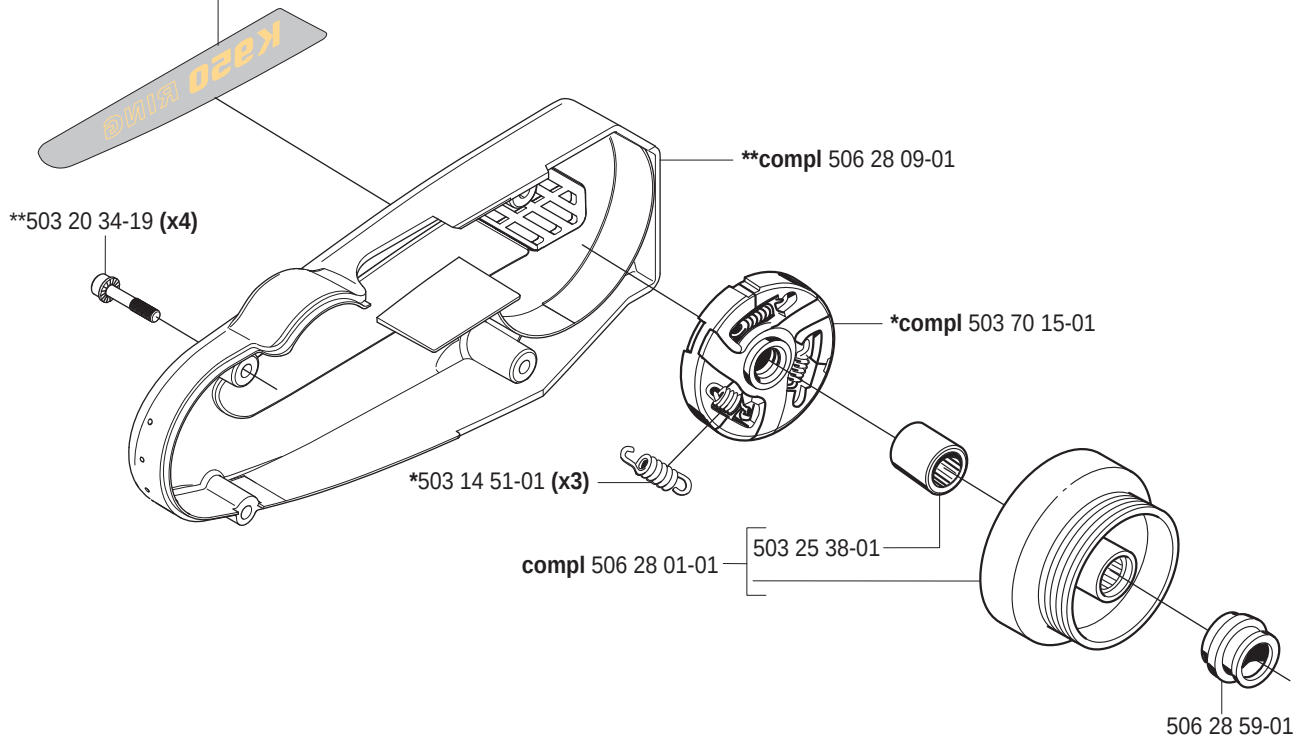

ConstructionParts.com

B


*compl 506 28 06-02

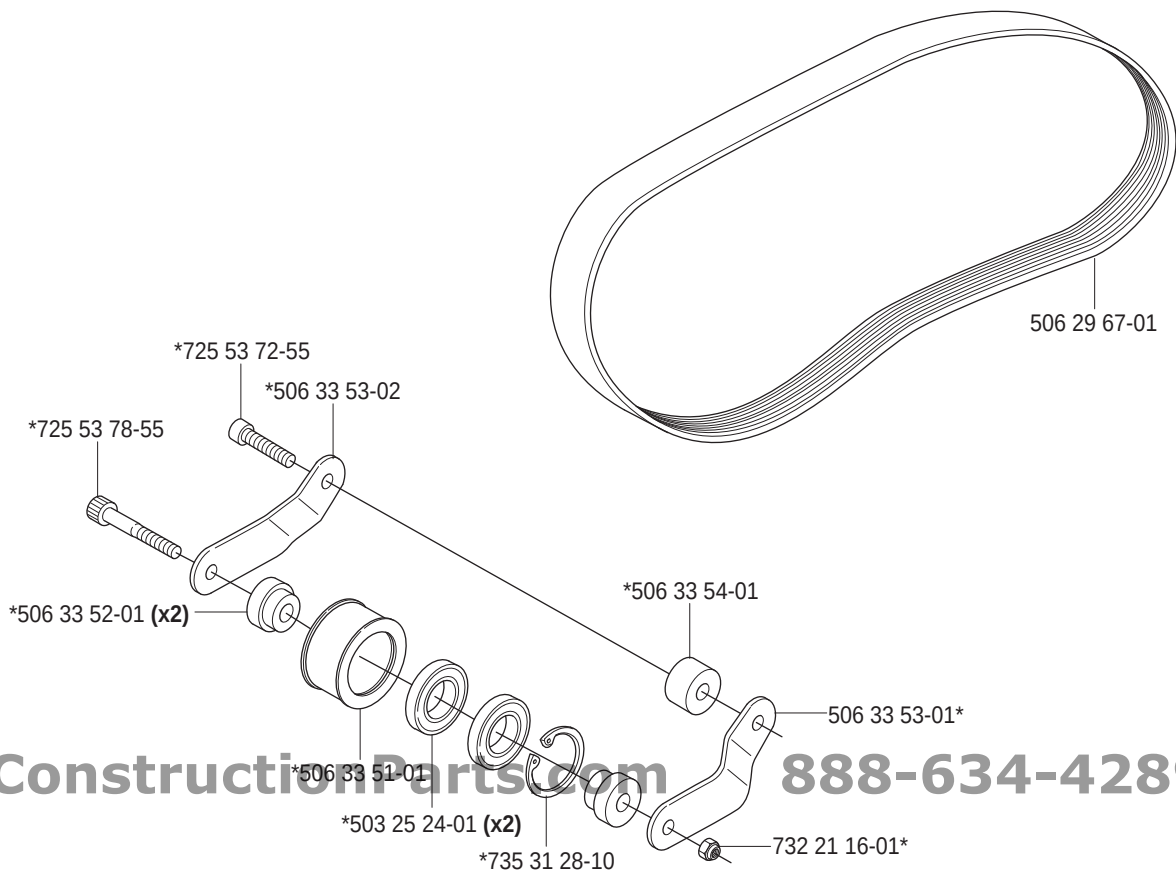


ConstructionParts.com

888-634-4289


C

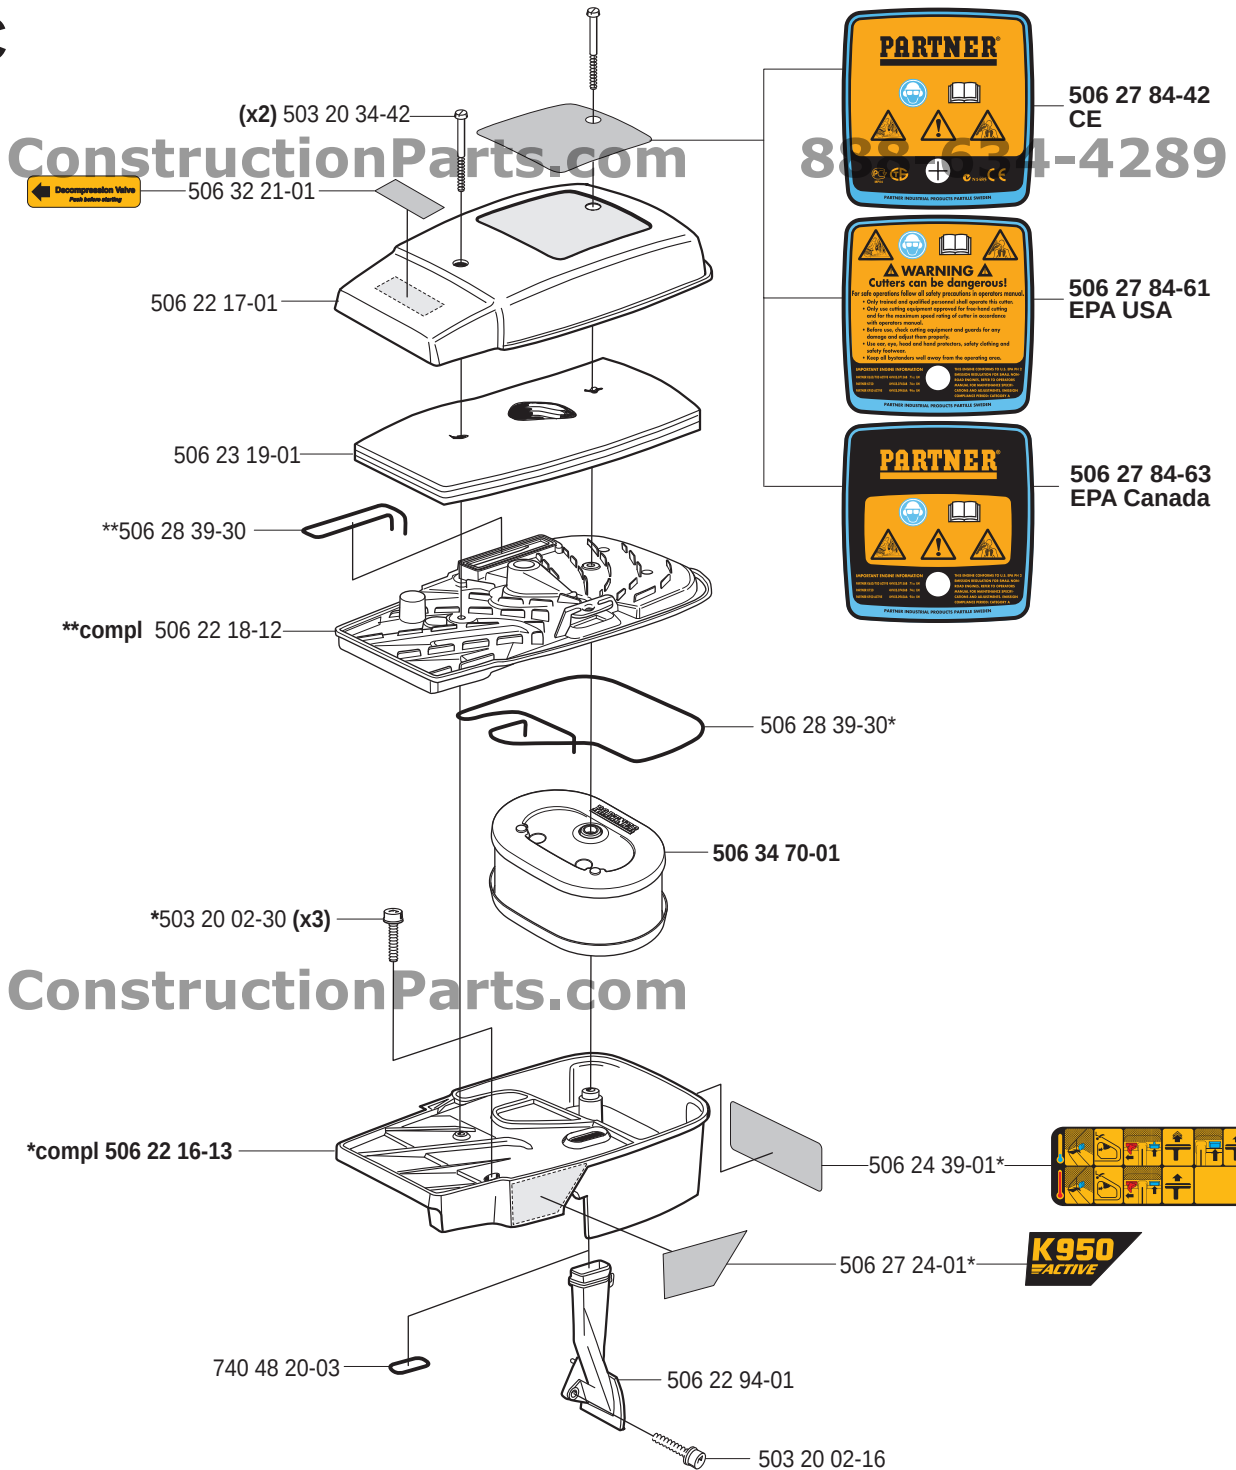


D

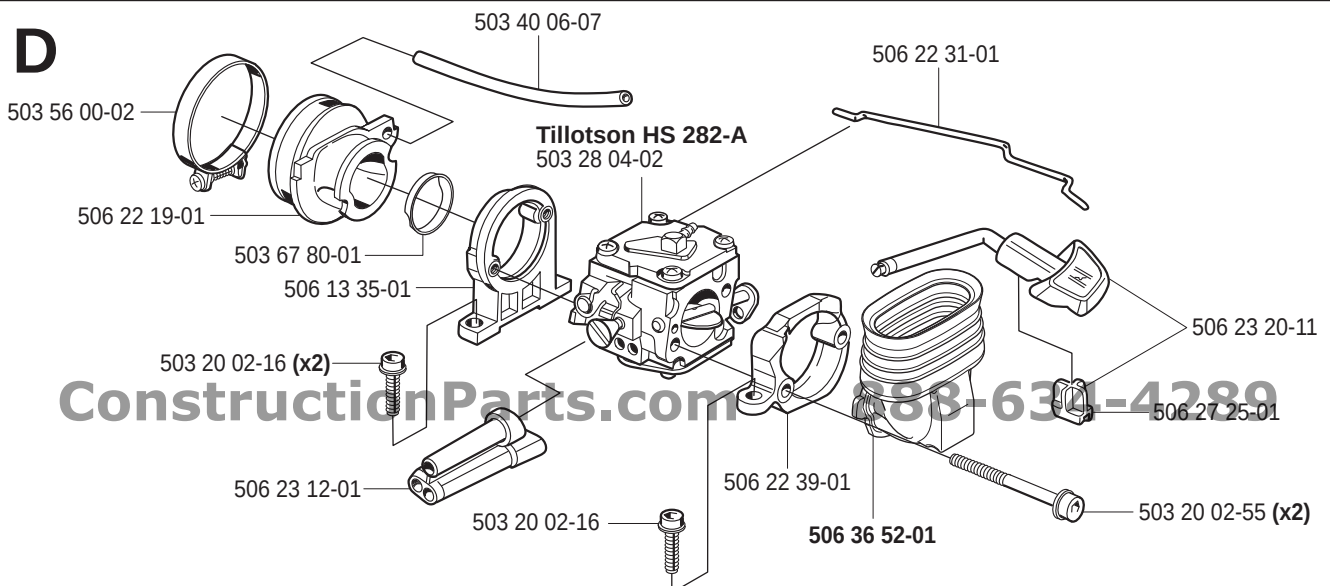

E Starter compl 506 23 59-07

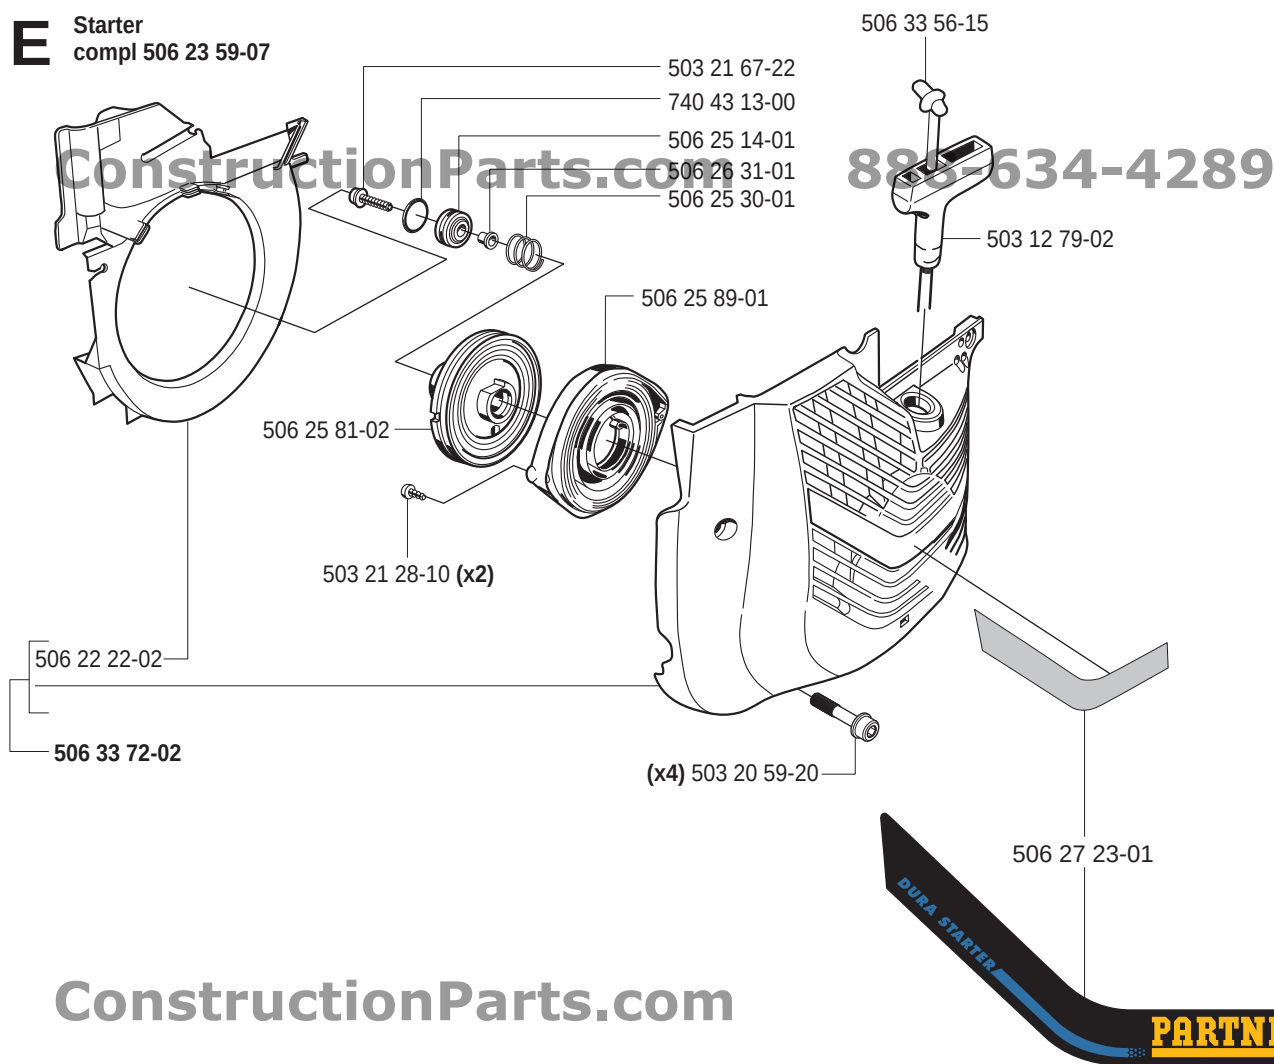

F

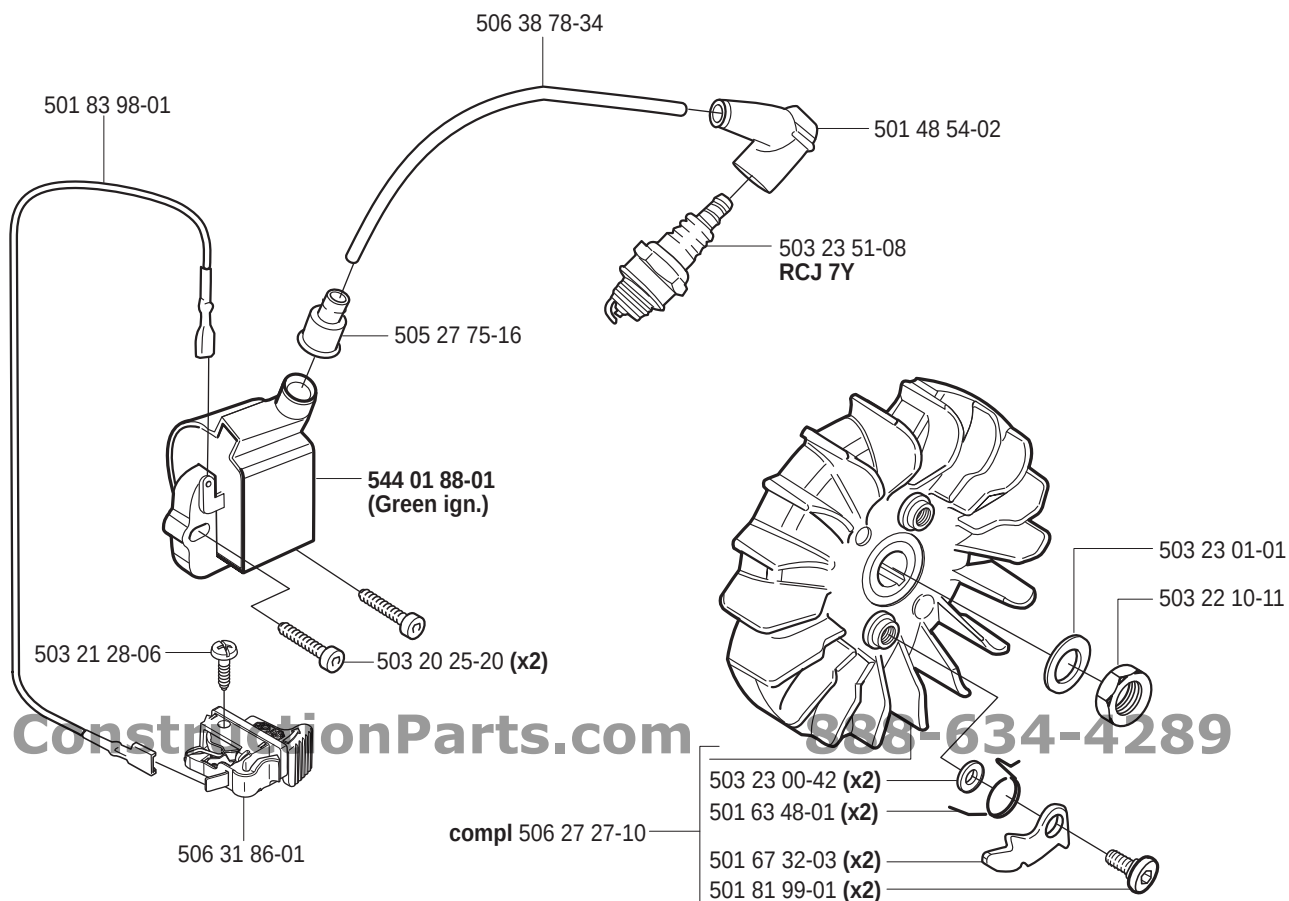


G

Cylinder and piston
*compl 506 15 55-06

ConstructionParts.com

888-634-4289

Silencer, spare part
**compl 506 37 28-02

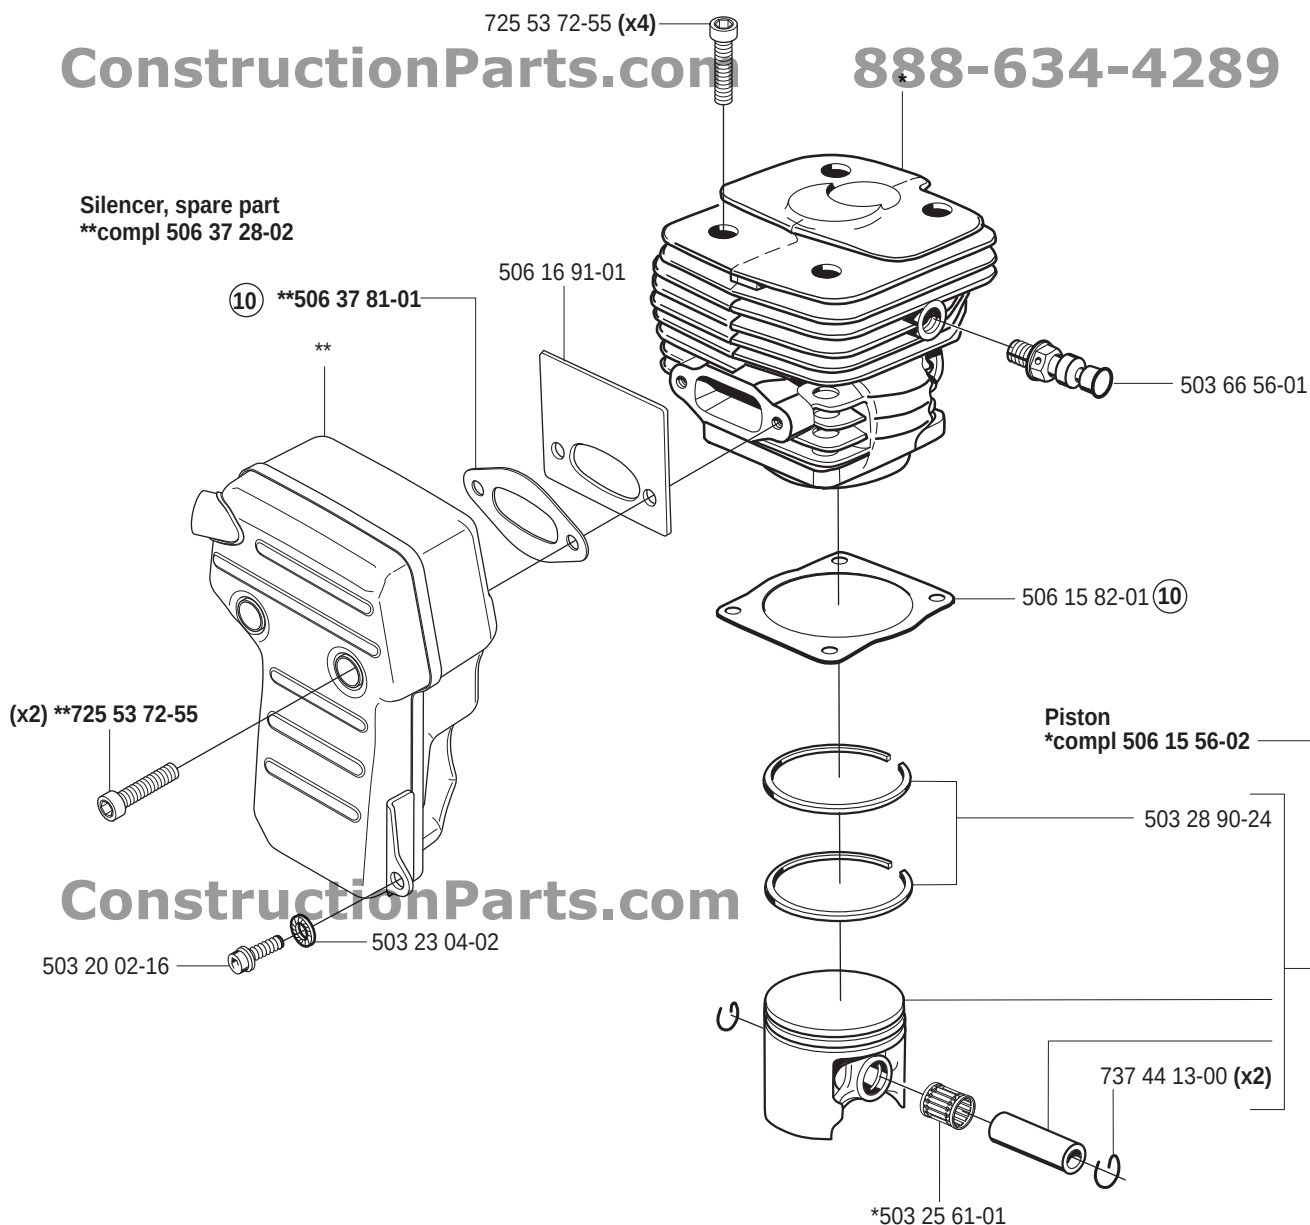


H

*compl 503 78 26-74

ConstructionParts.com

888-634-4289

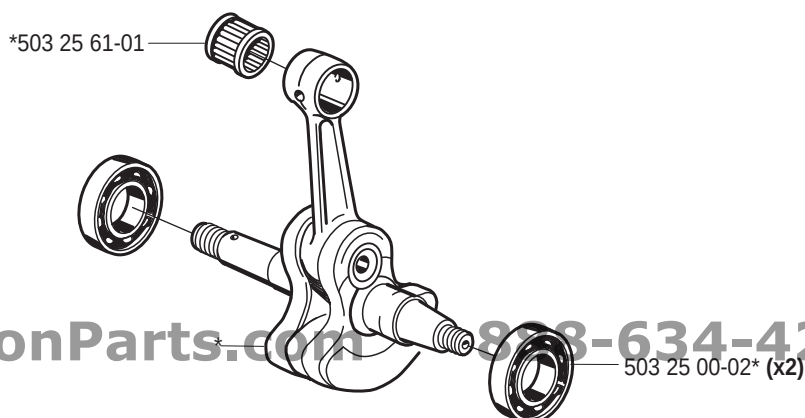


J

Crankcase
*compl 506 28 07-02

ConstructionParts.com


888-634-4289

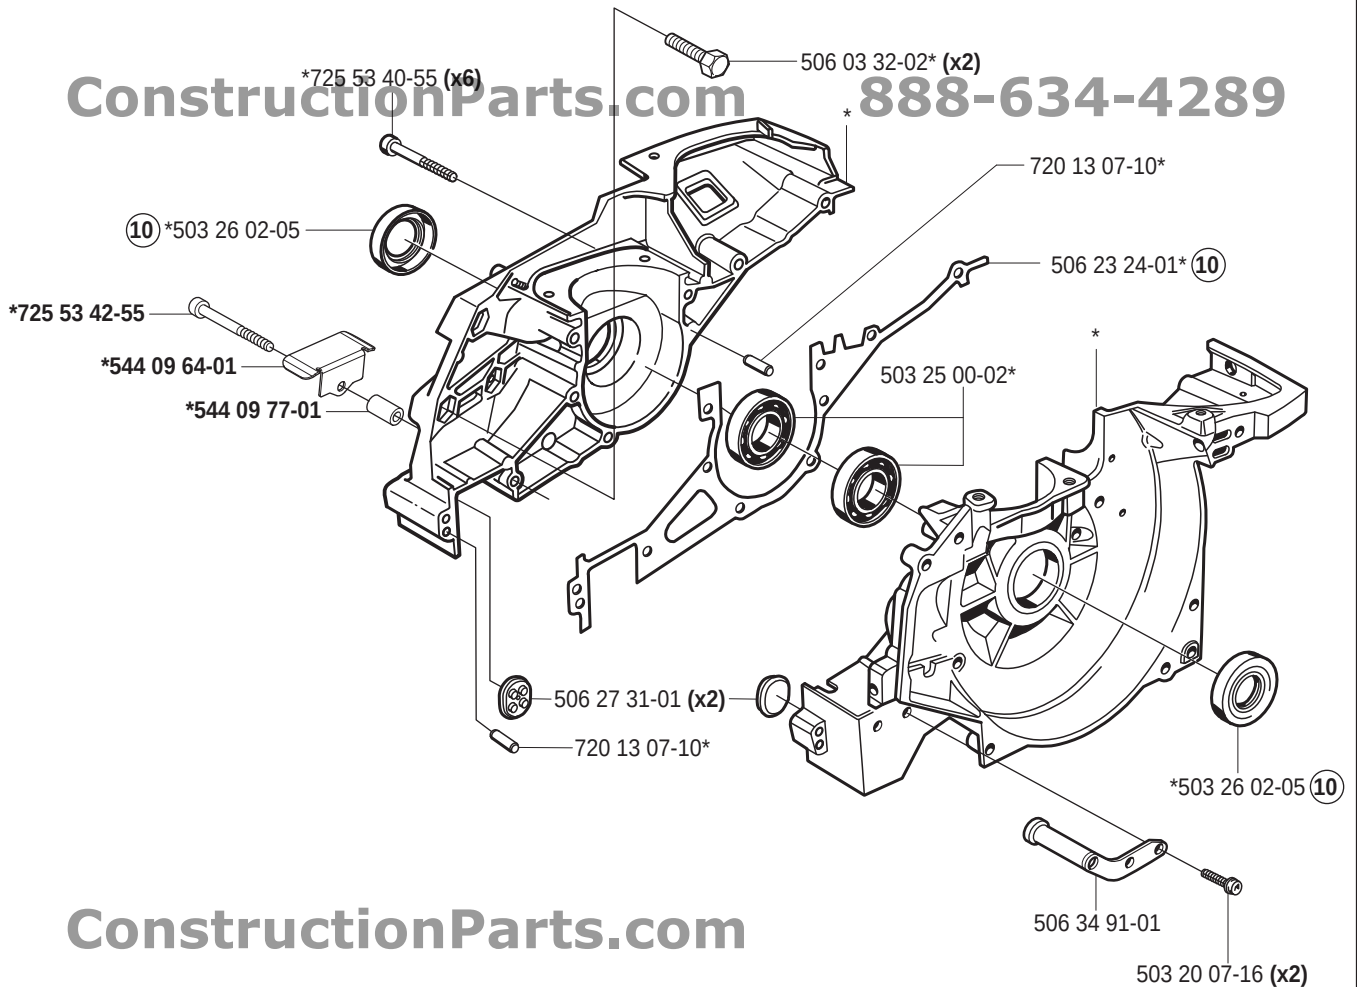

ConstructionParts.com

K

Tank unit
*compl 506 21 68-12

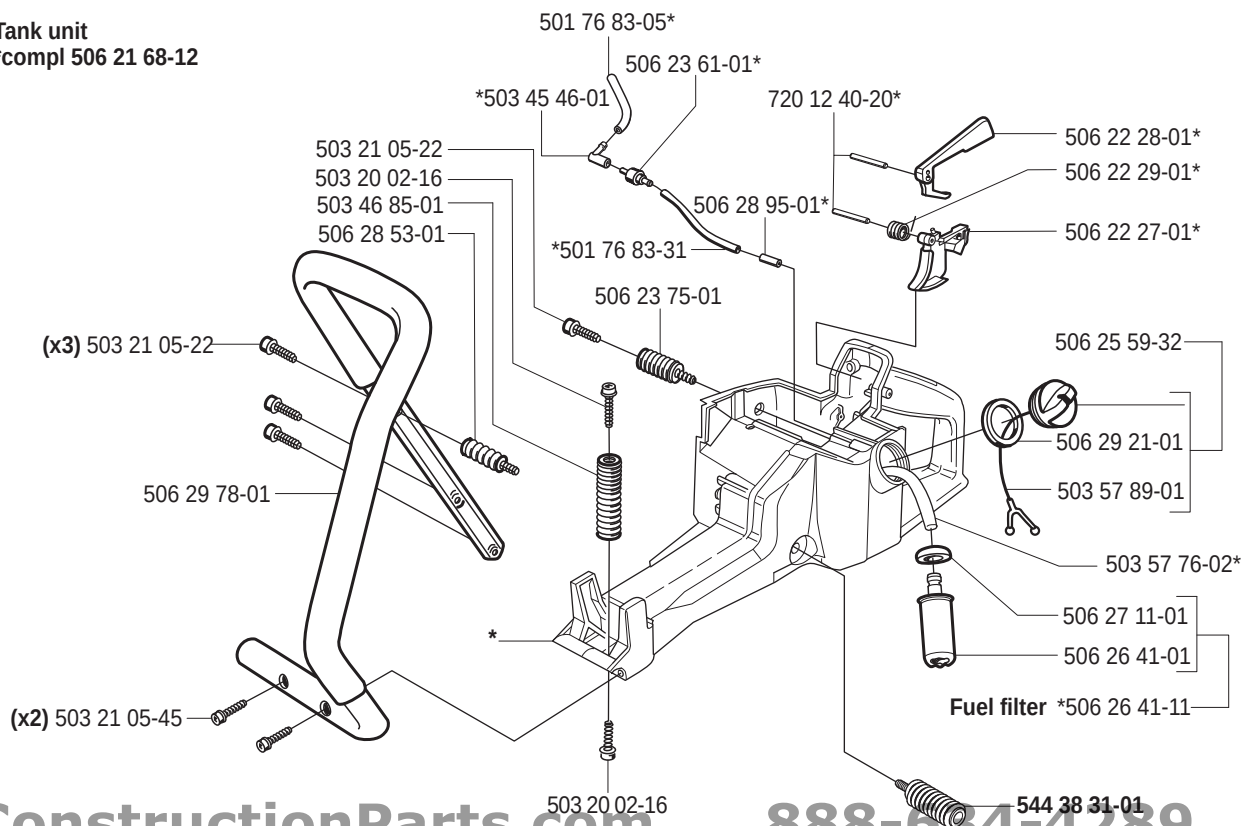

ConstructionParts.com

888-634-4289

L

*compl 506 24 69-01


503 21 46-01* (x2)

734 48 80-01* (x2)

506 26 22-01* (x2)

*506 29 59-01

888-634-4289

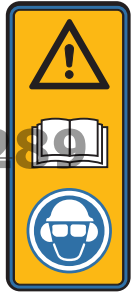

506 31 28-01*

503 26 60-01

506 31 45-01*

506 29 23-01*

***compl 506 32 89-02

*503 26 30-25 (x2)

*725 53 79-56

503 21 06-19 (x2)

506 31 77-11***

503 21 05-22

502 41 22-01

ConstructionParts.com

30mm

***506 09 56-02 (x2)

***506 29 57-01

***506 35 27-01

***506 09 58-04

503 26 30-21

506 29 88-01

(x2) ***506 09 56-03

729 52 89-71

506 38 29-01

503 26 30 -21

506 38 33-01

725 52 95-55

506 33 49-02** (x2)

740 42 05-00** (x2)

**506 33 96-01

**506 33 95-01

**725 53 76-56 (x2)

**506 34 90-01 (x2)


725 53 31-56 (x4)

ConstructionParts.com

888-634-4289

**compl 506 35 22-01

M Arm (x2)
*compl 506 35 18-06

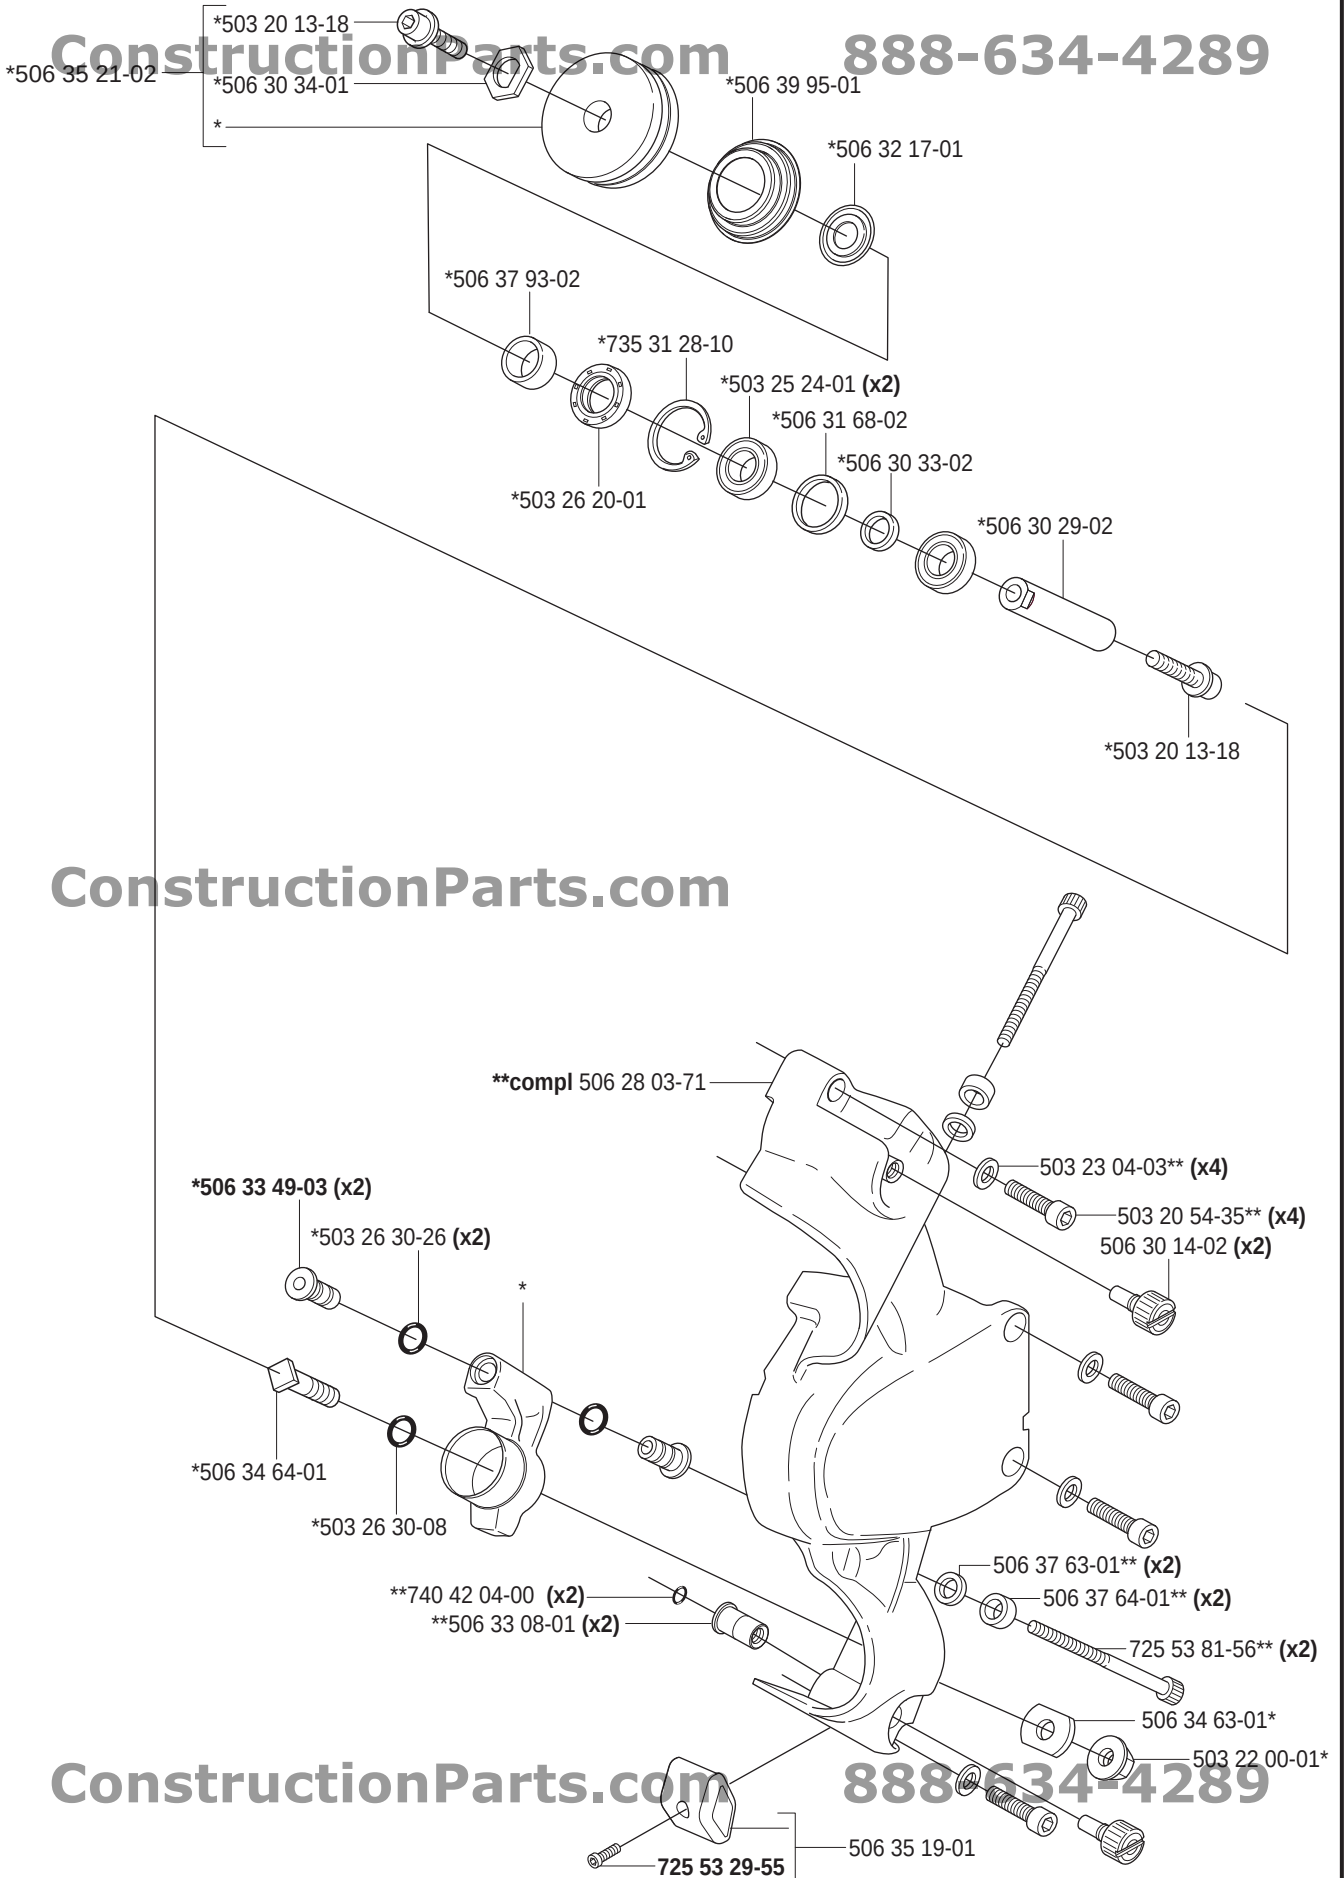

N

*compl 506 38 23-01

506 35 20-02*

*503 20 13-18

*506 30 34-01

*

*503 25 24-01 (x2)

*506 30 33-01

*506 31 68-01

*506 30 29-01

*503 20 13-18

*506 38 11-01

*740 48 20-12

*506 31 69-01

*506 37 93-02

*503 26 20-01

506 34 39-01** (x2)

*735 31 28-10

*506 38 09-01

*506 34 76-01

*506 30 35-01

*506 38 97-01

506 38 22-01

506 33 65-01

738 88 10-01 (x2)

503 22 00-01 (x2)

503 23 04-01 (x2)

725 54 59-05

503 20 00-45

506 27 75-01

503 20 03-80

**721 44 06-00

**506 25 73-01

**506 32 80-01

**544 07 76-01 (x2)

**740 48 25-02 (x2)

725 53 29-55

506 35 19-01

**compl 506 38 90-02

721 12 52-70

503 26 30-22** (x2)

503 23 01-12**

735 31 08-00**

503 25 21-01** (x2)

506 35 15-02

506 37 50-02**

740 42 24-00

506 37 47-01

503 26 21-01

506 37 46-02***

506 17 83-01***

***506 37 49-01

506 37 48-01

725 53 27-55 (x3)

***506 31 22-01

***721 42 52-50 (x2)

506 13 95-11***



506 13 96-01***

***compl 506 35 23-03

ConstructionParts.com


888-634-4289

- ¹ kit 506 25 88-01
- ² kit 506 29 09-01
- ³ kit 506 29 10-01
- ⁴ kit 506 29 11-01
- ⁵ kit 506 27 63-01
- ⁶ kit 506 29 13-01

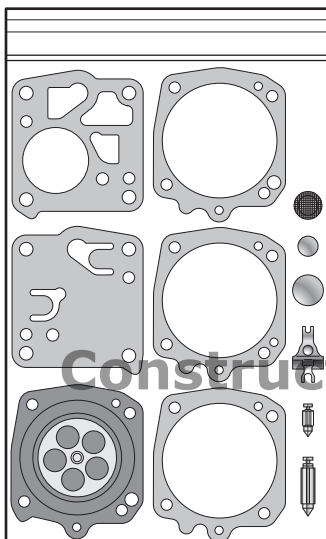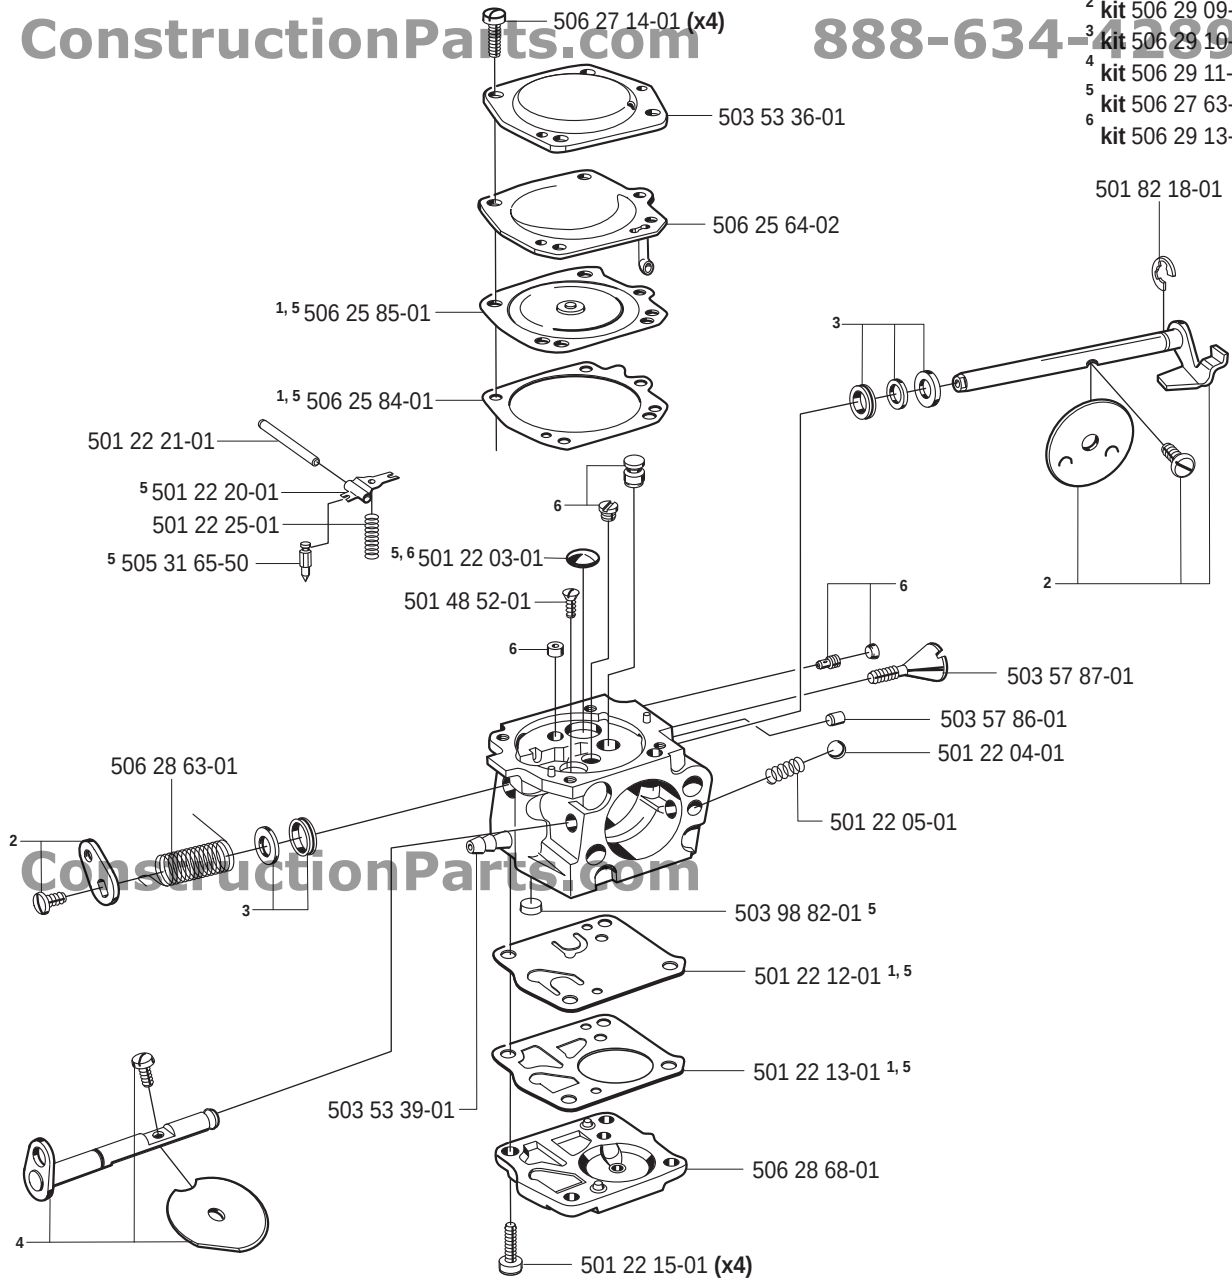

506 27 63-01⁵
Repair kit RK-31-HS

¹ 506 25 88-01
Diaphragm and gasket set DG-10-HS

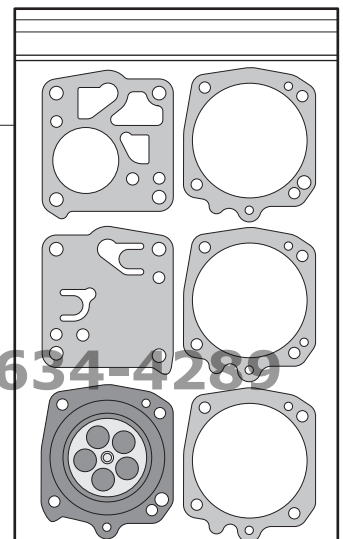

ConstructionParts.com

888-634-4289


Q Accessories
Zubehöre
Accessoires
Acessorios
Tillbehör

*compl 506 36 38-02


*506 36 36-01 (6mm)

*506 38 37-02 (5mm)


*502 21 58-01 (4mm)

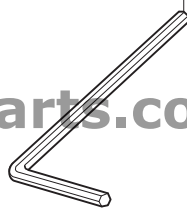



*501 69 17-02 (13-19mm)

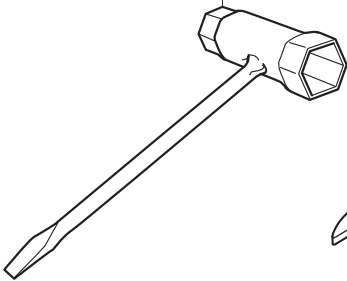

*506 35 52-01 (19mm)

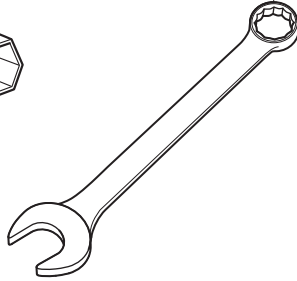


*501 19 22-01

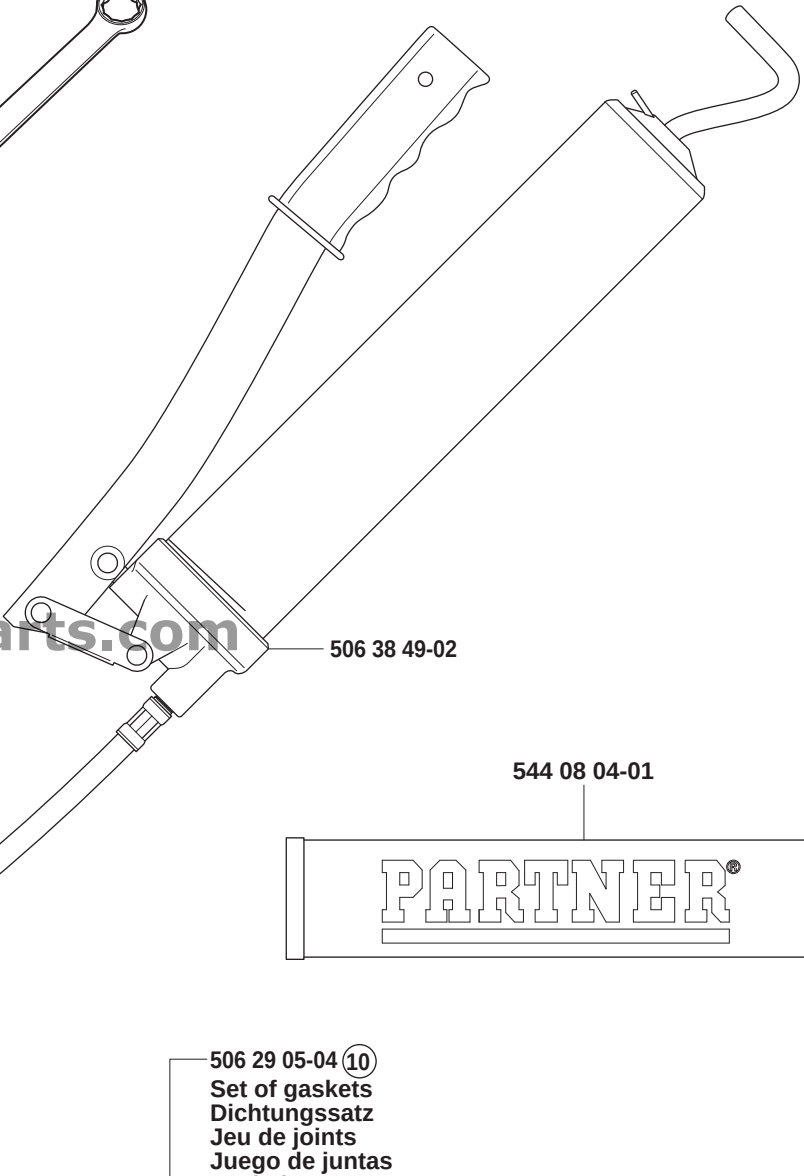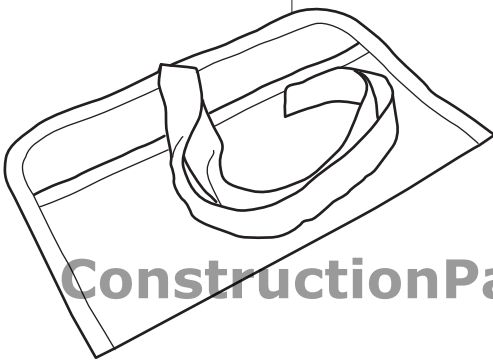


506 38 49-02

544 08 04-01

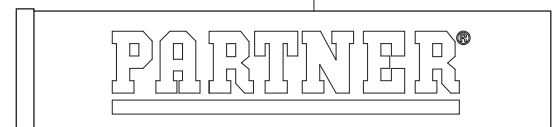

506 29 05-04 (10)
 Set of gaskets
 Dichtungssatz
 Jeu de joints
 Juego de juntas
 Packningssats

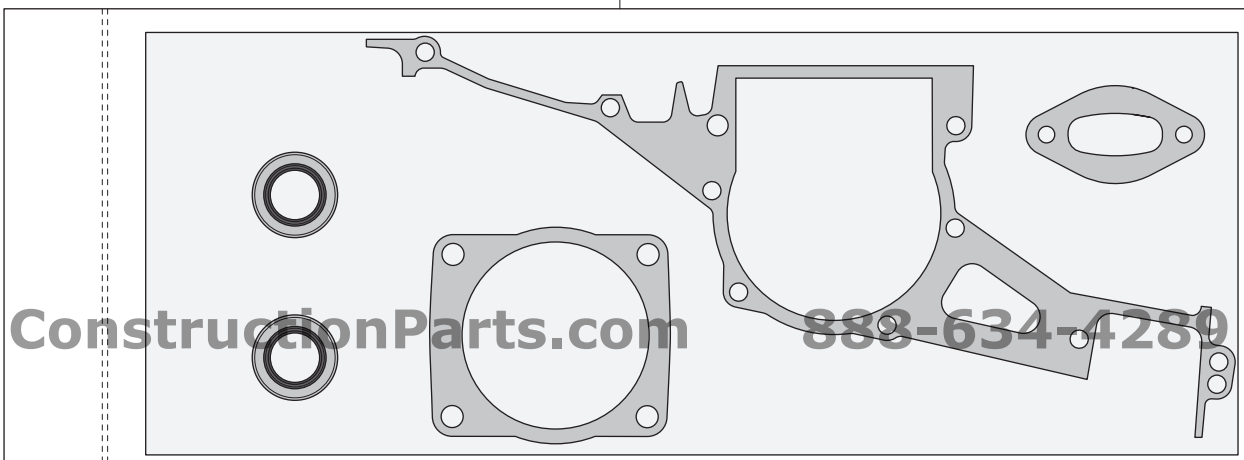

ConstructionParts.com

888-634-4289

No.	Pos.	Description	No.	Pos.	Description
501 19 22-01	Q	TOOL BAG	503 53 36-01	P	COVER
501 22 03-01	P	PLUG	503 53 39-01	P	NIPPLE
501 22 04-01	P	BALL	503 56 00-02	D	CLAMP
501 22 05-01	P	SPRING	503 57 76-02	K	HOSE
501 22 12-01	P	FUEL PUMP DIAPHRAGM	503 57 86-01	P	BALL
501 22 13-01	P	GASKET, PUMP SIDE	503 57 87-01	P	SCREW
501 22 15-01	P	SCREW	503 57 89-01	K	HOLDER
501 22 20-01	P	LEVER	503 66 56-01	G	VALVE
501 22 21-01	P	SHAFT	503 67 80-01	D	SLEEVE
501 22 25-01	P	SPRING	503 70 15-01	A	CLUTCH KPL.
501 48 52-01	P	SCREW	503 78 26-74	H	CRANKSHAFT
501 48 54-02	F	SPARK PLUG CONN. KIT	503 98 82-01	P	SCREEN
501 63 48-01	F	SPRING	505 27 75-16	F	INSULATING CAP
501 67 32-03	F	PAWL	505 31 65-50	P	INLET NEEDLE
501 69 17-02	Q	COMB.TOOL	506 03 32-02	J	SCREW
501 76 83-05	K	HOSE	506 09 56-02	L	CLAMP
501 76 83-31	K	HOSE	506 09 56-03	L	CLAMP
501 81 99-01	F	SCREW	506 09 58-04	L	HOSE
501 82 18-01	P	RETAINING RING	506 13 35-01	D	BRACKET
501 83 98-01	F	SHORTING LEAD	506 13 95-11	N	WASHER
502 21 58-01	Q	ALLEN KEY	506 13 96-01	N	SCREW
502 41 22-01	L	CLIP	506 15 55-06	G	CYLINDER CPL.
503 12 79-02	E	STARTER HANDLE	506 15 56-02	G	PISTON
503 14 51-01	A	CLUTCH SPRING	506 15 82-01	G	GASKET
503 20 00-45	N	SCREW	506 16 91-01	G	CONDUCTOR
503 20 02-16	CDGK	SCREW	506 17 83-01	N	RING
503 20 02-30	C	SCREW	506 21 68-12	K	TANK UNIT
503 20 02-55	D	SCREW	506 22 16-13	C	CYLINDER COVER
503 20 03-80	N	SCREW	506 22 17-01	C	COVER
503 20 07-16	J	SCREW	506 22 18-12	C	BASE
503 20 13-18	MN	SCREW	506 22 19-01	D	PIPE
503 20 25-20	F	SCREW	506 22 22-02	E	AIR CONDUCTOR
503 20 34-19	A	SCREW	506 22 27-01	K	THROTTLE TRIGGER
503 20 34-42	C	SCREW	506 22 28-01	K	THROTTLE LOCK
503 20 54-35	M	SCREW	506 22 29-01	K	SPRING
503 20 59-20	E	SCREW	506 22 31-01	D	ROD
503 21 05-22	KL	SCREW	506 22 39-01	D	FLANGE
503 21 05-45	K	SCREW	506 22 94-01	C	JET
503 21 06-19	L	SCREW	506 23 12-01	D	GUIDE
503 21 28-06	F	SCREW	506 23 19-01	C	FILTER
503 21 28-10	E	SCREW	506 23 20-11	D	CHOKE CONTROL
503 21 46-01	L	SCREW	506 23 24-01	J	GASKET
503 21 67-22	E	SCREW	506 23 59-07	E	STARTER DEVICE
503 22 00-01	MN	NUT	506 23 61-01	K	TANK VENT.
503 22 10-11	F	NUT	506 23 75-01	K	SPRING
503 23 00-42	F	WASHER	506 24 39-01	C	DECAL
503 23 01-01	F	WASHER	506 24 69-01	L	BLADE GUARD
503 23 01-12	N	WASHER	506 25 14-01	E	WASHER
503 23 04-01	N	WASHER	506 25 30-01	E	SPRING
503 23 04-02	G	WASHER	506 25 59-32	K	TANK CAP
503 23 04-03	M	WASHER	506 25 64-02	P	INSERT
503 23 51-08	F	SPARK PLUG	506 25 73-01	N	SPRING
503 25 00-02	HJ	BALL BEARING	506 25 81-02	E	STARTER PULLEY
503 25 21-01	N	BALL BEARING	506 25 84-01	P	GASKET
503 25 24-01	BMN	BALL BEARING	506 25 85-01	P	DIAPHRAGM
503 25 38-01	A	NEEDLE BEARING	506 25 88-01	P	GASKET SET
503 25 61-01	GH	NEEDLE BEARING	506 25 89-01	E	RETURN SPRING
503 26 02-05	J	SEALING RING	506 26 22-01	L	ROLLER
503 26 20-01	MN	SEALING RING	506 26 31-01	E	SLEEVE
503 26 21-01	N	SEALING RING	506 26 41-01	K	FILTER
503 26 30-08	M	O-RING	506 26 41-11	K	FILTER
503 26 30-21	L	O-RING	506 27 11-01	K	PENDULUM
503 26 30-21	L	O-RING	506 27 14-01	P	SCREW
503 26 30-22	N	O-RING	506 27 23-01	E	DECAL
503 26 30-25	L	O-RING	506 27 24-01	C	DECAL
503 26 30-26	M	O-RING	506 27 25-01	D	PROTECTOR
503 26 60-01	L	FEMALE QUICK COUPLER	506 27 27-10	F	FLYWHEEL CPL
503 28 04-02	DP	CARBURETOR	506 27 31-01	J	BUFFER
503 28 90-24	G	PISTON RING	506 27 63-01	P	REPAIR KIT
503 40 06-07	D	HOSE	506 27 75-01	N	PULLEY
503 45 46-01	K	CONNECTION	506 27 84-42	C	DECAL
503 46 85-01	K	ANTIVIBE ELEMENT	506 27 84-61	C	DECAL

No.	Pos.	Description	No.	Pos.	Description
506 27 84-63	C	DECAL	506 35 52-01	Q	KEY
506 28 01-01	A	WHEEL CPL	506 36 36-01	Q	L-SPANNER
506 28 03-71	M	COVER	506 36 38-02	Q	TOOL KIT
506 28 06-03	B	BELT TENSIONER CPL	506 36 52-01	D	INTAKE
506 28 07-02	J	CRANKCASE CPL	506 37 28-02	G	MUFFLER
506 28 09-01	A	PROTECTOR CPL	506 37 46-02	N	WASHER
506 28 11-01	A	DECAL	506 37 47-01	N	SEALING
506 28 39-30	C	SEALING	506 37 48-01	N	HOLDER
506 28 53-01	K	SPRING	506 37 49-01	N	SLEEVE
506 28 59-01	A	SPACER SLEEVE	506 37 50-02	N	SPACER
506 28 63-01	P	SPRING	506 37 63-01	M	SPACER
506 28 68-01	P	COVER	506 37 64-01	M	BUSHING
506 28 95-01	K	NIPPLE	506 37 81-01	G	GASKET MUFFLER
506 29 05-04	Q	SET OF GASKETS	506 37 93-02	MN	SLEEVE
506 29 09-01	P	THROTTLE SHAFT(KIT)	506 38 09-01	N	HOLDER
506 29 10-01	P	SEALING, KIT	506 38 11-01	N	COVER
506 29 11-01	P	CHOKE SHAFT (KIT)	506 38 22-01	N	KNOB
506 29 13-01	P	JET (KIT)	506 38 23-01	N	ENGAGEMENT ROLLER CPL
506 29 21-01	K	GASKET	506 38 29-01	L	NIPPLE
506 29 23-01	L	SPRING	506 38 33-01	L	WATER DISK CPL
506 29 57-01	L	NIPPLE	506 38 37-02	Q	L-KEY
506 29 59-01	L	WARNINGSDECAL	506 38 49-02	Q	GREASE GUN
506 29 67-01	B	BELT	506 38 78-34	F	CABLE
506 29 78-01	K	HANDLE	506 38 90-02	N	CHASSIE
506 29 88-01	L	SCREEN	506 38 97-01	N	PIN
506 30 14-02	M	ADJUSTMENT SCREW	506 39 95-01	M	SEALING
506 30 29-01	N	SHAFT	544 01 88-01	F	IGNITION MODULE
506 30 29-02	M	SHAFT	544 07 76-01	N	SLEEVE
506 30 33-01	N	SPACER SLEEVE	544 08 04-01	Q	GREASE TUBE
506 30 33-02	M	SPACER SLEEVE	544 09 64-01	J	BELT GUIDE
506 30 34-01	MN	CARRIER	544 09 77-01	J	BUSHING
506 30 35-01	N	PROTECTOR	544 38 31-01	K	SPRING
506 31 22-01	N	CARRIER CPL	720 12 40-20	K	PIN
506 31 28-01	L	PLATE	720 13 07-10	J	PIN
506 31 45-01	L	PIPE	721 12 52-70	N	PIN
506 31 68-01	N	SPACER SLEEVE	721 42 52-50	N	SPIRAL PIN
506 31 68-02	M	SPACER SLEEVE	721 44 06-00	N	PIN
506 31 69-01	N	DUST PROTECTION	725 52 95-55	L	SCREW
506 31 77-11	L	VALVE CPL	725 53 27-55	N	SCREW
506 31 86-01	F	STOP SWITCH	725 53 29-55	MN	SCREW
506 32 17-01	M	SEALING	725 53 31-56	L	SVREW
506 32 21-01	C	DECAL	725 53 40-55	J	SCREW
506 32 80-01	N	CATCH	725 53 42-55	J	SCREW
506 32 89-02	L	HOSE KIT	725 53 72-55	BG	SCREW
506 33 08-01	M	BUSHING	725 53 76-56	L	SCREW
506 33 49-02	L	SLEEVE	725 53 78-55	B	SCREW
506 33 49-03	M	SPACER TUBE	725 53 79-56	L	SCREW
506 33 51-01	B	ROLLER	725 53 81-56	M	SCREW
506 33 52-01	B	SPACER	725 54 59-05	N	SCREW
506 33 53-01	B	ARM	729 52 89-71	L	SCREW
506 33 53-02	B	ARM	732 21 16-01	B	LOCKNUT
506 33 54-01	B	SPACER	734 48 80-01	L	WASHER
506 33 56-15	E	STARTER ROPE	735 31 08-00	N	SEEGER CLIP
506 33 65-01	N	SEALING RING	735 31 28-10	BMN	RETAINING RING
506 33 72-02	E	STARTER DEVICE	737 44 13-00	G	CLIP
506 33 95-01	L	SPRING	738 88 10-01	N	GREASE NIPPLE
506 33 96-01	L	BOLT	740 42 04-00	M	O-RING
506 34 39-01	N	SEALING	740 42 05-00	L	O-RING
506 34 63-01	M	WASHER	740 42 24-00	N	O-RING
506 34 64-01	M	SCREW	740 43 13-00	E	O-RING
506 34 70-01	C	AIR FILTER	740 48 20-03	C	O-RING
506 34 76-01	N	SPRING	740 48 20-12	N	O-RING
506 34 90-01	L	PLUG	740 48 25-02	N	O-RING
506 34 91-01	J	BRACKET			
506 35 15-02	N	SHAFT CPL			
506 35 18-06	M	ARM ROLLER CPL			
506 35 19-01	MN	WEAR PROTECTOR			
506 35 20-02	N	ENGAGEMENT ROLLER			
506 35 21-02	M	ROLLER CPL.			
506 35 22-01	L	SPLASH GUARD			
506 35 23-03	N	WHEEL CPL			
506 35 27-01	L	SPRING			