


PARTS DIAGRAM

iBuyFireplaceParts.com

888-634-4289

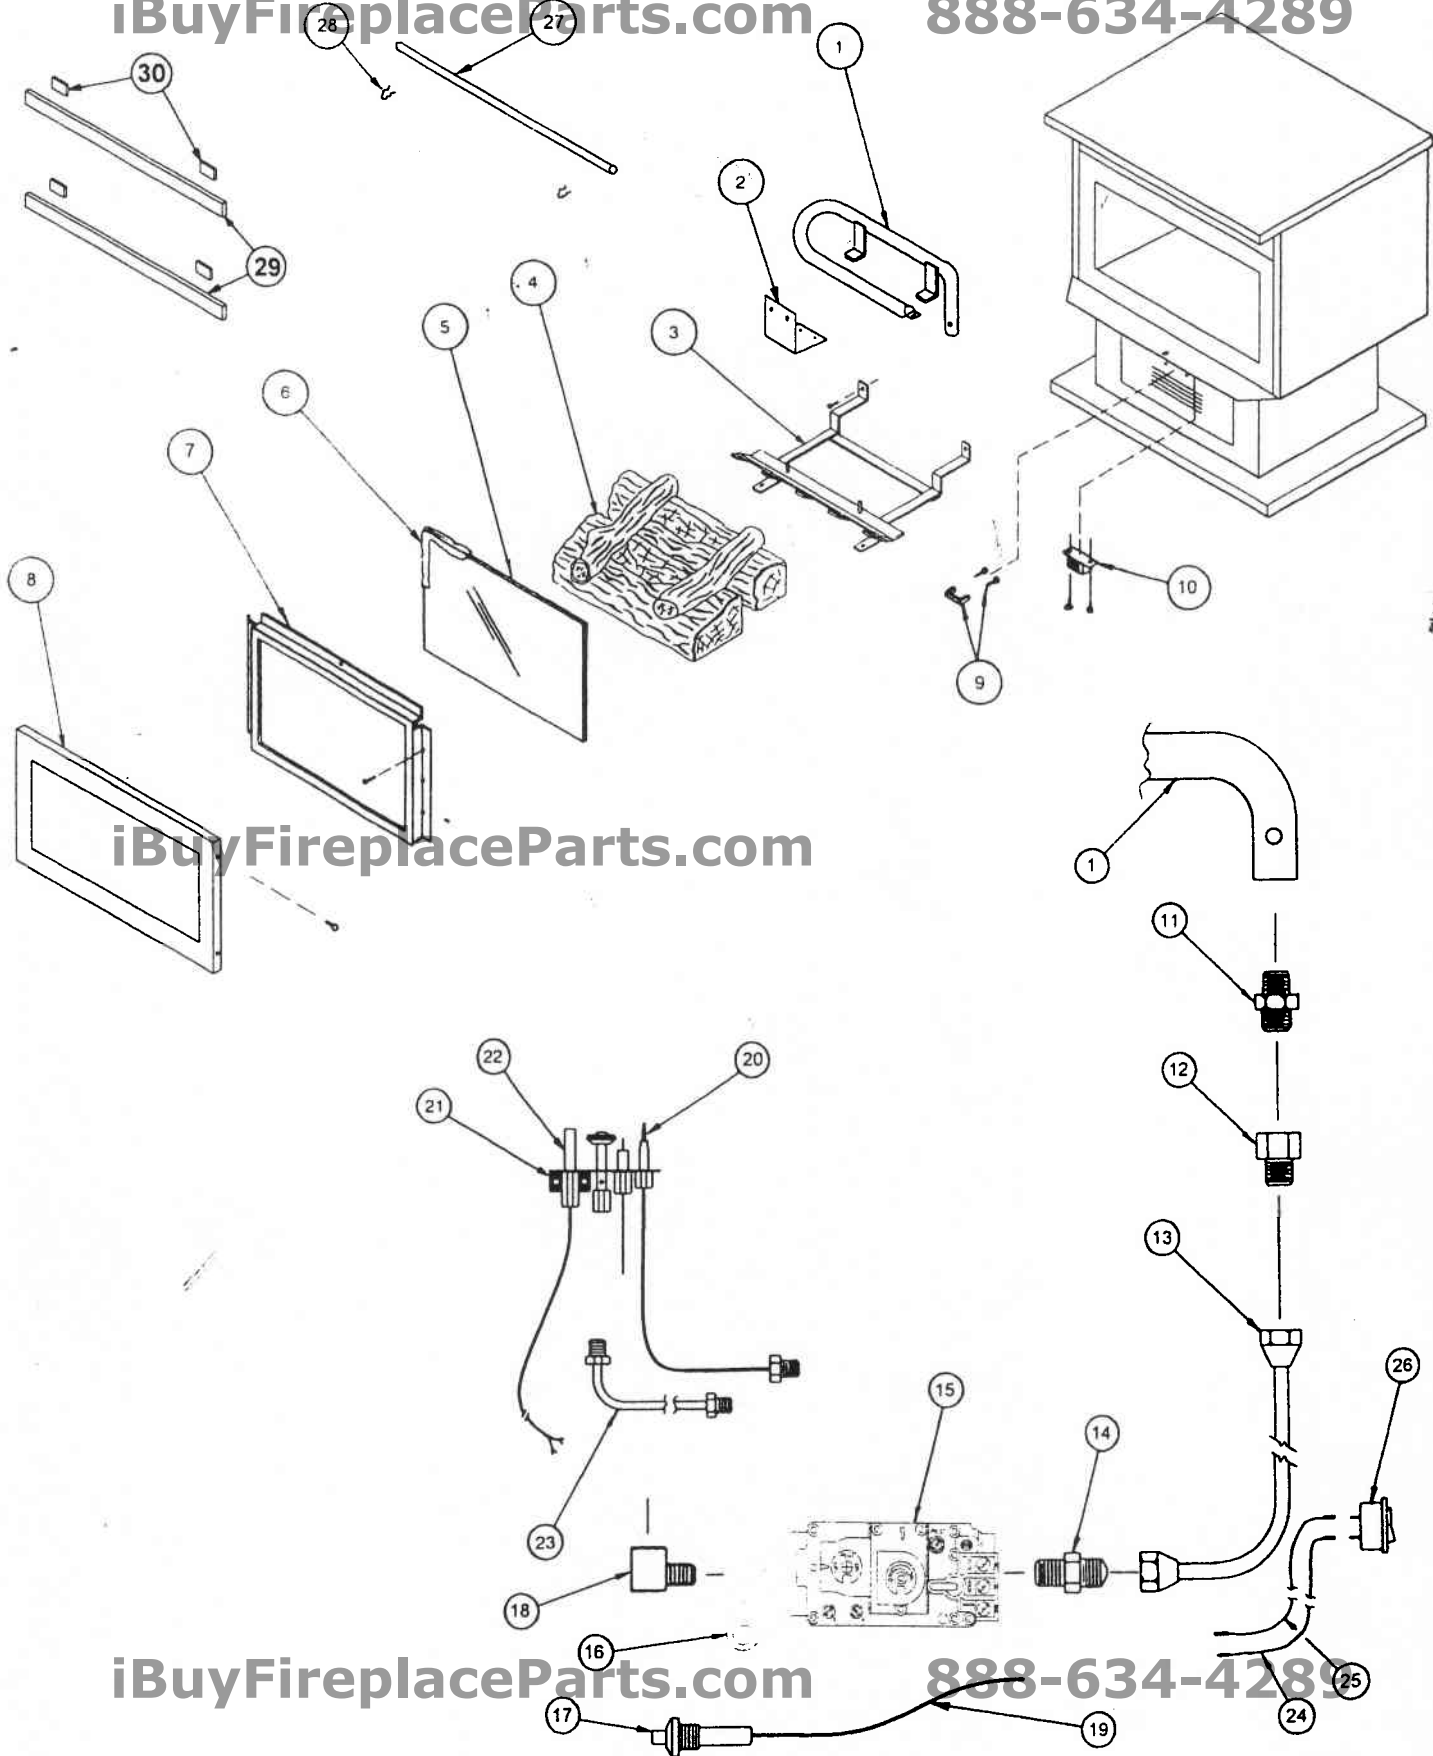

iBuyFireplaceParts.com

iBuyFireplaceParts.com

888-634-4289


PARTS LIST

iBuyFireplaceParts.com 888-634-4289				
KEY NO.	DESCRIPTION	PART NO.	G601N	G601P
1	BURNER (NG)	S41342	1	—
1	BURNER (LP)	S41343	—	1
2	PILOT BRACKET	S32532	1	1
2	GRATE	S41372	1	1
4	LOG SET	S16213	1	1
5	FRONT GLASS ASSEMBLY	S10019	1	1
6	GLASS ROPE	S15013	4.7 ft.	4.7 ft.
7	GLASS FRAME	S41336	1	1
8	OUTER TRIM	S13413	1	1
9	DOOR HANDLE	S11329	1	1
10	MAGNETIC CATCH	S11308	1	1
11	ORIFICE (NG)	S11325	1	—
11	ORIFICE (LP)	S11350	—	1
12	3/8 ADAPTOR	S11314	1	1
13	GAS TUBE ASSEMBLY	S32487	1	1
14	3/8 PIPE TO 3/8-FLARE	S11313	1	1
15	VALVE (NG)	S11345	1	—
15	VALVE (LP)	S11347	—	1
16	IGNITOR BRACKET	S14107	1	1
17	PIEZO IGNITOR	S14106	1	1
18	3/8 ELBOW	S11312	1	1
19	IGNITOR WIRE	S11275	1	1
20	THERMO COUPLE	S11349	1	1
21	PILOT (NG)	S11346	1	—
21	PILOT (LP)	S11348	—	1
22	THERMOPILE	S14103	1	1
23	PILOT TUBE	S11183	1	1
24	SWITCH WIRE	S14040	1	1
25	SWITCH WIRE	S14039	1	1
26	ROCKER SWITCH	S14034	1	1
27	TRIM BAR	S32555	1	1
28	TRIM BAR CLIP	S11363	2	2
29	BRASS PLATED TRIM	S32558	2	2
30	MAGNET	S32571	4	4
iBuyFireplaceParts.com 888-634-4289				

FIG. A

iBuyFireplaceParts.com

888-634-4289

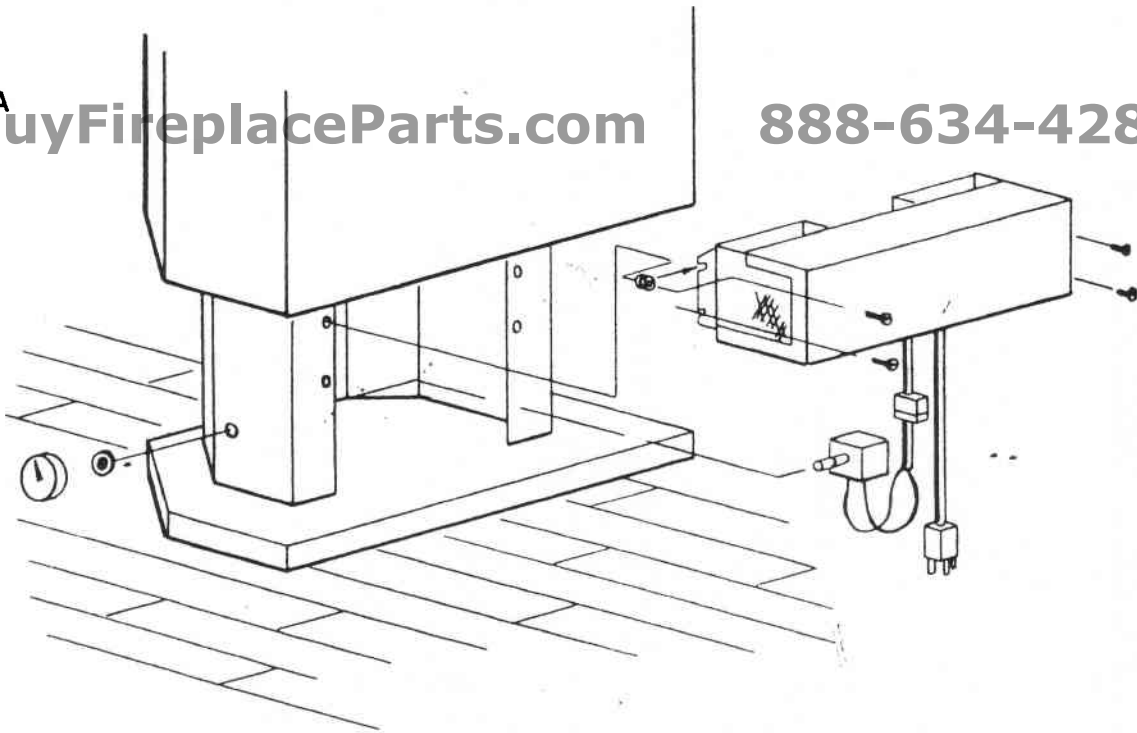

fan installation instructions (optional fan kit #S31192)

1. Remove fan from carton.
2. Using four screws provided attach fan to stove as shown above. Be sure to install rubber gromets as shown above.
3. Speed control switch is to be inserted into pedestal, as shown, and tighten until secure.
4. Snap variable speed control knob into place.
5. Plug fan in.


CAUTION - "Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation."
"Verify proper operation after servicing."

WARNING

Electrical Grounding Instructions


This appliance is equipped with a three-prong (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle. Do not cut or remove the grounding prong from this plug.

FAN WIRING DIAGRAM

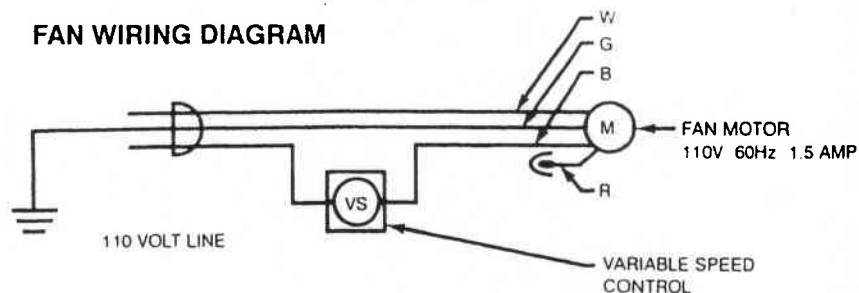


Original wiring that is replaced must be replaced with wire having at least a 105°C temperature rating.

Key#	Part Number	Description	Qty.
1	S41225	Fan Case Weld't - G400	1
2	S41059	Motor Assy - G300	1
3	S14003	Speed Control Switch	1
4	S14005	Power Cord	1
5	S14009	Speed Control Knob	1

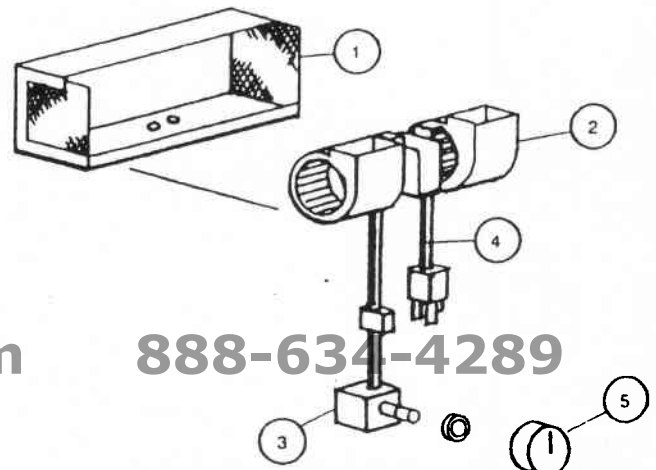

888-634-4289

FIG. A

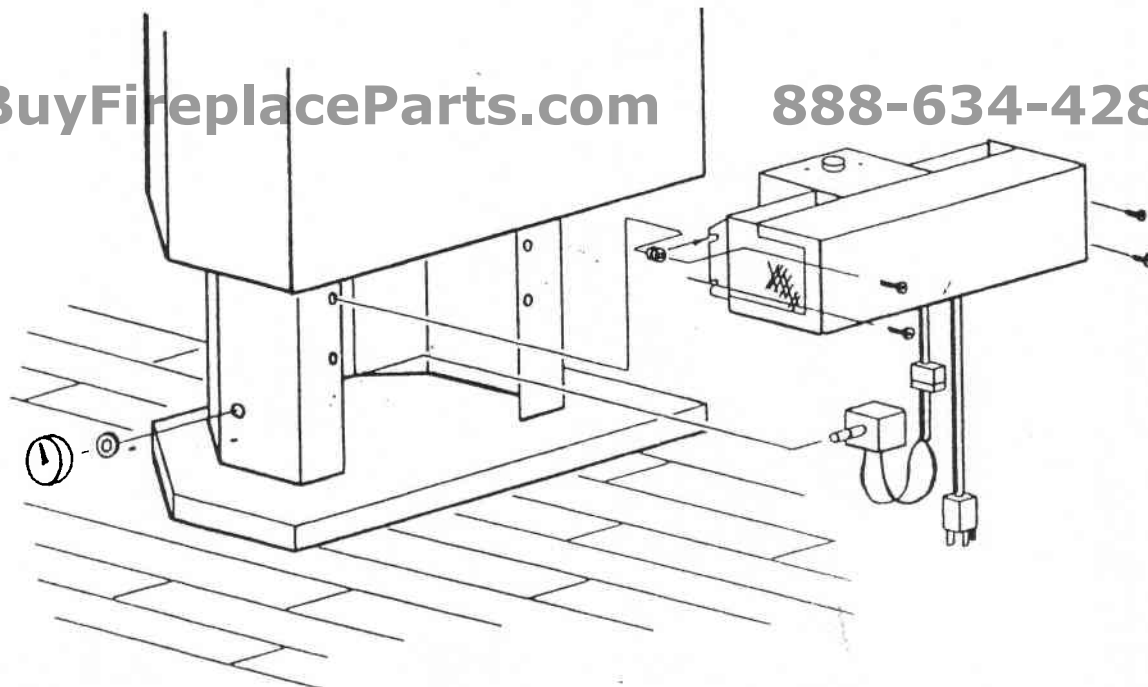


fan installation instructions (optional fan kit #S31233)

1. Remove fan from carton.
2. Using four screws provided attach fan to stove as shown above. Be sure to install rubber gromets as shown above.
3. Speed control switch is to be inserted into pedestal, as shown, and tighten until secure.
4. Snap variable speed control knob into place.
5. Plug fan in.

CAUTION - "Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation."
"Verify proper operation after servicing."

FAN WIRING DIAGRAM

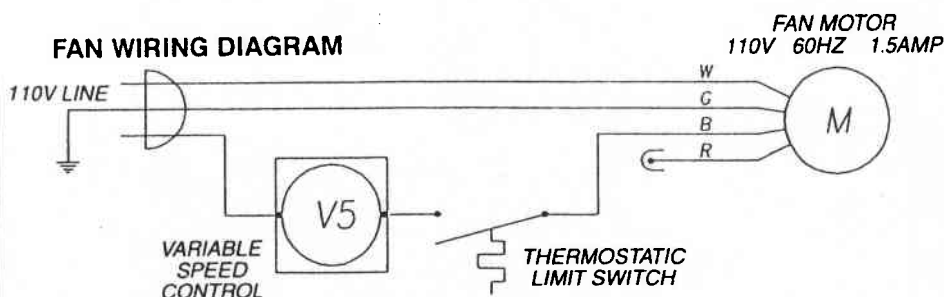

WARNING Electrical Grounding Instructions

This appliance is equipped with a three-prong (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle.

Do not cut or remove the grounding prong from this plug.

Original wiring that is replaced must be replaced with wire having at least a 105°C temperature rating.

Key#	Part Number	Description	Qty.
1	S41225	Fan Case Weld't	1
2	S41059	Motor Assy	1
3	S14003	Speed Control Switch	1
4	S14005	Power Cord	1
5	S14009	Speed Control Knob	1
6	S14060	Limit Switch	1

