



INSTALLATION INSTRUCTIONS

STANDARD SERIES

Unvented Decorative Gas Fireplaces
P/N 903589 REV. E 02/2004

MODELS

CFST-CMN
CFST-CMP

CFPF-CMN
CFPF-CMP

RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE



FOR USE ONLY WITH DECORATIVE TYPE UNVENTED ROOM HEATERS.
DO NOT BUILD A WOOD FIRE.

WARNING: IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE INJURY OR PROPERTY DAMAGE. REFER TO THIS MANUAL. FOR ASSISTANCE OR ADDITIONAL INFORMATION CONSULT A QUALIFIED INSTALLER, SERVICE AGENCY OR THE GAS SUPPLIER.

WARNING: DO NOT BURN WOOD OR OTHER MATERIAL IN THESE APPLIANCES.

CAREFULLY REVIEW THE INSTRUCTIONS SUPPLIED WITH THE DECORATIVE TYPE UNVENTED ROOM HEATER FOR THE MINIMUM FIREPLACE SIZE REQUIREMENT.

DO NOT INSTALL THE APPLIANCE IN THIS FIREBOX, UNLESS THIS FIREBOX MEETS THE MINIMUM DIMENSIONS REQUIRED FOR THE INSTALLATIONS.

This is an unvented gas-fired heater. It uses air (oxygen) from the room in which it is installed. Provisions for adequate combustion and ventilation air must be provided. Refer to Combustion and Ventilation Air Section, Page 3.

Due to high temperatures, the appliance should be located out of traffic and away from furniture or draperies.

Do not place clothing or other materials on or near this appliance.

IMPORTANT: READ AND UNDERSTAND THESE INSTRUCTIONS COMPLETELY BEFORE INSTALLING YOUR UNVENTED ROOM HEATERS.

WARNING: IF THE INFORMATION IN THIS MANUAL IS NOT FOLLOWED EXACTLY, A FIRE OR EXPLOSION MAY RESULT CAUSING PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OF LIFE.

FOR YOUR SAFETY: Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

FOR YOUR SAFETY: What to do if you smell gas:


- **DO NOT** light any appliance.
- **DO NOT** touch any electrical switches.
- **DO NOT** use any phone in your building.
- **Immediately** call your gas supplier from a neighbor's phone.

Follow your gas suppliers instructions.


- **If your gas supplier cannot be reached, call the fire department.**

Installation and service must be performed by a qualified installer, service agency or the gas supplier.


ACCESSORIES AND COMPONENTS

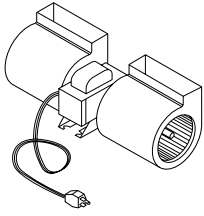


Forced Air Kit **FAB-1100**

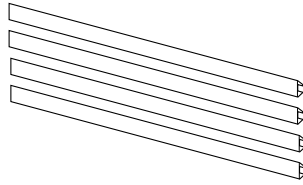


Brass Louvers
-Main Panel **VF6-BRLK**
-End Panel **VF6-BRLEK**

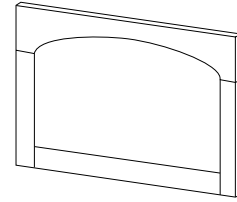


4-Piece Decorative Arch Frame Kit
-Main Panel **DAT-6-4**
-End Panel **DAET-6-4**

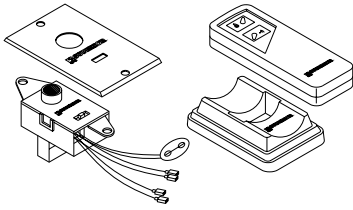


Remote Control Kit **RCK**

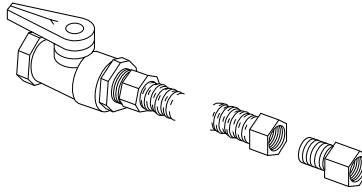

Gas Flex Line Kit **GFLV**

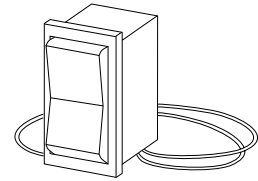


Rocker Switch Kit **RS**

 


Decorative Volcanic Stone **DVS**

Note: Model SPK-6 may not be used in conjunction with Models DAT-6-1 or DAT-6-4.

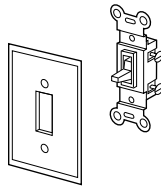


Wall Switch Kit **WSK**


Note: Model DAT-6-1 may not be used in conjunction with Model SPK-6.

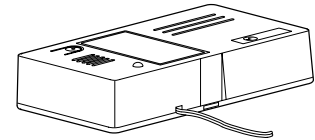

CO Sensor Kit **CMSK**

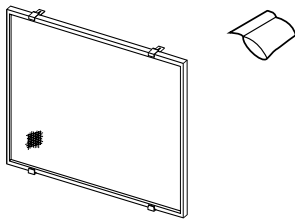

Screen Panel Kit
-Main Panel **SPK-6**
-End Panel **SPEK-6**

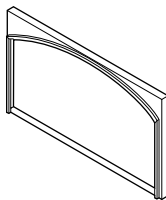

1-Piece Decorative Arch Frame Kit
-Main Panel **DAT-6-1**
-End Panel **DAET-6-1**

NOTE: DIAGRAMS & ILLUSTRATION NOT TO SCALE.


CFST REPLACEMENT PARTS LIST

No.	Description	CFST-CMN		CFST-CMP	
		Part No.	Qty.	Part No.	Qty.
1.	Gas Fireplace Assembly	123071	1	123072	1
2.	Bar, Louver (Black)	104951	8	104951	8
3.	Hood (Black), Clean Face	108971	2	108971	2
4.	Screw	000861	6	000861	6
5.	Replacement Glass Panel with Gasket	104852	2	104852	2
6.	Door Switch	094468	1	094468	1
7.	Gas Valve with Burner Assembly	123111	1	123112	1
8.	Burner Assembly	123151	1	123151	1
9.	Log Set (Split)	-	-	-	-
a.	Bottom, Front	903601	1	903601	1
b.	Bottom, Rear	903602	1	903602	1
c.	Log, Center	903603	1	903603	1
d.	Twig, Left	903604	1	903604	1
e.	Top Twig, Center	903605	1	903605	1
f.	Top Twig, Right	903606	1	903606	1
g.	Log, Top, Vertical	903607	1	903607	1
10.	Bag of Rockwool/Ember Coals	125011	1	125011	1
11.	Refractory Liner	903216	2	903216	2

CFST GAS CONTROLS — MILLIVOLT

No.	Description	CFST-CMN		CFST-CMP	
		Part No.	Qty.	Part No.	Qty.
20.	Gas Valve - SIT	901916	1	901917	1
21.	Piezo Igniter	111061	1	111061	1
22.	Orifice, Main Burners	124291	2	124292	2
23.	Pilot Assembly (ODS)	901914	1	901915	1

REPLACEMENT PARTS – CFST

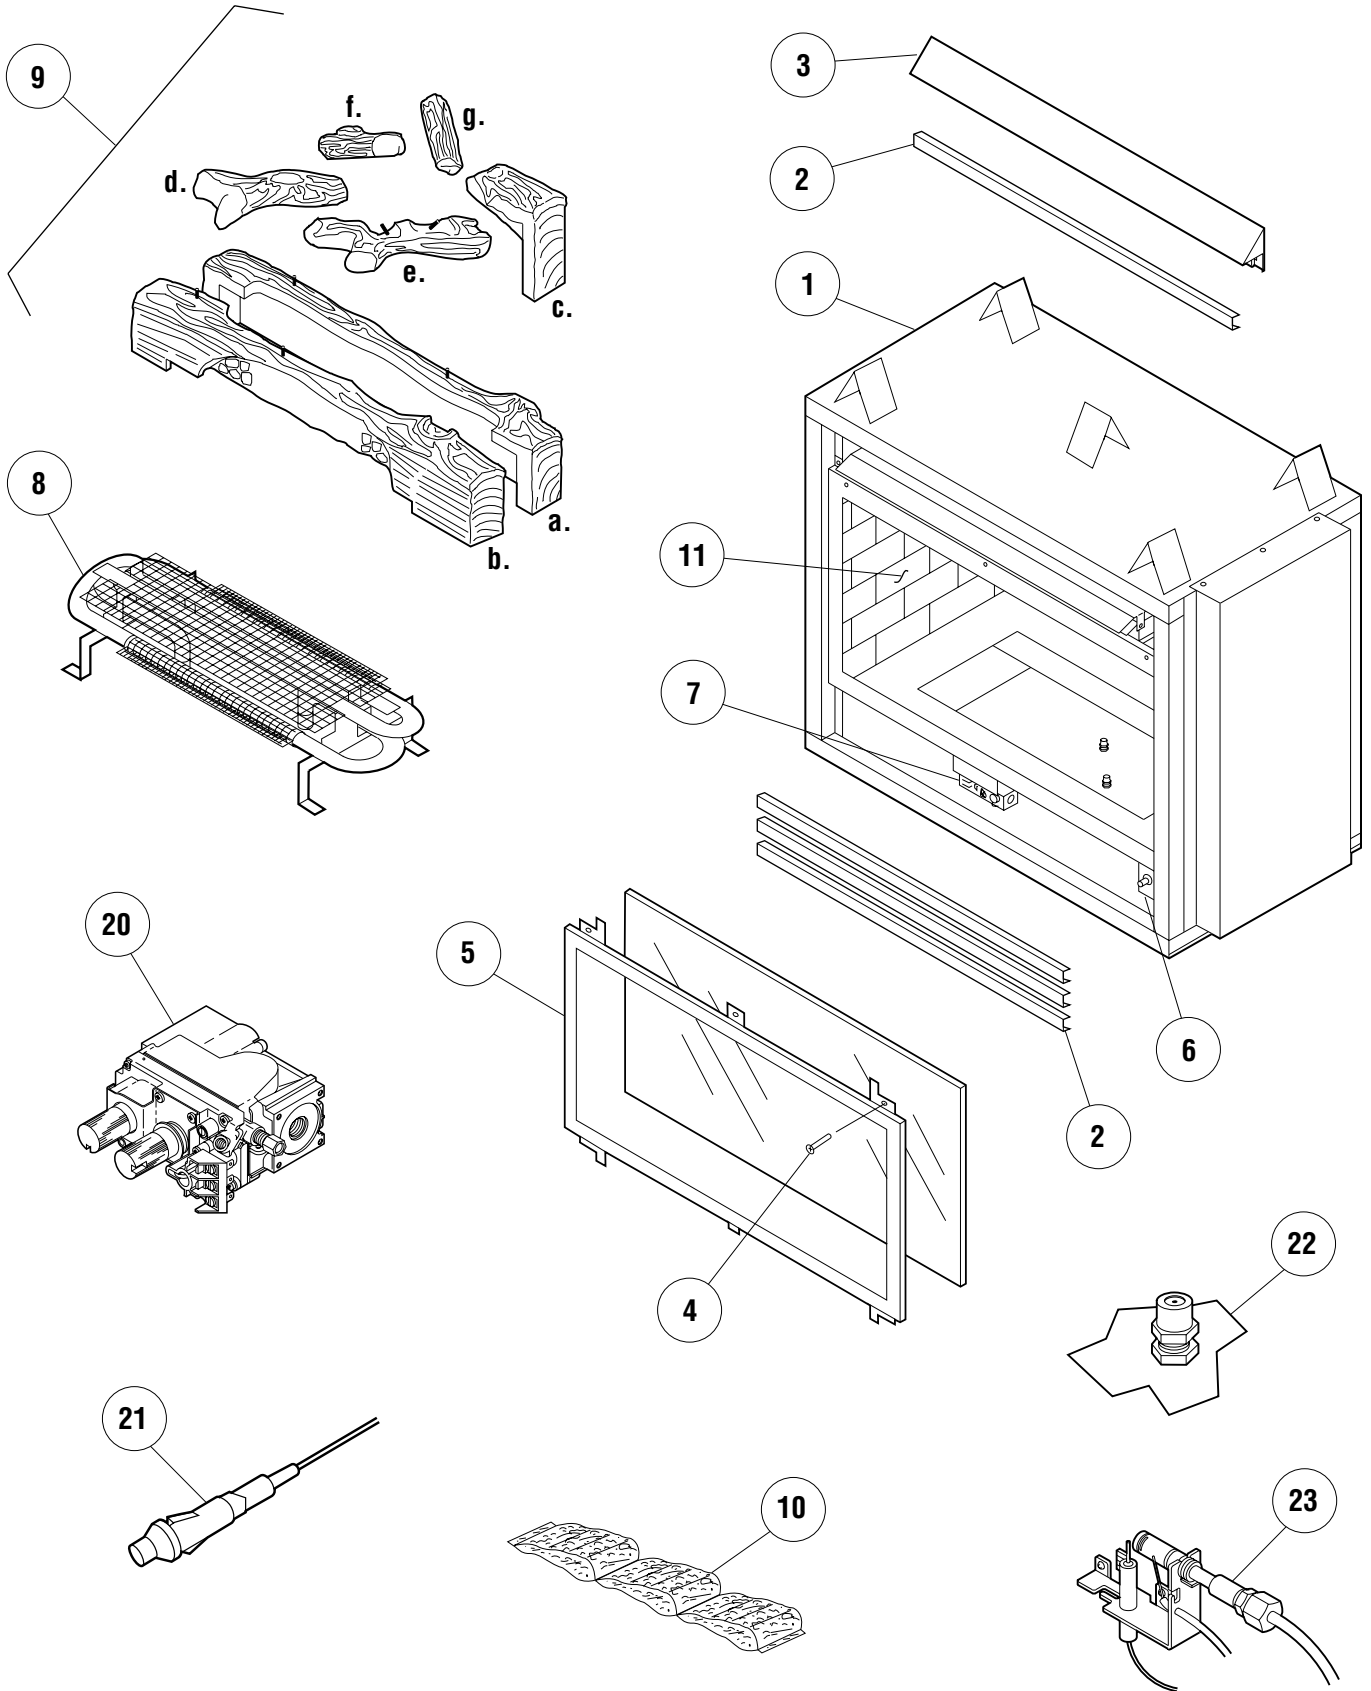

NOTE: DIAGRAMS & ILLUSTRATION NOT TO SCALE.

CFPF REPLACEMENT PARTS LIST

No.	Description	CFPF-CMN		CFPF-CMP	
		Part No.	Qty.	Part No.	Qty.
1.	Gas Fireplace Assembly	123073	1	123074	1
2.	Bar, Louver (Black) - Main Panel	104951	8	104951	8
3.	Bar, Louver (Black) - End Panel	104955	4	104955	4
4.	Hood (Black), Clean Face - Main Panel	108971	2	108971	2
5.	Hood (Black), Clean Face - End Panel	124761	1	124761	1
6.	Screw	000861	8	000861	8
7.	Replacement Glass Panel with Gasket - Main Panel	104852	2	104852	2
8.	Replacement Glass Panel with Gasket - End Panel	104853	1	104853	1
9.	Door Switch	094468	1	094468	1
10.	Gas Valve with Burner Assembly	123111	1	123112	1
11.	Burner Assembly	123151	1	123151	1
12.	Log Set (Split)	-	-	-	-
a.	Bottom, Front	903601	1	903601	1
b.	Bottom, Rear	903602	1	903602	1
c.	Log, Center	903603	1	903603	1
d.	Twig, Left	903604	1	903604	1
e.	Top Twig, Center	903605	1	903605	1
f.	Top Twig, Right	903606	1	903606	1
g.	Log, Top, Vertical	903607	1	903607	1
13.	Bag of Rockwool/Ember Coals	125011	1	125011	1
14.	Refractory Liner	903216	1	903216	1

CFPF GAS CONTROLS — MILLIVOLT

No.	Description	CFPF-CMN		CFPF-CMP	
		Part No.	Qty.	Part No.	Qty.
20.	Gas Valve - SIT	901916	1	901917	1
21.	Piezo Igniter	111061	1	111061	1
22.	Orifice, Main Burners	124291	2	124292	2
23.	Pilot Assembly (ODS)	901914	1	901915	1

REPLACEMENT PARTS – CFPF

