




IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.

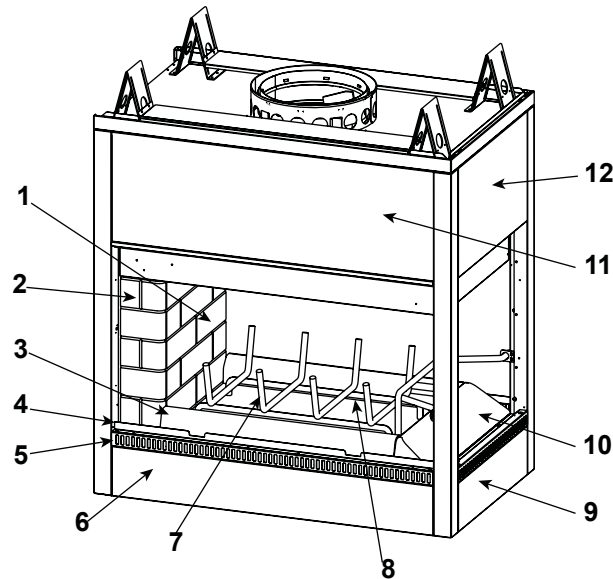

**Stocked
at Depot**

ITEM	DESCRIPTION	COMMENTS	PART NUMBER	
1	Refractory - Back		13319	
2	Refractory - Side	Qty 2 req	13320A	
3	Front Ashlip	Qty 2 req	13214A	
4	Door Track - Lower	Qty 2 req	15425	
5	Door Support	No longer available	13274D	
6	Face, Lower Front - Overlay only	No longer available	12847B	
7	Grate		GR3	Y
8	Refractory - Hearth		13321B	
9	Face, Lower Side - Overlay only	No longer available	13234B	
10	End Ashlip		13215A	
11	Face, Upper Front - Overlay only	No longer available	13232D	
12	Face, Upper Side - Overlay only	No longer available	13233C	
	Damper Repair Kit	No longer available	13942	
	Door Assembly, Glass	No longer available	15931B	
	Door Assembly, Left L	No longer available	15408A	
	Door Assembly, Right L	No longer available	15407	
	Door Track Support	Qty 4 req	12757	
	Firescreen Assembly	Qty 4 req	11855A	Y
	Firescreen Rod	Qty 4 req	11866B	Y
	Glass Panel, Door	No longer available	13714B	
	Glass Panel, End A	No longer available	13259A	
	Outside Air Kit	No longer available	13330	