


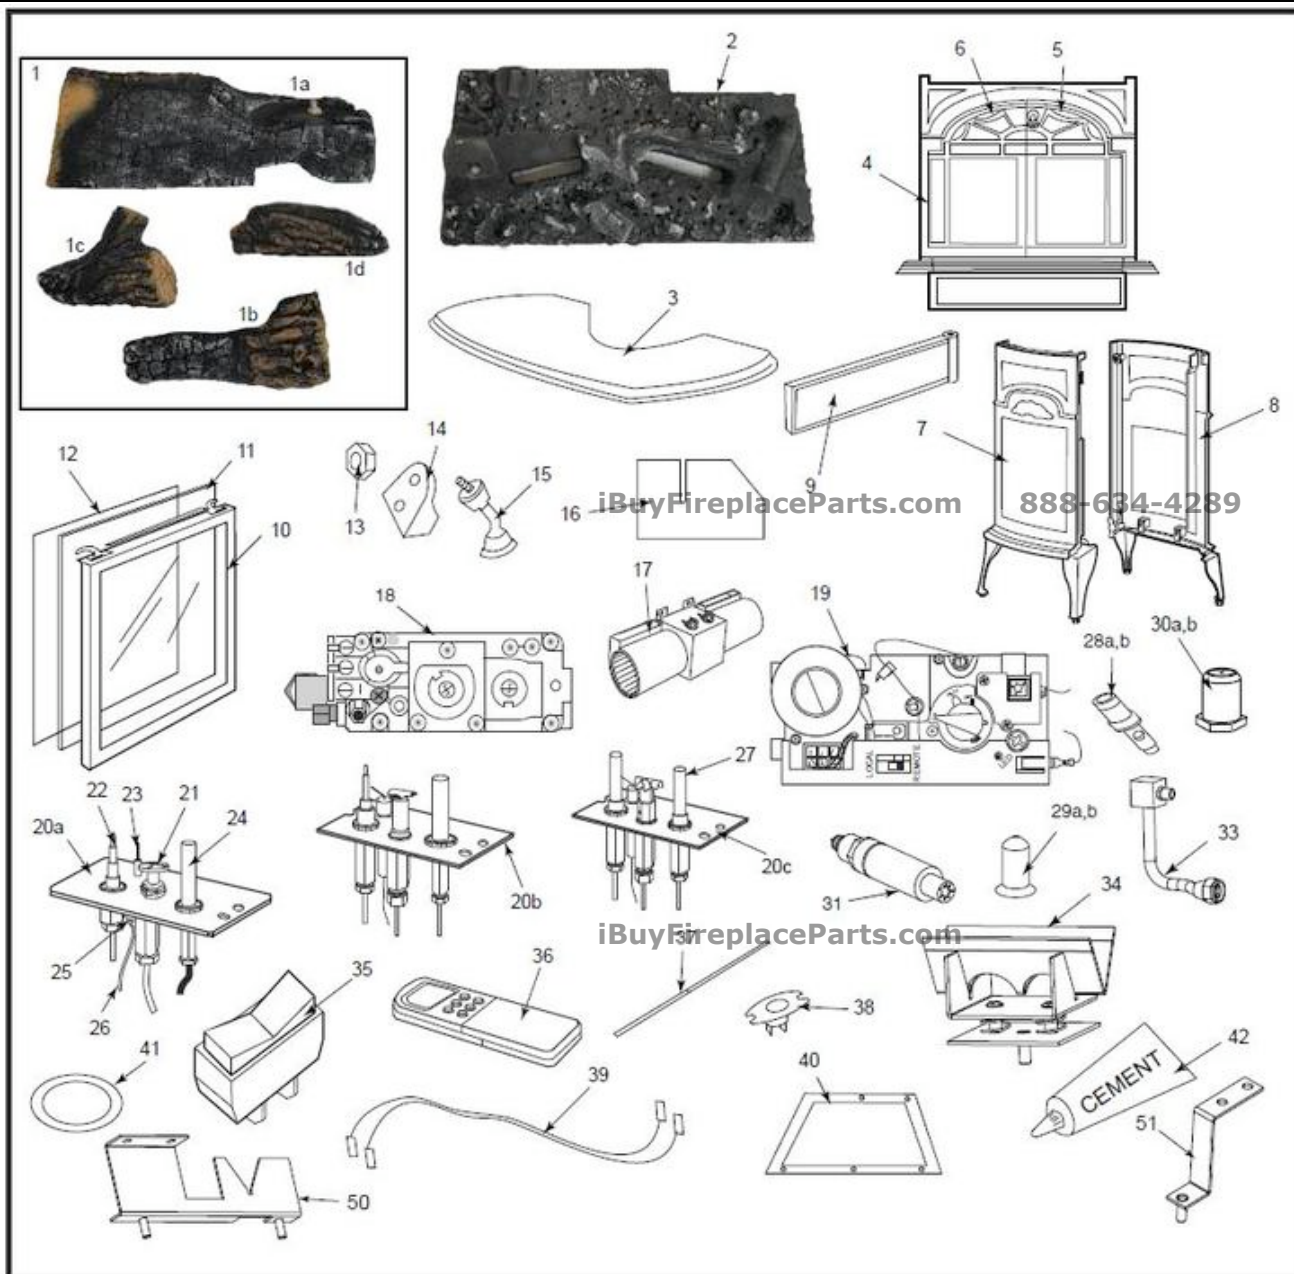

Ref#	Part#	Description	Qty Reqd
1	20012551	LOG SET - COMPLETE	1
1a	20012546	LOG REAR	1
1b	20012548	LOG RIGHT	1
1c	20012547	LOG LEFT	1
1d	20012915	LOG TOP	1
2	20012492	EMBER BED ASSEMBLY	1
3	30001276	TOP CLASSIC BLACK	1

3	30003305	TOP BISCUIT	1
3	30001283	TOP BORDEAUX	1
3	30003313	TOP CHESTNUT BROWN	1
3	30001304	TOP EBONY	1
3	30004897	TOP MAJOLICA BROWN	1
3	30001317	TOP MIDNIGHT BLUE	1
3	30003321	TOP VERMONT CLASSIC GREEN	1
3	30003636	TOP BRICK BLUE	1
3	30003644	TOP COUNTRY COOKWARE GRAY	1
3	30003652	TOP GRANITE GRAY	1
3	30003660	TOP SAGE GREEN	1
4	30001496	FRONT CLASSIC BLACK	1
4	30003302	FRONT BISCUIT	1
4	30001261	FRONT BORDEAUX	1
4	30003310	FRONT CHESTNUT BROWN	1
4	30001270	FRONT EBONY	1
4	30004899	FRONT MAJOLICA BROWN	1
4	30001314	FRONT MIDNIGHT BLUE	1
4	30003318	FRONT VERMONT CLASSIC GREEN	1
4	30003633	FRONT BRICK BLUE	1
4	30003641	FRONT COUNTRY COOKWARE GRAY	1
4	30003649	FRONT GRANITE GRAY	1
4	30003657	FRONT SAGE GREEN	1
5	30001138	DOOR RIGHT CLASSIC BLACK WITH HANDLE STUB	1
5	30003303	DOOR RIGHT BISCUIT WITH HANDLE STUB	1
5	30001262	DOOR RIGHT BORDEAUX WITH HANDLE STUB	1
5	30003311	DOOR RIGHT CHESTNUT BROWN WITH HANDLE STUB	1
5	30001271	DOOR RIGHT EBONY WITH HANDLE STUB	1
5	30001315	DOOR RIGHT MIDNIGHT BLUE WITH HANDLE STUB	1
5	30003319	DOOR RIGHT VERMONT CLASSIC GREEN WITH HANDLE STUB	1
5	30003634	DOOR RIGHT BRICK BLUE WITH HANDLE STUB	1
5	30003642	DOOR RIGHT COUNTRY COOKWARE GRAY WITH HANDLE STUB	1
5	30003650	DOOR RIGHT GRANITE GRAY WITH HANDLE STUB	1
5	30003658	DOOR RIGHT SAGE GREEN WITH HANDLE STUB	1
5	30004081	DOOR RIGHT CLASSIC BLACK WITH MAGNETS, NO HANDLE	1
5	30004089	DOOR RIGHT BISCUIT WITH MAGNETS, NO HANDLE	1
5	30004083	DOOR RIGHT BORDEAUX WITH MAGNETS, NO HANDLE	1
5	30004091	DOOR RIGHT CHESTNUT BROWN WITH MAGNETS, NO HANDLE	1
5	30004085	DOOR RIGHT EBONY WITH MAGNETS, NO HANDLE	1
5	30004900	DOOR RIGHT MAJOLICA BROWN	1
5	30004087	DOOR RIGHT MIDNIGHT BLUE WITH MAGNETS, NO HANDLE	1
5	30004093	DOOR RIGHT VERMONT CLASSIC GREEN WITH MAGNETS, NO HANDLE	1
5	30004095	DOOR RIGHT BRICK BLUE WITH MAGNETS, NO HANDLE	1
5	30004097	DOOR RIGHT COUNTRY COOKWARE GRAY WITH MAGNETS, NO HANDLE	1
5	30004099	DOOR RIGHT GRANITE GRAY WITH MAGNETS, NO HANDLE	1
5	30004101	DOOR RIGHT SAGE GREEN WITH MAGNETS, NO HANDLE	1
6	30001139	DOOR LEFT CLASSIC BLACK WITH HANDLE STUB	1
6	30003304	DOOR LEFT BISCUIT WITH HANDLE STUB	1
6	30001263	DOOR LEFT BORDEAUX WITH HANDLE STUB	1
6	30003312	DOOR LEFT CHESTNUT BROWN WITH HANDLE STUB	1
6	30001272	DOOR LEFT EBONY WITH HANDLE STUB	1
6	30001316	DOOR LEFT MIDNIGHT BLUE WITH HANDLE STUB	1
6	30003320	DOOR LEFT VERMONT CLASSIC GREEN WITH HANDLE STUB	1
6	30003635	DOOR LEFT BRICK BLUE WITH HANDLE STUB	1
6	30003643	DOOR LEFT COUNTRY COOKWARE GRAY WITH HANDLE STUB	1

6	30003651	DOOR LEFT GRANITE GRAY WITH HANDLE STUB	1
6	30003659	DOOR LEFT SAGE GREEN WITH HANDLE STUB	1
6	30004082	DOOR LEFT CLASSIC BLACK WITH MAGNETS, NO HANDLE	1
6	30004090	DOOR LEFT BISCUIT WITH MAGNETS, NO HANDLE	1
6	30004084	DOOR LEFT BORDEAUX WITH MAGNETS, NO HANDLE	1
6	30004092	DOOR LEFT CHESTNUT BROWN WITH MAGNETS, NO HANDLE	1
6	30004086	DOOR LEFT EBONY WITH MAGNETS, NO HANDLE	1
6	30004901	DOOR LEFT MAJOLICA BROWN	1
6	30004088	DOOR LEFT MIDNIGHT BLUE WITH MAGNETS, NO HANDLE	1
6	30004094	DOOR LEFT VERMONT CLASSIC GREEN WITH MAGNETS, NO HANDLE	1
6	30004096	DOOR LEFT BRICK BLUE WITH MAGNETS, NO HANDLE	1
6	30004098	DOOR LEFT COUNTRY COOKWARE GRAY WITH MAGNETS, NO HANDLE	1
6	30004100	DOOR LEFT GRANITE GRAY WITH MAGNETS, NO HANDLE	1
6	30004102	DOOR LEFT SAGE GREEN WITH MAGNETS, NO HANDLE	1
7	30001280	LEFT END CLASSIC BLACK	1
7	30003300	LEFT END BISCUIT	1
7	30001287	LEFT END BORDEAUX	1
7	30003308	LEFT END CHESTNUT BROWN	1
7	30001308	LEFT END EBONY	1
7	30004895	LEFT END MAJOLICA BROWN	1
7	30001321	LEFT END MIDNIGHT BLUE	1
7	30003316	LEFT END VERMONT CLASSIC GREEN	1
7	30003631	LEFT END BRICK BLUE	1
7	30003639	LEFT END COUNTRY COOKWARE GRAY	1
7	30003647	LEFT END GRANITE GRAY	1
7	30003655	LEFT END SAGE GREEN	1
8	30001279	RIGHT END CLASSIC BLACK	1
8	30003301	RIGHT END BISCUIT	1
8	30001286	RIGHT END BORDEAUX	1
8	30003309	RIGHT END CHESTNUT BROWN	1
8	30001307	RIGHT END EBONY	1
8	30004896	RIGHT END MAJOLICA BROWN	1
8	30001320	RIGHT END MIDNIGHT BLUE	1
8	30003317	RIGHT END VERMONT CLASSIC GREEN	1
8	30003632	RIGHT END BRICK BLUE	1
8	30003640	RIGHT END COUNTRY COOKWARE GRAY	1
8	30003648	RIGHT END GRANITE GRAY	1
8	30003656	RIGHT END SAGE GREEN	1
9	1301087	DOOR, CONTROL	1
10	30000127	GLASS FRAME ASSEMBLY	1
11	1601691	GLASS	1
12	1203702	GASKET, GLASS - MED. KNIT	7
13	1203290	NUT, HEX JAM 3/8-16 TOPLK-Z	1
14	5004025	PAWL ASSEMBLY ASH DOOR	1
15	30002717	FRONT STEEL HANDLE/SHAFT -NI/VER	1
16	20013026	RESTRICTOR PLATE	1
17	30000879	FK26 FAN SUBASSEMBLY (SDDVTC SERIES ONLY)	1
18	20012218	VALVE NOVA SIT 820.852	1
19	20003719	VALVE GAS HONEYWELL CONVERTIBLE RFN RV8310E	1
20a	10002264	PILOT ASSEMBLY 3WAY N/DV RN 0.199.706	1
20a	10002265	PILOT ASSEMBLY 3WAY N/DV RP 0.199.703	1
20b	20001115	PILOT PSE - NA175 NG	1
20b	20001116	PILOT PSE - NA175 LP	1
20c	20002266	PILOT ASSEMBLY 3WAY DV/RFN CS3003A2009	1
20c	20002268	PILOT ASSEMBLY 3WAY DV/RFP CS3003A2017	1

21	10002266	PILOT TOP CONVERTIBLE	1
22	24D0808	THERMOCOUPLE 24IN	1
23	10001297	ELECTRODE IGNITER W/CABLE SIT24	1
24	26D0566	THERMOPILE 18IN RS	1
25	57886	NUT ELECTRODE SIT NO. 0.974.144	1
26	26D0665	TUBING PILOT W/FITTINGS 1/8 X 24IN	1
27	20002400	THERMOPILE PSE FOR RF PILOTS - NO LONGER AVAILABLE SUB 26D0566	2
28a	37D0022	PILOT ORIFICE NO.62 - NG TOP CONVERTIBLE	1
28b	37D0023	PILOT ORIFICE NO.35 -LP TOP CONVERTIBLE	1
29a	20000908	PILOT ORIFICE PSE RFN	1
29b	20000907	PILOT ORIFICE PSE RFP	1
30a	20007347	ORIFICE HOOD NO.53 (.0595IN) LP	1
30b	20009310	ORIFICE HOOD NO.38 (.101IN) NAT	1
31	057958	IGNITER PIEZO W/NUT SIT	1
32	20010876	BRACKET PIEZO IGNITER (NOT SHOWN)	1
33	20012553	MANIFOLD ASSEMBLY	1
34	20012517	AIR SHUTTER ASSEMBLY	1
35	30000874	TRIM ON/OFF SWITCH	1
36	20002047	TRANSMITTER HONEYWELL RF	1
37	20003561	ANTENNE, HONEYWELL 395783-1	1
38	10002013	SENSOR 1450 CMG -8184-0032 - FSDHAG	1
39	10002582	WIRING HARNESS	1
40	20002282	GASKET, BASE PAN	1
41	1203687	GASKET, HE DOOR	1
42	1206122	GASKET CEMENT	1
43	30004175K	BLACK WOOD FALLAWAY HANDLE ASSEMBLY	1
44	20005227	DRAFT HOOD FINAL ASSEMBLY (NOT SHOWN)	1
45	53821	SWITCH BRACKET (NOT SHOWN)	1
46	30000245	STARTER PIPE (NOT SHOWN)	1
47	20003802	REAR SHROUD (NOT SHOWN)	1
48	1203560	1/4IN FIBER GLASS GASKET (NOT SHOWN)	1
49	30004112	MAGNET, DOOR (NOT SHOWN)	1
50	20012512	RIGHT BURNER SUPPORT ASSEMBLY	1
51	20012514	TIE BRACKET ASSEMBLY	1
N/S	20012735	CONVERSION KIT NG TO LP SDDVT SERIES	1
N/S	20012904	CONVERSION KIT NG TO LP SDDVTC SERIES	1
N/S	20012903	CONVERSION KIT LP TO NG SDDVT SERIES	1
N/S	20012905	CONVERSION KIT LP TO NG SDDVTC SERIES	1