


ILLUSTRATED PARTS BREAKDOWN

ConstructionParts.com 888-634-4289

MODEL CP350AK

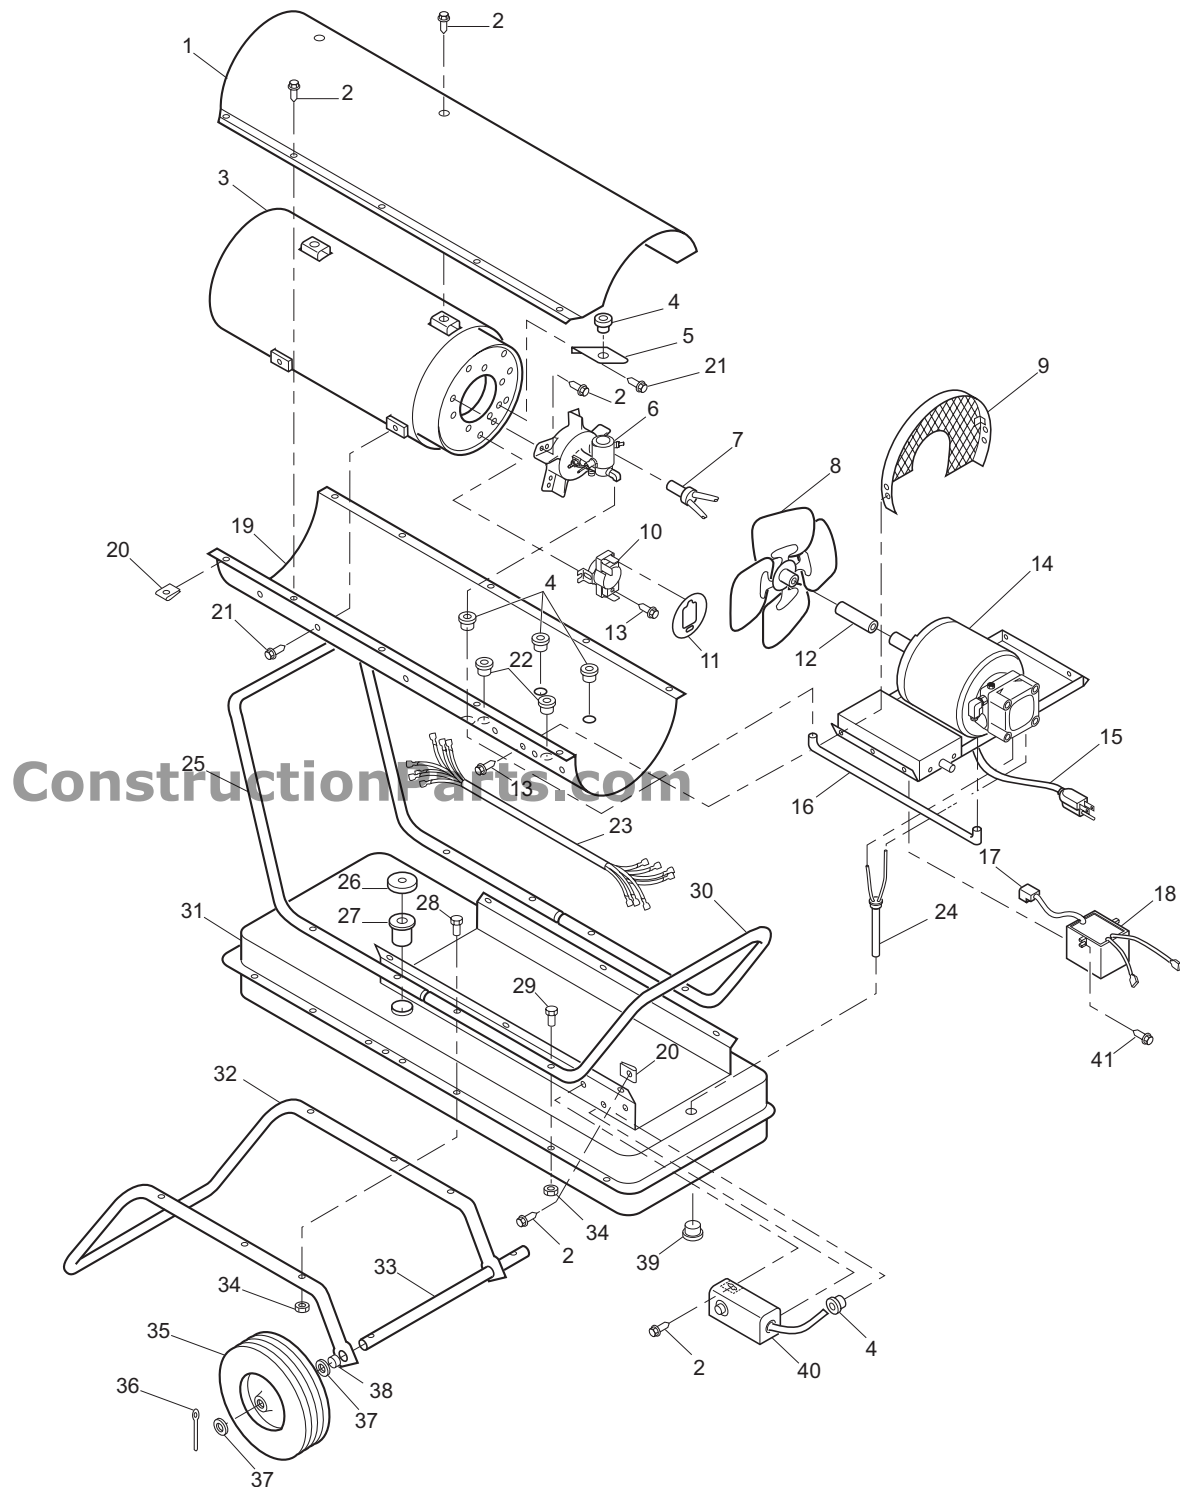

ConstructionParts.com 888-634-4289

PARTS LIST

ConstructionParts.com 888-634-4289

MODEL CP350AK


This list contains replaceable parts used in your heater. When ordering parts, follow the instructions on the back page of this manual.

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	130-20768	Upper shell	1
2	130-20805	Screw, #10-16 x 1/2"	15
3	130-20776	Combustion Chamber & Shield	1
4	130-20931	Bushing	7
5	130-20942	Air Deflector	5
6	400-20829	Burner Head Assembly	1
7	130-20828	Photocell Assembly	1
8	130-20845	Fan	1
9	130-20937	Fan Guard	1
10	120-20938	Fan Switch	1
11	130-20939	Fan Switch Cover	1
12	130-20941	Sleeve	1
13	130-20806	Screw, #10-16 x 3/8"	13
14	**	Motor & Pump Assembly	1
15	120-20892	Power Cord	1
16	130-20940	Fuel Line	1
17	120-20891	Ignition Boot	1
18	120-20890	Electronic Ignitor	1
19	130-20769	Lower Shell	1
20	130-20936	Clip Nut	16
21	130-20815	Screw, #12-14 x 1/2"	14
22	130-20932	Bushing	2
23	120-20897	Wire Harness	1
24	130-20943	Fuel Line Assembly	1
25	130-20780	Front Handle	1
26	130-20944	Fuel Cap	1
27	130-20946	Filler Neck Screen	1
28	130-20817	Screw, 1/4-20 x 2 1/4"	6
29	130-20816	Screw, 1/4-20 x 1 1/2"	2
30	130-20781	Rear Handle	1
31	130-20779	Fuel Tank	1
32	130-20846	Wheel Support Frame	1
33	130-20848	Axle	1
34	130-20818	Hex Lock Nut, 1/4-20	8
35	130-20847	Wheel	2
36	130-20824	Cotter Pin, 5/32 x 1 1/4"	2
37	130-20823	Flatwasher, 5/8"	4
38	130-20849	Wheel Spacer	2
39	130-20945	Drain Plug	1
40	120-20898	Thermostat	1
41	130-20807	Screw, #10-16 x 3/4"	2

** Not available as complete assembly. See page 18.

ConstructionParts.com 888-634-4289

ILLUSTRATED PARTS BREAKDOWN
ConstructionParts.com **888-634-4289**
MODEL CP600AK

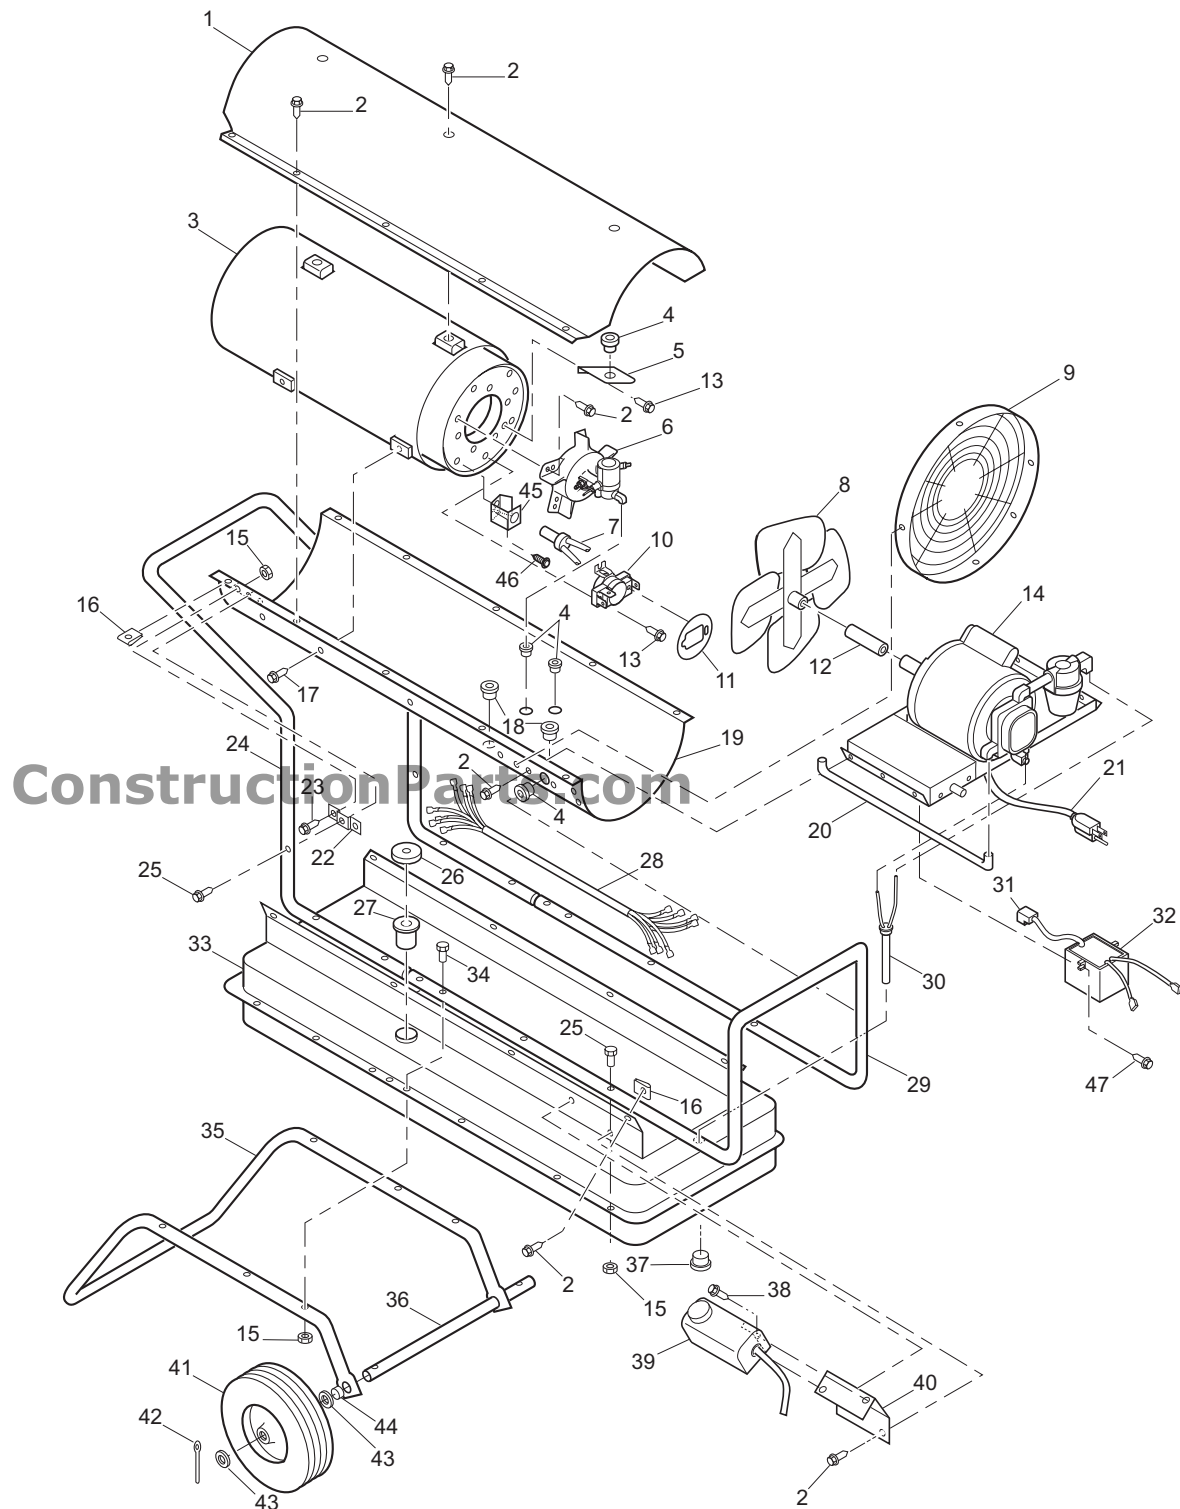

ConstructionParts.com **888-634-4289**

PARTS LIST

MODEL CP600AK **888-634-4289**

This list contains replaceable parts used in your heater. When ordering parts, follow the instructions on the back page of this manual.

REF.	NO.	PART NO.	DESCRIPTION	QTY.
	1	130-21889	Upper Shell	1
	2	130-20805	Screw, #10-16 x 1/2"	28
	3	130-21890	Combustion Chamber & Shield	1
	4	130-20931	Bushing	5
	5	130-21891	Air Deflector	5
	6	**	Burner Head Assembly	1
	7	130-21892	Photocell Assembly	1
	8	130-21893	Fan	1
	9	130-21894	Fan Guard	1
	10	120-20938	Fan Switch	1
	11	120-20939	Fan Switch Cover	1
	12	130-20941	Sleeve	1
	13	130-20806	Screw, #10-16 x 3/8"	15
	14	**	Motor & Pump Assembly	1
	15	130-20818	Hex Nut, 1/4-20	18
	16	130-20936	Clip Nut	18
	17	130-20815	Screw, #12-14 x 1/2"	4
	18	130-20932	Bushing	2
	19	130-21895	Lower Shell	1
	20	130-21896	Fuel Line	1
	21	120-20892	Power Cord	1
	22	130-21897	Support Bracket	2
	23	130-21898	Screw, 1/4-20 x 3/8"	4
	24	130-21899	Front Handle	1
	25	130-20816	Screw, 1/4-20 x 1 1/2"	6
	26	130-20944	Fuel Cap	1
	27	130-20946	Filler Neck Screen	1
	28	130-21900	Wire Harness	1
	29	130-21901	Rear Handle	1
	30	400-21902	Fuel Line Assembly	1
	31	120-20891	Ignition Boot	1
	32	120-20890	Electronic Ignitor	1
	33	130-21903	Fuel Tank	1
	34	130-21904	Screw, 1/4-20 x 2 3/4"	8
	35	130-21905	Wheel Support Frame	1
	36	130-20848	Axle	1
	37	130-20945	Drain Plug	1
	38	130-21906	Screw, #6-32 x 3/8"	2
	39	120-20898	Thermostat	1
	40	130-21907	Thermostat Bracket (Black)	1
	41	130-20847	Wheel	2
	42	130-20824	Cotter Pin, 5/32 x 1 1/4"	2
	43	130-20823	Flatwasher, 5/8"	4
	44	130-20849	Wheel Spacer	2
	45	130-21908	Photocell Bracket	1
	46	130-21909	Screw, #6-32 x 3/8"	2
	47	130-20807	Screw, #10-16 x 3/4"	2
	Δ	*	Internal Lockwasher No. 6	2
	Δ	130-21910	Nut, 6-32	2


* Standard hardware item

** Not available as complete assembly. See page 18.


Δ Not shown.

ILLUSTRATED PARTS BREAKDOWN

BURNER HEAD ASSEMBLY 350,000 AND 600,000 BTU/HR

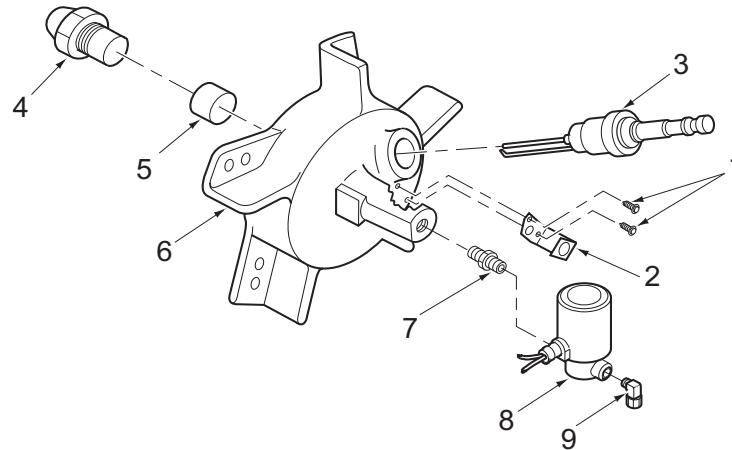

MOTOR AND PUMP ASSEMBLY 350,000 AND 600,000 BTU/HR HEATERS WITH FUEL FILTER INTERNAL TO PUMP

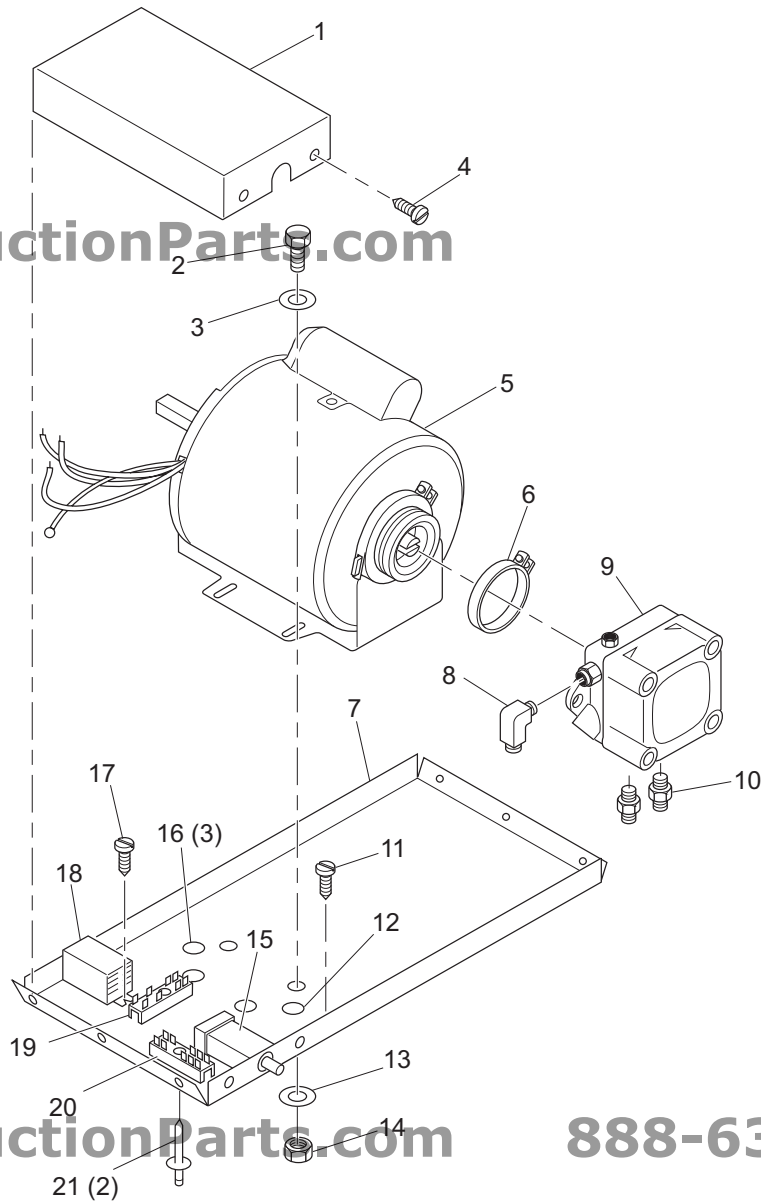

PARTS LIST

ConstructionParts.com 888-634-4289

BURNER HEAD ASSEMBLY 350,000 AND 600,000 BTU/HR

REF.	NO.	PART NO.	DESCRIPTION	QTY.
	1	130-20808	Screw, #6-32 x 3/8"	2
	2	130-20826	Photocell Bracket	1
	3	130-20830	Spark Plug	1
	4	130-20767	Nozzle (350,000 Btu/Hr)	1
		130-21911	Nozzle (600,000 Btu/Hr)	1
	5	130-20839	Plug	1
	6	130-20836	Burner Head Body	1
	7	130-20841	Straight Nipple	1
	8	120-20840	Solenoid Valve	1
	9	130-20842	Compression Elbow	1

MOTOR AND PUMP ASSEMBLY 350,000 AND 600,000 BTU/HR HEATERS WITH FUEL FILTER INTERNAL TO PUMP

REF.	NO.	PART NO.	DESCRIPTION	QTY.
	1	130-20868	Wiring Cover	1
	2	130-20819	Screw, 5/16-24 x 5/16"	4
	3	130-20820	External Lockwasher, 5/16"	4
	4	130-20806	Screw, #10-16 x 3/8"	3
	5	130-20870	Motor (350,000 Btu/Hr)	1
		130-21912	Motor (600,000 Btu/Hr)	1
	6	130-20866	Flange Clamp (holds pump to motor)	1
	7	130-20865	Motor Support (350,000 Btu/Hr)	1
		130-21913	Motor Support (600,000 Btu/Hr)	1
	8	130-20842	Compression Elbow	1
	9	130-20867	Fuel Pump	1
	10	130-20925	Straight Fitting	2
	11	130-20811	Screw, #8-32 x 3/8"	1
	12	130-22132	Strain Relief Bushing	1
	13	**	Lockwasher, 5/16"	4
	14	130-20821	Hex Nut, 5/16-24"	4
	15	130-20875	Flame-out Control	1
	16	130-20926	Snap Bushing	3
	17	130-20808	Screw, #6-32 x 3/8"	2
	18	130-20896	Power Relay	1
	19	130-20895	Terminal Board	1
	20	130-20887	Terminal Board	1
	21	130-20927	Rivet	2

** Standard hardware item

ConstructionParts.com

888-634-4289

ILLUSTRATED PARTS BREAKDOWN
MOTOR AND PUMP ASSEMBLY 350,000 AND 600,000 BTU/HR
FOR HEATERS WITH FUEL FILTER/CANISTER EXTERNAL TO PUMP

ConstructionParts.com



105850-01E

PARTS LIST

ConstructionParts.com 888-634-4289
MOTOR AND PUMP ASSEMBLY 350,000 AND 600,000 BTU/HR
FOR HEATERS WITH FUEL FILTER/CANISTER EXTERNAL TO PUMP

REF. NO.	PART NO.	DESCRIPTION	QTY.
1	130-20868	Wiring Cover	1
2	130-20819	Screw, 5/16-24 x 5/16"	4
3	130-20820	External Lockwasher, 5/16"	4
4	130-20806	Screw, #10-16 x 3/8"	3
5	120-20870	Motor (350,000 Btu/Hr)	1
	130-21912	Motor (600,000 Btu/Hr)	1
6	130-20866	Flange Clamp (holds pump to motor)	1
7	130-20865	Motor Support (350,000 Btu/Hr)	1
	130-21913	Motor Support (600,000 Btu/Hr)	1
8	130-20871	Street Elbow	2
9	130-20872	Pipe Nipple	1
10	400-20873	Fuel Filter Assembly	1
	130-20874	Filter Element (inside fuel filter assembly, includes rubber gaskets)	1
11	130-20869	90° Male Elbow	1
12	130-20842	Compression Elbow	1
13	130-20925	Straight Fitting	1
14	130-20867	Fuel Pump	1
15	130-20820**	Lockwasher, 5/16"	4
16	130-20821	Hex Nut, 5/16-24"	4
17	120-20875	Flame-out Control	1
18	120-20896	Power Relay	1
19	130-20926	Snap Bushing	3
20	130-20808	Screw, #6-32 x 3/8"	2
21	130-22132	Strain Relief Bushing	1
22	130-20811	Screw, #8-32 x 1/4"	1
23	120-20887	Terminal Board	1
24	120-20895	Terminal Board	1
25	130-20927	Rivet	2

** Standard hardware item

ConstructionParts.com

888-634-4289