




IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.

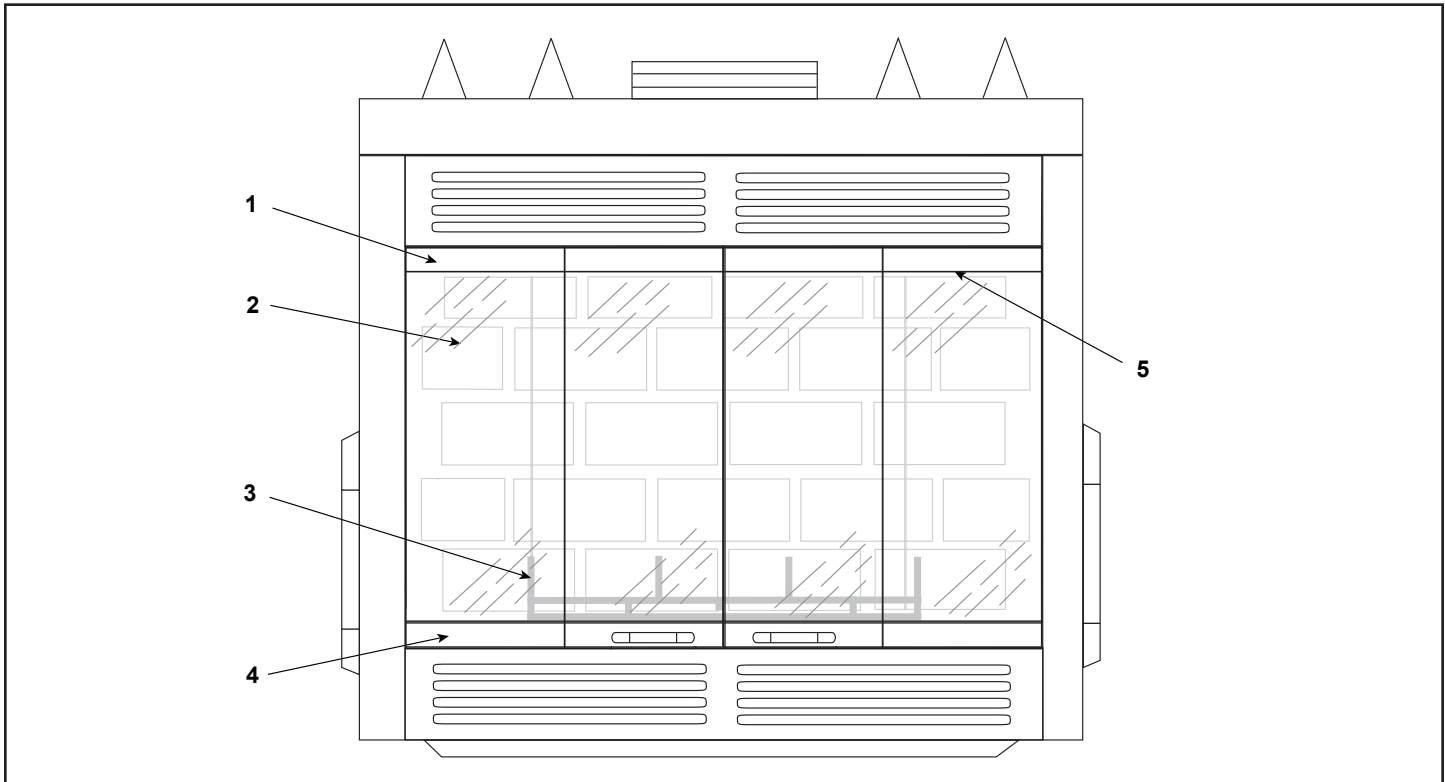

**Stocked
at Depot**

ITEM	DESCRIPTION	COMMENTS	PART NUMBER	
1	Door Track, Upper	No longer available	SRV15427	
2	Door Glass Panel	No longer available	11702B	
3	Grate		GR40	Y
4	Door Track, Lower	No longer available	SRV15427	
5	Smoke Shield	No longer available	12051C	
	Ashlip	No longer available	13623B	
	Damper Repair Kit	No longer available	13942	
	Firescreen Assembly - Qty. 2 req.	Pre 26/91	12048A	Y
		Post 26/91	16765	Y
	Firescreen - Hairpin Clip	Pkg of 24	101025/24	Y
	Refractory, Side - Qty. 2 req.	No longer available	11821	
		Post 7/91	16757	
	Refractory, Back	Pre 7/91	12031A	
		Post 7/91	16756A	
	Refractory, Hearth		12033A	
	Rocker Switch	No longer available	12661D	
	Smoke Baffle	No longer available	14079B	
	Smoke Shield - Extended	No longer available	12831B	
	Installation Instructions & Owner's Manual		12653B	