


PB-68011 Parts List

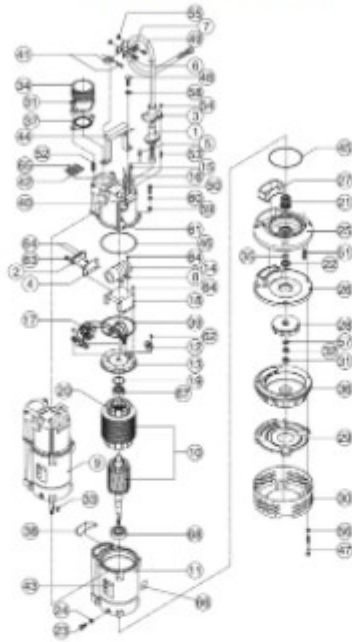

REF. NO.	PLRT NO.	DESCRIPTION	QTY.	REF. NO.	PLRT NO.	DESCRIPTION	QTY.
09	0400144	MOTOR ASSEMBLY	1	39	0400020	GASKET	1
10	0400145	ROTOR & STATOR	1	40	0400027	MOTOR COVER	1
11	0400498	STATOR HOUSING	1	41	0400028	SHACKLE	1
12	0400499	MOTOR PROTECTOR	1	42	0400487	PB-68011 Name Plate	1
13	0400500	HOUSING	1	43	0400029	WARNING LABEL	1
14	0400501	CAPACITOR	1	44	0400030	HANDLE	1
15	0400502	LEAD WIRE	1	45	0400031	O RING (G125)	1
16	0400503	EARTH WIRE	1	46	0400032	O RING (G140)	1
17	0400504	CENTRIFUGAL SWITCH	1	47	0400033	BOLT (M6x80) 1pc	4
18	0400505	CENTRIFUGAL SWITCH COVER	1	48	0400034	BOLT (M6x100) 1pc	2
19	0400506	WAVE WASHER 1pc	2	49	0400035	BOLT (M6x16) 1pc	2
20	0400507	KEY	1	50	0400036	BOLT (M6x25) 1pc	4
21	0400508	MECHANICAL SEAL	1	51	0400037	SCREW (M6x20) 1pc	4
22	0400509	OIL SEAL	1	52	0400038	STUD BOLT (M12) 1pc	2
23	0400510	OIL PLUG	1	53	0400039	STUD BOLT (M6) 1pc	4
24	55420500	M10 SEAL WASHER	1	54	0400040	NUT (M6) 1pc	4
25	0400512	MECHANICAL SEAL HOUSING	1	55	0400041	NUT (M6) 1pc	2
26	0400513	REAR COVER	1	56	0400042	WASHER (M6) 1pc	4
27	0400514	DISCHARGE COVER	1	57	0400043	WASHER (M12) 1pc	1
28	0400515	IMPELLER	1	58	0400044	WASHER (M12) 1pc	2
29	0400516	SUCTION COVER	1	59	0400045	WASHER 1pc	4
30	0400517	STRAINER	1	60	0400046	SPRING WASHER 1pc	4
31	0400518	NUT (M12) 1pc	2	61	0400047	SCREW (M4x8) 1pc	1
32	0400519	NUT (M12) 1pc	1	62	0400048	SCREW (M4x20) 1pc	2
33	0400520	KEY	1	63	0400049	SCREW (M4x22) 1pc	4
34	0400521	HOSE COUPLING	1	64	0400050	SCREW (M4x2) 1pc	8
35	0400522	SLEEVE	1	65	0400051	SCREW 1pc	2
36	0400523	PUMP CASING	1	66	0400052	PONSTAR LABEL	1
37	0400524	GASKET	1	67	0400496	BALL BEARING (UPPER)	1
38	0400525	GASKET	1	68	0400497	BALL BEARING (LOWER)	1