




IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.

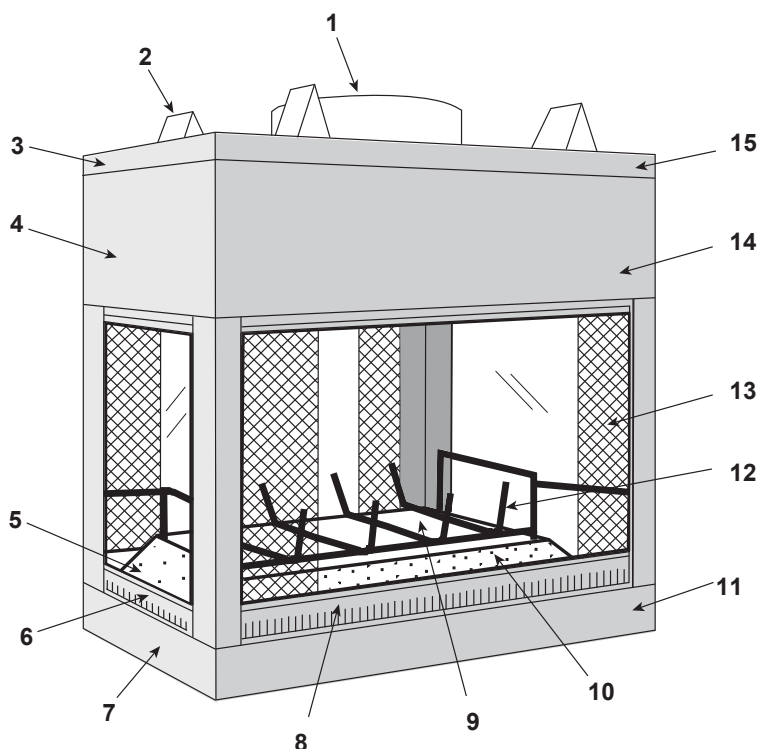

**Stocked
at Depot**

ITEM	DESCRIPTION	COMMENTS	PART NUMBER	
1	Starter Section		22072B	Y
2	Standoff, Top	Qty 4 req	11864i	
3	Face, Top End (overlay)	Qty 2 req	23911A	
4	Face, Upper End (overlay)	Qty 2 req	23949A	
5	Ashlip, End	Qty 2 req	13215A	
6	Door Support	Qty 2 req	23954A	
7	Face, Lower End (overlay)		23950A	
8	Door Track Support	Qty 4 req	12757	
9	Refractory, Hearth	No longer available	13213A	
10	Ashlip	Qty 2 req	13214A	
11	Face, Lower Front (overlay)	No longer available	12847B	
12	Grate		GR3	Y
13	Firescreen Assembly - Qty. 4 req.	Pre 22/97	11855A	Y
		Post 23/97	12267	Y
14	Face, Upper Front (overlay)	No longer available	13232D	
		No longer available	22937B	
15	Face, Top Front (overlay)	No longer available	13253G	
		No longer available	23953A	

Ending Manufacturing Date: Dec 2001

IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.



Stocked at Depot

[illegible]