

VERMONT CASTINGS

DIRECT VENT GAS HEATER

DH25

OWNER'S GUIDE

**INSTALLATION AND OPERATION PROCEDURES FOR THE #2626 NG
AND #2627 LP GAS HEATERS**

**TESTED AND LISTED TO ANSI STANDARD Z21.44-1995 AND CAN/CGA-2.19-M81 BY
INTERNATIONAL APPROVAL SERVICES, INC.**

WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS

- Turn main gas supply off. Open windows.
- Do not try to light any appliance. Extinguish any open flame.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.

WARNING: Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to this manual for correct installation and operational procedures. For assistance or additional information consult a qualified installer, service agency, or the gas supplier.



SAVE THIS MANUAL FOR FUTURE REFERENCE.

Parts List

DH25 FIREBOX #000-2626 (NG) AND #000-2627(LP)

1.	Firebox	130-1127
2.	Door, Heat Exchanger	130-1124
3.	Gasket, Heat Exchanger	120-3689
4.	Firebox Baffle	130-1118
5.	Flue Outlet	130-1125
6.	Air Passage	130-1126
7.	Gas Log Set	500-2984
8.	Gasket, Firebox	120-3668
9.	Glass	160-1691
10.	Gasket, Glass Panel	700-0909
11.	Frame, Glass Panel	140-8865
12.	Injector	
	Natural Gas	160-1666
	Propane	160-1668
13.	On/Off Switch	160-1597
14.	Gas Valve, LP	160-1750
	Gas Valve, NG	160-1752
15.	Bottom Heat Shield	140-8901
16.	Spacer	120-1798
17.	Reset Switch Assby.	500-3020
18.	Bottom	130-1112
19.	J-tube	160-1598
20.	Burner Base	130-1096
21.	Burner Top Gasket	120-3690
22.	Burner Top	140-8864
23.	Cable, Reset Switch	120-4867
24.	Pilot Gasket	120-3685
25.	Piezo	160-1304
26.	Pilot Assembly	160-1587
27.	Pilot Conversion Kit, LP	160-1324
28.	Gas Valve Bracket	140-8906
29.	Pilot Tube	160-1689
30.	Injector Tube	160-1712
31.	Ember Strip	140-8887
32.	Heat Exchanger Door Clips	160-1036
33.	NG Fuel Conversion Kit	000-2658
34.	LP Fuel Conversion Kit	000-2659

For replacement parts, or for information regarding parts or service, contact your local Vermont Castings Authorized dealer. For the name of the dealer nearest you contact:

The Majestic Products Company
1000 East Market Street
Huntington, IN 46750-2579
219-356-8000

Parts List

DH25 SHELL ASSEMBLY

- | | | | | |
|--------------------------------|----------|--|--------------------------------|----------|
| 1. Firebox Assembly | | | 12. 1/4-20x1/2" Hex Head Screw | 120-1338 |
| NG | 000-2626 | | 13. Washer, Wingscrew | 120-2470 |
| LP | 000-2627 | | 14. Washer | 120-2474 |
| 2. Rear shroud* | 140-8985 | | 15. Fender Washer | 120-2527 |
| 3. End, Left | 130-1116 | | 16. 1/4-20 Wingscrew | 120-1621 |
| 4. End, Right | 130-1115 | | 17. Snap Ring | 120-1987 |
| 5. Top | 130-1083 | | 18. Levelling Bolt | 120-1347 |
| 6. Front | 130-1105 | | 19. Side Heatshield* | 140-9065 |
| 7. Hinge, Control Door | 160-1670 | | | |
| 8. Control Door | 130-1087 | | | |
| 9. Heatshield | 140-8871 | | | |
| 10. Tab, Steel | 160-1488 | | | |
| 11. 1/4-20x3/8" Phillips Screw | 120-0993 | | | |

* (1) of item 2 and (2) of item 19 comprise assembly #500-3022.

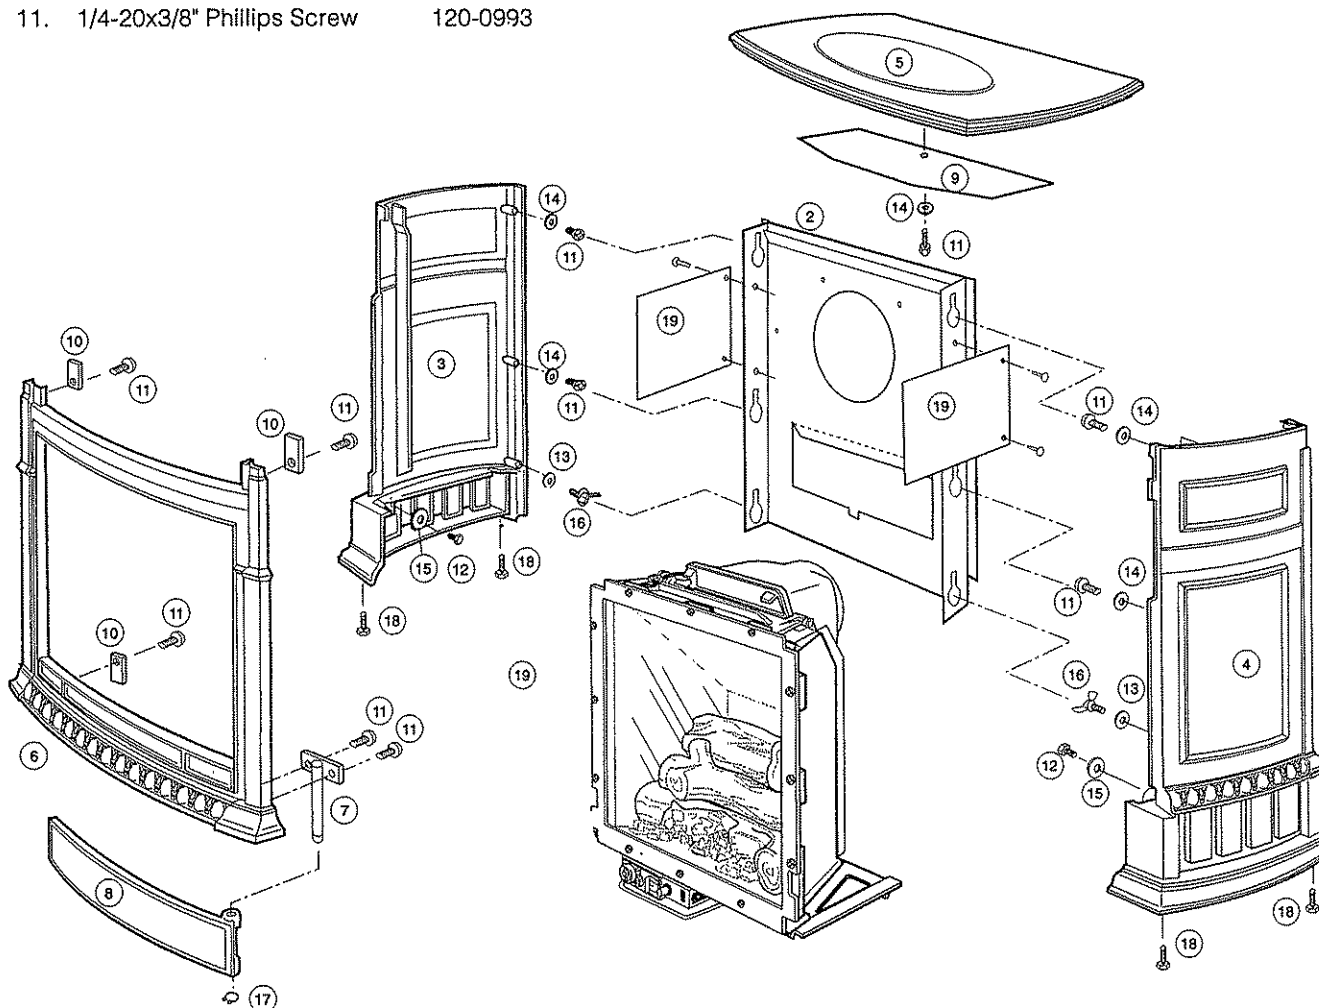


Figure 42. Illustrated Parts / Hearthmount Shell