




IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.

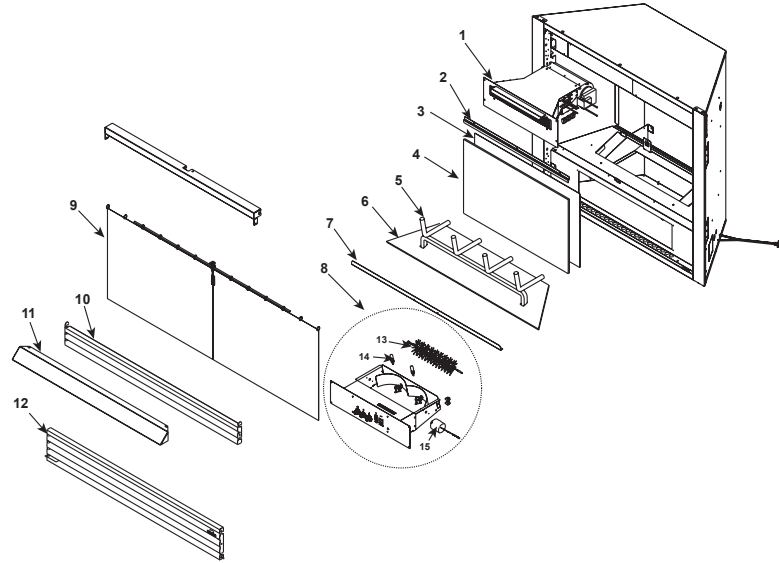

**Stocked
at Depot**

ITEM	DESCRIPTION	COMMENTS	PART NUMBER	
	Electric Log Assembly	No longer available	4030-055	
1	120VAC Heater Assembly	No longer available	SRV4030-541	
		No longer available	4050-104	
2	Upper Glass Retainer	No longer available	4030-218	
3	Lenticular Lens	No longer available	4030-840	
4	Back Glass Panel	No longer available	4038-810	
5	Grate	No longer available	4030-896	
6	Ember Bed	No longer available	4030-913	
7	Rock Retainer	No longer available	4030-219	
8	Light Tray Assembly	No longer available	SRV-020	
9	Screen & Rod Assembly	No longer available	4030-050	
10	Grille, Upper Assembly	No longer available	4030-528	
11	Hood	No longer available	4030-530	
12	Grille, Lower Assembly	No longer available	4030-047	
13	Flame Element Kit	No longer available	4030-200	
14	Halogen Light	Qty. 2 req.	33961	Y
15	Motor w/Vinyl Cover Assembly	No longer available	4030-883	
	Door Track	No longer available	4030-321	
	Door Pivot Clip		SRV31527	
	Light Receptacle	No longer available	33962	
	Power Cord	No longer available	4030-018	
	Reflective Flame Decal	No longer available	4021-190	
	Installation Manual		4038-780	