


DIMAS

ConstructionParts.com

888-634-4289

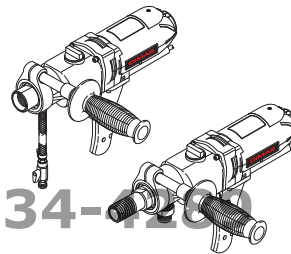

IPL, DIMAS DM225, DM225D, 2003-03, 531 07 99-05

DIMAS DM225
DIMAS DM225D

Reservdelar

Spare parts

Ersatzteile

Pieces de rechange

Piezas de repuesto

Ricambi

Peças
sobresselente

ConstructionParts.com

ConstructionParts.com

888-634-4289


531 07 99-05

DIMAS

No.	Pos.	Description	No.	Pos.	Description
503 21 20-02	J	Screw	531 07 42-58	A	Output shaft
503 26 60-01	D	Quick coupler	531 07 42-59	D	Adapter
503 78 22-04	J	Decal	531 07 42-60	D	Washer
505 53 03-00	G	Cable clamp	531 07 43-31	G	Elgard
505 53 03-03	G	Cord guard	531 14 09-50	D	Waterhose complete
505 53 03-56	G	Cord	531 14 09-51	H	Spanner 32mm
531 07 38-11	J	Brush rocker complete	531 14 09-52	H	Spanner 24mm
531 07 38-15	J	Inspection cover	531 14 09-53	H	Adapter
531 07 38-16	F	Bearing bush	531 14 09-54	H	Adapter
531 07 38-50	E	Gear box	531 14 09-55	J	Decal
531 07 38-51	F	Fan casing	531 14 09-56	J	Screw
531 07 38-53	B	Gear wheel	531 14 09-62	C	Washer
531 07 38-54	A	Gear shaft	531 14 09-63	C	Side handle fastener
531 07 38-55	A	Gear wheel	531 14 09-64	C	Side handle
531 07 38-56	B	Gear wheel	531 14 09-66	G	Cord PRCD
531 07 38-57	A	Gear wheel	531 14 09-67	J	Plastic box
531 07 38-58	J	Field coil 230v	725 53 42-55	DE	Screw
531 07 38-59	F	Armatur 230v	735 31 26-00	A	Retaining ring
531 07 38-60	D	Spacer	735 31 28-10	F	Retaining ring
531 07 38-61	B	Pressure washer	735 31 40-10	DE	Retaining ring
531 07 38-62	B	Bar	738 21 05-14	A	Ball bearing
531 07 38-63	B	Bush	738 22 99-27	B	Ball bearing
531 07 38-64	B	Nut			
531 07 38-65	DE	Gear handle			
531 07 38-66	DE	Gear shifter			
531 07 38-67	D	Gear box			
531 07 38-68	E	Protection tube			
531 07 38-69	E	Protection ring outer			
531 07 38-70	E	Protection ring inner			
531 07 38-71	A	Output shaft			
531 07 38-72	A	Output shaft			
531 07 38-73	B	Gear wheel compl			
531 07 38-74	J	Motor casing			
531 07 38-75	G	Handle			
531 07 38-76	E	Adapter			
531 07 38-77	F	Armature 110v			
531 07 38-78	J	Field coil 110v			
531 07 38-82	J	Level round			
531 07 38-83	J	Level straight			
531 07 38-86	DE	Radial sealing			
531 07 38-87	E	Radial sealing			
531 07 38-88	D	Radial sealing			
531 07 38-90	G	Switch			
531 07 38-95	E	Sealing ring			
531 07 39-00	J	Carbon brush			
531 07 39-28	B	Cup spring			
531 07 39-35	A	Retaining ring			
531 07 39-36	F	Arched washer			
531 07 39-37	A	Retaining ring			
531 07 39-40	F	Ball bearing			
531 07 39-46	A	Ball bearing			
531 07 39-47	F	Needle bearing			
531 07 39-54	J	Screw			
531 07 39-55	G	Screw			
531 07 39-56	DE	Screw			
531 07 39-61	DE	Screw			
531 07 39-62	J	Screw			
531 07 39-66	J	Locking washer			
531 07 39-67	DE	Locking washer			
531 07 39-71	J	Spacer			
531 07 39-75	A	Retaining ring			
531 07 39-78	E	Retaining ring			
531 07 39-80	DE	Cylndric pin			
531 07 39-86	F	O-ring			
531 07 39-87	J	Washer			
531 07 39-89	GJ	Washer			
531 07 39-90	F	Radial sealing			
531 07 39-94	A	Key			
531 07 39-96	F	Rubber ring			
531 07 40-01	GJ	Screw			


A

DIMAS DM225

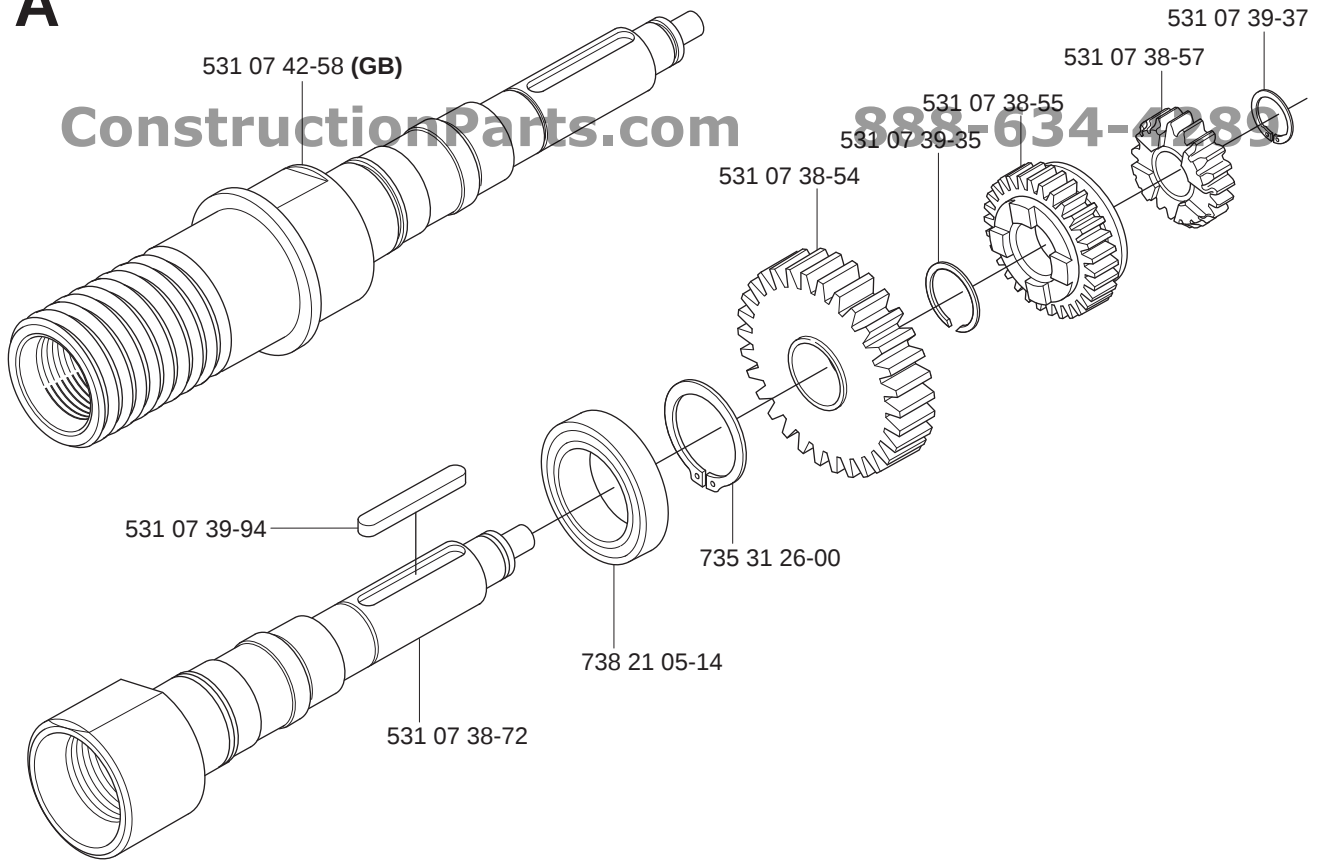


A


DIMAS DM225D

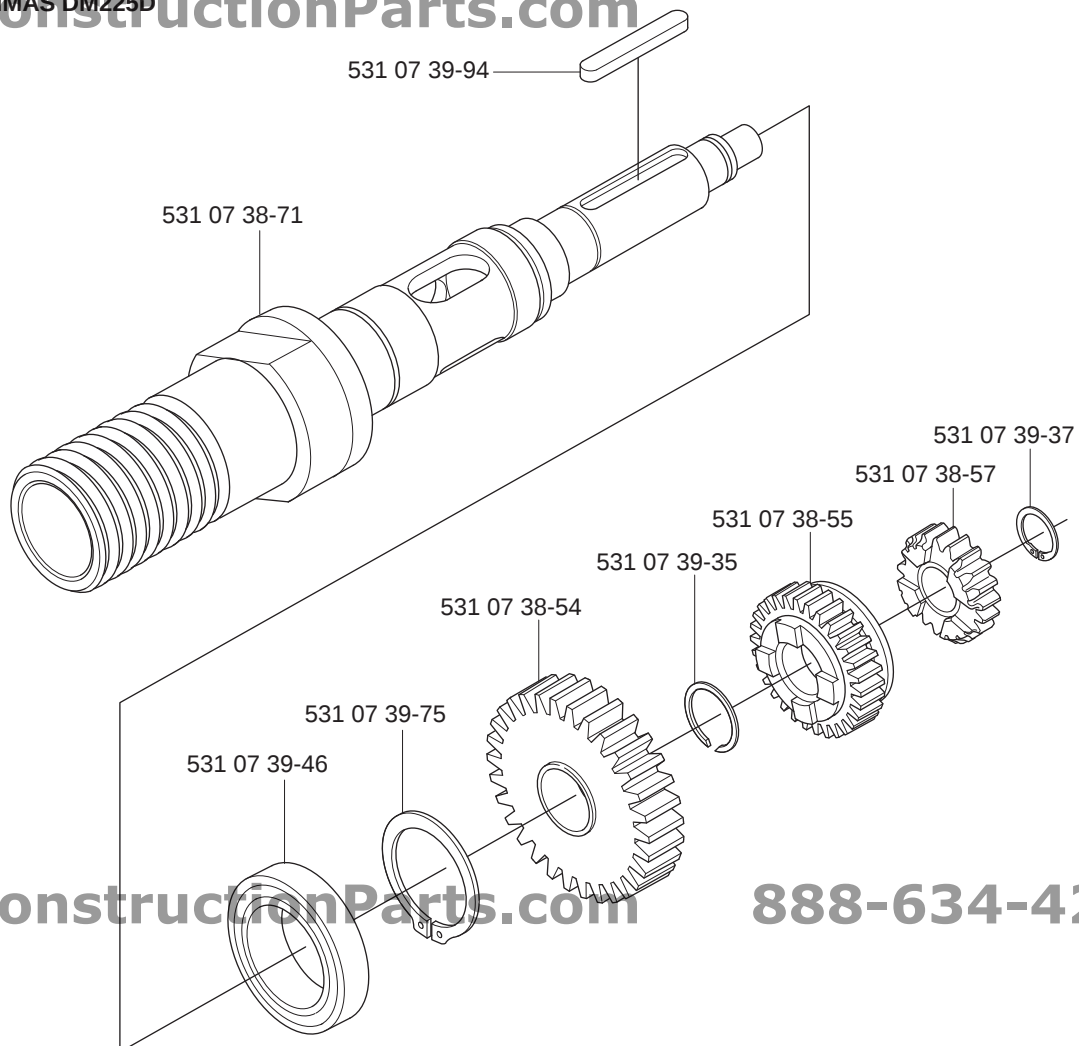

B

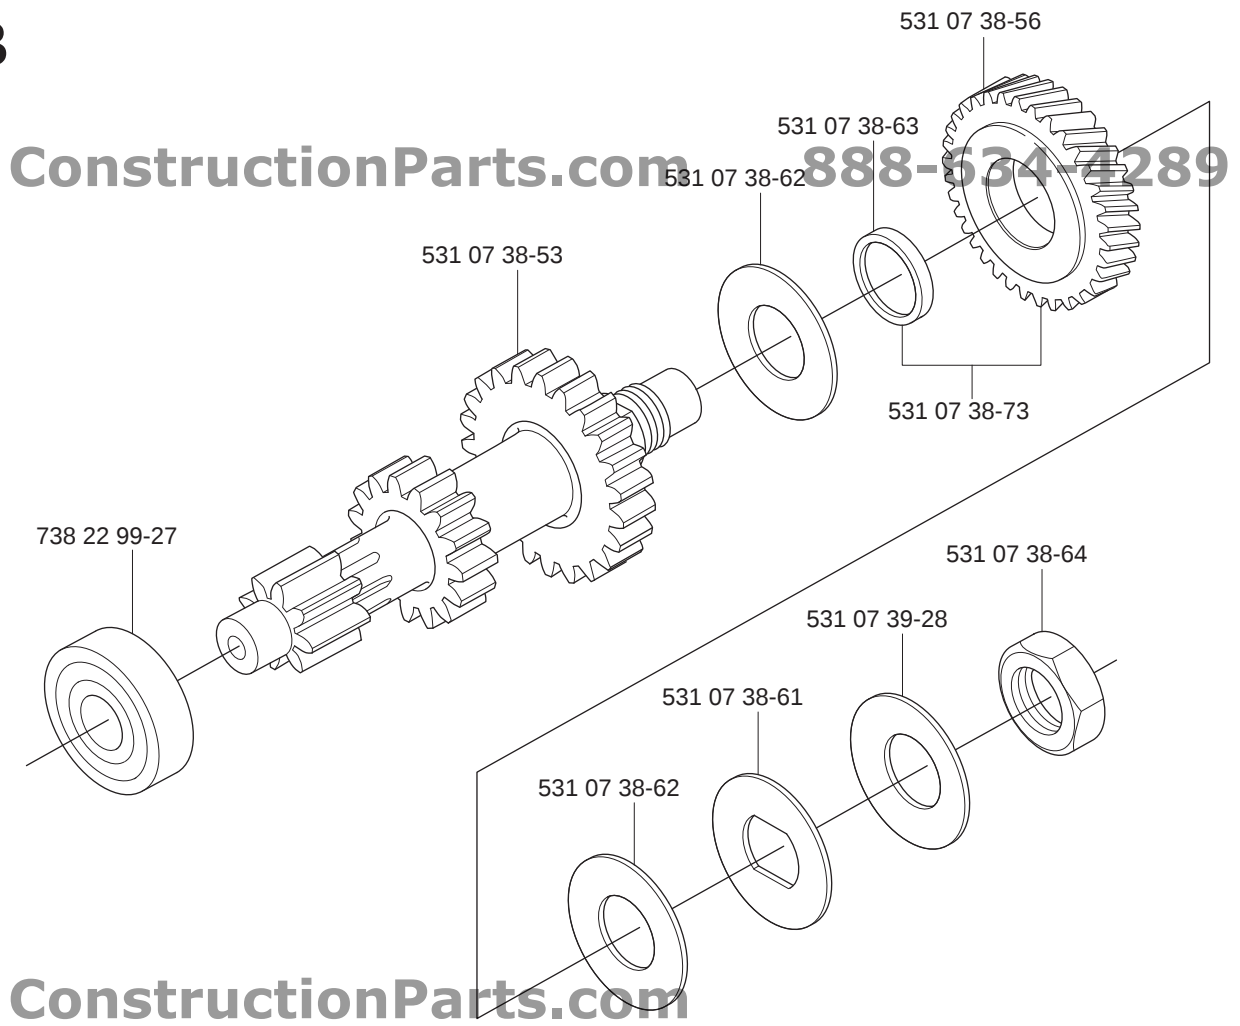

C

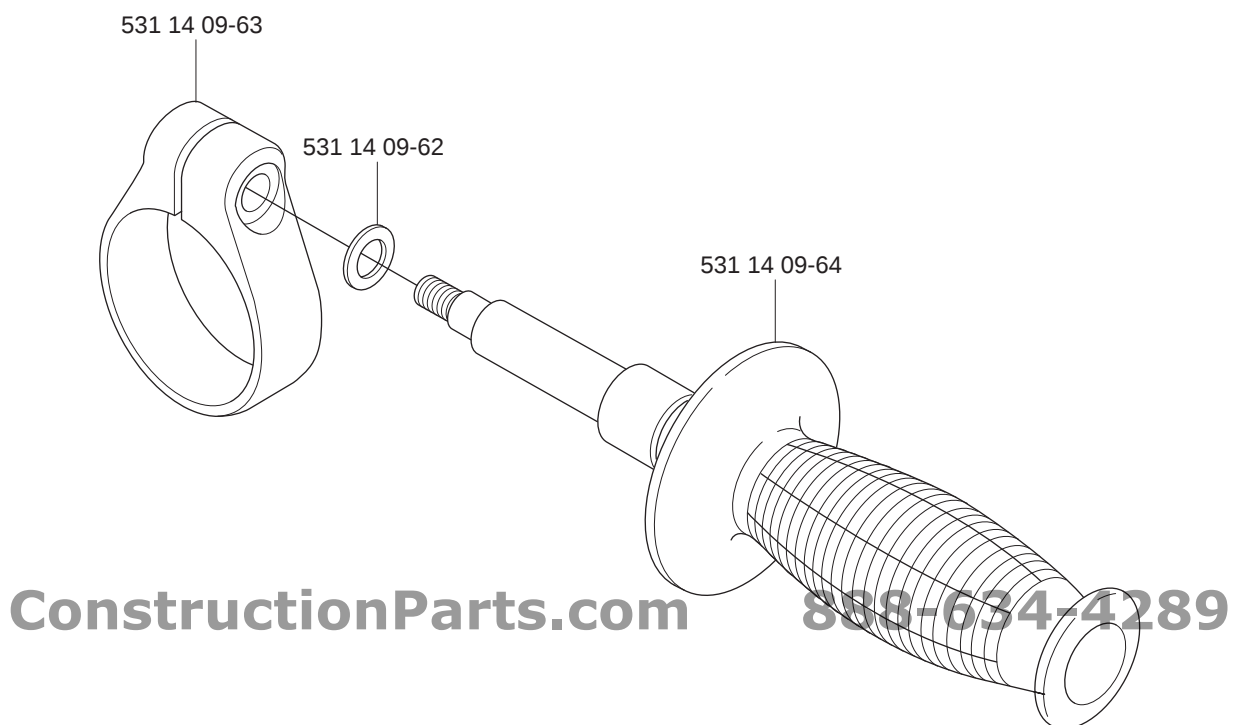

D

DIMAS DM225


ConstructionParts.com

888-634-4289

ConstructionParts.com

ConstructionParts.com

888-634-4289

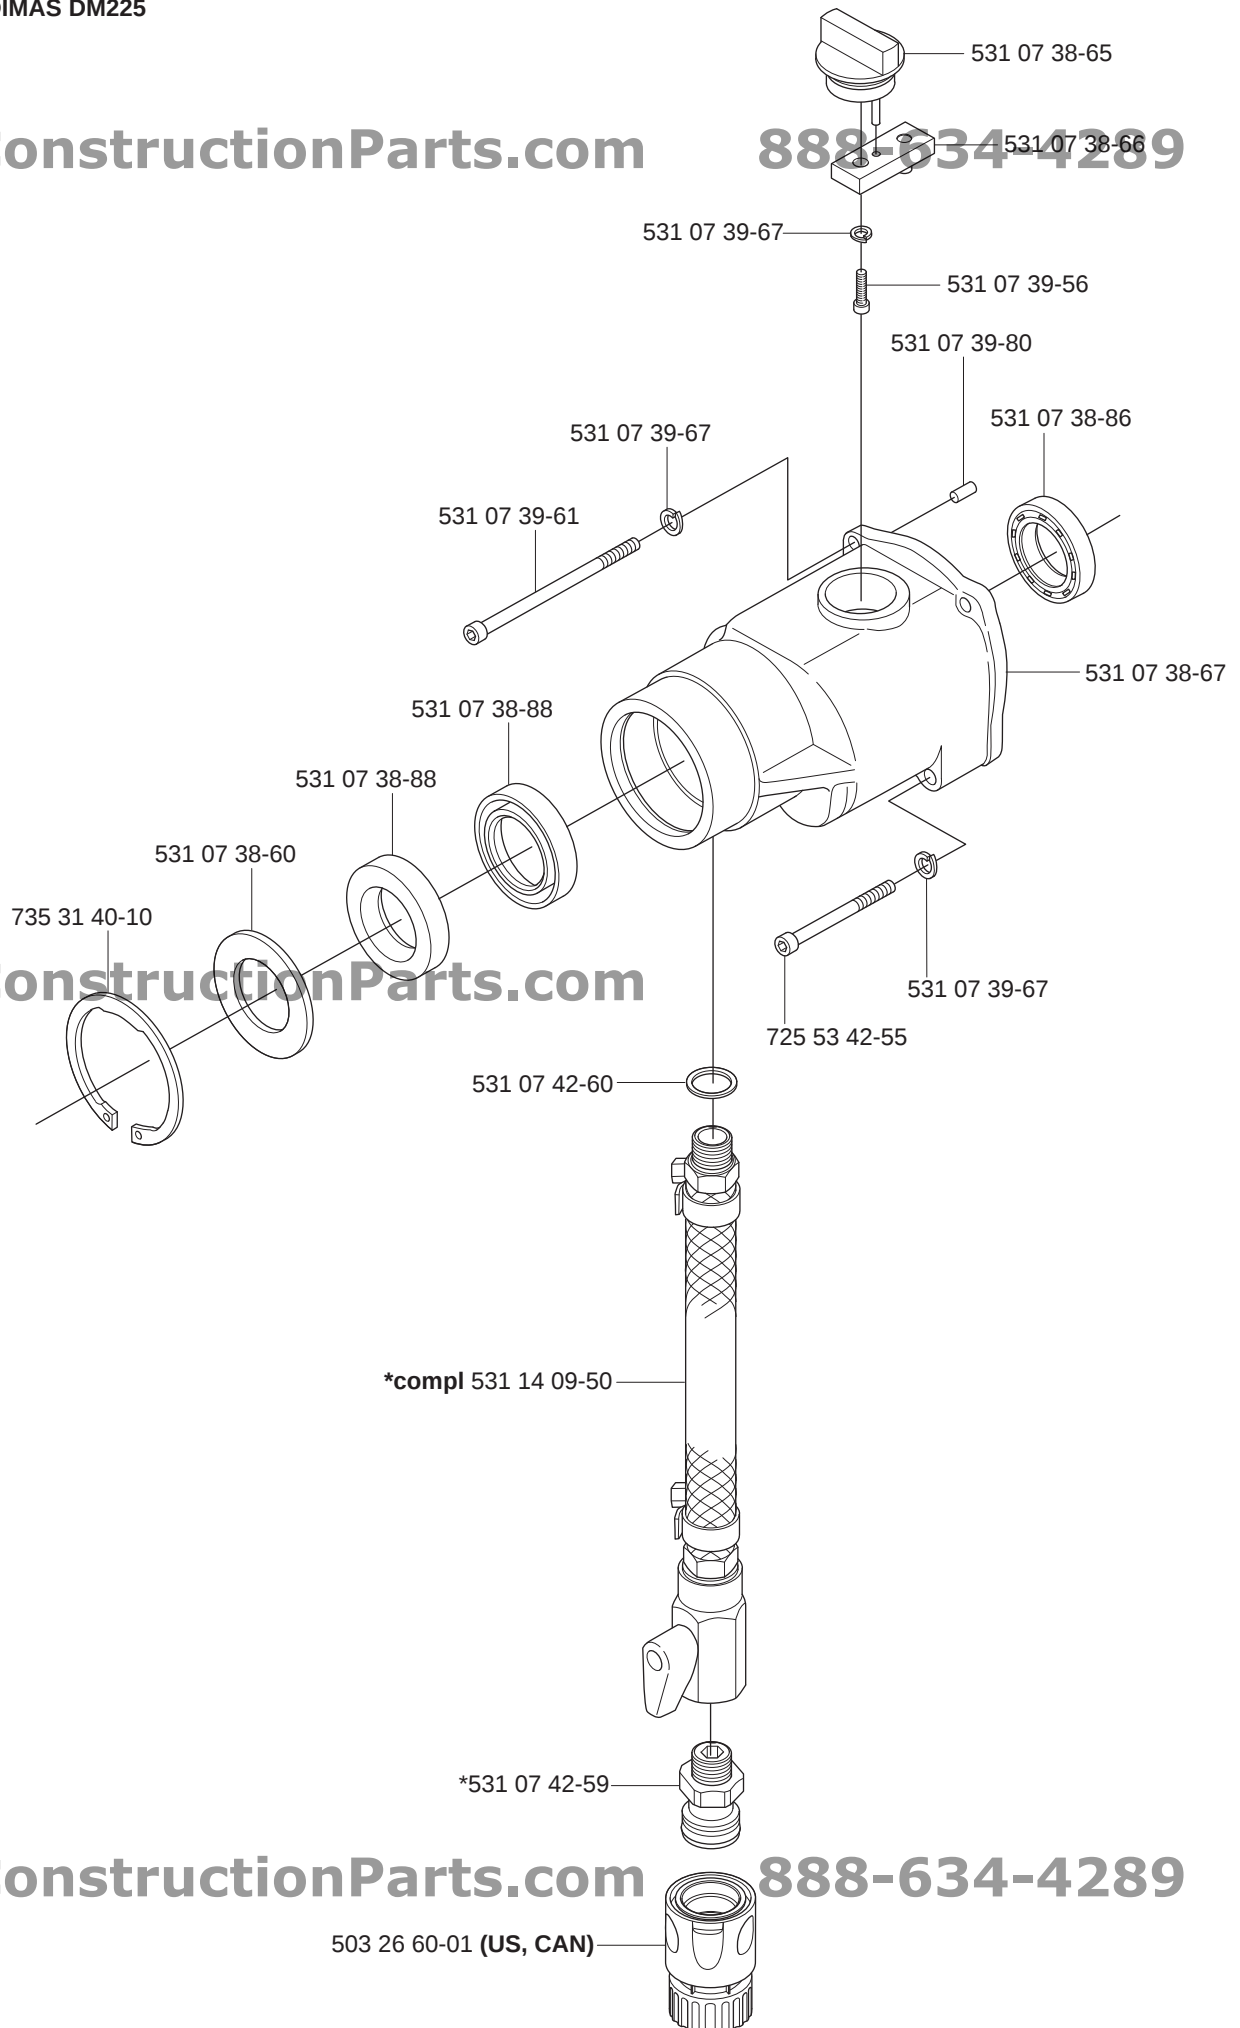

E

DIMAS DM225D


ConstructionParts.com

888-634-4289

ConstructionParts.com

ConstructionParts.com



888-634-4289

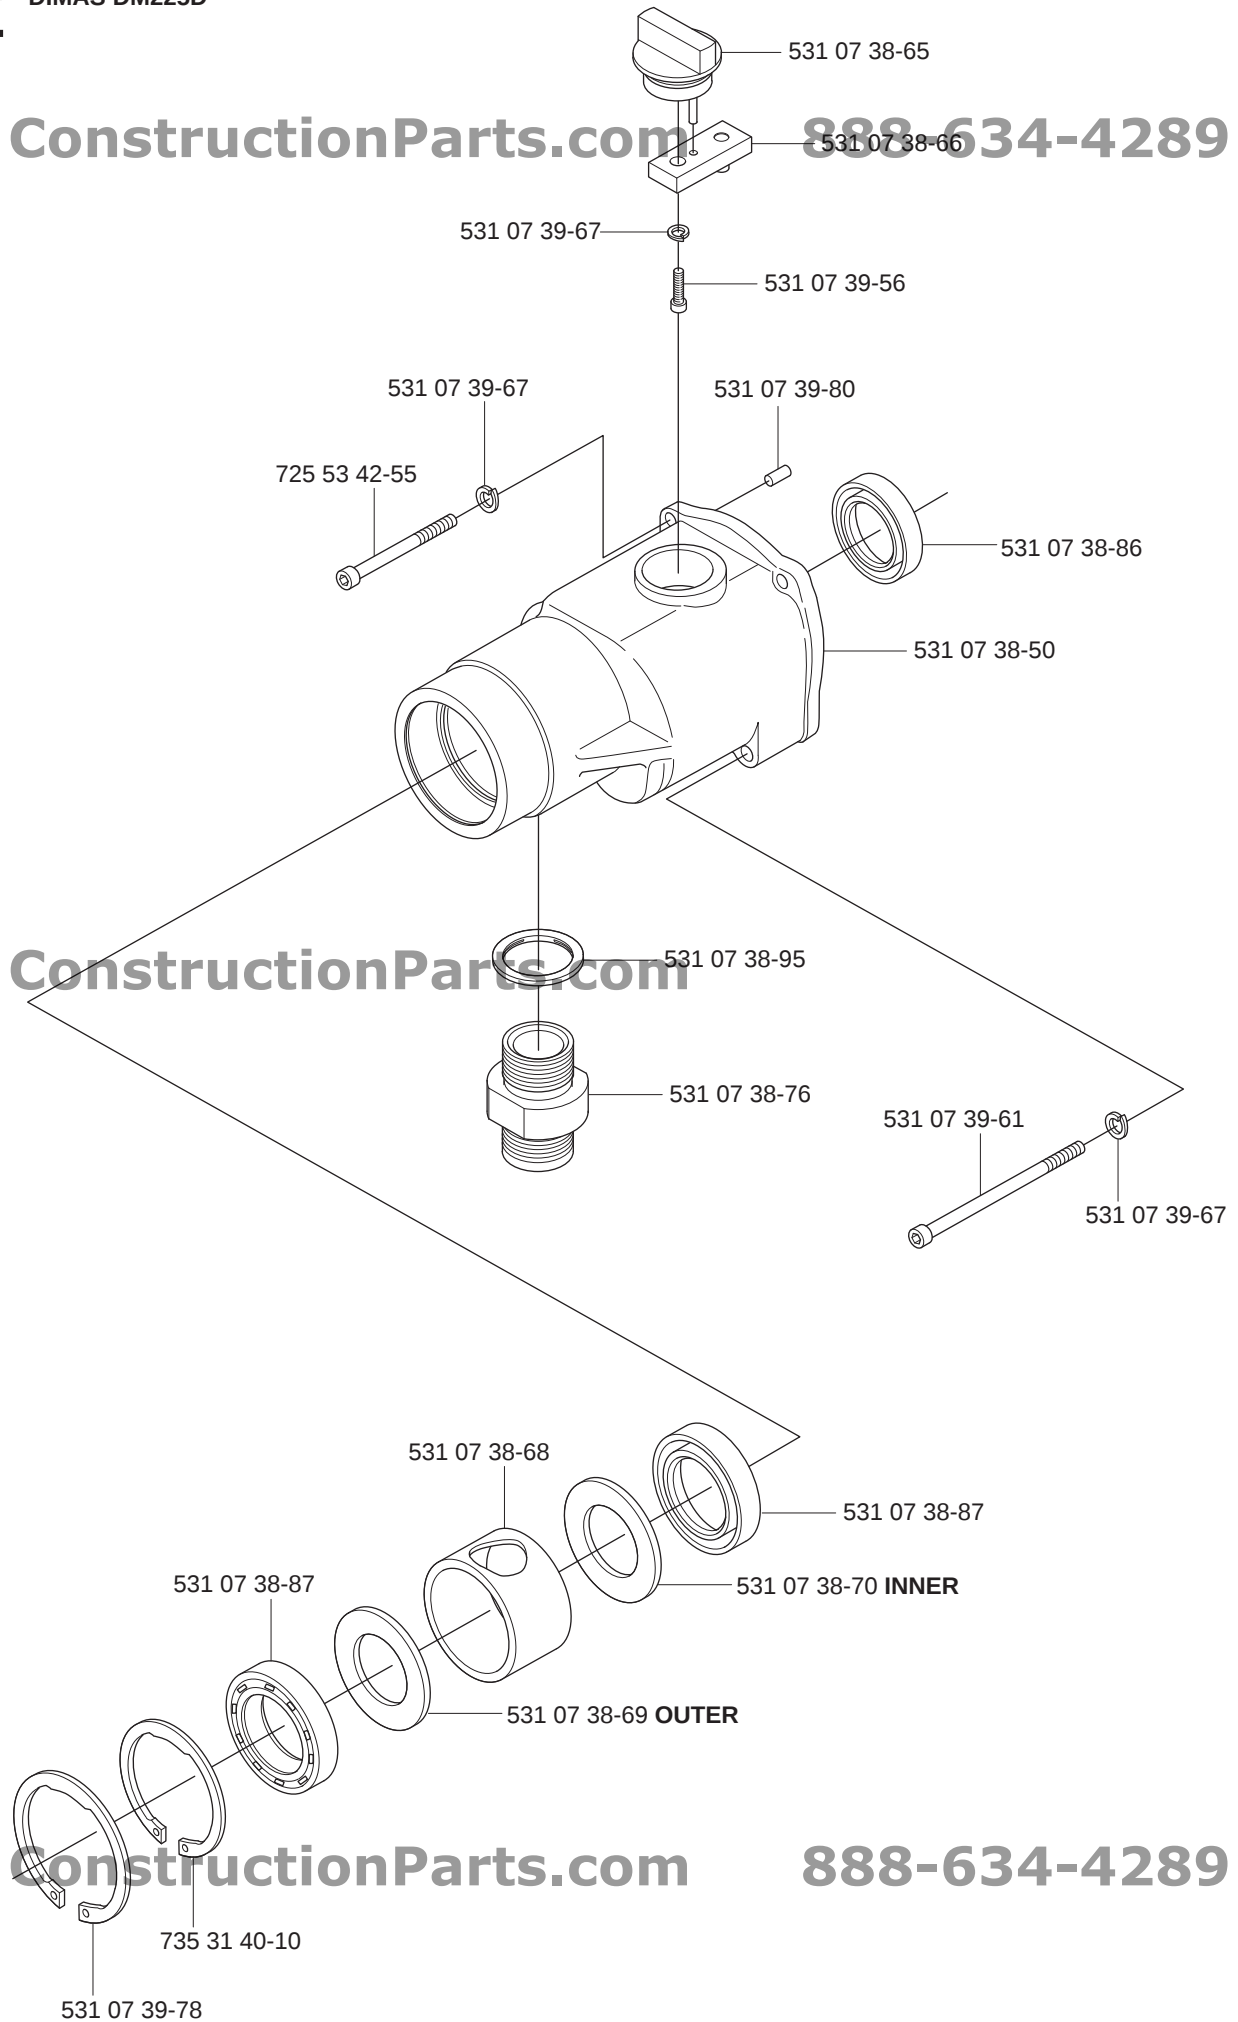

F

ConstructionParts.com


888-634-4289

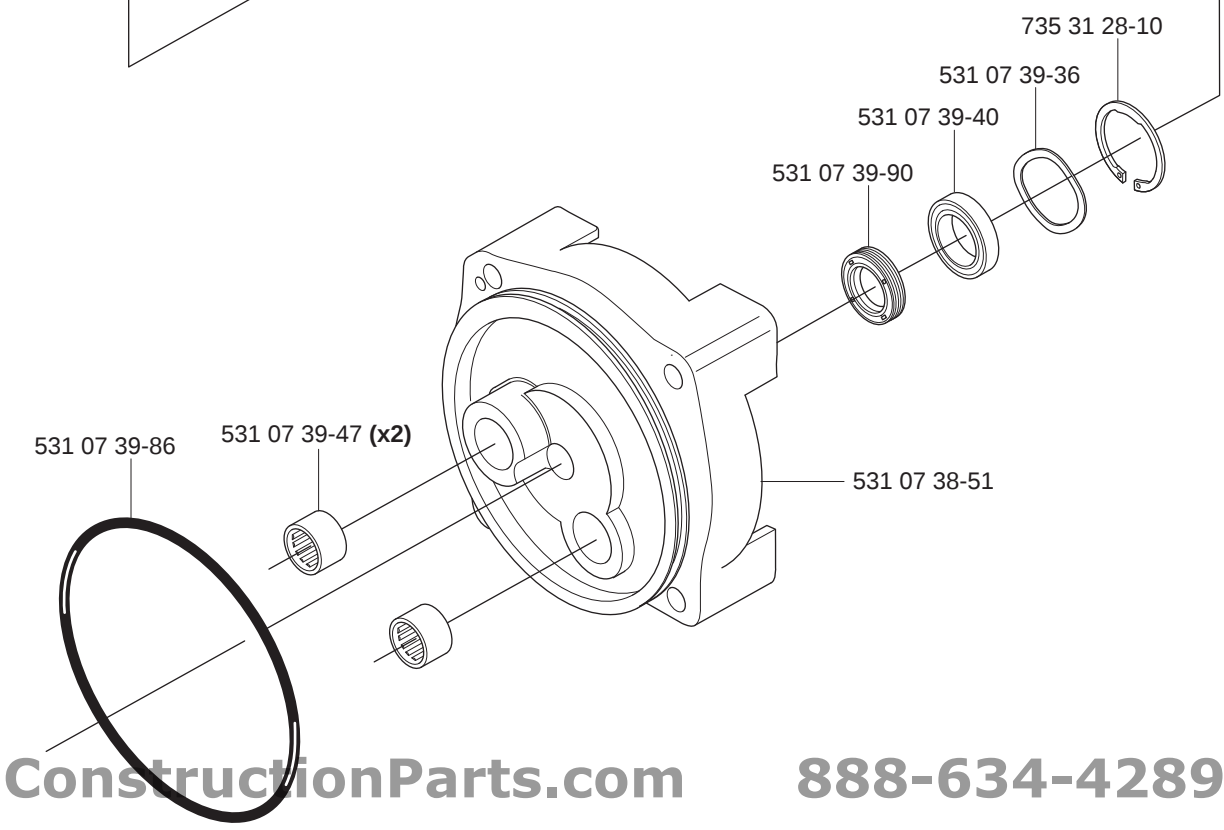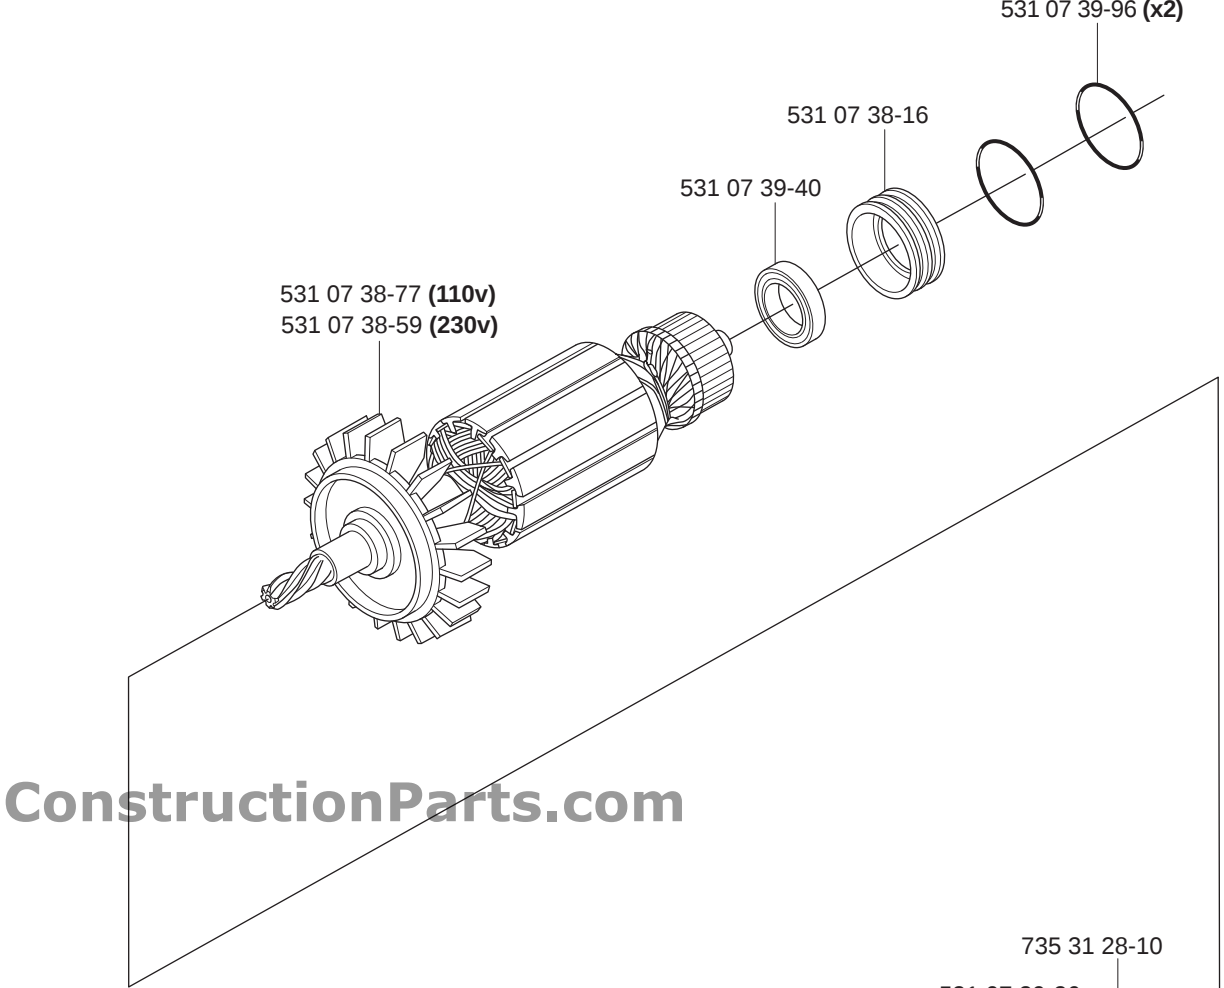

G

ConstructionParts.com

888-634-4289

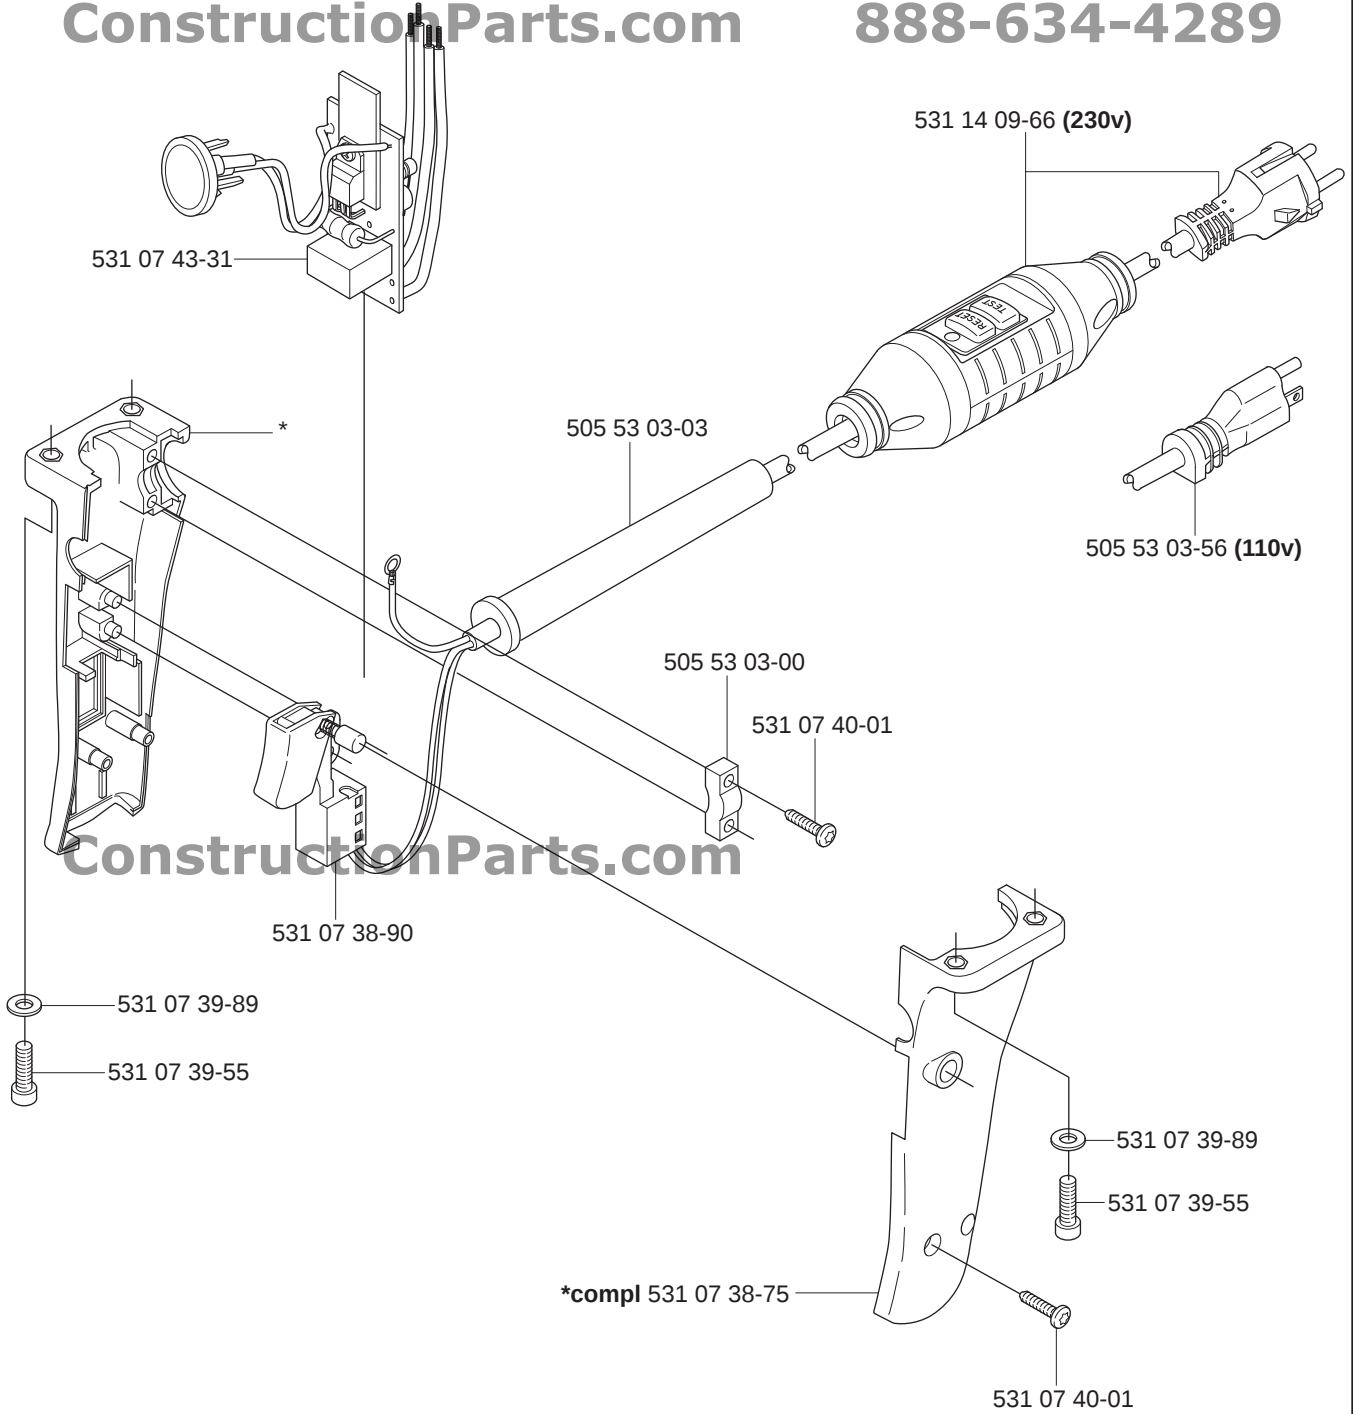


ConstructionParts.com

888-634-4289

H

ConstructionParts.com

888-634-4289

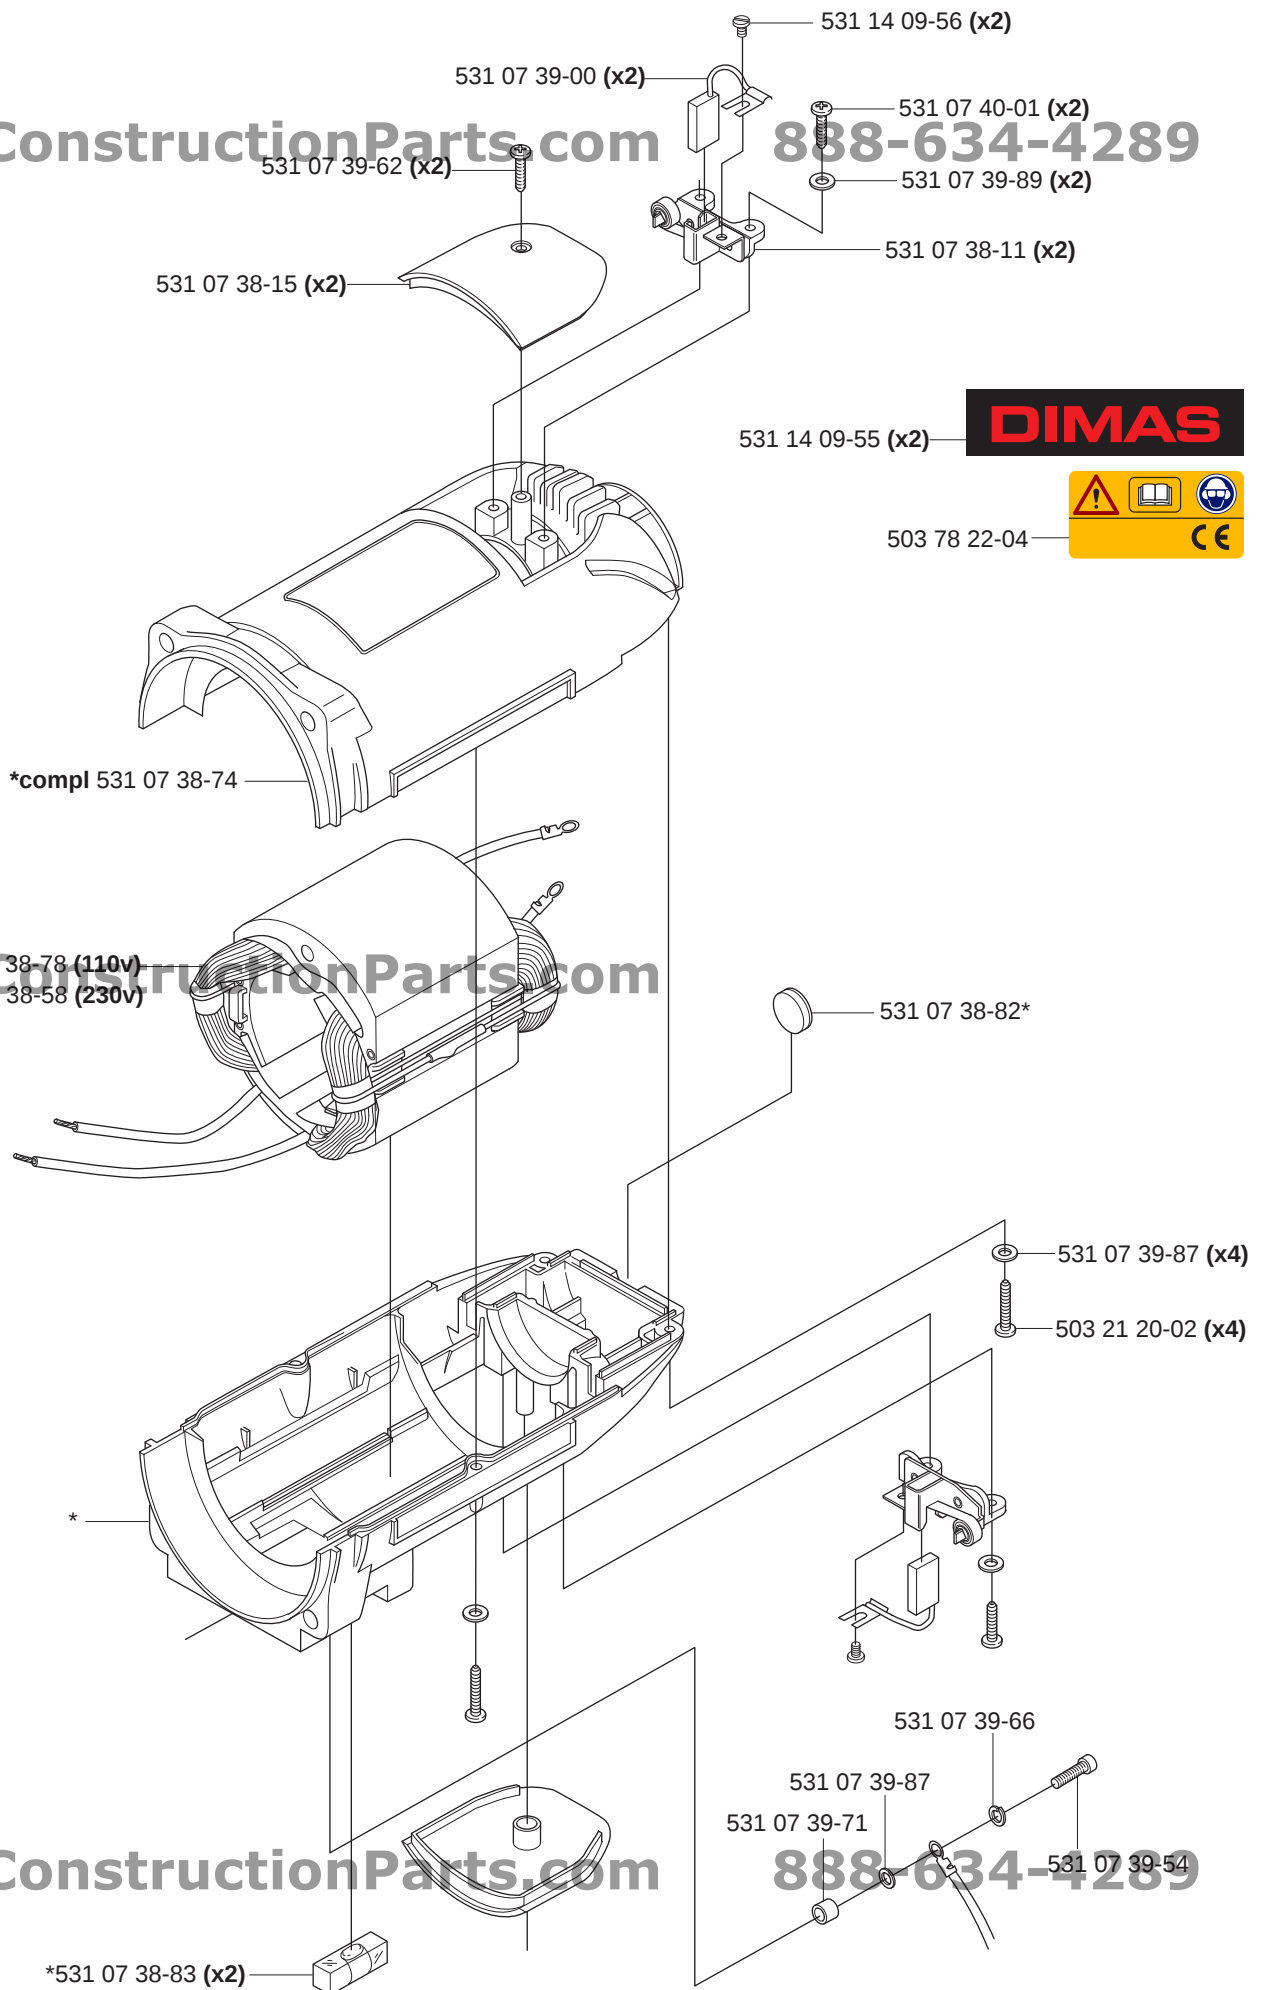

J


531 14 09-51 32mm

ConstructionParts.com


888-634-4289

531 14 09-52 24mm (Not US,CAN)

531 14 09-53 (US,CAN)

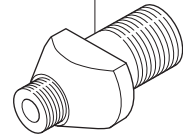


531 14 09-54 (US,CAN)

 

531 14 09-67

ConstructionParts.com

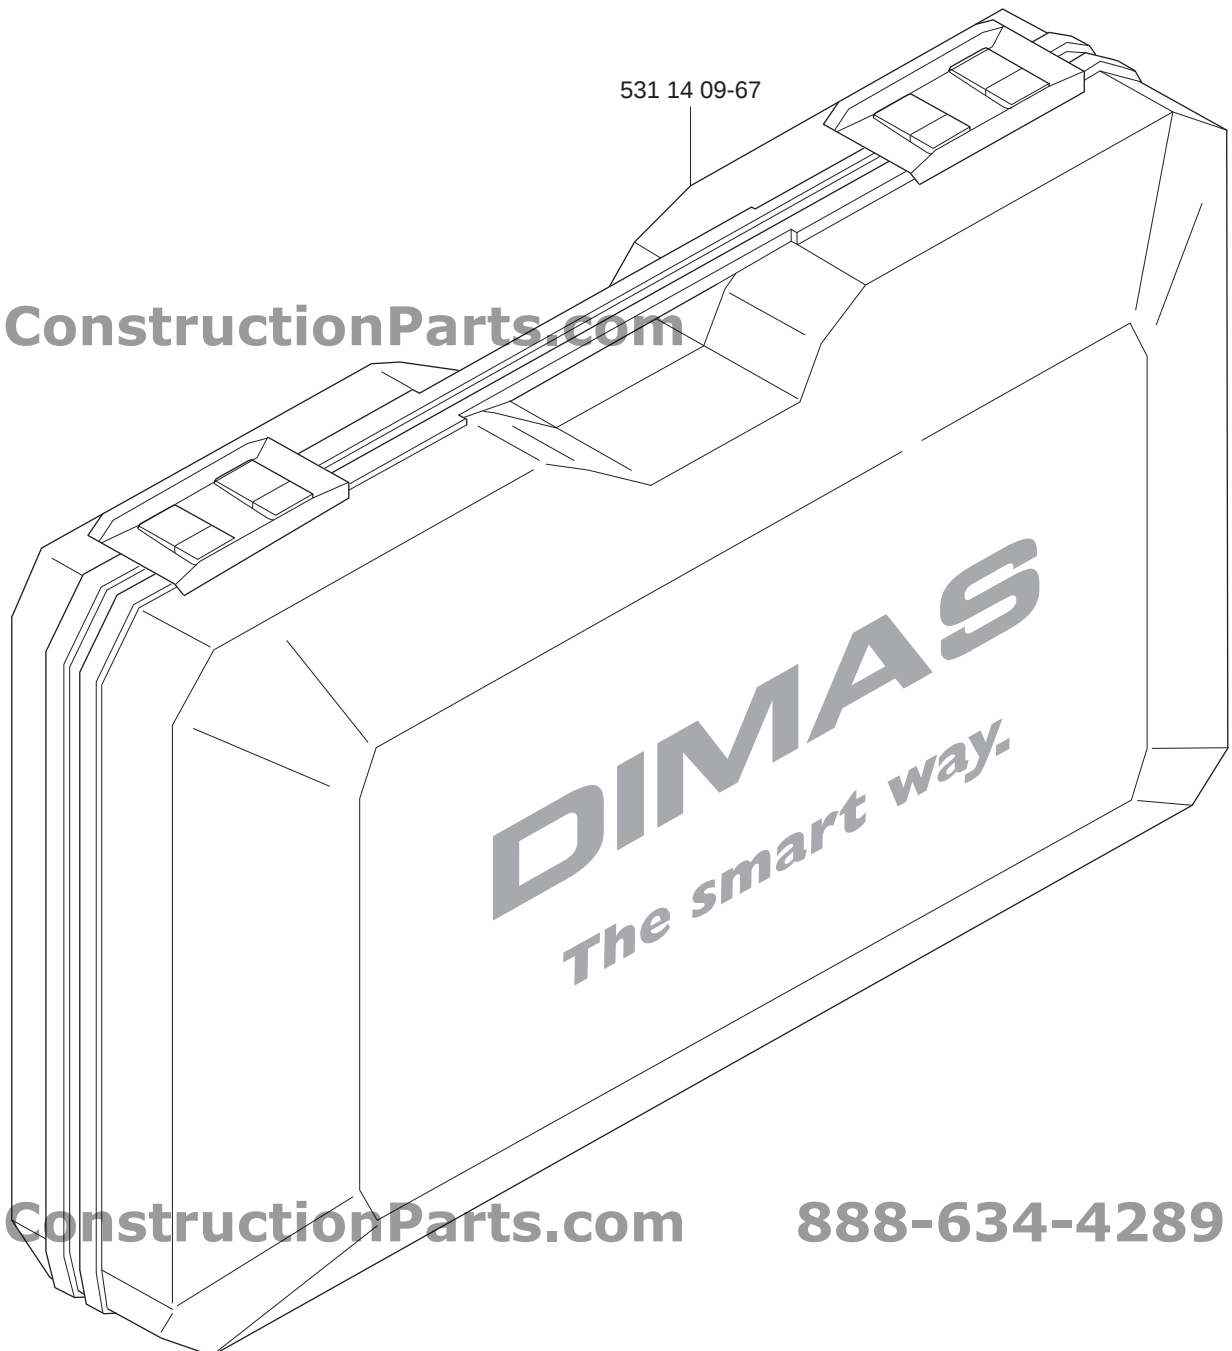

ConstructionParts.com

888-634-4289