


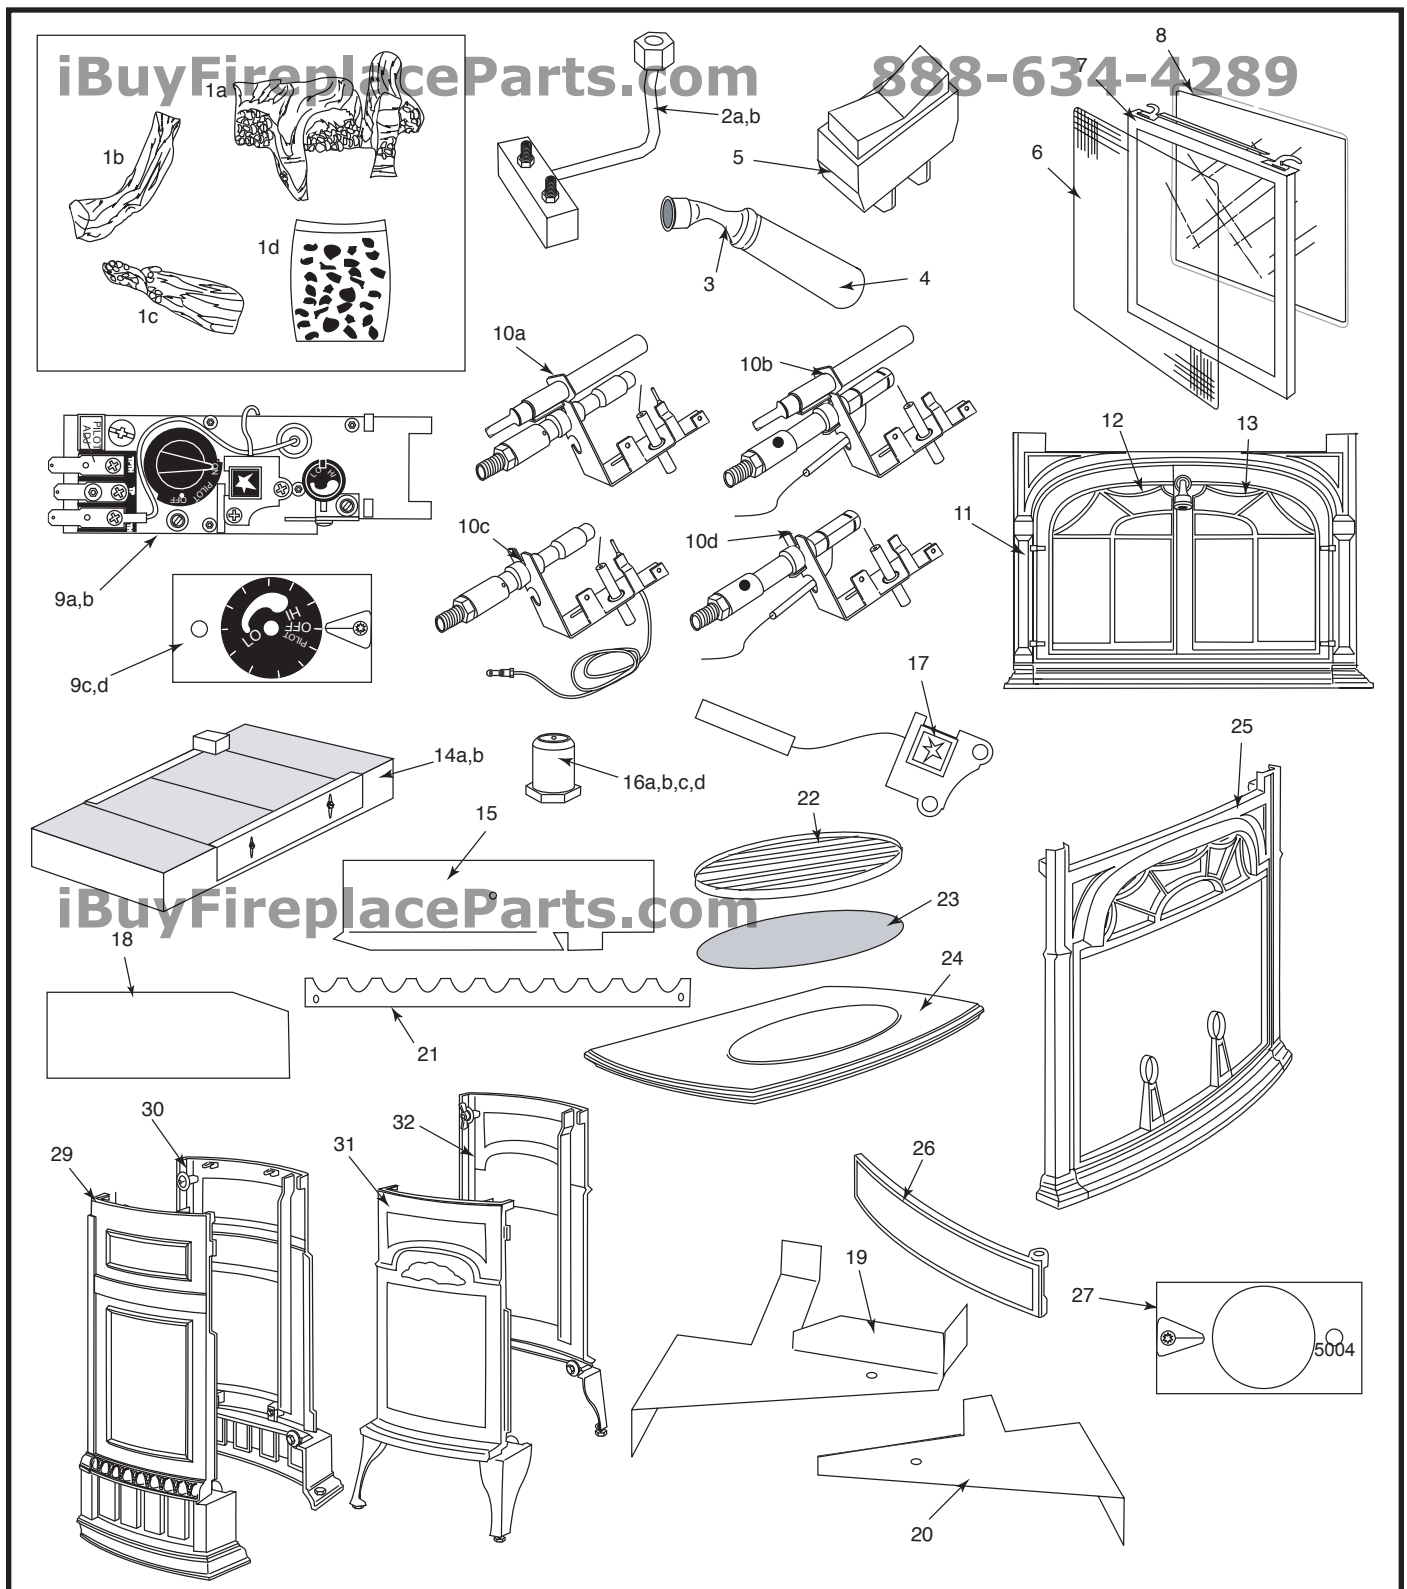

CFM Corporation reserves the right to make changes in design, materials, specifications, prices and discontinue colors and products at any time, without notice.

UVS27R, UVS27M Vent Free Gas Heaters

Models 4030-4049, 4085 - 4087, 4090 - 4092 - 888-634-4289

UVS27R, UVS27M Vent Free Gas Heaters

Models 4030-4049, 4085 - 4087, 4090 - 4092 (continued)

888-634-4289

Ref.	Description	UVS27
1.	Gas Log Assembly - UVS27	20005005
1a.	Log #V40 Rear UVS27	20005006
1b.	Log #V42 Left UVS27	20005008
1c.	Log #V41 Right UVS27	20005007
1d.	Lava Rocks Burner	57897
2a.	Manifold Assy. - UVS27R	20003739
2b.	Manifold Assy. - UVS27M	20004935
3.	Damper Steel Handle/Screw (Stardance Operable Door Only)	30002720
4.	Handle Package, Ceramic w/Screw (Stardance Operable Door Only)	0004345
5.	Trim ON/OFF Switch	53606
6.	Screen UVS27	20005009
7.	Glass Frame Assembly - SDV30	30000127
8.	Glass w/Gasket (Comes with UVGODCFK)	20005018
9a.	Valve NG Honeywell - VS84212003	10000235
9b.	Valve LP Honeywell - VS84212011	10000242
9c.	Valve MN Eurosit 0.630.564	20001354
9d.	Valve MP Eurosit 0.630.563	20001355
10a.	Oxygenerator, NG OP #8204	55464
10b.	Oxygenerator, LP OP #8404	55465
10c.	Oxygenerator, NG OP #8202	20004435
10d.	Pilot ODS TP OP #8402	20001357
11.	Front, Stardance OP DR (Stardance Only)	Refer to Enamel Parts Chart Page 23
12.	Door, Left - Stardance	Refer to Enamel Parts Chart Page 23
13.	Door, Right - Stardance	Refer to Enamel Parts Chart Page 23
14a.	Burner Housing Assy. - JUV NG	20003130
14b.	Burner Housing Assy. - LP	20004995
15.	Bracket, Rear Log - JUV	20003274
16a.	Orifice Hood #69 (.0292") - Front - LP	30000513
16b.	Orifice Hood #54 (.055") - Front - NG	20000130
16c.	Orifice Hood #54 (.055") - Rear - LP	20000130
16d.	Orifice Hood #44 (.086") - Rear - NG	30000334
17.	Ignitor Piezo - Honeywell #396079	20000062
18.	Gasket, Base Pan Inner	20002566
19.	Bracket Support Right Log	20004920
20.	Bracket Support Left Log	20005022
21.	Grate Decorative Burner	20003022
22.	Grille, UV30	30000393
23.	Mesh, Grille - UV30	30000508
24.	Top, Stardance UV/PDV	Refer to Enamel Parts Chart Page 23
25.	Front, HM-VC	Refer to Enamel Parts Chart Page 23
26.	Door, Control - FS/HM	Refer to Enamel Parts Chart Page 23
27.	Cover, Valve w/Piezo	51851
28.	Catalyst, RUV (not shown) (Comes with UVGODCFK)	30000506
29.	Left End - Hearthmount	Refer to Enamel Parts Chart Page 23
30.	Right End - Hearthmount	Refer to Enamel Parts Chart Page 23
31.	Left End - Freestanding	Refer to Enamel Parts Chart Page 23
32.	Right End - Freestanding	Refer to Enamel Parts Chart Page 23
33.	1/4" Fiberglass Gasket	1203560

UVS27R, UVS27M Vent Free Gas Heaters

Models 4030-4049, 4085 - 4087, 4090 - 4092 (continued)

888-634-4289

Shell Enamel Part Numbers - Hearthmount Models: 4085 - 4087, 4090 - 4092					
Color	Top	Left End	Right End	Front	Control Door
Classic	1301083	30001282	30001281	1301129	1301087
Sand	1321083	30001303	30001302	1321129	1321087
Midnight	1341083	30001310	30001309	1341129	1341087

Shell Enamel Part Numbers - Freestanding Models						
Color	Top	Left End	Right End	Front (OP)	Left Door	Right Door
Classic	30001278	30001280	30001279	30001496	30001139	30001138
Biscuit	30003307	30003300	30003301	30003302	30003304	30003303
Bordeaux	30001285	30001287	30001286	30001261	30001263	3001262
Chestnut Brown	30003315	30003308	30003309	30003310	30003312	30003311
Ebony	30001306	30001308	30001307	30001270	30001272	30001271
Forest Green	30001292	30001294	30001293	30001264	300012266	30001265
Midnight Blue	30001319	30001321	30001320	30001314	30001316	30001315
Sand	30001299	30001301	30001300	30001267	30001269	30001268
Suede Brown	30002554	30002547	30002548	30002550	30002552	30002551
Vermont						
Classic Green	30003323	30003316	30003317	30003318	30003320	30003319

iBuyFireplaceParts.com**iBuyFireplaceParts.com****888-634-4289**

Optional Accessories Available

Fan Kits

FK28 Fan Assembly

The FK28 fan kit helps distribute heated air from within the firebox out into the room. The fan is controlled by a snapstat that turns power on and off as the firebox temperature rises above and falls below a preset temperature. A rheostat provides for variable fan speeds.

Specifications

115 Volt / 60Hz / .75 Amps

Maintenance

The fan itself does not require regular maintenance, however periodic cleaning of the fan and the surrounding area is required.

Installation

Refer to Assembly Section, Page 9 for installation instructions.

Glass / Catalyst Kit UVGODCFK

The glass panel replaces the standard screen. The catalytic combustor installs easily into the upper manifold above the firebox.

Remote Controls

The remote control allows you to turn the heater on or off from anywhere in the room. Remote controls are available for the UVS27R only. Refer to Figure 17, Page 12 for wiring diagram.

Model	Function/s Controlled
RC1	ON/OFF
RC2	ON/OFF and Temperature
IMTFK	Wall mounted thermostat control

Warming Shelf

Warming shelves add versatility to your stove. The warming shelf can be used to keep foods warm at mealtime.

Model		
Pinnacle Shell	Stardance Shell	Color
2702	2702	Classic Black
2684	2684	Biscuit
n/a	2685	Chestnut Brown
n/a	2688	Vt. Classic Green
n/a	2704	Bordeaux
n/a	2706	Forest Green
n/a	2711	Midnight Blue
2764	2764	Sand
2765	2765	Ebony

The shelf installation is done in three stages. First you attach the shelf loosely to the stove, leaving the screws loose enough to allow final adjustments. Then, you position the shelf and adjust the brackets so the shelf fits correctly. Finally, you tighten the screws.

Refer to the instructions included with each warming shelf for complete installation procedures.