


DIMAS

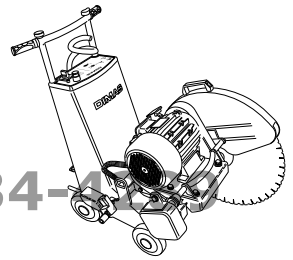

ConstructionParts.com 888-634-4289

IPL, DIMAS FS 700 E, 2005-42, 531 12 45-19

DIMAS FS 700 E

Reservdelar

Spare parts

Ersatzteile

Pieces de rechange

Piezas de repuesto

Ricambi

Peças
sobresselente

ConstructionParts.com

ConstructionParts.com

From machine number: 1001

888-634-4289

531 12 45-19

DIMAS

No.	Pos.	Description	No.	Pos.	Description
531 11 23-07	A	Blade guard FS 700	531 11 94-26	DGH	Screw K6S 6x16 10.9 fzb
531 11 23-17	D	Flush blade flange complete	531 11 94-59	M	Stop
531 11 23-28	D	Blade shaft L/R ass.	531 11 94-60	N	Cylindric pin
531 11 70-74	P	Over current relay	531 11 94-61	K	Handle
531 11 70-96	K	Potentiometer	531 11 94-62	K	Resilient set screw
531 11 71-55	J	Plug connection 220 V	531 11 94-63	N	Cylindric pin
531 11 71-82	L	Emergency shut down	531 11 94-67	N	Bushing PCM 242715 B
531 11 71-95	J	Tubular rivet	531 11 94-68	N	Bearing HK 0810
531 11 71-96	J	Spring	531 11 94-69	N	Bearing washer GS 81102
531 11 72-08	J	Personal Safety Guard	531 11 94-70	N	Raceway washer LS 1528
531 11 72-15	L	Main switch PP 325 E 400V	531 11 94-71	N	Bearing 6302-2RSH
531 11 72-16	P	Softstart PP 325 E 400V	531 11 94-72	N	Flange bearing
531 11 72-23	L	Circuit breaker 2-pol	531 11 94-74	AM	Spring mounting
531 11 72-71	J	Cover for fuses	531 11 94-75	N	Cup spring
531 11 72-86	P	Relay 400V PP 325 E softstart	531 11 94-78	D	Bearing bracet SY 30 TF
531 11 72-87	P	Socket for relay	531 11 94-79	M	Bearing bracket PFT 47
531 11 73-07	KP	Cabel fitting M16	531 11 94-80	M	Bearing YAR 204-2F
531 11 73-08	PQ	Cabel fitting M20	531 11 94-84	B	Belt FS 700
531 11 73-09	KP	Lock nut M16	531 11 94-86	E	Front wheel FS
531 11 73-10	P	Lock nut M20	531 11 94-87	D	Shaft seal BABSL 38x50x6
531 11 73-11	J	Electric inlet	531 11 94-88	E	Washer TBRBS 8,4x26
531 11 73-14	C	Cabel fitting	531 11 94-89	M	Screw MVBF 8x20
531 11 73-16	M	Feedingmotor	531 11 94-90	N	Screw RXK ST 4,2x6,5
531 11 73-17	C	Locking part	531 11 94-92	F	Key 8x7x40
531 11 73-22	C	House	531 11 94-97	D	Nut M8 headcap
531 11 73-23	N	Feedingmotor	531 11 94-98	N	V-ring 35
531 11 73-27	N	Kable fitting	531 11 95-01	H	Screw K6S 10x40 10.9 fzb
531 11 73-28	N	Distance M5x35	531 11 95-02	M	Screw M6SF 6x16 8.8 fzb
531 11 73-29	L	Lamp	531 11 95-03	A	Ball D25
531 11 73-30	C	Electric motor 7,5kW 400V	531 11 95-05	F	Spring
531 11 73-42	P	Softstart 480V	531 11 95-10	DQ	Screw K6S 6x10 10.9 fzb
531 11 73-43	K	Potentiometer knob	531 11 95-11	DF	Screw K6S 8x16 10.9 fzb
531 11 73-48	P	Contacto	531 11 95-12	D	Screw M6S 12x16
531 11 80-03	DJ	Quick coupling, female 1800 uv	531 11 95-19	D	Screw M6S 12x30 left threaded
531 11 80-05	DJL	Nipple 1812	531 11 95-56	DF	Key 8x7x60
531 11 80-06	D	Nipple 18210	531 12 41-28	Q	Chassis
531 11 83-01	J	Angle coupling 3/8"	531 12 41-42	F	Housing
531 11 83-02	L	Angle coupling 3/8"	531 12 41-43	F	Bearing
531 11 83-08	L	Ball valve mini 3/8"	531 12 41-45	F	Cutting head axis
531 11 83-18	DJL	Waterhose black 1/2	531 12 41-50	L	Water valve knob
531 11 90-14	DJL	Hose clamp 13-20	531 12 41-52	P	Electric box
531 11 90-16	P	Pop-nut	531 12 41-58	P	Cover electric box
531 11 90-18	P	Spacer	531 12 41-59	P	Bracket for electric box
531 11 90-83	N	Bearing washer AS 2035	531 12 41-61	J	Bracket
531 11 90-85	N	Bearing AXK 2035	531 12 41-64	J	Bracket hose carrier
531 11 91-05	N	Ball 5 mm	531 12 41-65	G	Carrier bracket right
531 11 91-50	N	Bearing	531 12 41-67	G	Hose carrier
531 11 91-65	A	Blind rivet 4x12 st/st	531 12 41-72	G	Holder of hose carrier
531 11 91-81	CGH	Washer 10.5x22	531 12 41-73	M	Wheel guard left
531 11 91-83	ADFQ	Washer 13x24x2	531 12 41-74	M	Wheel guard right
531 11 91-97	G	Screw M6S 10x16	531 12 41-79	E	Wheel axle
531 11 91-98	N	Screw M6S 10x25	531 12 41-94	C	Motor bracket, left
531 11 92-00	C	Screw M6S 10x35	531 12 41-95	C	Motor bracket, Right
531 11 92-02	AQ	Screw M6S 12x25	531 12 41-97	D	Runner
531 11 92-03	B	Screw M6S 12x30	531 12 41-99	D	Platform 700
531 11 92-07	A	Screw M6S 12x45	531 12 42-09	D	Blade flange outer
531 11 92-10	J	Screw M6S 6x12	531 12 42-69	A	Splash guard
531 11 92-11	LM	Screw M6S 6x16	531 12 42-04	B	Pulley motor 7,5kW 50Hz
531 11 92-12	BM	Screw M6S 6x20	531 12 42-08	BD	Blade flange inner
531 11 92-17	F	Screw M6S 8x22	531 12 42-10	D	Flush blade flange
531 11 92-19	M	Screw M6S 8x30	531 12 42-14	B	Pulley blade shaft FS 700 50Hz
531 11 92-20	F	Screw M6S 8x35	531 12 42-16	D	Water block
531 11 92-49	B	Nut M6 headcap	531 12 42-17	D	Holding plate
531 11 92-60	A	Washer 5x19x1	531 12 42-18	D	Cover
531 11 92-70	D	O-ring 24,2x3	531 12 42-19	D	Sealing sleeve
531 11 93-05	N	Key 5x5x14	531 12 42-26	B	Belt cover FS 700
531 11 93-10	D	Key 8x7x25	531 12 42-27	B	Inner belt cover FS 700
531 11 93-32	N	Washer 6,4x22x4	531 12 42-30	L	Clamp for water valve
531 11 94-07	M	Key 6x6x20	531 12 42-31	M	Stop dog
531 11 94-11	CD	Screw 12x70	531 12 42-32	G	Carrier bracket left



No.	Pos.	Description	No.	Pos.	Description
531 12 42-43	D	Inner flange guard	531 12 45-05	F	Lever arm
531 12 42-44	D	Flange guard bracket	531 12 45-06	N	Spring socket
531 12 42-45	D	Flange guard	531 12 45-12	C	Motor bracket plate FS 700
531 12 42-68	A	Holder	531 12 45-13	D	Blade shaft L/R ass. US/CAN
531 12 42-94	M	Motor mounting plate	531 12 45-15	A	Distance
531 12 42-97	M	Spur gear	531 12 45-16	A	Spring 12 revolutions
531 12 42-98	M	Mounting plate	531 12 45-17	M	Spring 20 revolutions
531 12 43-01	M	Feeding axis	531 12 45-20	N	Slide sleeve
531 12 43-02	M	Spur gear feeding axis	531 12 45-21	N	Feeding nut FS 700
531 12 43-03	M	Lifting bar	531 12 45-32	H	Sleeve
531 12 43-04	M	Cam	531 14 10-99	P	Phase indicator
531 12 43-06	H	Pedal	531 14 11-22	J	Hinge
531 12 43-09	H	Pedal axis	531 14 11-50	J	Gasket fuse cover
531 12 43-10	H	Distance ring	720 13 54-06	D	Cylindrical pin 6x22
531 12 43-11	H	Guide pin	720 15 20-50	C	Cylindrical pin 12x50
531 12 43-13	H	Sealing plate	721 42 07-00	N	Spring pin 3x14
531 12 43-15	K	Handle	721 42 08-00	K	Spring pin 3x16
531 12 43-22	K	Rod to potentiometer	721 42 61-50	N	Spring pin 4x30
531 12 43-23	K	Support	721 43 49-00	A	Spring pin 6x50
531 12 43-25	L	Switch panel	721 43 75-00	F	Spring pin 8x20
531 12 43-28	K	Guide ring	722 78 25-03	J	Blind rivet 3.2x10 al/al
531 12 43-30	K	Support	723 12 20-01	P	Screw MCS 3x6
531 12 43-31	K	Potentiometer guide	723 12 24-01	C	Screw MCS 3x10
531 12 43-35	C	Contact fitting	723 12 91-01	J	Screw MCS 4x12
531 12 43-41	L	Instruction sign	723 12 95-01	J	Screw MCS 4x20
531 12 43-42	B	Support	723 13 64-01	FL	Screw MCS 6x10
531 12 43-44	F	Locking washer	723 52 92-01	J	Screw MFS 4x14
531 12 43-46	N	Pivoting unit	725 24 49-71	EM	Screw M6S 8x16
531 12 43-52	N	Gearbox, lower part	725 25 43-51	D	Screw M6S 12x55
531 12 43-53	N	Gearbox cover	725 25 48-51	F	Screw M6S 12x80
531 12 43-56	N	Spur gear motor	725 53 23-01	KN	Screw MC6S 5x8
531 12 43-58	N	Large spur gear	725 53 64-01	FL	Screw MC6S M6x10
531 12 43-59	N	Small spur gear	725 53 66-01	NP	Screw MC6S 6x12
531 12 43-60	N	Spur gear feeding screw	725 53 68-01	N	Screw MC6S 6x16
531 12 43-61	N	Nut washer	725 53 70-01	A	Screw MC6S 6x20
531 12 43-62	N	Feeding screw	725 53 72-01	A	Screw MC6S 6x25
531 12 43-63	N	Distance	725 53 74-01	E	Screw MC6S 6x30
531 12 43-65	N	Stopring	725 53 82-01	P	Screw MC6S 6x60
531 12 43-76	D	Guiding flange left	725 54 87-01	G	Screw MC6S 10x12
531 12 43-77	D	Guiding flange right	725 63 68-51	A	Screw MF6S 6x16 10.9
531 12 43-83	M	Feeding gear	725 64 49-51	D	Screw MF6S 8x16
531 12 43-84	E	Rear wheel floorsaw	725 64 89-51	D	Screw MF6S 10x16
531 12 43-85	E	Distance	728 52 83-05	DK	Stop screw P6SS 4x4
531 12 43-86	E	Spur gear rear wheel	728 52 87-05	N	Stop screw P6SS 4x8
531 12 43-88	D	Front handle FS 700	728 73 66-05	BD	Stop screw S6SS 6x12
531 12 43-98	A	Handle Bladeguard	728 82 87-05	M	Stop screw SK6SS 4x8
531 12 44-24	F	Lock	728 83 64-05	M	Stop screw SK6SS 6x10
531 12 44-30	A	Bladeguard holder	728 84 43-01	M	Stop screw SK6SS 8x8
531 12 44-32	Q	Back cover 5-pin	728 84 45-05	F	Stop screw SK6SS 8x10
531 12 44-34	A	Blade guard unass. FS 700	731 23 14-01	NP	Nut M6M M5
531 12 44-42	A	Distance washer	731 23 20-01	C	Nut M6M M10
531 12 44-43	A	Distance	731 43 20-01	K	Nut M10 low
531 12 44-45	D	Sealing washer	732 25 12-01	J	Nut M4 nylock
531 12 44-46	B	End cover	732 25 16-01	BGM	Nut M6 Nylock
531 12 44-47	P	Mounting plate	732 25 18-01	M	Nut M8 Nylock
531 12 44-48	A	Rubber to splash guard	732 25 20-01	H	Nut M10 Nylock
531 12 44-54	Q	Clamp	732 25 22-71	D	Nut M12 Nylock 10.9
531 12 44-55	K	Handle guide	734 11 23-71	P	Washer 3.2x6
531 12 44-56	N	Bearing plate	734 11 35-71	J	Washer 4.3x8
531 12 44-57	F	Cutting bridge	734 11 46-01	DLNP	Washer 5,3x10x1
531 12 44-59	K	Socket left	734 11 52-01	BGHJLMNP	Washer 6.4x12
531 12 44-60	K	Socket right	734 11 63-01	DFM	Washer 8.4x16
531 12 44-61	N	Motor cap	735 31 33-10	H	Seeger circlip SGH 35
531 12 44-63	M	Sealing plate	735 31 38-10	N	Seeger circlip SGH 42
531 12 44-86	B	Pulley electric motor 60Hz	738 22 02-24	H	Bearing 6202-2RS1 C2
531 12 44-87	B	Pulley bladeshaft 60Hz	740 38 34-01	J	Sealing ring 3/8
531 12 44-91	BD	Blade flange inner US/CAN			
531 12 44-93	D	Blade flange outer US/CAN			
531 12 44-99	N	Pivot spring			
531 12 45-02	Q	Back cover 4-pin			

A


DIMAS Floor saw Bladeguard

ConstructionParts.com


*compl. 531 11 23-07

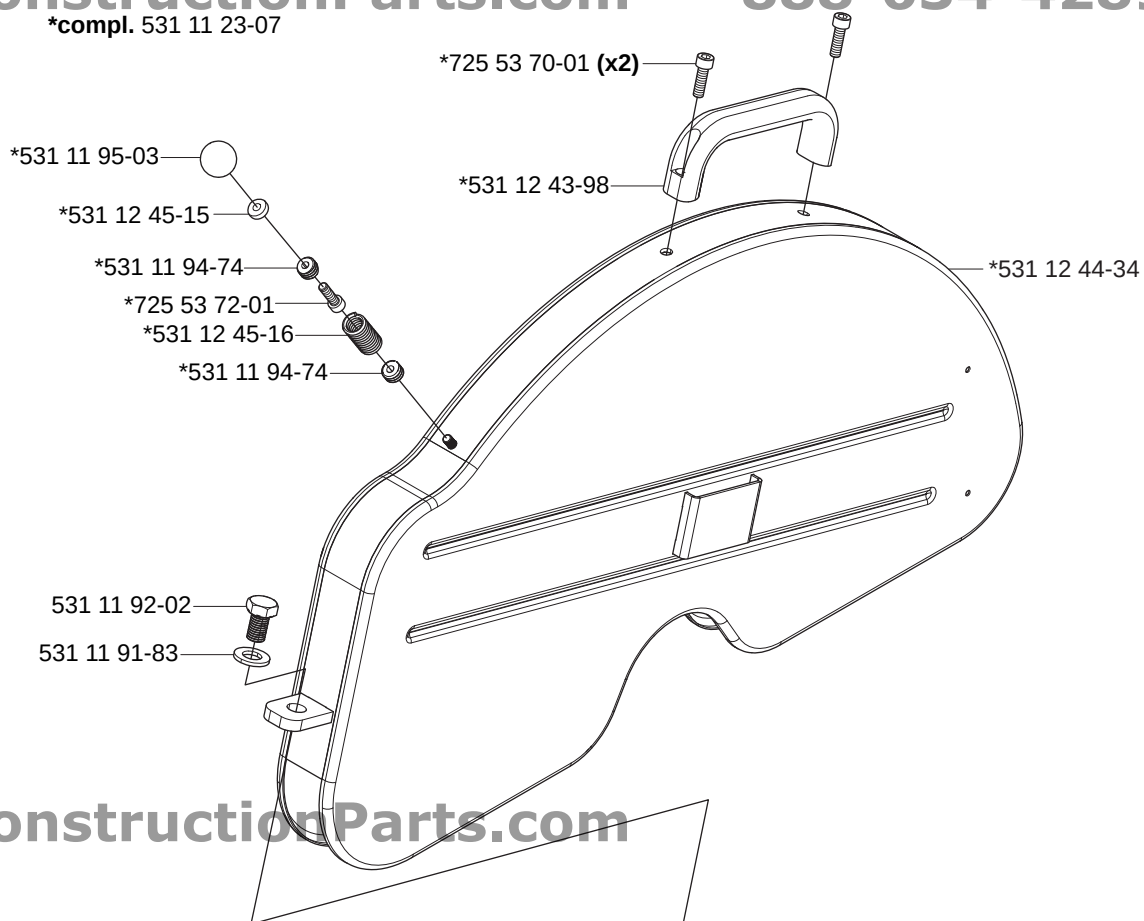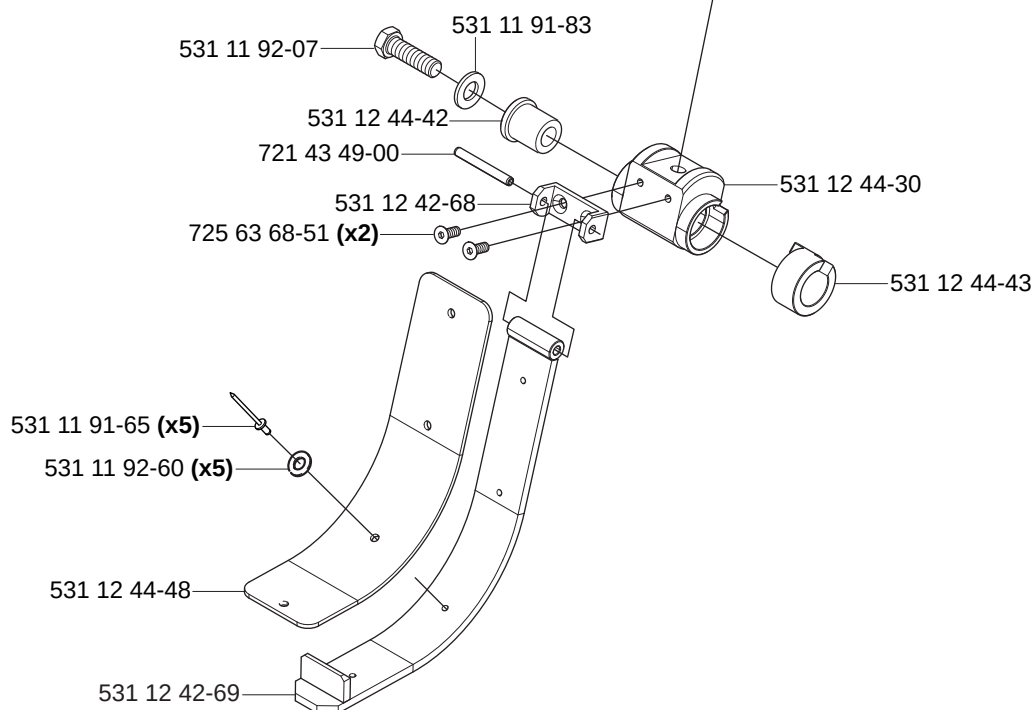888-634-4289**ConstructionParts.com****ConstructionParts.com****888-634-4289**


B

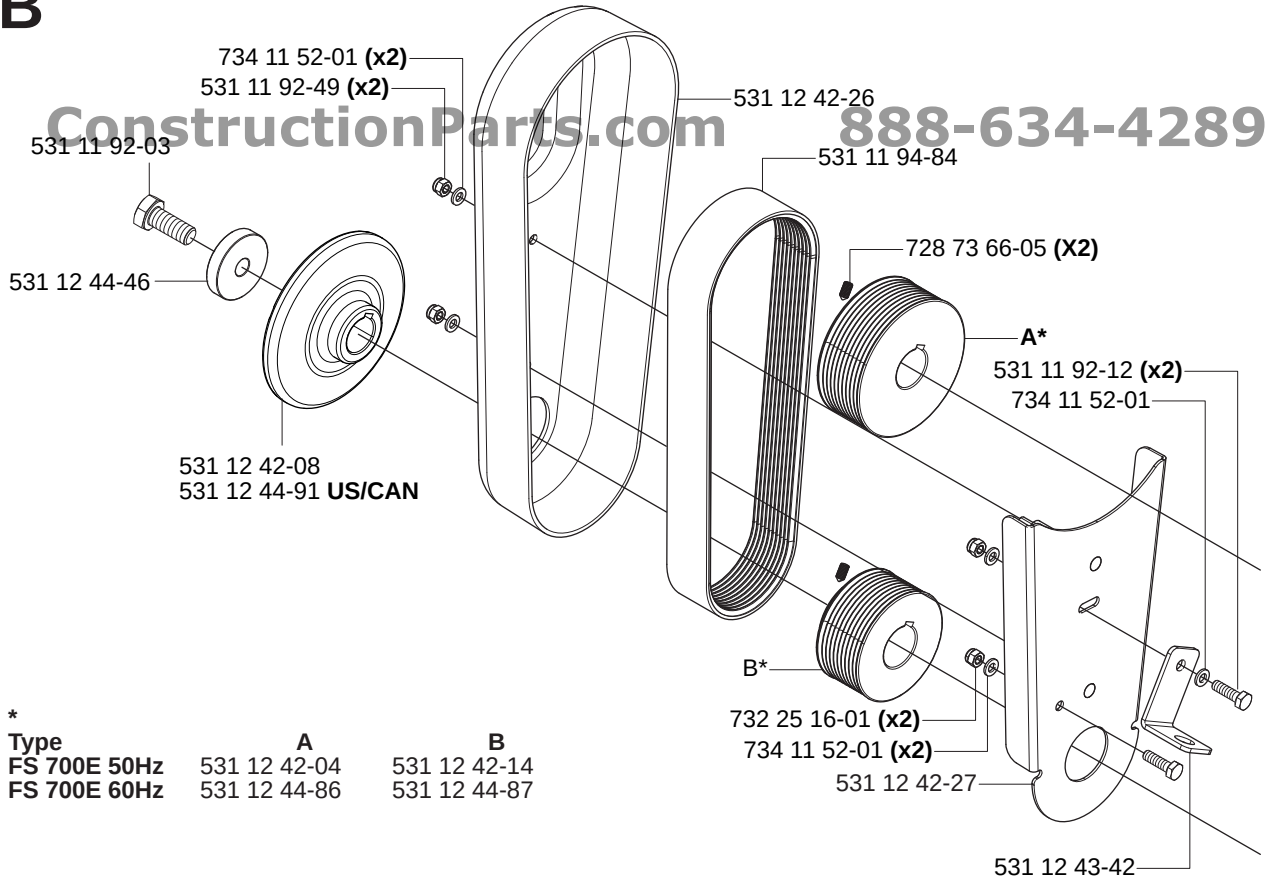

C

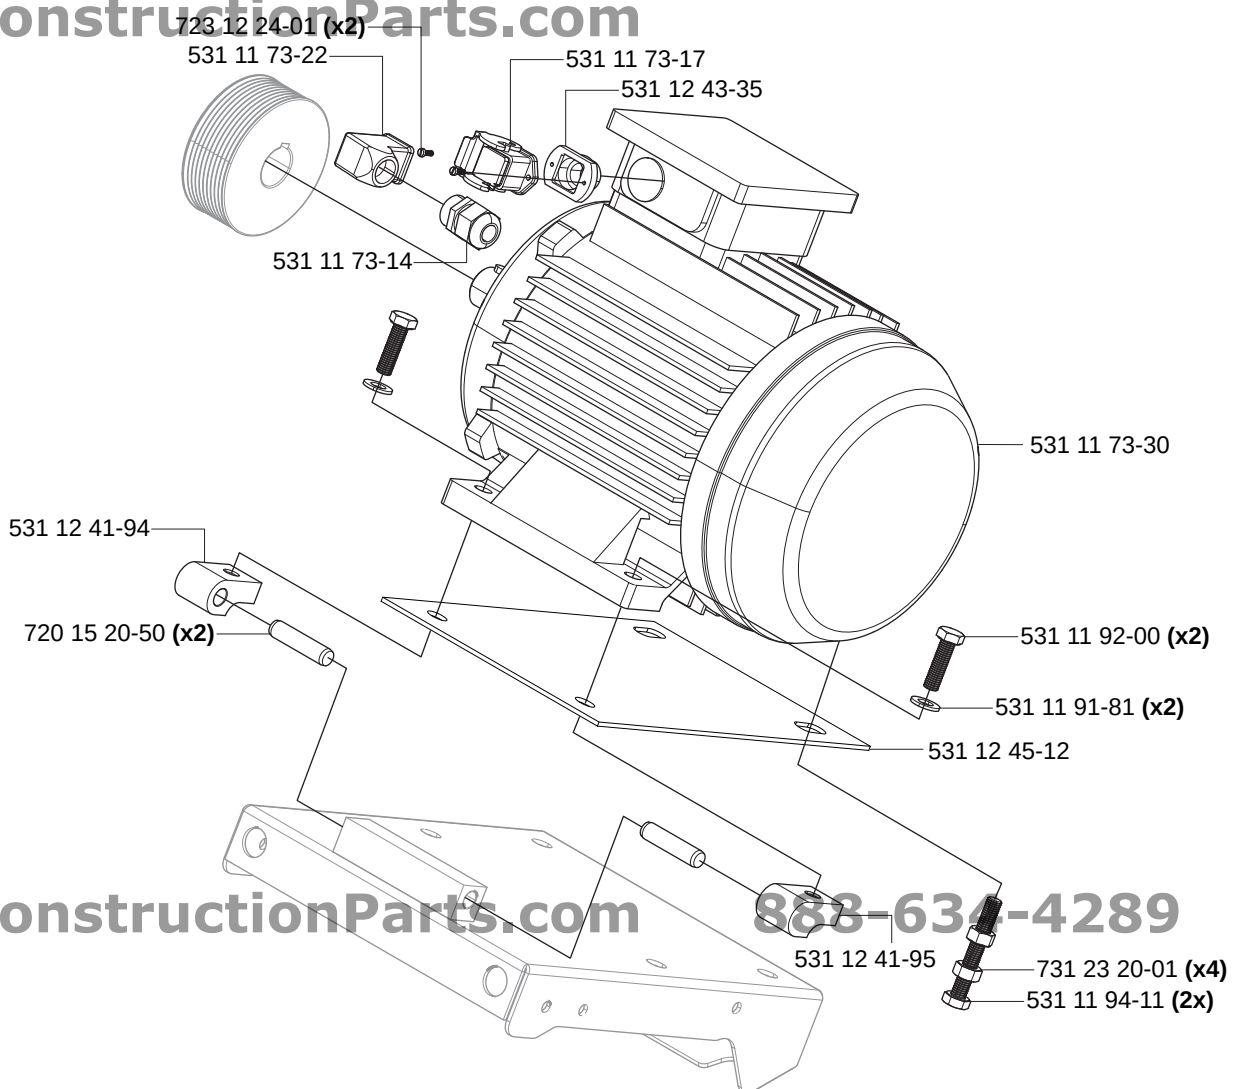


D

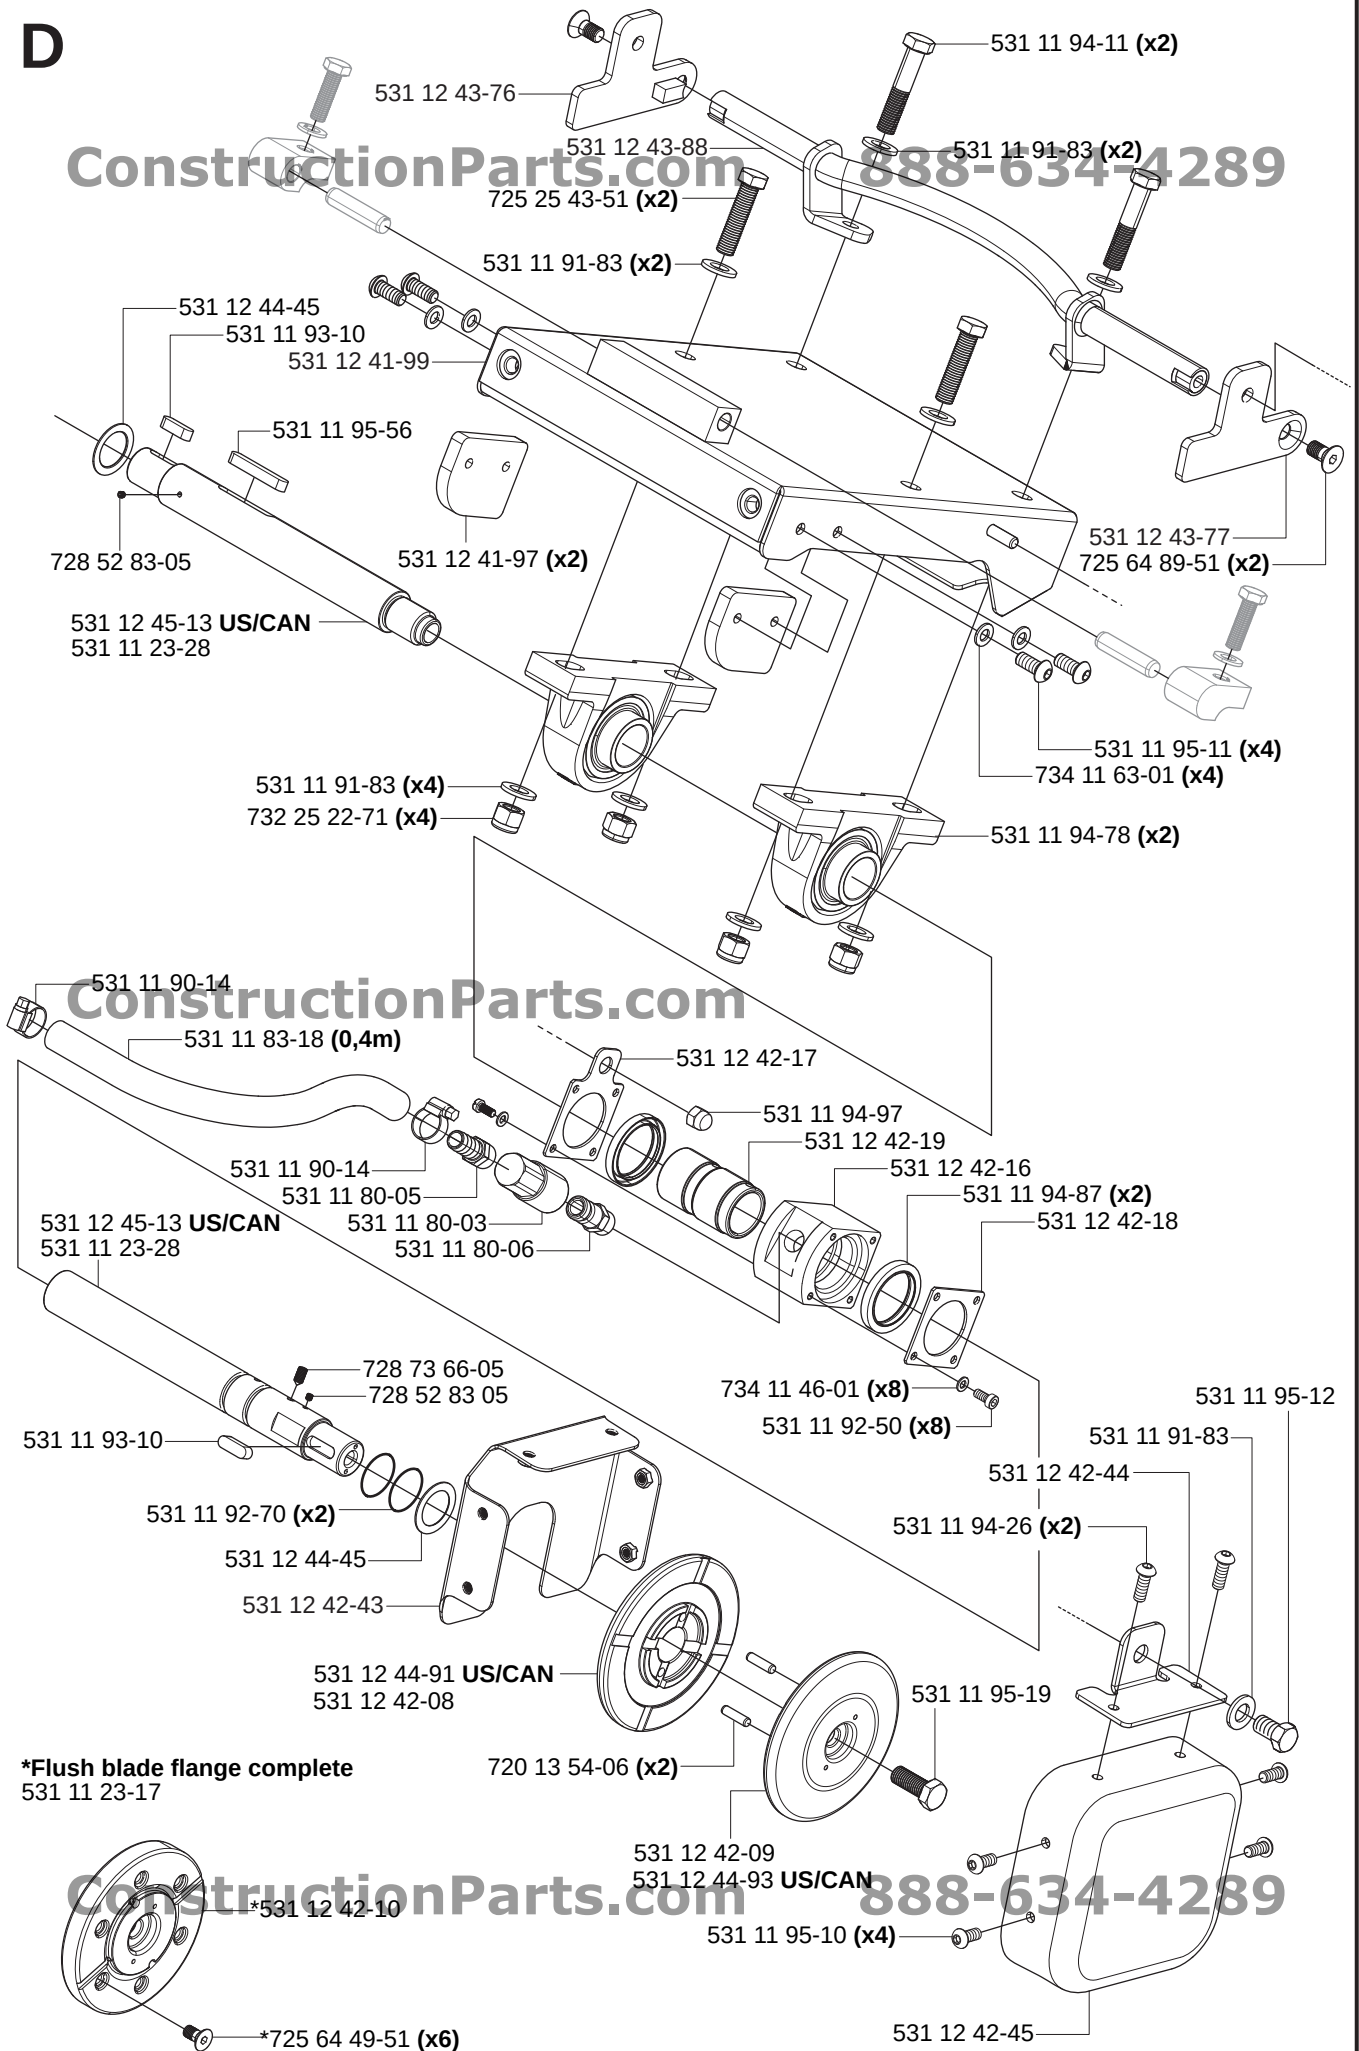


E

ConstructionParts.com


888-634-4289

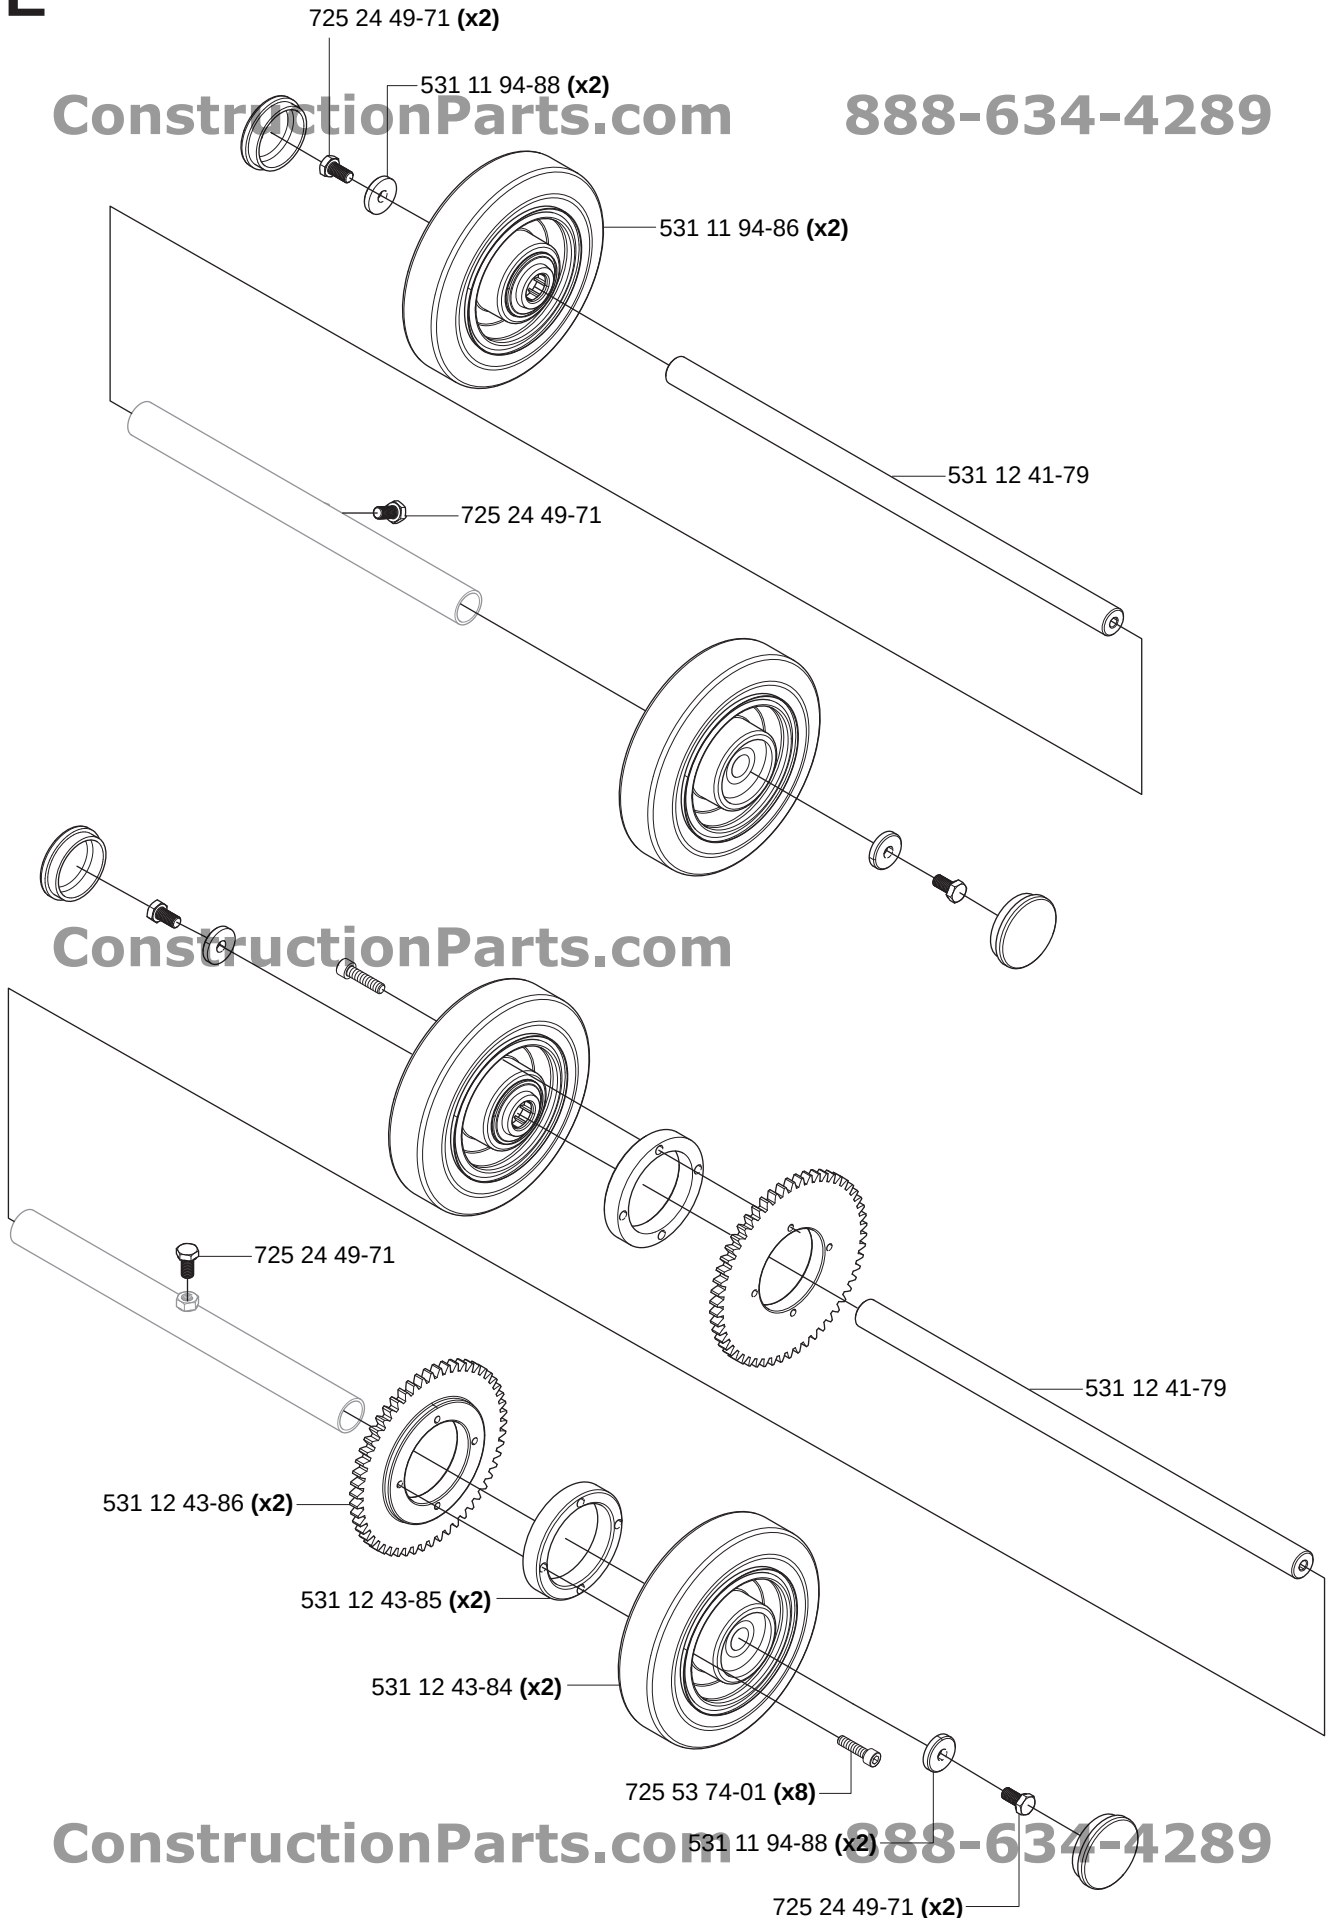

F

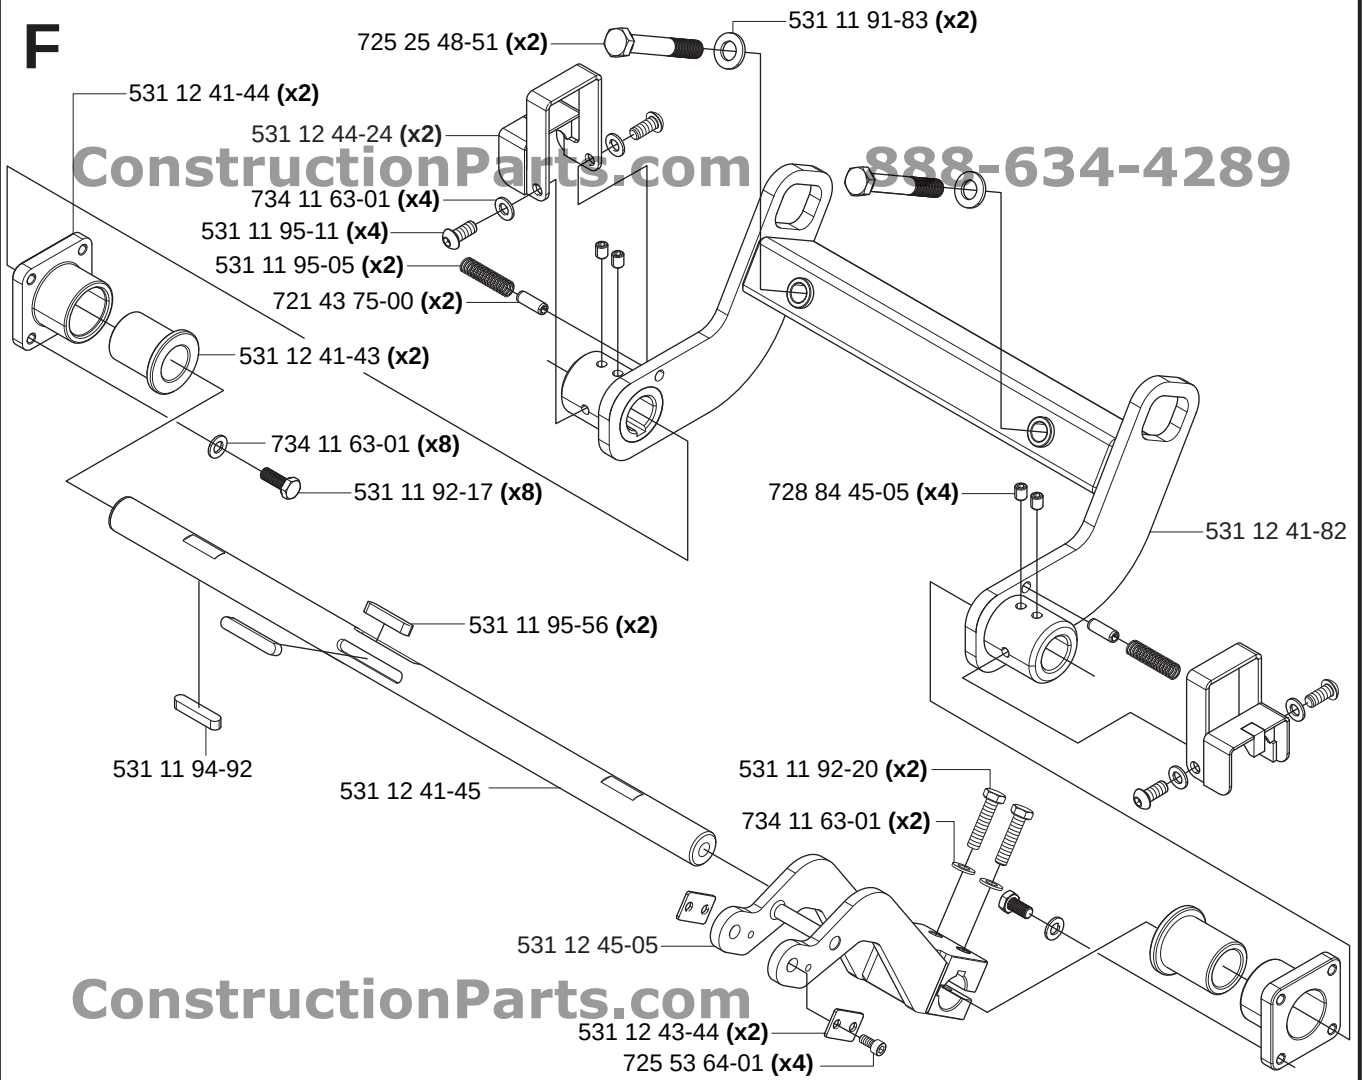


G

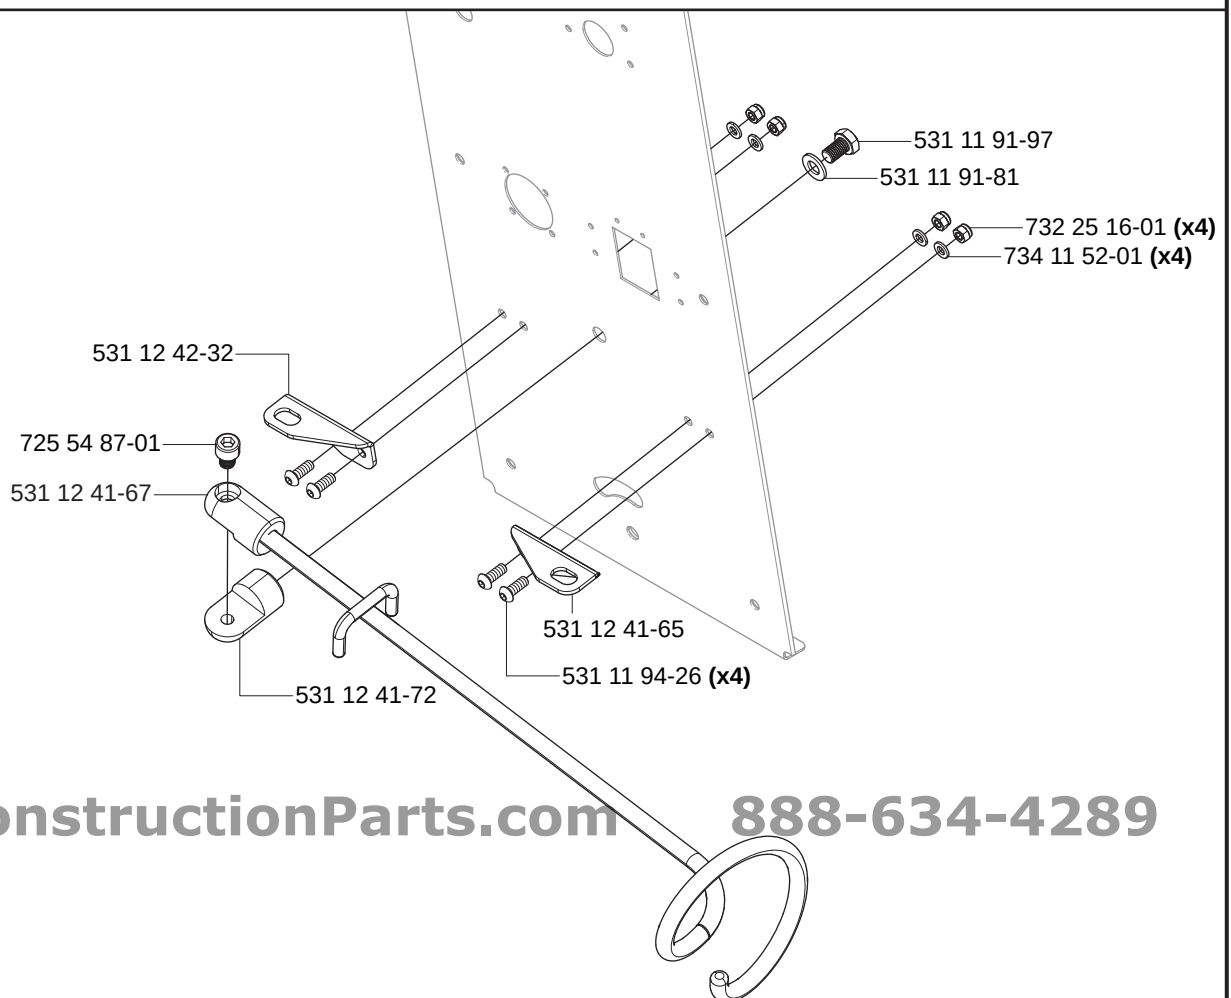

H

ConstructionParts.com


888-634-4289

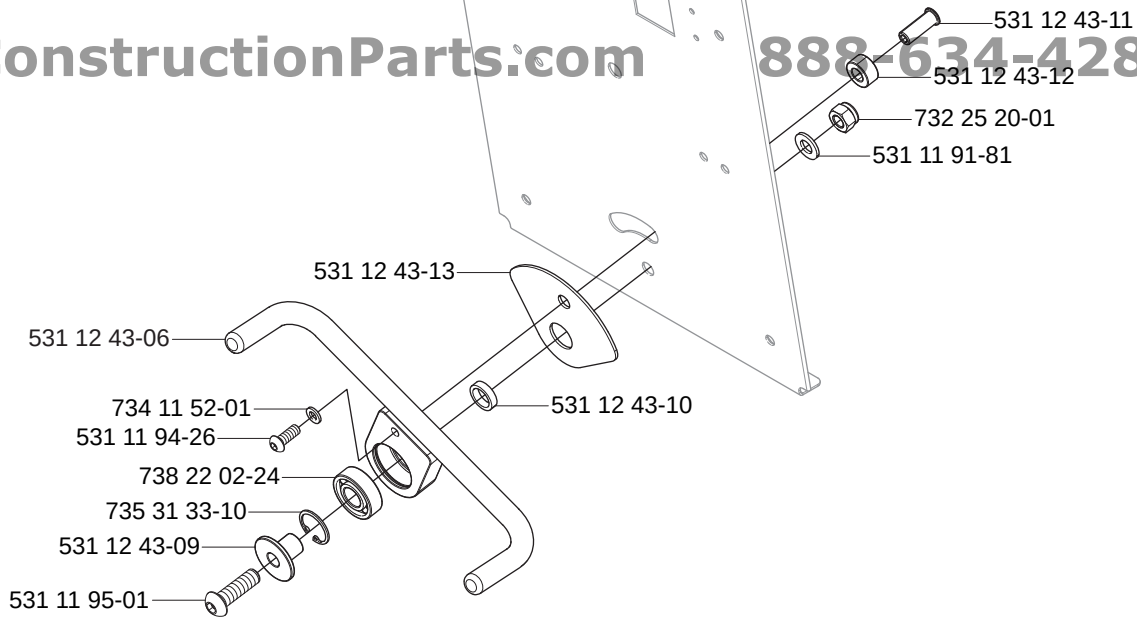


J

ConstructionParts.com

888-634-4289

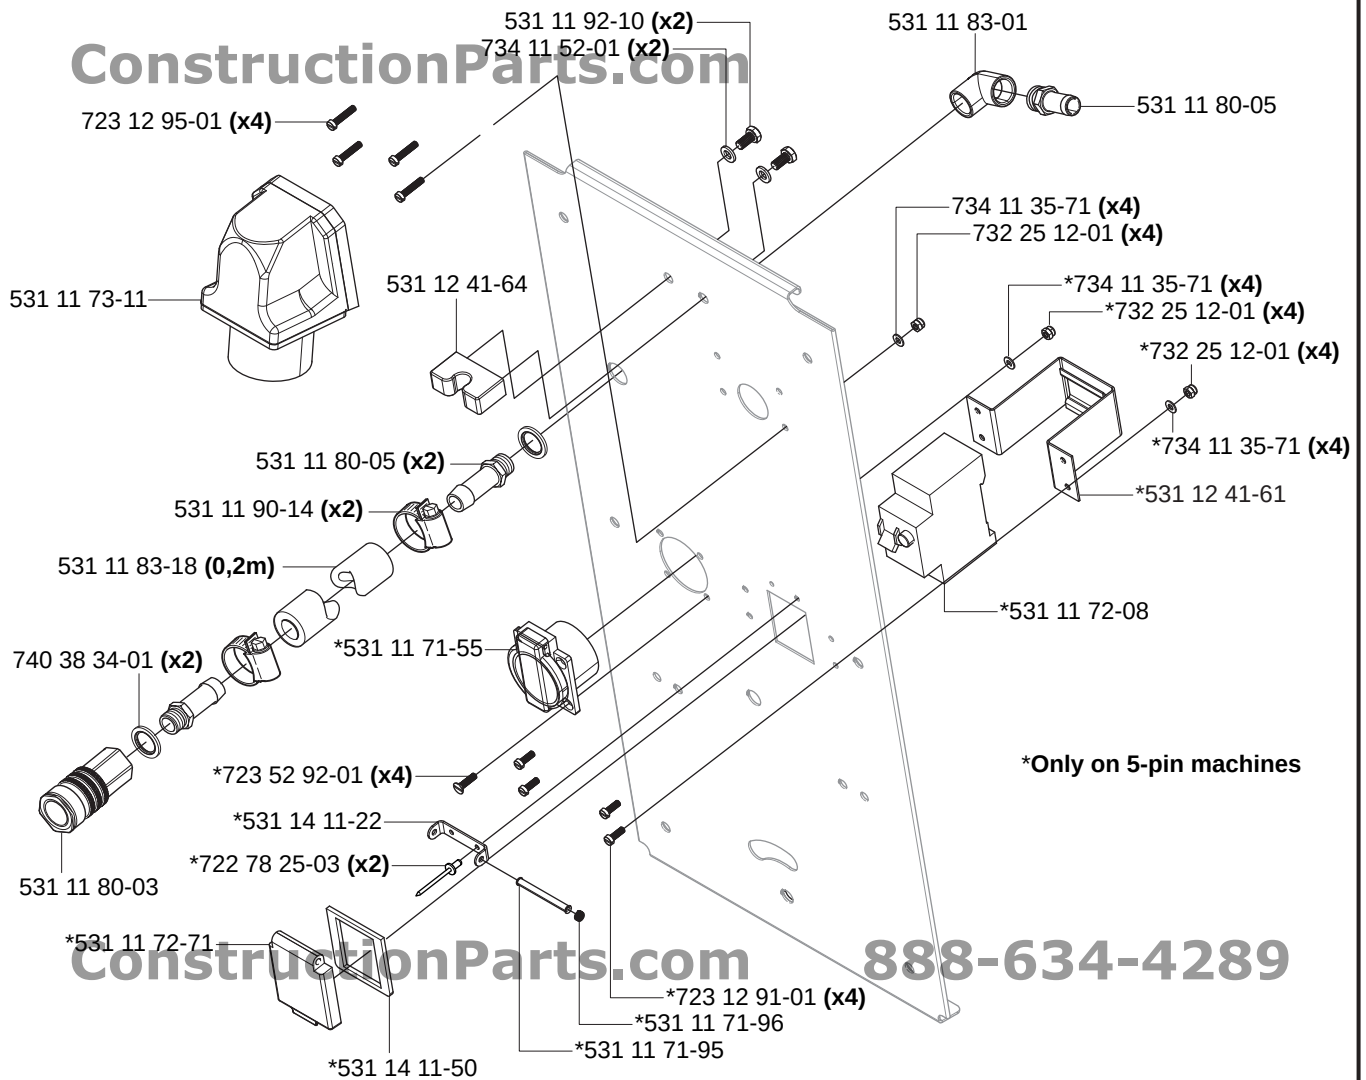


K

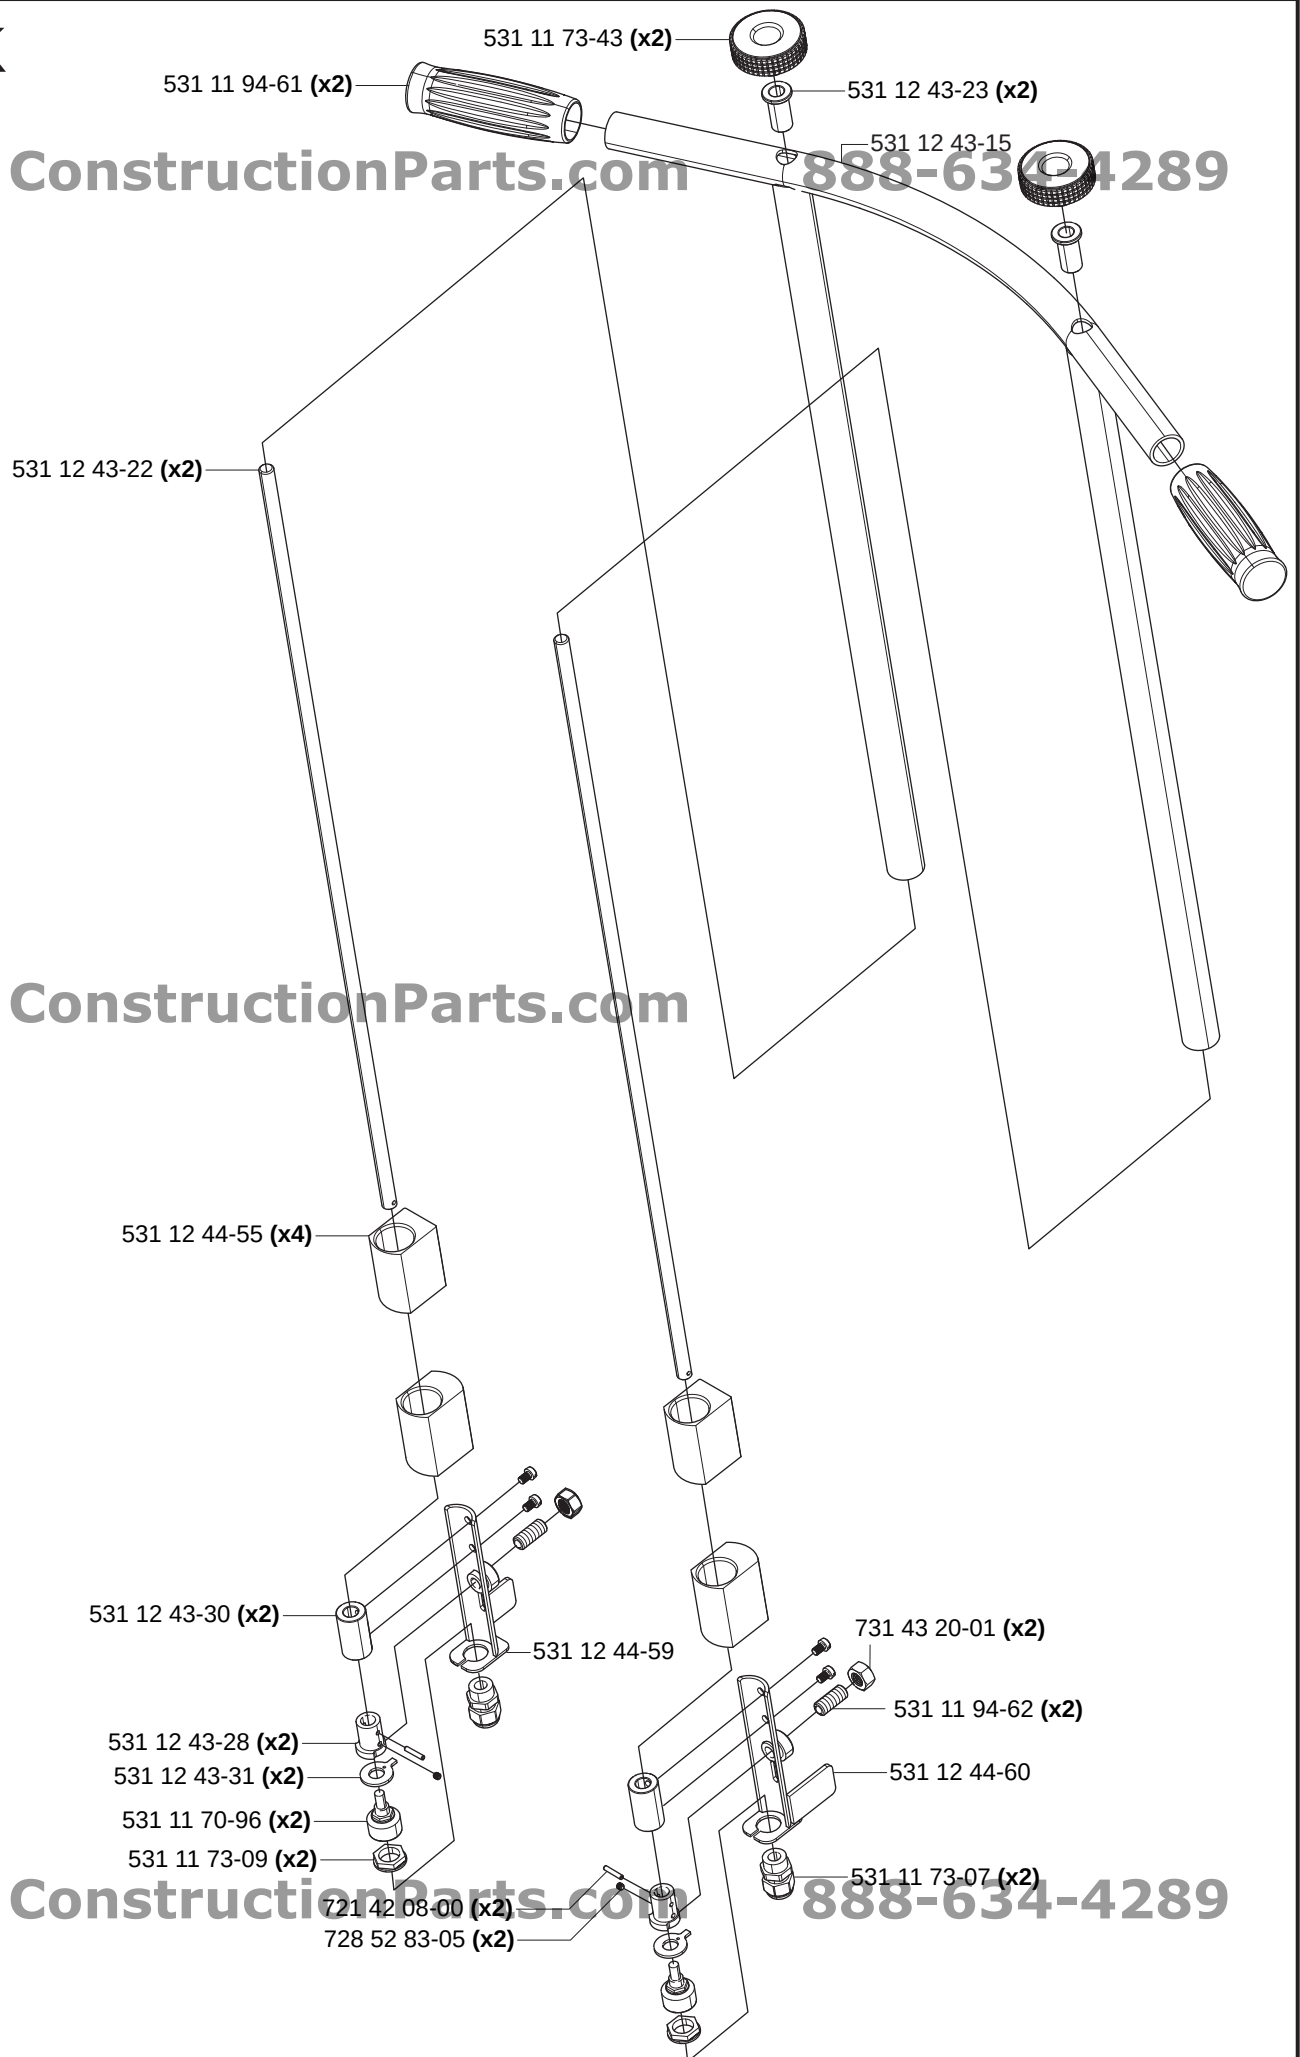


L


ConstructionParts.com


888-634-4289

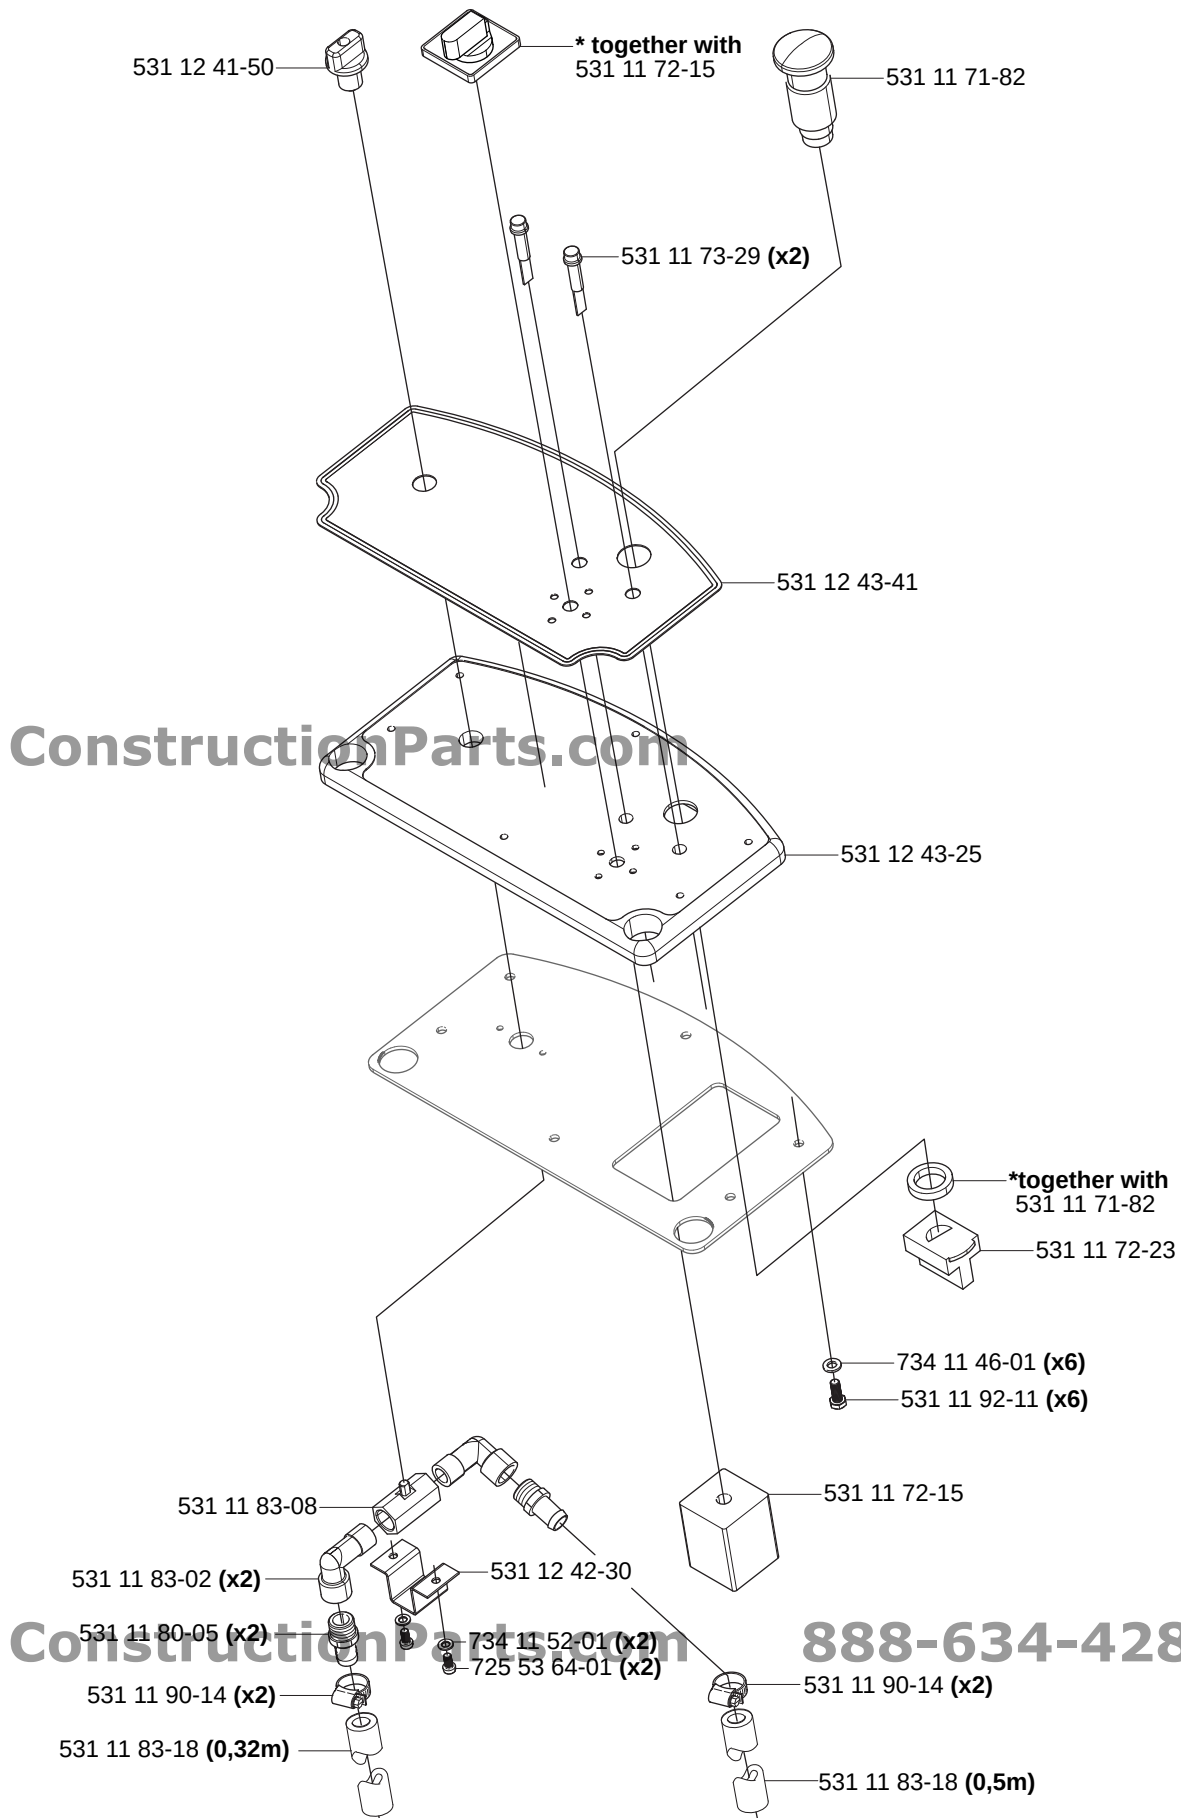

M

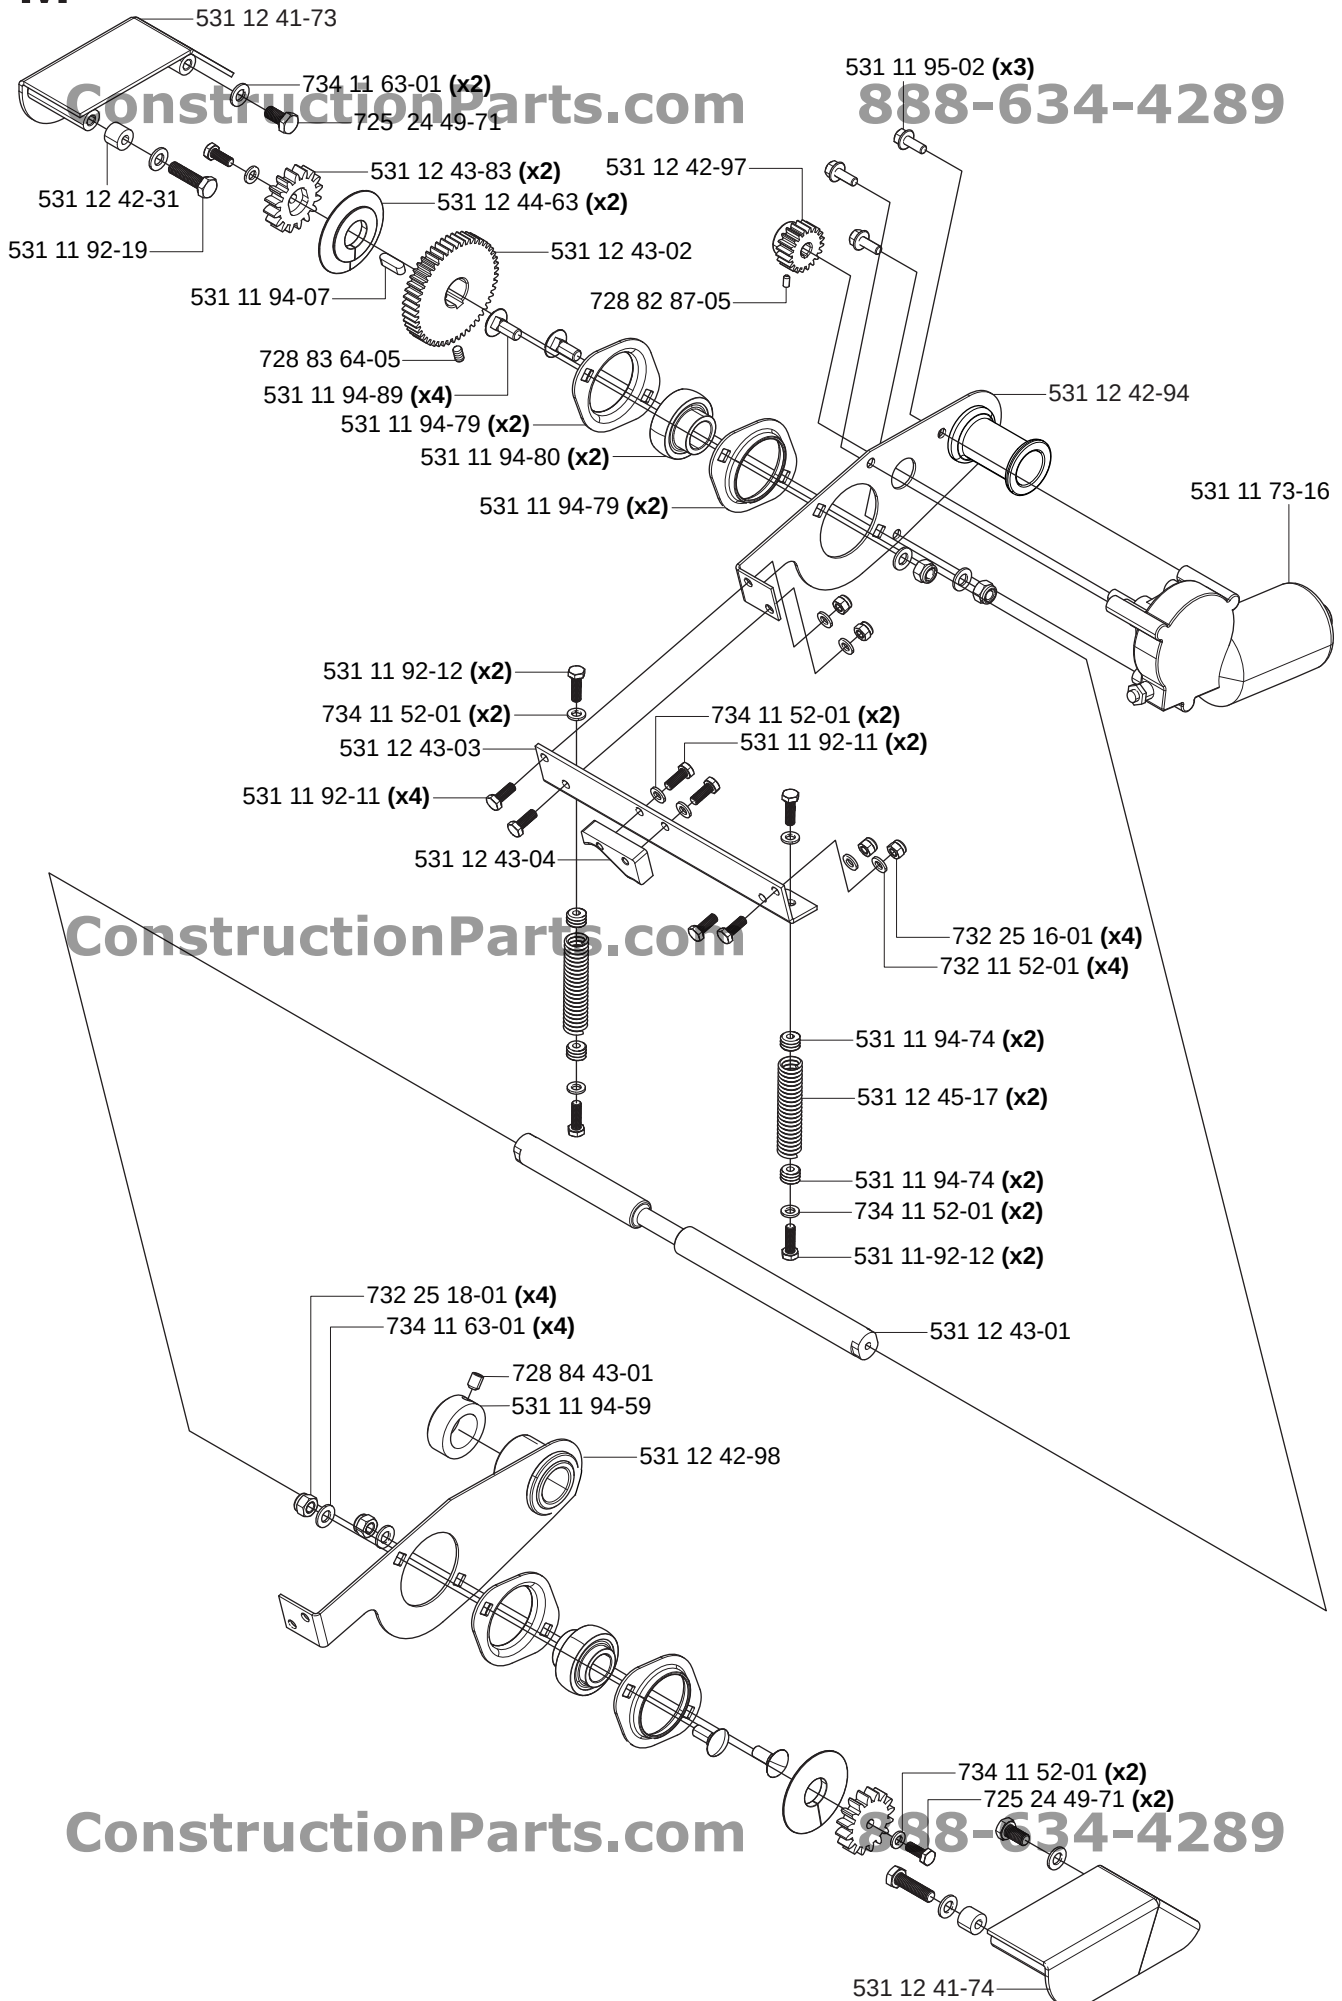

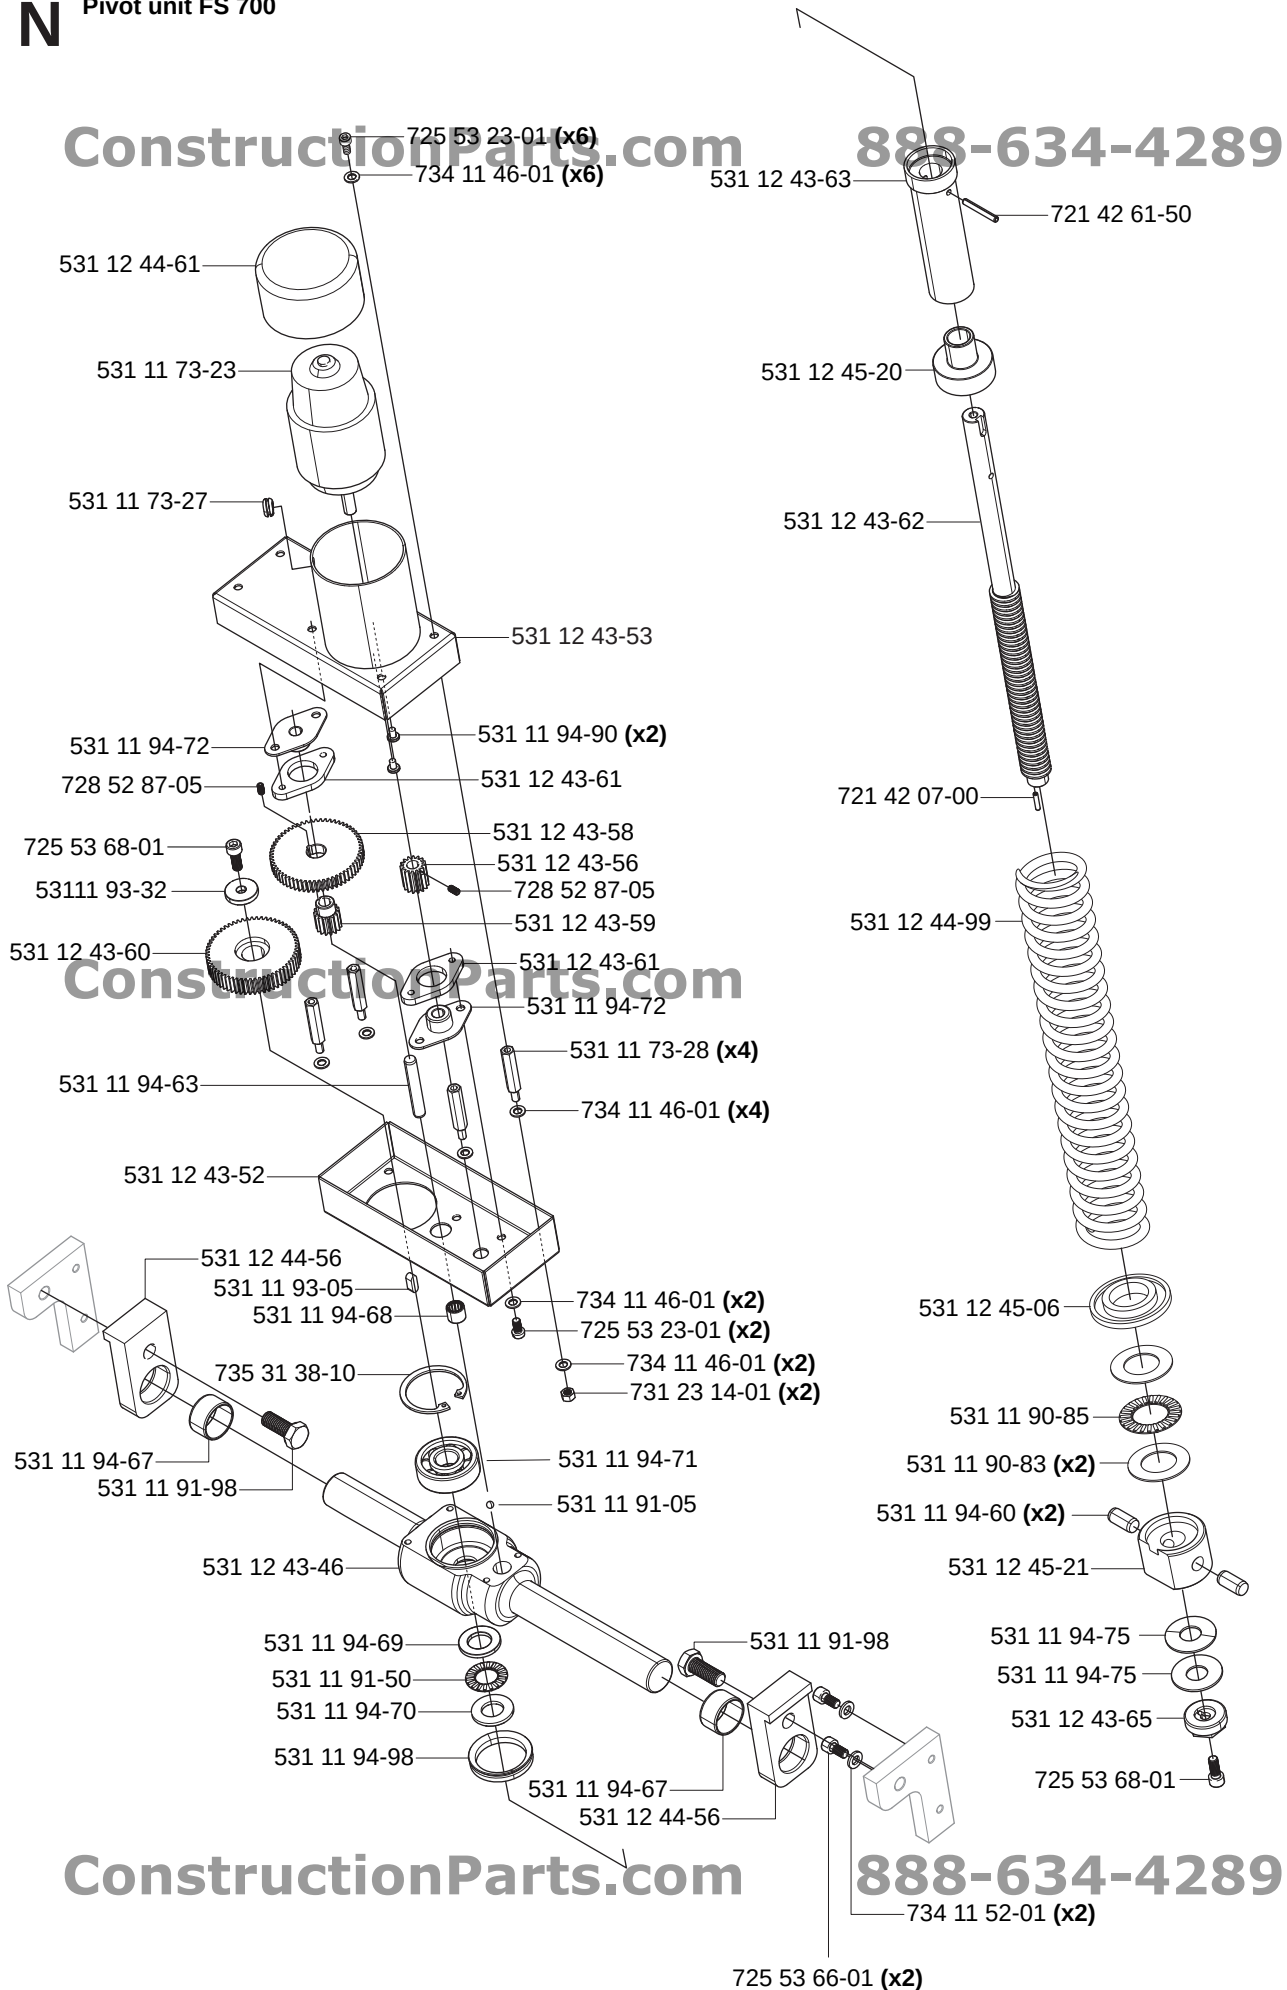
N**Pivot unit FS 700**

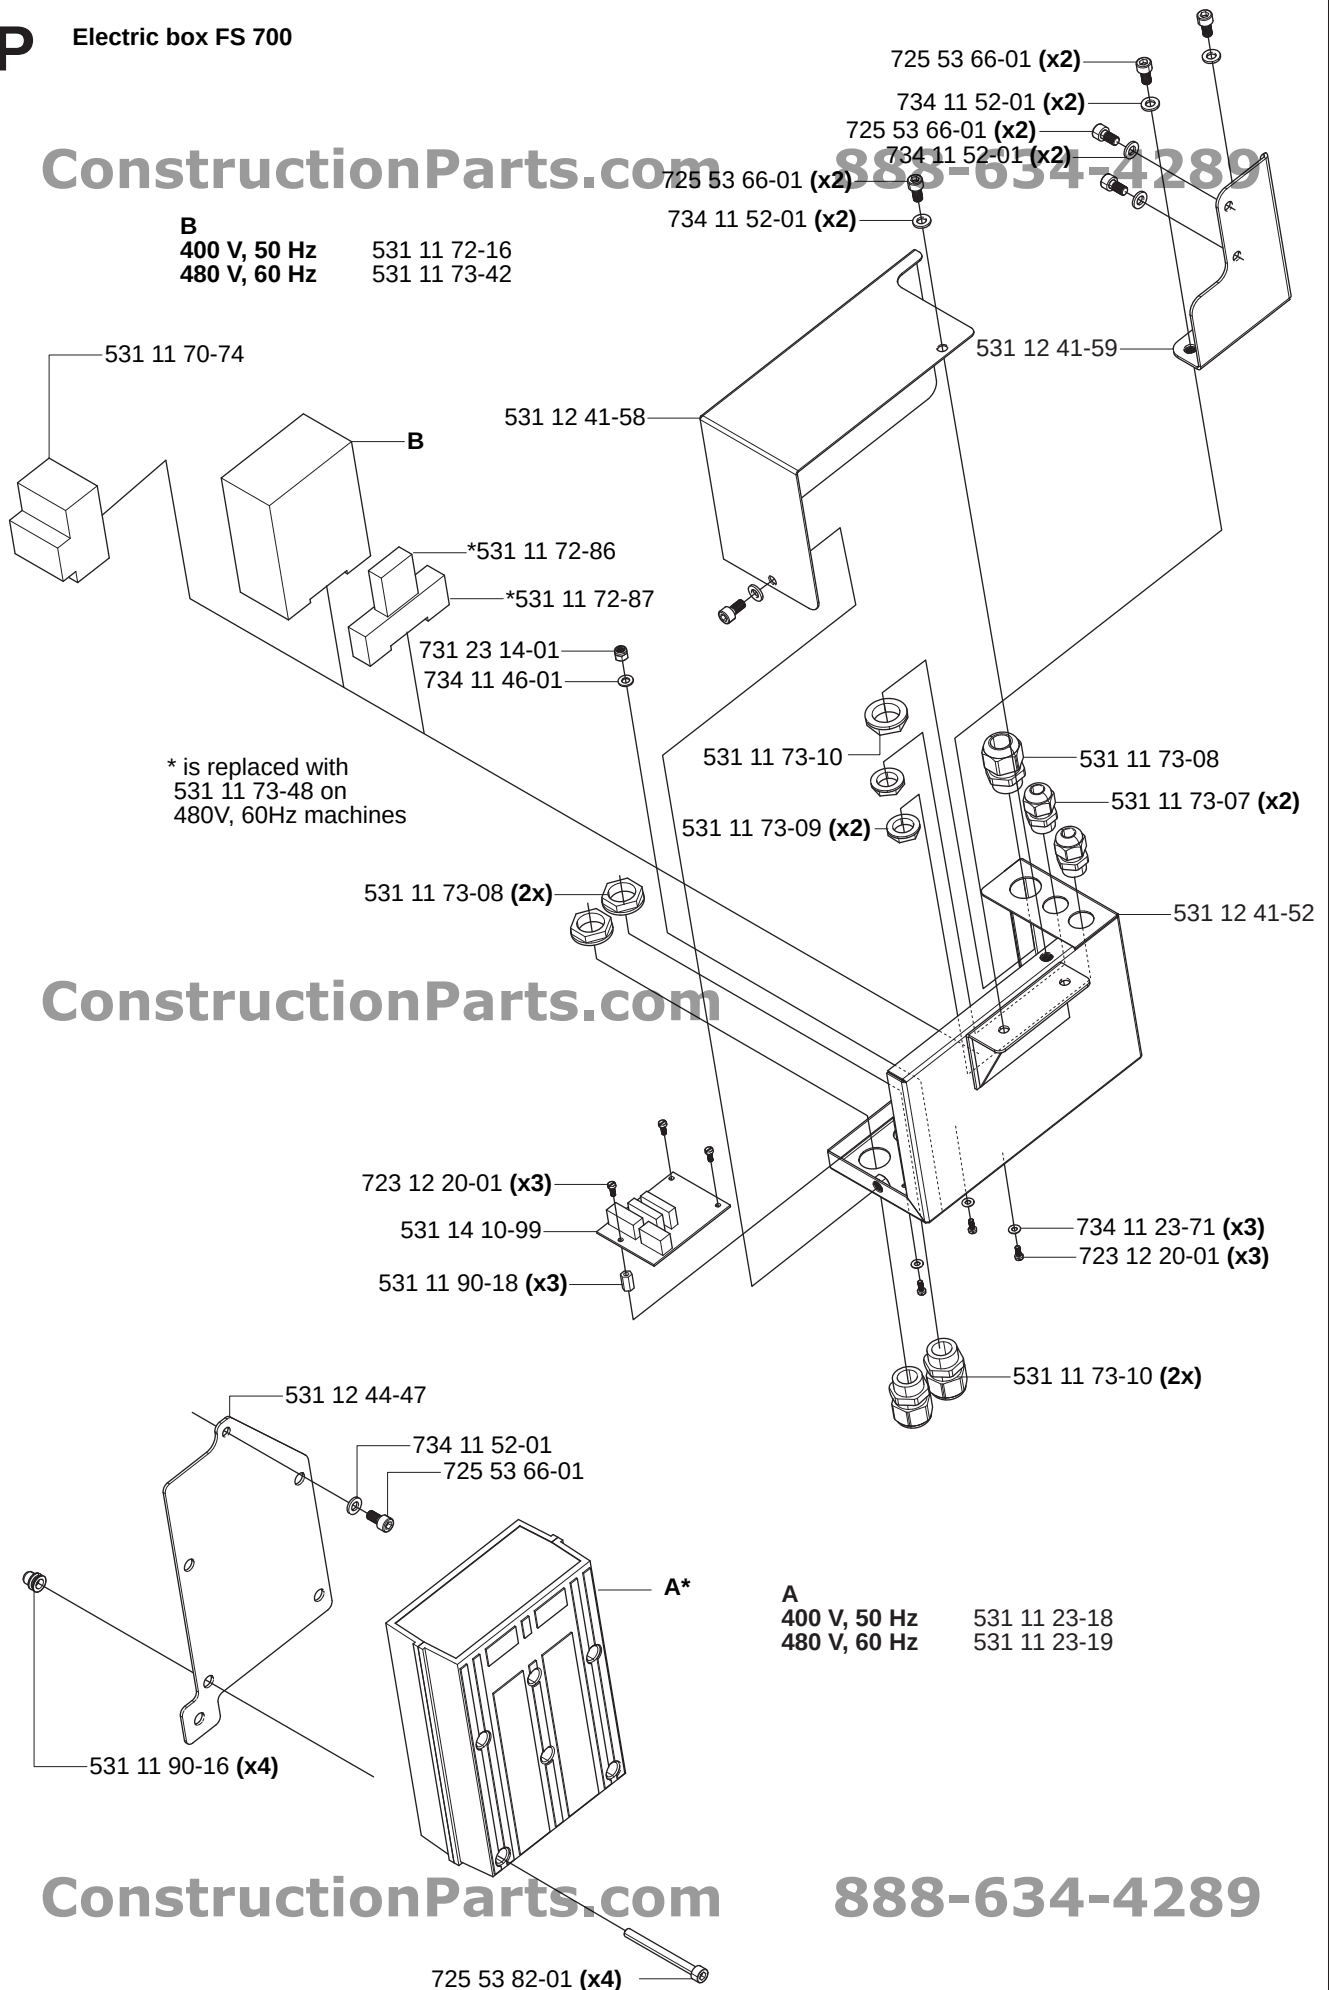P**Electric box FS 700****ConstructionParts.com** 888-634-4289**B****400 V, 50 Hz**
480 V, 60 Hz531 11 72-16
531 11 73-42**ConstructionParts.com****888-634-4289**


Q

ConstructionParts.com

888-634-4289

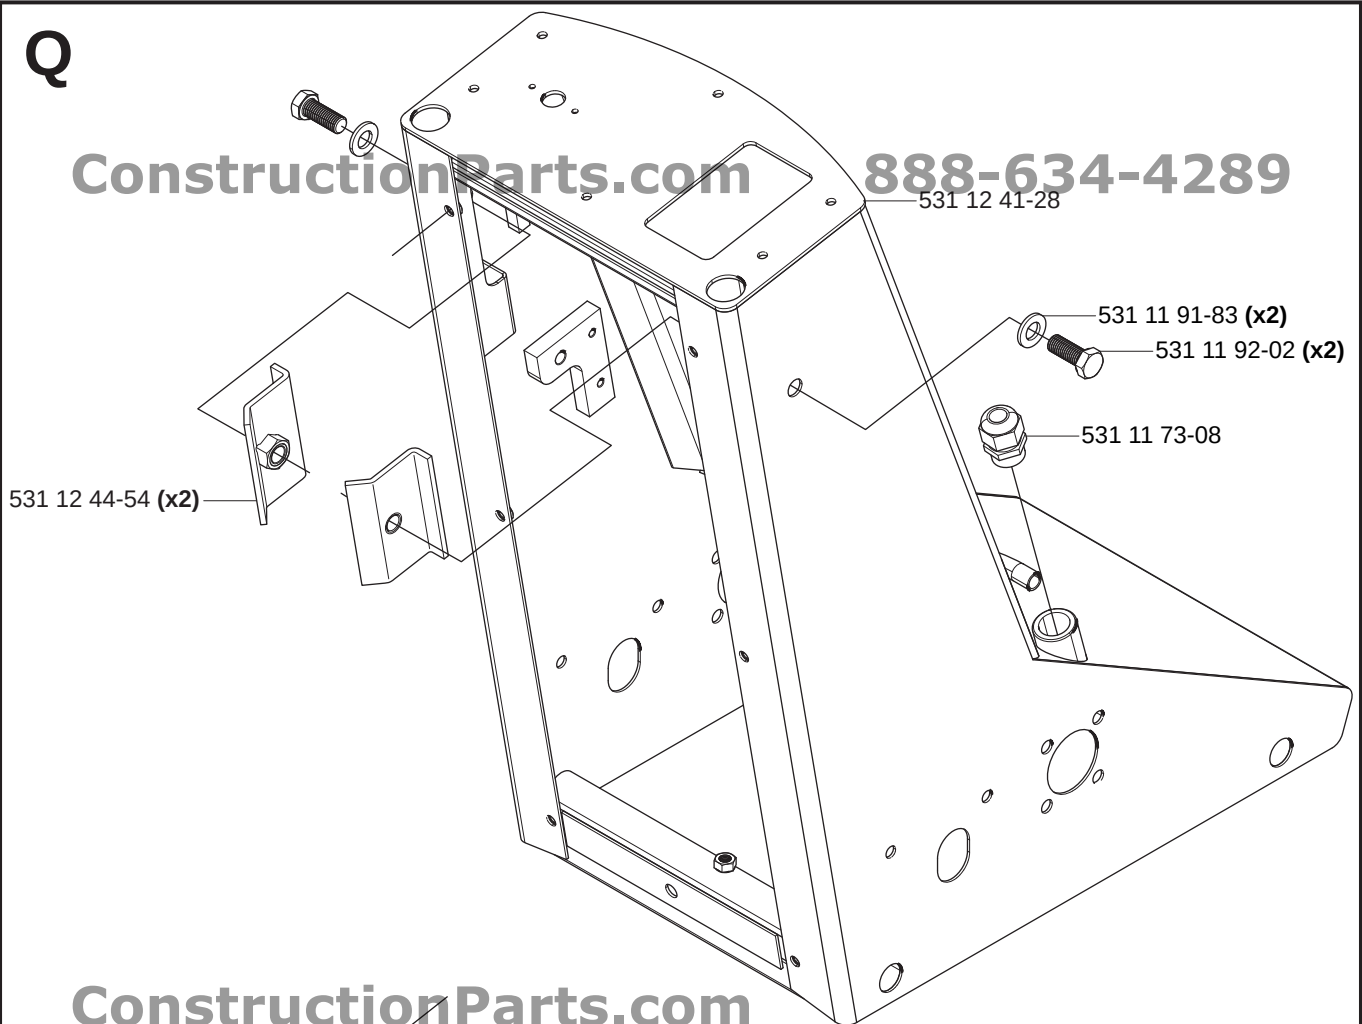

ConstructionParts.com

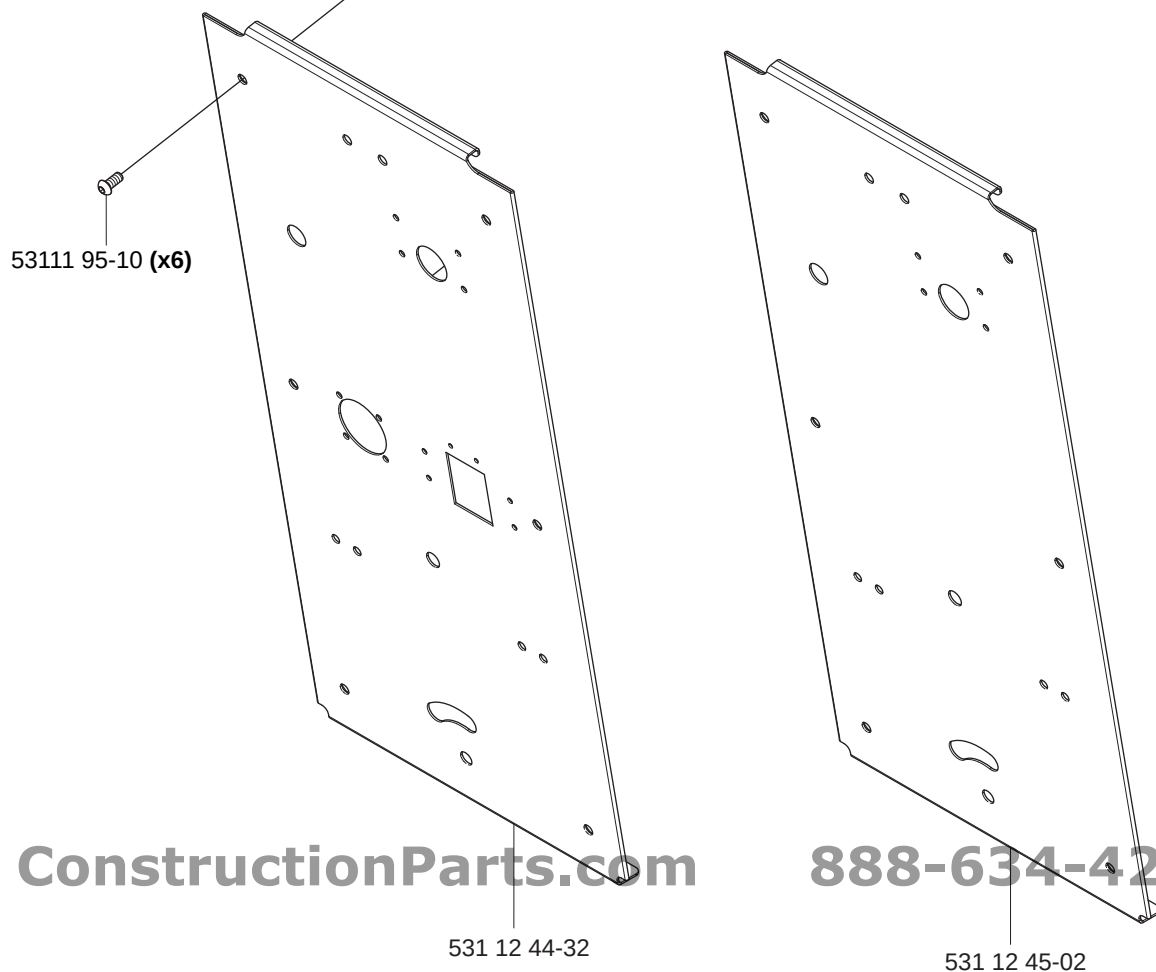

ConstructionParts.com

888-634-4289