
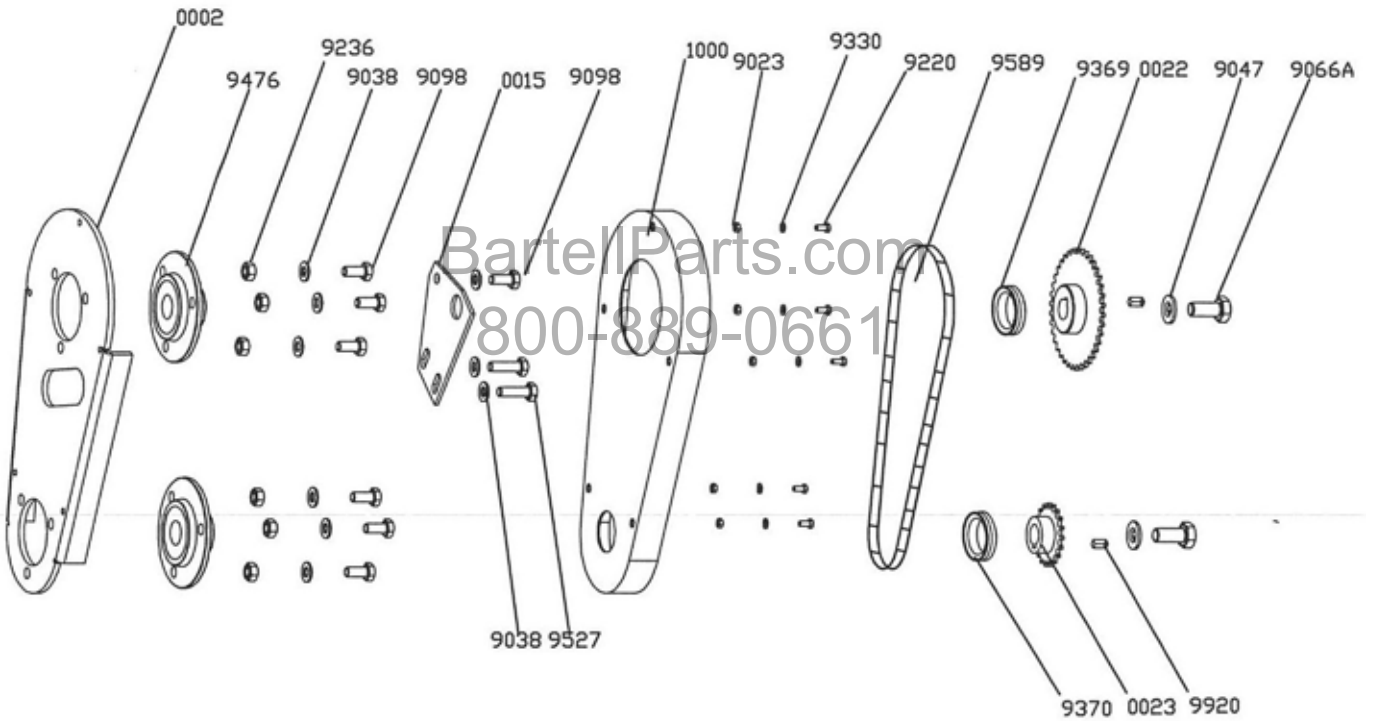


WALK BEHIND MATERIAL SPREADER INSTRUCTION MANUAL & PARTS BOOK

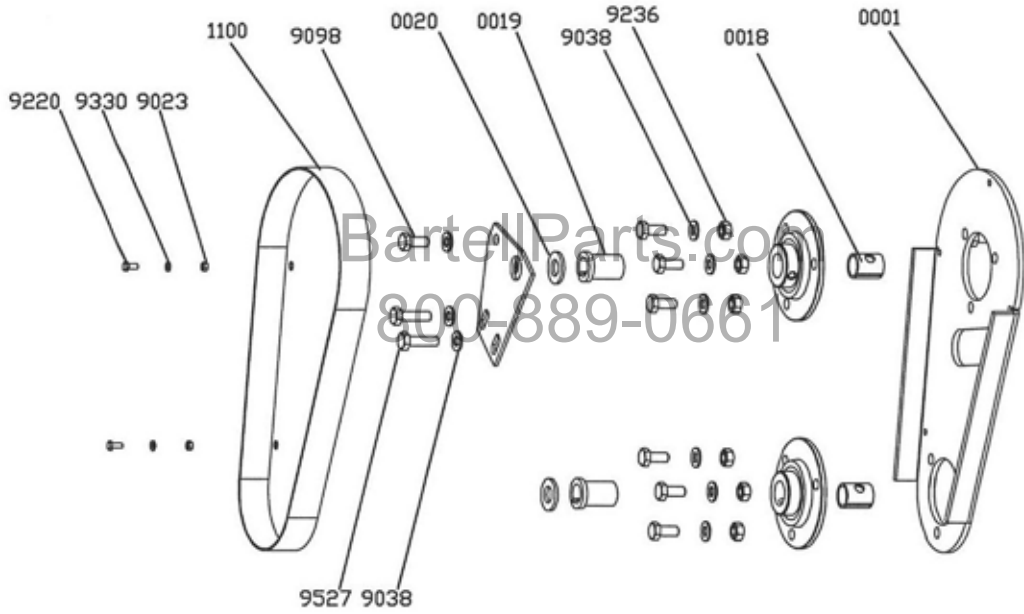

WALK BEHIND MATERIAL SPREADER INSTRUCTION MANUAL & PARTS BOOK

Material Spreader Parts List

PARTS NO.	DESP.	QTY
0003	Upper handle	1
0004	Block plate	1
0005	Washer	1
0006	Pull rod	4
0007	Connector	2
0009	Blade plate	2
0010	Blade	2
0011	Bolt	2
0012	Bushing	2
0013	Leather cover mounting plate	2
0014	Leather cover	2
0016	Mixer shaft	2
0100L	Left joint plate	1
0100R	Right joint plate	1
0200	Left handle tube	1
0300	Right handle tube	1
0400	Hopper	1
0500	Flow control handle	1
0600	Strengthen tube	1
0700	Block	1
0800	Mixer	1
0900	Roller	1
0001	Left mounting plate	1
0002	Right mounting plate	1
0015	Roller plate	2
0018	Bushing	2
0019	Bushing	2
0020	Check ring	2
0022	Large chain wheel	1
0023	Small chain wheel	1
1000	Inner belt guard	1
1100	Outer belt guard	1
9010	Screw	12
9023	Locknut	16
9038	Plate washer	28
9047	Plate washer	2
9066A	Hex bolt	2
9098	Hex bolt	16

WALK BEHIND MATERIAL SPREADER INSTRUCTION MANUAL & PARTS BOOK

9112	Nut	4
9121	Knob	1
9220	Hex bolt	16
9236	Locknut	21
9261	Plate washer	12
9316	Hex bolt	4
9330	Plate washer	21
9369	Seal	1
9370	Seal	1
9476	Bearing	4
9518	Pin	4
9527	Hex bolt	4
9589	Chain	1
9590	Air spring	1
9624	Wheel	2
9920	Key	2

BartellParts.com
800-889-0661
