

# BE

---

## WHEELED AIR COMPRESSOR

*AC658HB*


---

**BEPOWEREQUIPMENT**

**.COM**

## AC708RB/AC658HB/AC908HB

### Parts Diagram

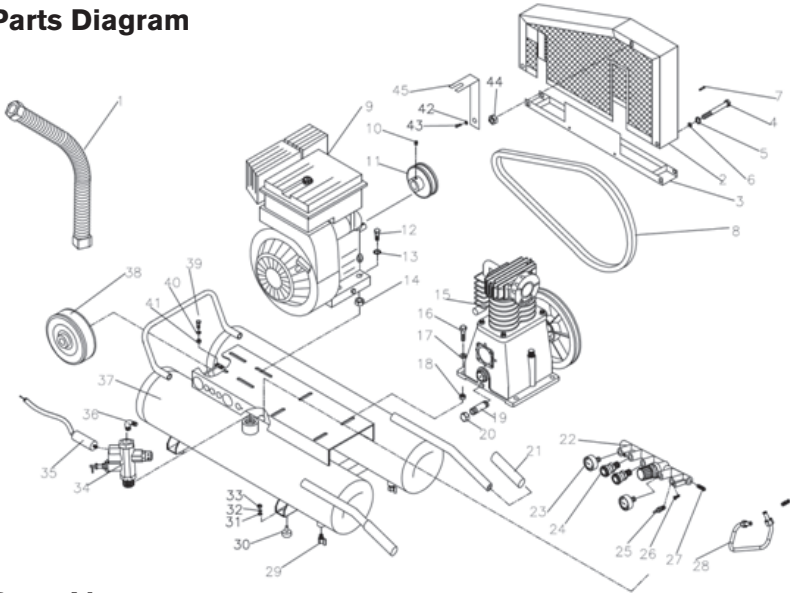


### Parts List

No.	Description	Qty
1	Exhaust Pipe Assembly	1
2	Safety Guard	1
3	Safety Guard	1
4	Bolt	2
5	Spring Washer	2
6	Washer	2
7	M5x0.8x8 Screw	3
8	V-Belt	1
9	Engine	1
10	In-six Angle Bolt	1
11	Motor Pulley	1
12	Bolt	4
13	Spring Washer	4
14	Six Angle Nut	4
15	Pump	1
16	Bolt	4
17	Spring Washer	4
18	Six Angle Nut	4
19	Discharge tubing	1
20	Six Angle Nut	1
21	Grip, Handle	2
22	Manifold	1
23	Pressure Gauge	2

No.	Description	Qty
24	Quick Disconnect	2
25	Safety valve	1
26	Screw,Cross recess head	2
27	nipple	2
28	Pipe	1
29	Drain Cock	2
30	Foot Rubber Pad	4
31	8 Flat Washer	4
32	Spring Washer	4
33	Bolt	4
34	Pilot Unloader Valve	1
35	Gas Pedal	1
36	Exhaust Elbow	1
37	Air Tank	1
38	Tank Wheel	1
39	Screw,Cross recess head	2
40	Spring Washer	2
41	Six Angle Nut	2
42	Washer	2
43	Screw	1
44	Six Angle Nut	1
45	link span	1

### AC708RB/AC658HB Pump

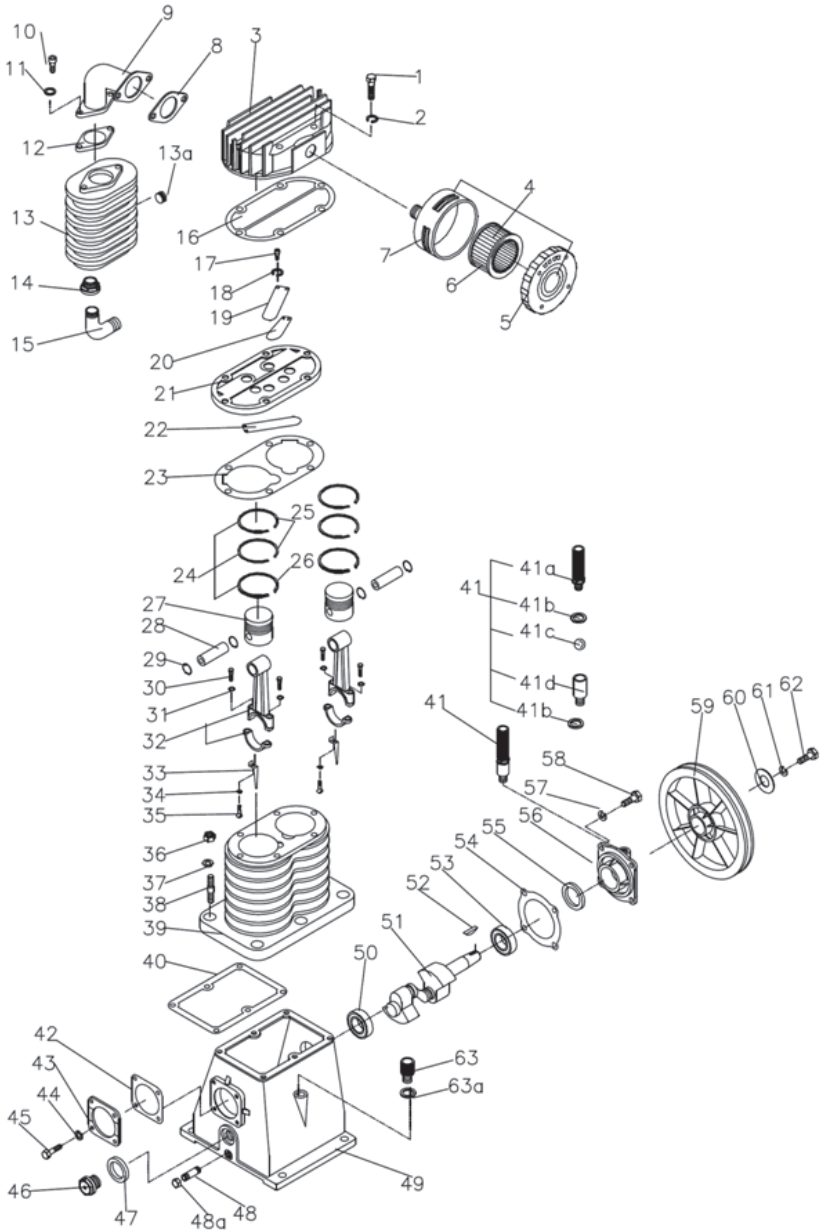

## Parts List

No.	Description	Qty	Part #
1	Bolt	6	6005880B
2	Spring Washer	6	60018
3	Cylinder Head	1	5101UH30
4	Air Filter Assy	1	504034
5	Front Cover, Air Filter	1	504434
6	Element, Air Filter	1	504334
7	Rear Cover, Air Filter	1	504534
8	Exht. Elbow Gasket	1	501365A
9	Exht. Elbow	1	5011UH30
10	In-six Angle Bolt	4	6011825B
11	Copper Washer	4	60028C
12	Exht. Elbow Gasket	1	501365
13	Exht. Cooler	1	5014UH30
13a	Bolt	1	531814
14	Nut,Exhaust	1	20341234
15	Exhaust Elbow	1	50051234
16	Gasket, Cylinder Head	1	5102UH30
17	M4*10 Screw	8	6021410
18	Spring Washer	8	60014
19	Outlet Valve Guard	2	514580
20	Valve Plate	2	513380
21	Vavle Seat	1	510365UH
22	Valve Plate	2	51138519
23	Gasket, Cylinder	1	5107UH30
24	Piston Ring Set	2	520065
25	Compression Ring	4	520365
26	Oil Ring	2	520465
27	Piston	2	520265
28	Piston Pin	2	52071457
29	Piston Pin Clip	4	6018147
30	In-Six Angle Bolt	4	6011835
31	Spring Washer	4	60018
32	Connecting Rod	2	5206UB40
33	Splasher	2	5213UH30
34	Spring Washer	2	60014
35	Screw,Cross recess head	2	6021410
36	Six Angle Nut	6	60068
37	Spring Washer	6	60018

No.	Description	Qty	Part #
38	Stud	6	6013835
39	Cylinder	1	52016550
40	Gasket, Cylinder	1	5214UH30
41	Breather Assy	1	533016A
41a	Breather	1	533316A
41b	Washer,Breather	2	6014153
41c	Ball	1	5331113
41d	Rod, Breather	1	53321616
42	Gasket, Bearing Cover	1	5312UB20
43	Bearing Cover	1	5313UB40
44	Spring Washer	4	60016
45	Bolt	4	6005620B
46	Oil Leveler	1	532012
47	Washer, Oil Leveler	1	532112
48	Discharge tubing	1	5318UH30
48a	Six Angle Nut	1	5318UH301
49	Crankcase	1	5301UH30
50	Bearing	1	60176304
51	Crankshaft	1	5308UH30
52	Woodruff Key	1	601557519
53	Bearing	1	60176205Z
54	Gasket, Bearing Seat	1	5307UH30
55	Oil Seal	1	6016243575
56	Bearing Seat	1	5306UH30
57	Spring Washer	4	60018
58	Bolt 8.8	4	6005825A
59	Pulley	1	53021224A1
60	Pulley Washer	1	5304UB10
61	Spring Washer	1	60018L
62	Bolt	1	6005840L
63	Oil Filling Plug	1	5316UH55
63a	Washer	1	6014153