




IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.

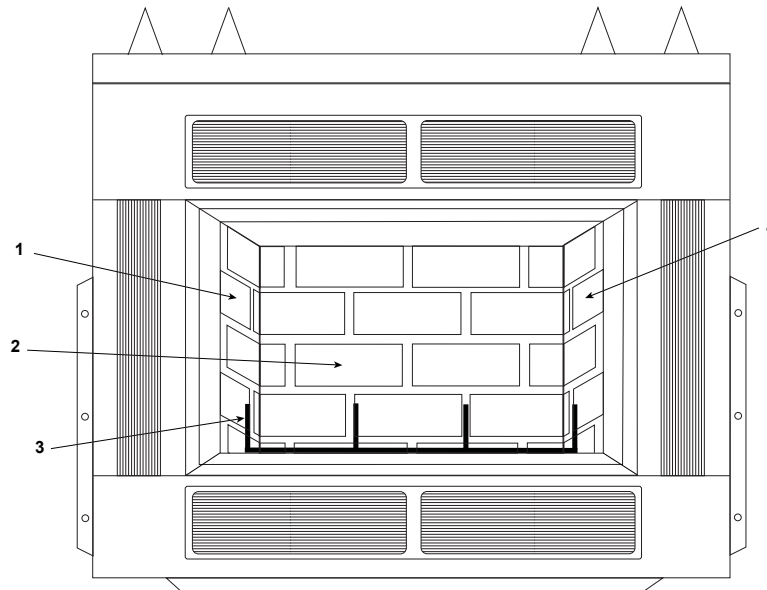

**Stocked
at Depot**

ITEM	DESCRIPTION	COMMENTS	PART NUMBER	
1	Refractory, Left Side	No longer available	12766A	
2	Refractory, Back	No longer available	12764A	
3	Grate		GR41	Y
4	Refractory, Right Side	No longer available	12765A	
	Ash Door	No longer available	12855E	
	Ash Pan	No longer available	12901A	
	Baffle, LX Upper	No longer available	12861B	
	Ball Stud (attaches to the door)	No longer available	12895A	
	Ball Stud Catch	No longer available	12802A	
	Damper Slide	No longer available	12940C	
	Door Gasket 5/8 in.	No longer available	9002	Y
	Door Hinge (bottom)	No longer available	12904A	
	Door Hinge (top)	No longer available	12906B	
	Glass Door Assembly	No longer available	14891B	
	Glass Panel	No longer available	12694A	
	Latch Plate	No longer available	14884D	
	Lower Door Assembly	No longer available	12779B	
	Protector Strip	No longer available	304196G	
	Refractory, Hearth, Right		12767A	
	Refractory, Hearth, Left		12768A	
	Rope Gasket	6 ft.	13263C	
	Installation Instructions and Owner's Manual		12898	