



<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
1.	40272	Body – R.H.
2.	40273	Body – L.H.
3.	40061	Extension Handle (Includes #38)
4.	40220	Tongue Nailing Shoe
5.	40153	Tongue Nailing Shoe Base – (2 ea)
6.	2598	Tongue Nailing Shoe Base Screws (4 ea)
7.	40223	Face Shoe
8.	40224	Face Shoe Base
9.	40226	Face Shoe Base Screws (4 ea)
10.	40043	Shoe Screws (4 ea.)
11.	40040	Wear Plate / Shear Plate Dowels (2 ea)
12.	54580	Wear Plate
13.	40170	Shear Plate
14.	53849	Pusher Spring Roll Pin 1/8 x 5/8
15.	-----	Pusher Spring Tube (See Ref. No. 48)
16.	40146	Pusher Spring
17.	40093	Connector
18.	40109	Rail Spring Pin 1/8 x 3/8
19.	40151	Rail
20.	40094	Pusher
21.	40030	Rubber Ram Cap
22.	40116	Ram (Includes #'s 21,24,26)
23.	40131	Driver Blade
24.	40052	Ram Washer
25.	40124	Ram Spring Guide
26.	40126	Ram Spring
27.	40245	Ram Guide

28. 40050 Ram Stop Screws (2 ea)
29. 40241 Shoulder Screw (Includes #30)
30. 802194 Shoulder Screw Nut
31. 2190 Pawl Housing Set
32. 40101 Pawl Spring
33. 40037 Pawl
34. 40115 Ram Stop Springs (2 ea)
35. 40048 Ram Stop Block
36. 40243 Nailer Body Screws (4 ea.)
37. 40244 Body Handle Screws (3 ea.)
38. 1165 Extension Handle Fasteners
39. 40229 Thin Flooring Shoe
40. 40152 Thin Flooring Shoe Base
41. 2600 Thin Flooring Shoe Base Screws (4 ea.)
42. 40221 Tongue Nailing Shoe Assembly
(Includes #'s 4, 5, 6) Not to be used
with Cat. No. 401
43. 40225 Face Shoe Assembly (Includes #'s 7, 8, 9)
Not to be used with Cat. No. 501
44. 40230 Thin Flooring Shoe Assembly (Includes #'s 39,
40, 41) – Not to be used with Cat. No. 401
45. 40008 Hammer (Not Shown)
46. 840080 Spare Parts Package (Not Shown
Includes #'s 24, 26)
47. 2191 Pawl Housing Assembly (Includes #'s 31, 32, 33)
48. 40097 Pusher Spring Tube Assembly
(Includes #'s 15, 16, 17)
49. 59561 Starter Parts Kit (Includes #'s 12, 13, 20, 21, 23,
24, 25, 26, 32, 33)