



BXR830, BXR830PRO
RIDE-ON TROWEL
PARTS BOOK





TABLE OF CONTENTS

<u>PARTS LIST 1 - RIDE ON TROWELS</u>	5
BXR830, FRAME	5
BXR830, FRAME - PARTS LIST 1	6
<u>PARTS LIST 2 - RIDE ON TROWELS</u>	7
BXR830, GAS POWER PLANT	7
BXR830, GAS POWER PLANT - PARTS LIST 2	8
<u>PARTS LIST 3 - RIDE ON TROWELS</u>	9
BXR830, PROPANE POWER PLANT	9
BXR830, PROPANE POWER PLANT - PARTS LIST 3	10
<u>PARTS LIST 4 - RIDE ON TROWELS</u>	11
BXR830, DRIVING SYSTEM	11
BXR830, DRIVING SYSTEM - PARTS LIST 4	12
<u>PARTS LIST 5 - RIDE ON TROWELS</u>	13
BXR830, STEERING AND BLADE PITCH SYSTEM	13
BXR830, STEERING AND BLADE PITCH SYSTEM - PARTS LIST 5	14
<u>PARTS LIST 6 - RIDE ON TROWELS</u>	15
BXR830, GEARBOX ASSEMBLY, RIGHT (CCW)	15
BXR830, GEARBOX ASSEMBLY RIGHT (CCW) - PARTS LIST 6	16
<u>PARTS LIST 7 - RIDE ON TROWELS</u>	17
BXR830, GEARBOX ASSEMBLY, LEFT (CW)	17
BXR830, GEARBOX ASSEMBLY LEFT (CW) - PARTS LIST 7	18
<u>PARTS LIST 8 - RIDE ON TROWELS</u>	19
BXR830, SPRAY SYSTEM	19
BXR830, SPRAY SYSTEM - PARTS LIST 8	19
<u>PARTS LIST 9 - RIDE ON TROWELS</u>	20
BXR830, FOOT THROTTLE KIT	20
BXR830, FOOT THROTTLE KIT - PARTS LIST 9	20
<u>PARTS LIST 10 - RIDE ON TROWELS</u>	21
BXR830, FUEL TANK	21
BXR830, FUEL TANK - PARTS LIST 10	22
<u>PARTS LIST 11 - RIDE ON TROWELS</u>	23
BXR830, PROPANE TANK	23



BXR830, PROPANE TANK - PARTS LIST 11	24
<u>PARTS LIST 12 - RIDE ON TROWELS</u>	25
BXR830, TRANSPORTER	25
BXR830, SPRAY SYSTEM - PARTS LIST 12.....	26

PARTS LIST 1 – RIDE ON TROWELS

BXR830, FRAME

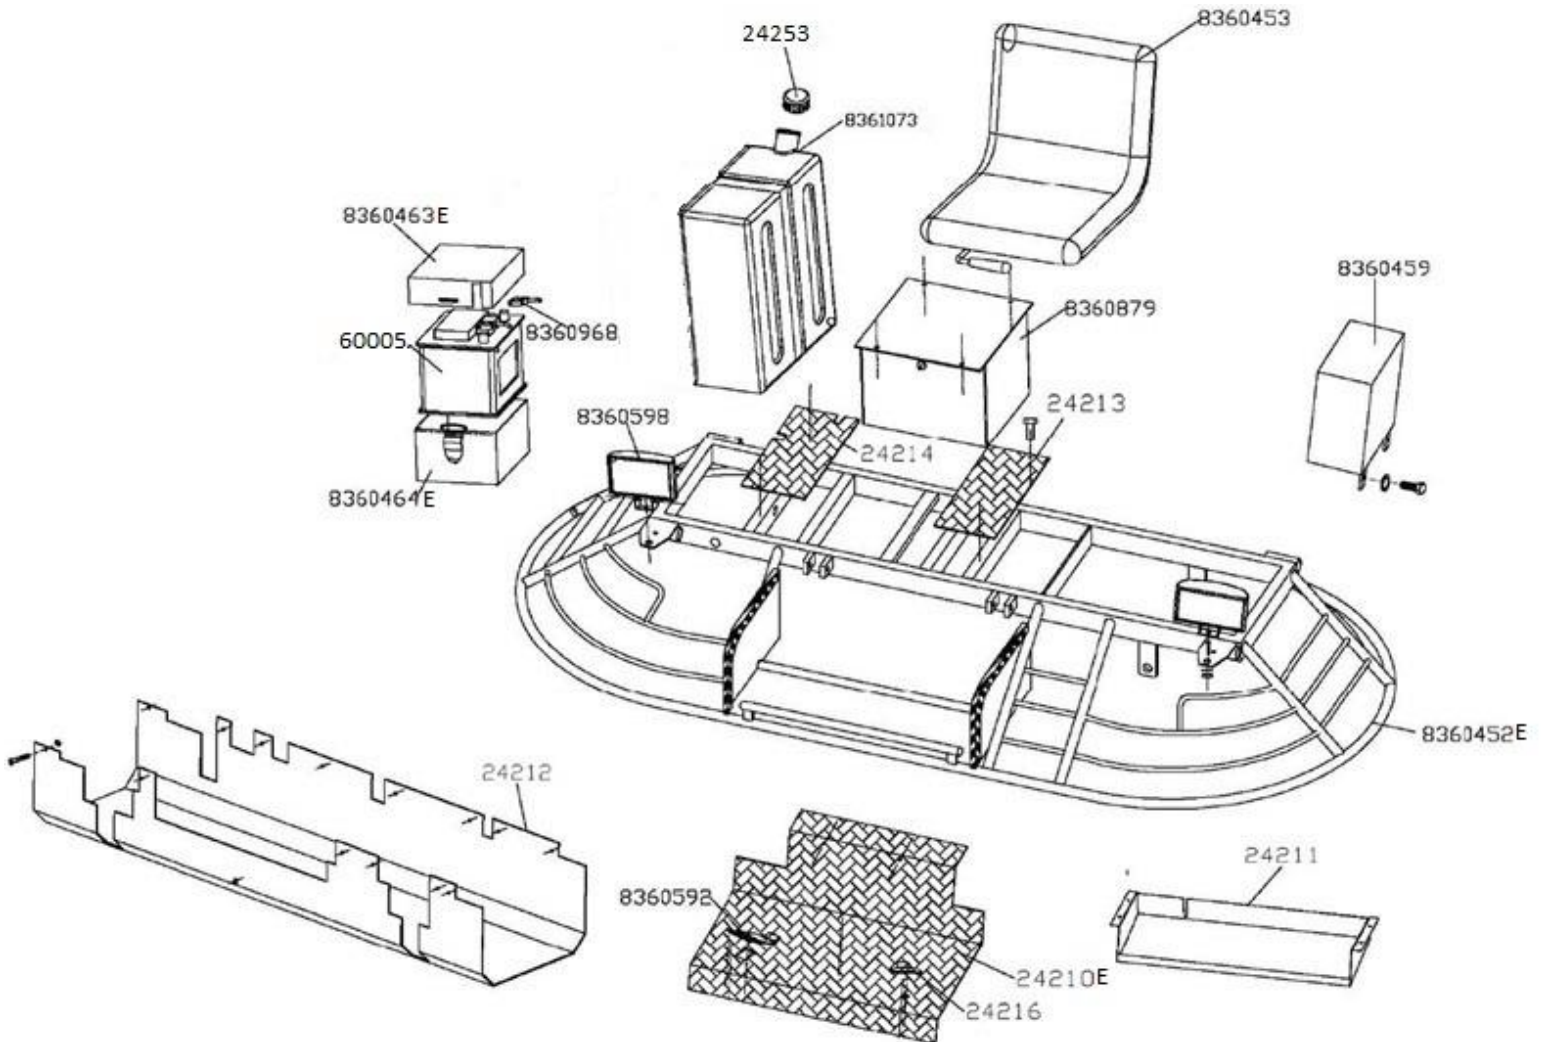


Figure 1: Frame



BXR830, FRAME – PARTS LIST 1

Part #	Description	QTY	Remarks
8360452	GUARD RING	1	
24210E	FOOT BOARD	1	
24211	COVER BOARD, THROTTLE	1	
24212	COVER BOARD, BOTTOM	1	
24213	COVER BOARD	1	
24214	COVER BOARD	1	
8360879	TOOLBOX	1	
8360453	SEAT	1	
8360459	COVER CLUTCH	1	
8361073	WATER TANK, PLASTIC	1	
24253	WATER CAP	1	
8360464E	BATTERY BOX	1	
60005	BATTERY	1	
8360463E	BATTERY COVER	1	
8360968	CONNECTOR, BATTERY	1	
8360592	THROTTLE CONTROL	1	
24216	SAFETY SWITCH	1	
25121	POLISHING SKIRT	1	NOT SHOWN

PARTS LIST 2 – RIDE ON TROWELS

BXR830, GAS POWER PLANT

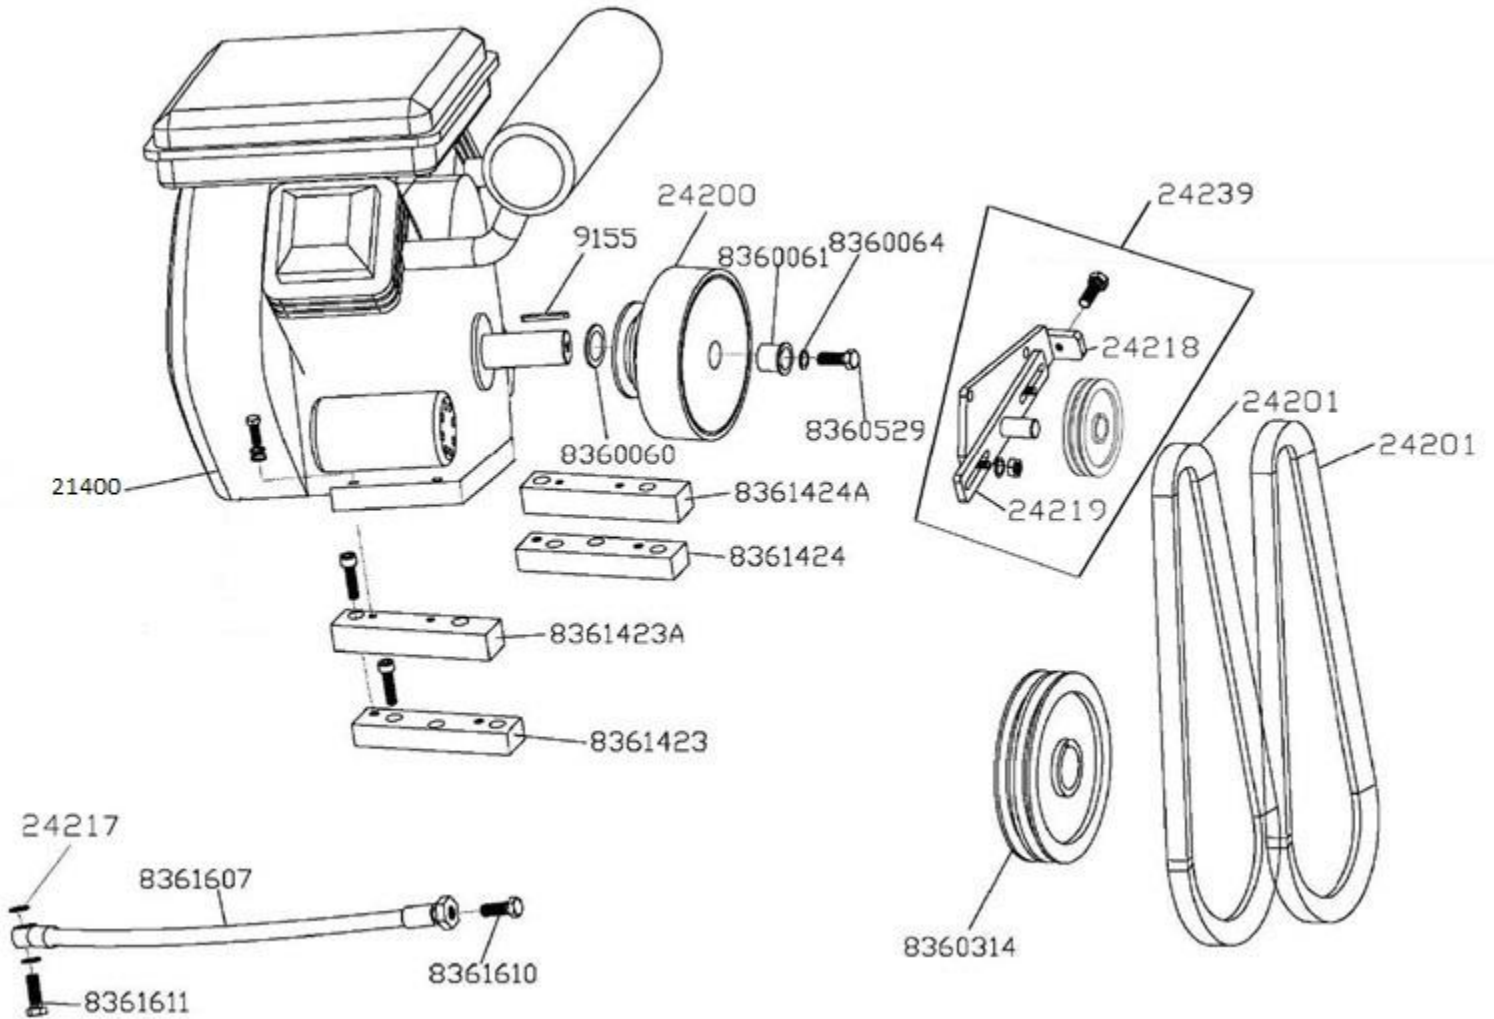


Figure 2: Gas Power Plant

BXR830, GAS POWER PLANT – PARTS LIST 2

Part #	Description	QTY	Remarks
21400	HONDA GX690	1	
8361423	ENGINE MOUNTING BAR	1	
8361423A	ENGINE MOUNTING BAR	1	
8361424	ENGINE MOUNTING BAR	1	
8361424A	ENGINE MOUNTING BAR	1	
24200	CLUTCH	1	
8360060	WASHER	1	
8360061	BUSHING	1	
8360064	WASHER	1	
8360529	BOLT	1	
9155	KEY	1	
8361607	OIL PIPE	1	
24217	WASHER	1	
8361611	BOLT	1	
8361610	BOLT	1	
8360314	PULLEY	1	
24218	MOUNTING PLATE, PULLEY	1	
24219	ADJUST PLATE, PULLEY	1	
24201	BELT	2	
24239	BELT TENSIONER ASSEMBLY	1	

PARTS LIST 3 – RIDE ON TROWELS

BXR830, PROPANE POWER PLANT

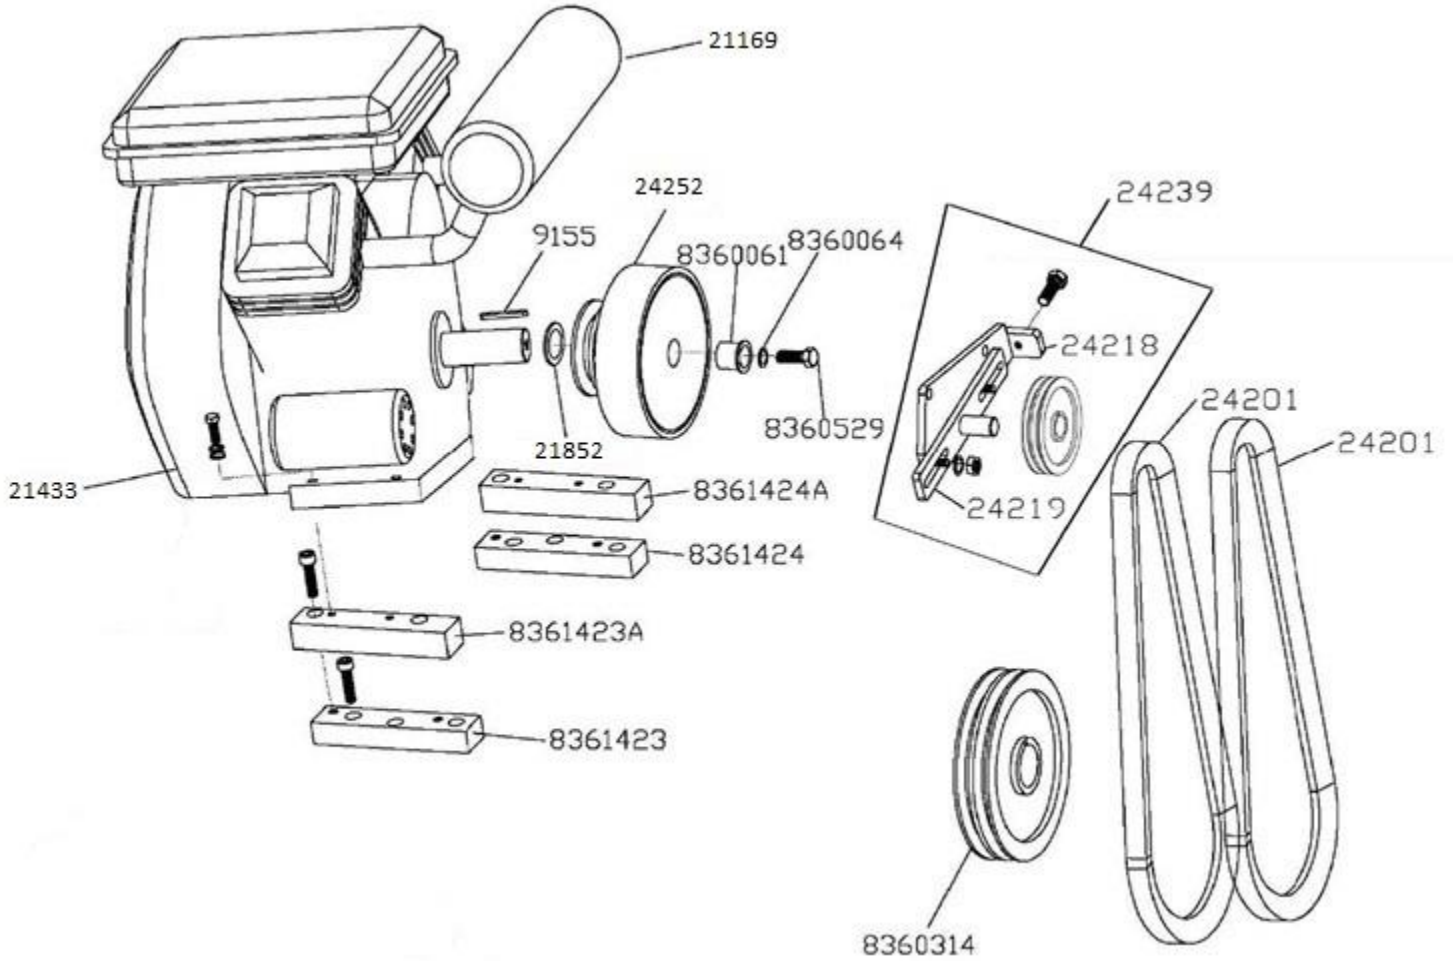


Figure 3: Propane Power Plant



BXR830, PROPANE POWER PLANT – PARTS LIST 3

Part #	Description	QTY	Remarks
21433	B&S, 627CC, PROPANE	1	
8361423	ENGINE MOUNTING BAR	1	
8361423A	ENGINE MOUNTING BAR	1	
8361424	ENGINE MOUNTING BAR	1	
8361424A	ENGINE MOUNTING BAR	1	
24252	CLUTCH	1	
21852	SPACER	1	
8360061	BUSHING	1	
8360064	WASHER	1	
8360529	BOLT	1	
9155	KEY	1	
8360314	PULLEY	1	
24218	MOUNTING PLATE, PULLEY	1	
24219	ADJUST PLATE, PULLEY	1	
24201	BELT	2	
24239	BELT TENSIONER ASSEMBLY	1	
21169	CATALYTIC MUFFLER	1	
16177	EMISSION DATA ANALYZER	1	NOT SHOWN
21854	REGULATOR MOUNT BRACKET	1	NOT SHOWN
24251	WIRING	1	NOT SHOWN
24250	KIT: HOSES, REGULATOR	1	NOT SHOWN

PARTS LIST 4 – RIDE ON TROWELS

BXR830, DRIVING SYSTEM

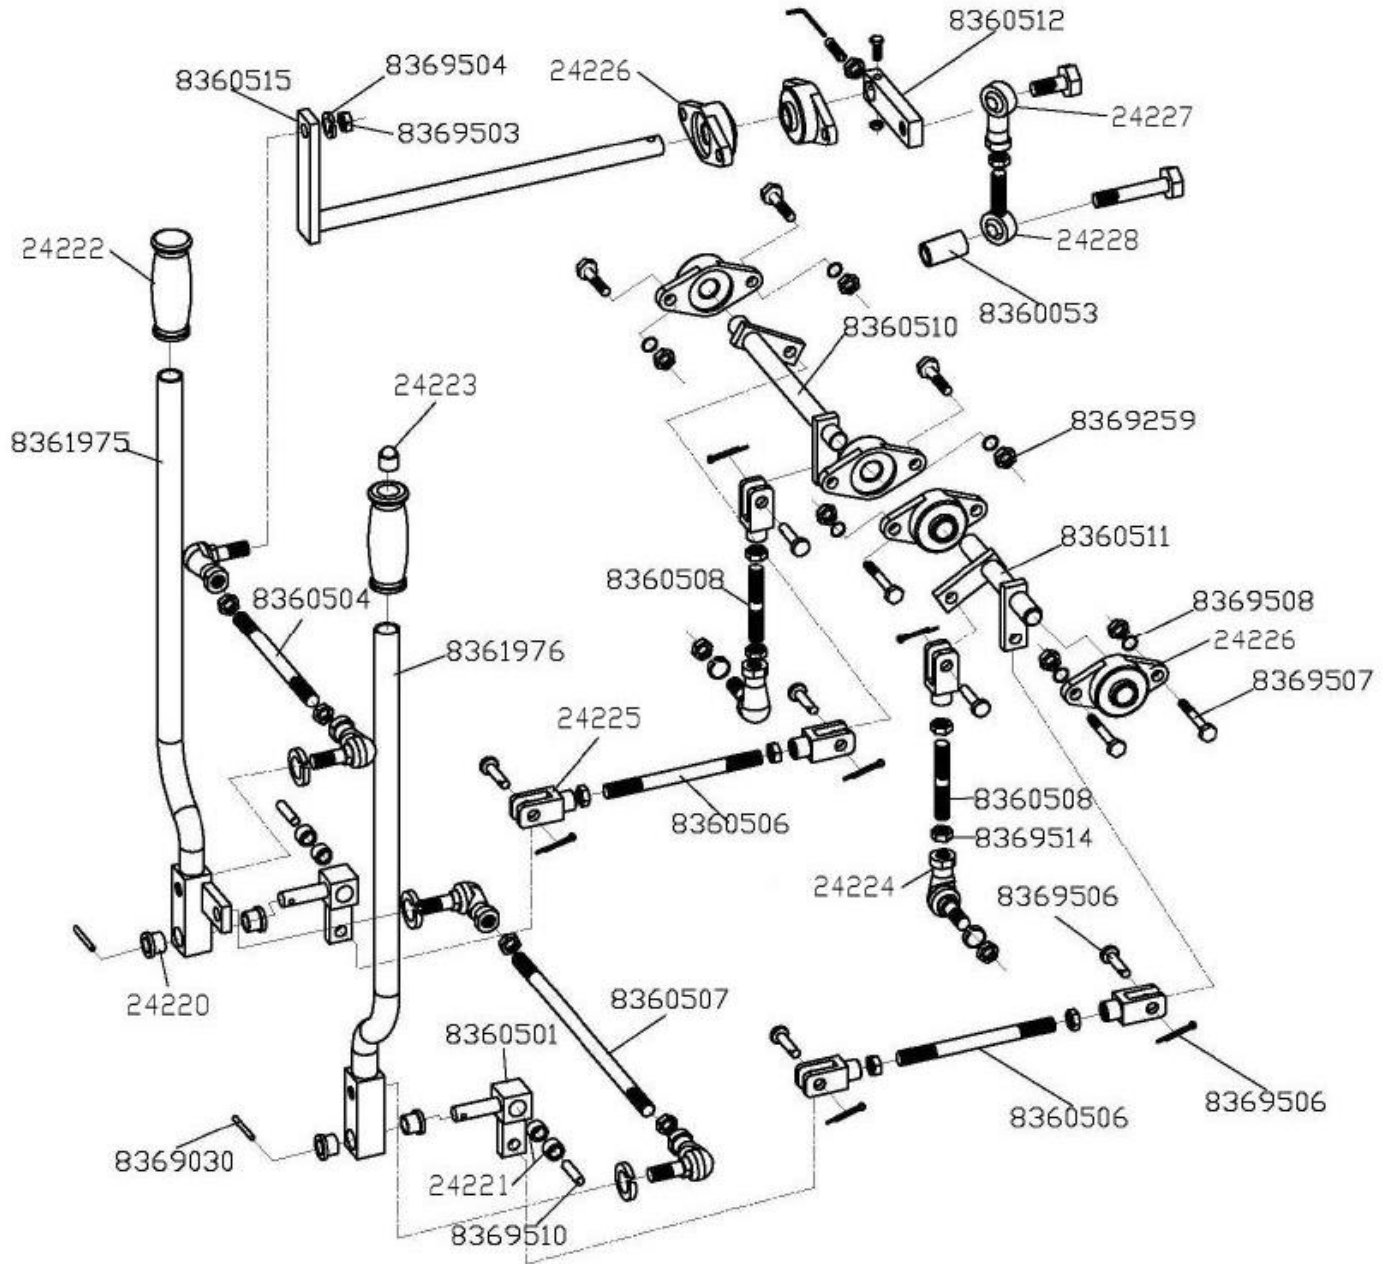


Figure 4: Driving System

BXR830, DRIVING SYSTEM – PARTS LIST 4

Part #	Description	QTY	Remarks
8361975	DRIVE LEVER, RIGHT	1	
8361976	DRIVE LEVER, LEFT	1	
8360501	T-CONNECTOR	2	
24220	BUSHING	4	
24221	BUSHING	4	
9030	LOCK PIN	2	
9502B	OIL CAP	2	
9502C	OIL CAP	2	
24222	PLASTIC HANDLE	2	
24223	BUTTON, WATER SPRAY SYSTEM	1	
8360504	CONNECT SHAFT	1	
24224	CONNECT BEARING	6	
8360506	CONNECT SHAFT	2	
24225	U-CONNECTOR	6	
8360507	CONNECT SHAFT	2	
8360508	CONNECT SHAFT	2	
8360515	OSCILLATING SHAFT	1	
24226	BRACKET BEARING	1	
8360512	TUMBLE BOARD	1	
8360510	TRANSMISSION SHAFT	1	
8360511	TRANSMISSION SHAFT	1	
24227	BEARING	1	
24228	BEARING	1	
8360053	BEARING	1	

PARTS LIST 5 – RIDE ON TROWELS

BXR830, STEERING AND BLADE PITCH SYSTEM

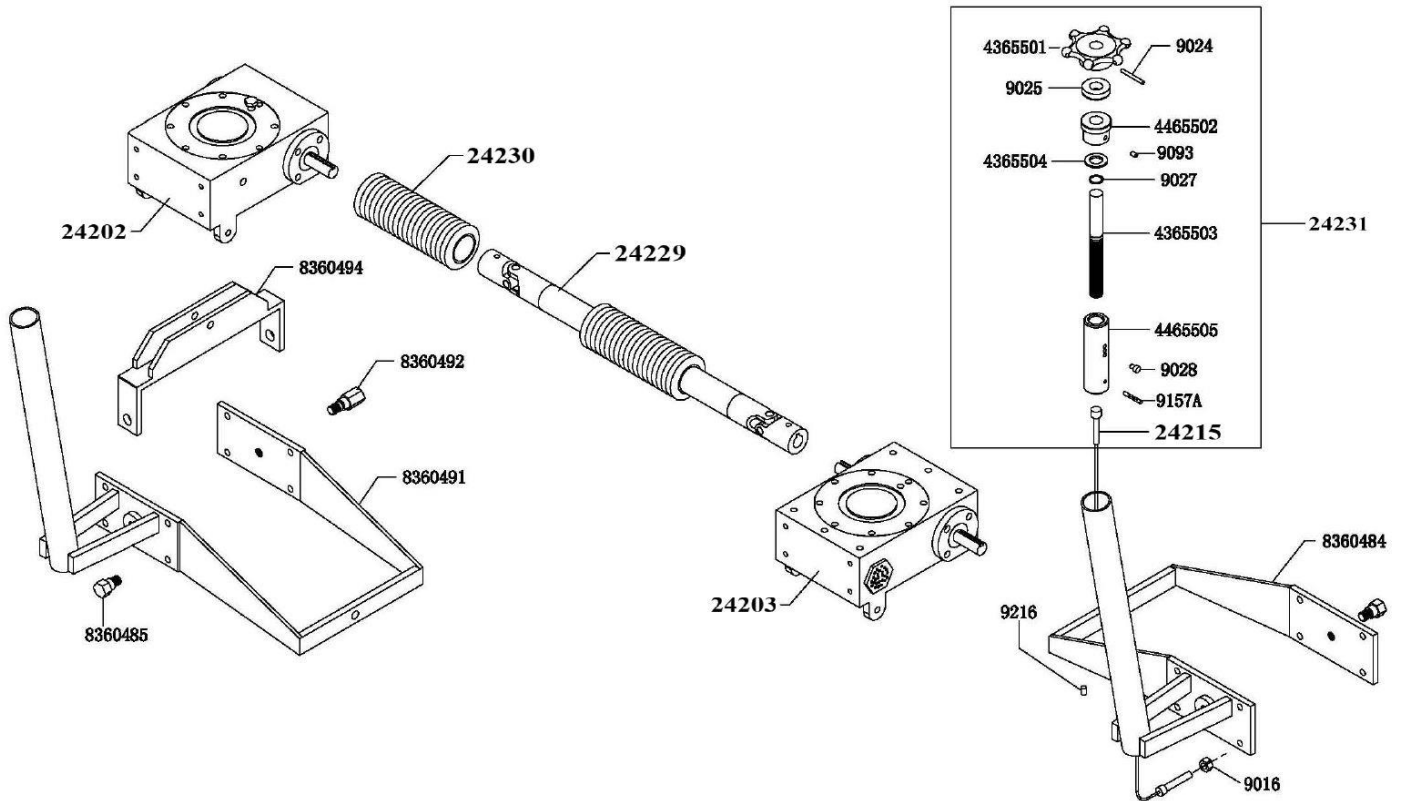


Figure 5: Steering and Blade Pitch System

BXR830, STEERING AND BLADE PITCH SYSTEM – PARTS LIST 5

Part #	Description	QTY	Remarks
24229	JOINT SHAFT	1	
24230	RUBBER COVER	2	
24202	GEARBOX, RIGHT	1	
24203	GEARBOX, LEFT	1	
8360491	BRACKET, RIGHT	1	
8360494	BRACKET	2	
8360485	BOLT	1	
8360492	BOLT	1	
8360484	BRACKET, LEFT	1	
9216	SCREW	1	
0470	QUICK PITCH	2	
9025	BEARING	2	
9024	LOCK PIN	2	
4465502	BUSHING	2	
4365504	WASHER	2	
9026	SCREW	2	
9027	WASHER	2	
4365503	ADJUST SHAFT	2	
4465505	ADJUST SHAFT BUSHING	2	
9028	SCREW	2	
9157a	PIN	2	
24215	WIRE	2	

PARTS LIST 6 – RIDE ON TROWELS

BXR830, GEARBOX ASSEMBLY, RIGHT (CCW)

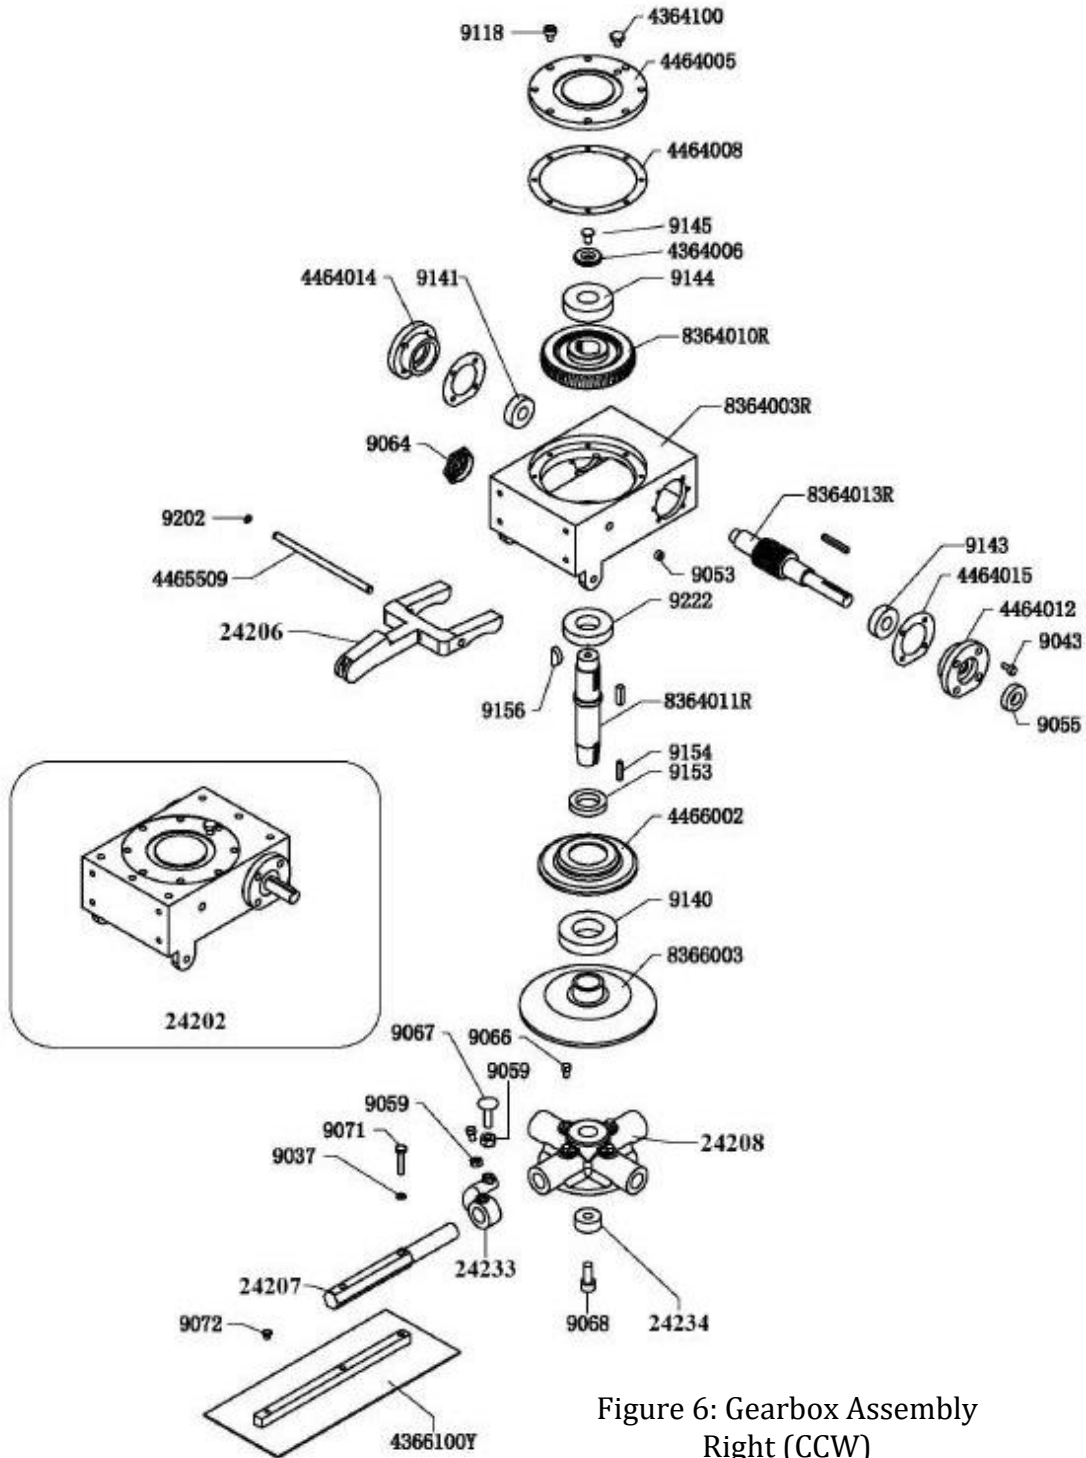


Figure 6: Gearbox Assembly
Right (CCW)

BXR830, GEARBOX ASSEMBLY RIGHT (CCW) – PARTS LIST 6

Part #	Description	QTY	Remarks
8364003R	GEARBOX CASING	1	
4464005	GEARBOX COVER	1	
8364010R	BRONZE GEAR	1	
8364013R	COUNTER SHAFT	1	
8354011R	MAIN SHAFT	1	
4464008	SHIMMING	1	
4364006	PRESSURE WASHER	1	
4464015	SHIMMING	2	
4464012	RIGHT BEARING FLANGE	1	
4464014	RIGHT BEARING FLANGE	1	
4364100	RELEASE VALVE	1	
9118	SCREW	8	
9145	SCREW	1	
9144	BEARING	1	
9141	BEARING	1	
9143	BEARING	1	
9043	SCREW	1	
9055	SEAL	1	
9064	GLASS EYE	1	
9053	PLUG	1	
9156	KEY	1	
24206	YOKE ARM	1	
4465509	SHAFT, YOKE ARM	1	
9202	RETAINER RING	1	
4466002	PRESSURE PLATE COVER	1	
8366003	PRESSURE PLATE	1	
24208	RIGHT SPIDER PLATE	1	
24232	LIFT LEVER	4	
24234	BUSHING	1	
24207	TROWEL ARM	4	
9059	NUT	8	
9066	SCREW	8	
9067	BOLT	4	
9068	BOLT	1	
9140	BEARING	1	
9153	SEAL	1	
9154	KEY	1	
9222	BEARING	1	

PARTS LIST 7 – RIDE ON TROWELS

BXR830, GEARBOX ASSEMBLY, LEFT (CW)

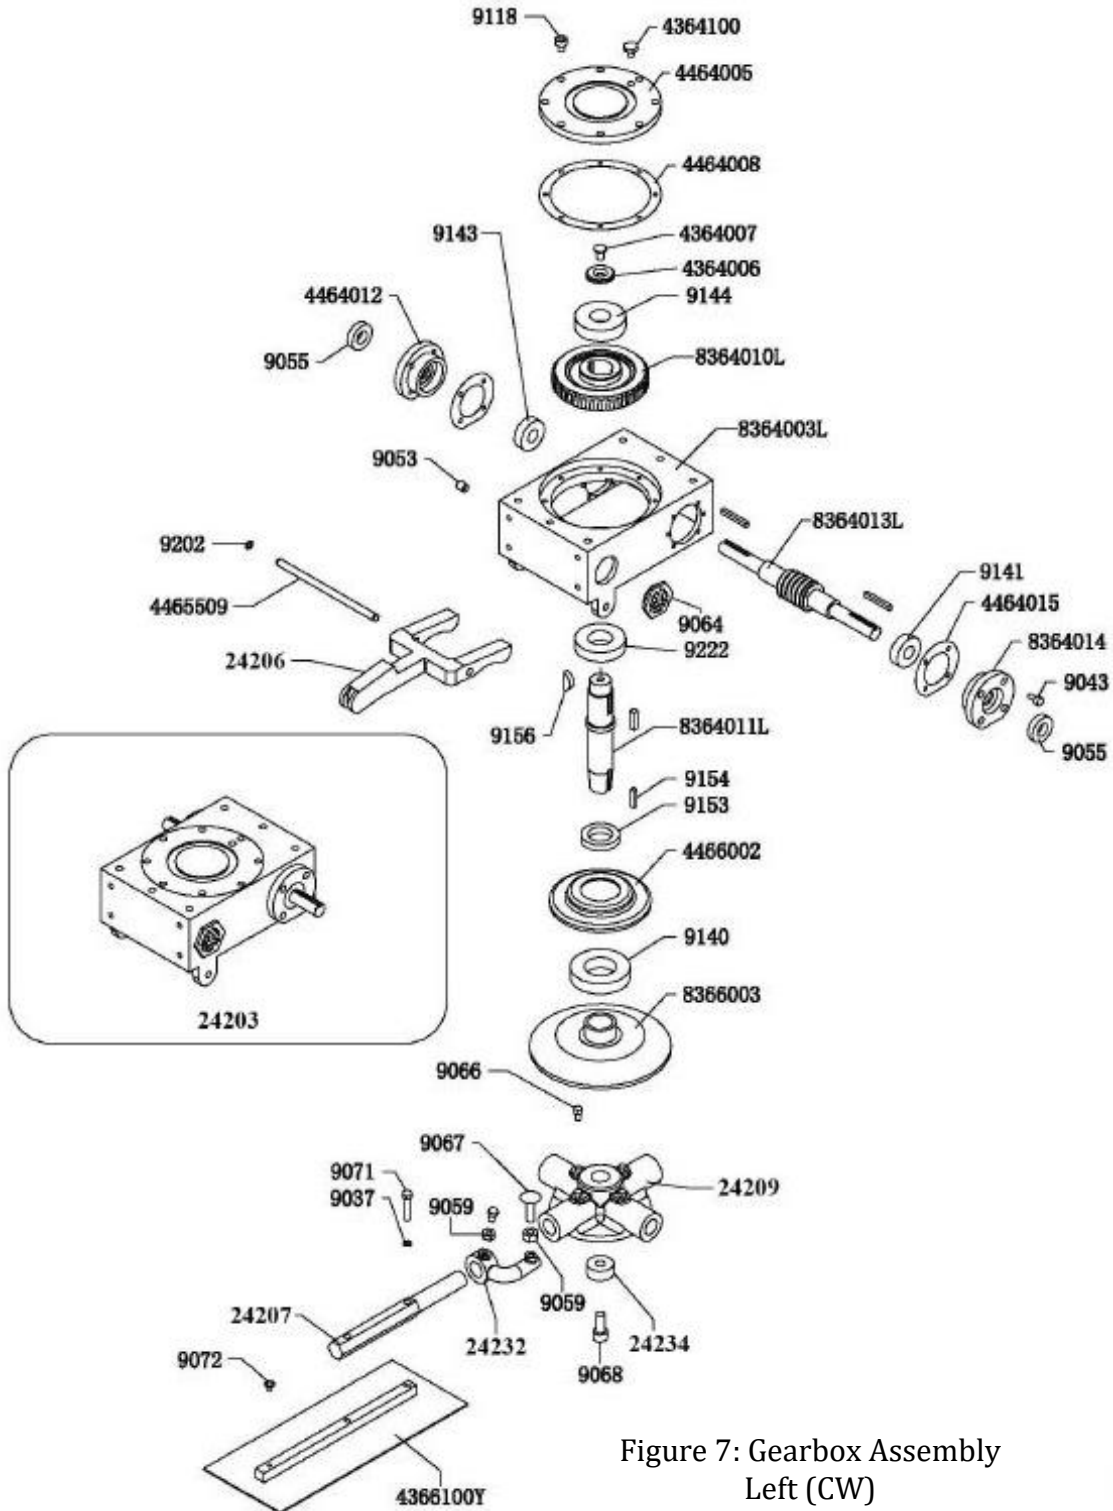


Figure 7: Gearbox Assembly
Left (CW)

BXR830, GEARBOX ASSEMBLY LEFT (CW) – PARTS LIST 7

Part #	Description	QTY	Remarks
8364003L	GEARBOX CASING	1	
4464005	GEARBOX COVER	1	
8364010L	BRONZE GEAR	1	
8364013L	COUNTER SHAFT	1	
8364011L	MAIN SHAFT	1	
4464008	SHIMMING	1	
4364006	PRESSURE WASHER	1	
4464015	SHIMMING	2	
4464012	LEFT BEARING FLANGE	1	
8364014	LEFT BEARING FLANGE	1	
4364100	RELEASE VALVE	1	
9118	SCREW	8	
4364007	SCREW	1	
9144	BEARING	1	
9141	BEARING	1	
9143	BEARING	1	
9043	SCREW	1	
9055	SEAL	1	
9064	GLASS EYE	1	
9053	PLUG	1	
9156	KEY	1	
24206	YOKE ARM	1	
4465509	SHAFT, YOKE ARM	1	
9202	RETAINER RING	1	
4466002	PRESSURE PLATE COVER	1	
8366003	PRESSURE PLATE	1	
24209	LEFT SPIDER PLATE	1	
24233	LIFT LEVER	4	
24234	BUSHING	1	
24207	TROWEL ARM	4	
9059	NUT	8	
9066	SCREW	8	
9067	BOLT	4	
9068	BOLT	1	
9140	BEARING	1	
9153	SEAL	1	
9154	KEY	1	
9222	BEARING	1	

PARTS LIST 8 – RIDE ON TROWELS

BXR830, SPRAY SYSTEM

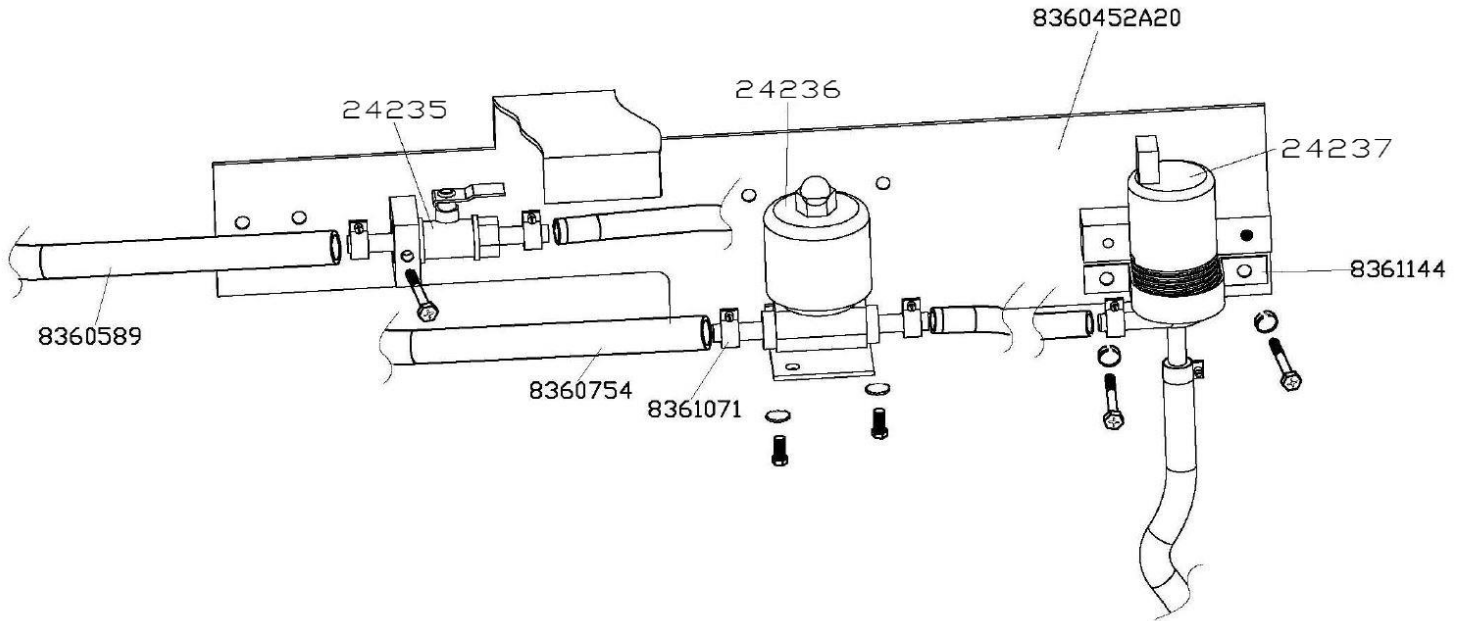


Figure 8: Spray System

BXR830, SPRAY SYSTEM – PARTS LIST 8

Part #	Description	QTY	Remarks
8360589	HOSE, GAS	2	
24235	VALVE	1	
8360754	WATER PIPE	2	
8361071	JOINT	6	
24236	SOLENOID PILOT ACTUATED VALVE	1	
24237	WATER PUMP	1	
8361144	MOUNTING PLATE, WATER PUMP	1	

PARTS LIST 9 – RIDE ON TROWELS

BXR830, FOOT THROTTLE KIT

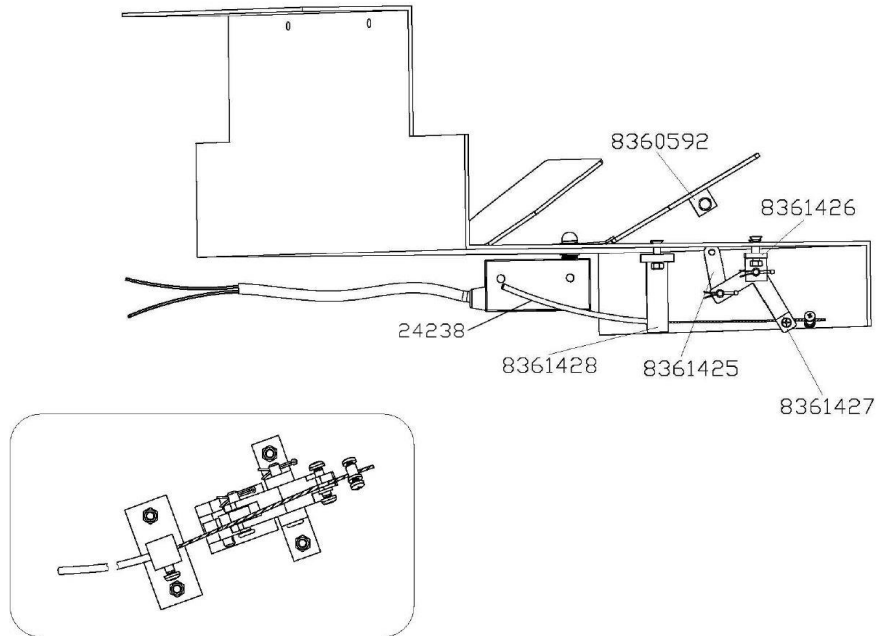


Figure 9: Foot Throttle Kit

BXR830, FOOT THROTTLE KIT – PARTS LIST 9

Part #	Description	QTY	Remarks
8360592	FOOT THROTTLE PARTS	1	
8361425		1	
8361426		1	
8361427		1	
8361428		1	
24238		THROTTLE CABLE	1

BXR830, FUEL TANK – PARTS LIST 10

Item #	Part #	Description	QTY	Remarks
1	18157-4	WATER TANK BRACKET	1	
2	10192	GAS TANK HOLD DOWN BAR	1	
3	11043	WASHER, 1/4"	12	
4	11832	THREADED ROD, 1/4"-20 x 13"	4	
5	14596	HWHS 1/4"-20 x 1/2" LG THREAD CUTTING	2	
6	18150	GAS TANK	1	
7	50316	HHCS 1/4"-20 UNC x 1" LG	8	
8	11831	CARB CANISTER BRACKET	1	
9	18126	CARB CANISTER	1	
10	18124	CARB CANISTER BRACKET	2	
11	30141	LOCKNUT, 1/4"-20	16	
12	18157-3	SUPPORT	2	
13	18157-2	SUPPORT	1	
14	18157-1	GAS TANK BASE	1	

PARTS LIST 11 – RIDE ON TROWELS

BXR830, PROPANE TANK

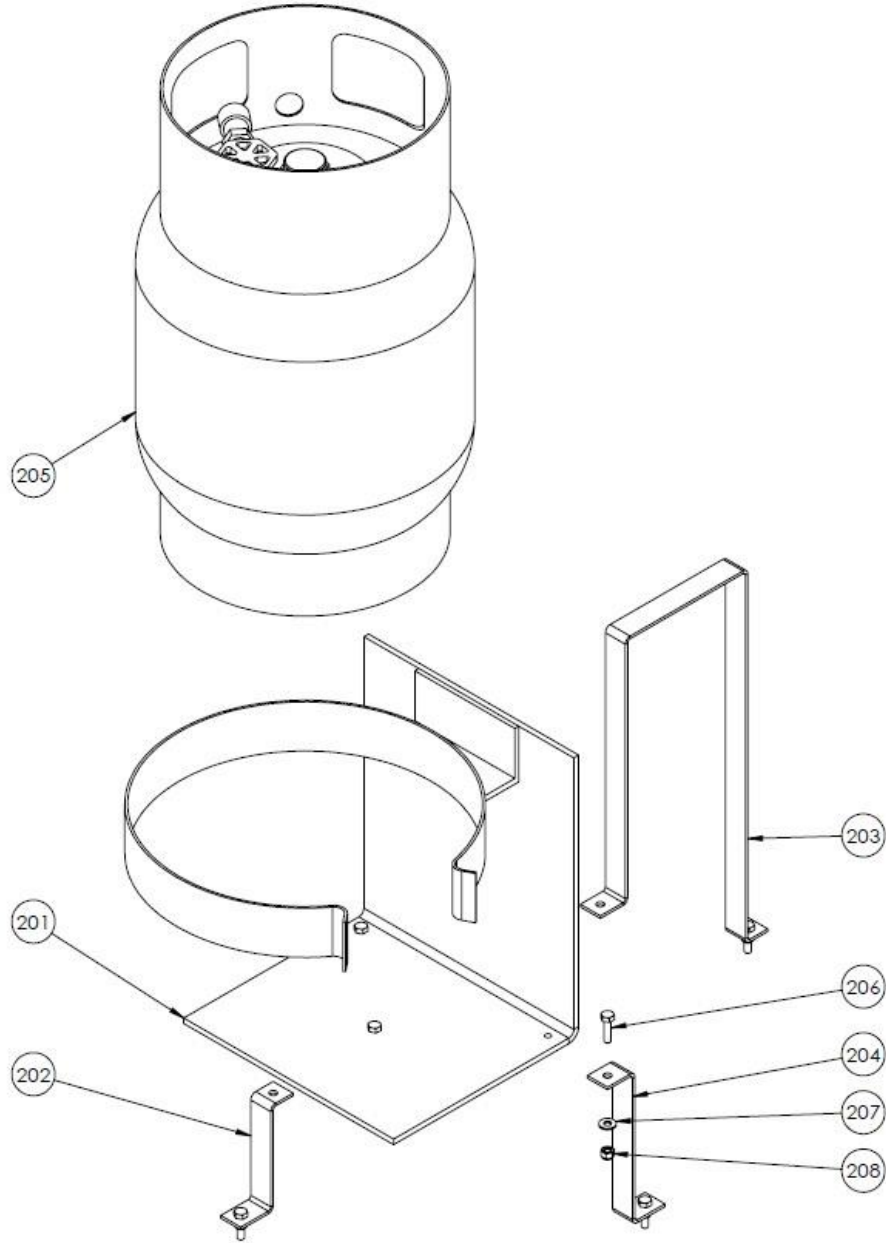


Figure 11: Propane Tank



BXR830, PROPANE TANK – PARTS LIST 11

Item #	Part #	Description	QTY	Remarks
201	24249	PROPANE TANK MOUNT	1	
202	18157-2	SUPPORT	1	
203	18157-4	WATER TANK BRACKET	1	
204	18157-3	SUPPORT	2	
205	24263	PROPANE TANK	1	
206	50316	HHCS ¼"-20 x 1" LG	7	
207	11043	WASHER, ¼"	7	
208	30141	LOCKNUT, ¼"-20	7	

PARTS LIST 12 – RIDE ON TROWELS

BXR830, STANDARD TRANSPORTER

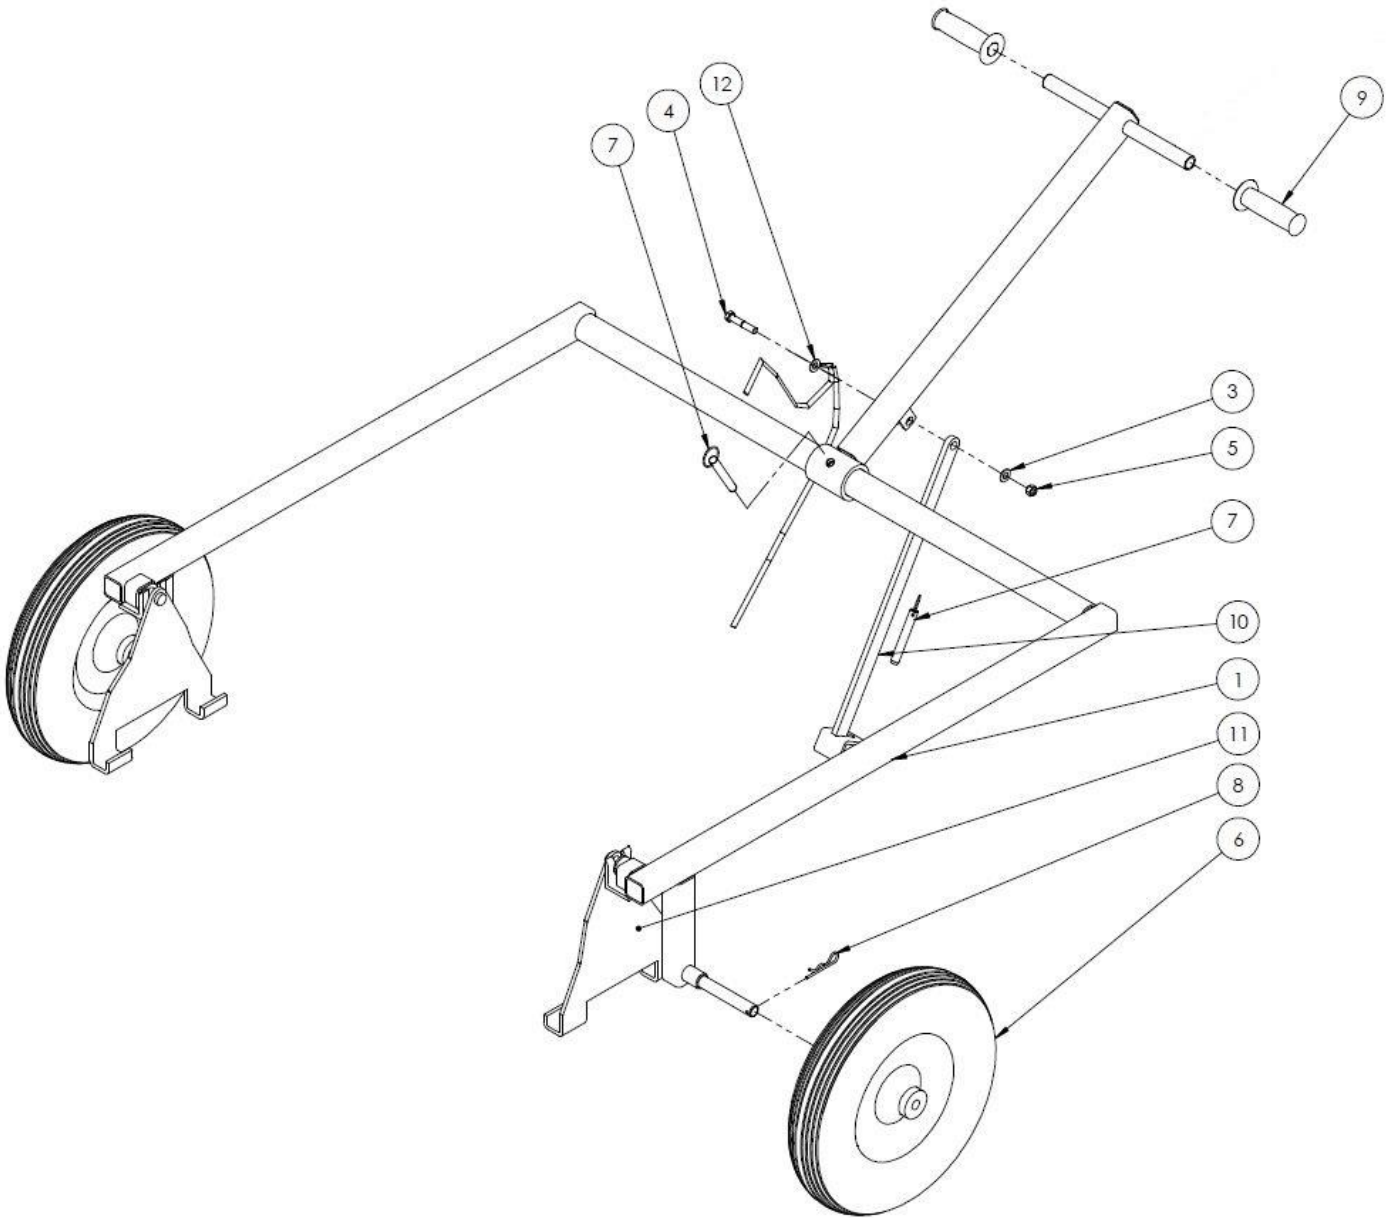


Figure 12: Transporter



BXR830, STANDARD TRANSPORTER – PARTS LIST 12

Item #	Part #	Description	QTY	Remarks
1	22594	TRANSPORTER FRAME	1	
3	11200	3/8" WASHER	1	
4	12859	HHCS, 3/8-16 UNC X 2" LC	1	
5	10317	3/8-16 LOCKNUT, NYLON	1	
6	13198	WHEEL 16" DIA X 4" HUB	2	
7	12487	HITCH PIN LARGE 3-1/2" LG	2	
8	50265	COTTER PIN 1/8" DIA	2	
9	10509	HANDLE GRIP	2	
10	14717	PICKUP BAR	1	
11	14715	TRANSPORTER BRACKET	2	
12	14716	CHAIN LINK W/ 3/8" WASHER	1	

PARTS LIST 12 – RIDE ON TROWELS

BXR830, FRAME MOUNT TRANSPORTER

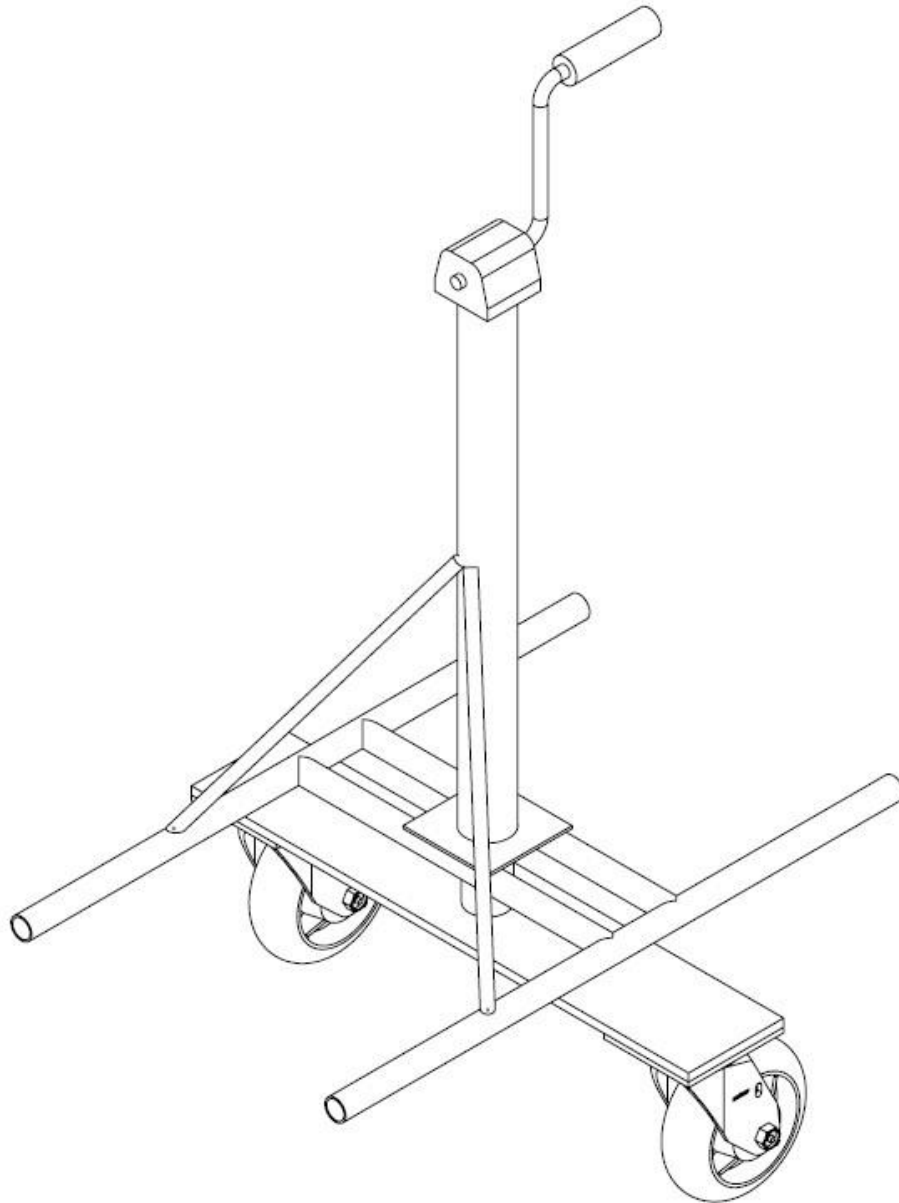


Figure 13: Transporter



BXR830, FRAME MOUNT TRANSPORTER – PARTS LIST 12

Item #	Part #	Description	QTY	Remarks
1	25120	FRAME MOUNT TRANSPORTER, COMPLETE, INCLUDES BOTH SIDES	1	