



BartellParts.com
800-889-0661

MATERIAL SPREADER PARTS LIST

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>
1	88001	WHEEL	2
2	88002	PLATE	2
3	88003	DIAMOND BEARING	2
4	88004	BEARING BLOCK	2
5	88005	WHEEL SHAFT	2
6	88006	AXLE	2
7	88007	BEARING BLOCK	2
8	88008	BEARING	2
9	88009	KNOB	2
10	88010	SPRING	1
11	88011	STAND	1
12	88012	CONNECTING ROD	1
13	88013	BAFFLE	1
14	88014	PLUG	2
15	88015	BEARING HOUSING	1
16	88016	LOCK PIN	1
17	88017	SHORT ROD	2
18	88018	LONG ROD	1
19	88019	BALL	1
20	88020	SPRING	1
21	88021	CONTROL KNOB	1
22	88022	ADJUSTER	1
23	88023	ROD	1
24	88024	NET	1
25	88025	HOPPER	1

BartellParts.com
800-889-0661