

FVO-1000TR – PARTS LIST

HARDWARE

DOOR HOLDER
(Prior to 2012)



FV-442TR

TOP LEVER LATCH & CAM
(4 per trailer)



FV-444TR/FV-445TR

BOLT ON HINGE
(12 per trailer)



FV-450TR

PUSH TO CLOSE
(2 per trailer)



FV-443TR

LOCKING DOOR LATCH/ ROD
(After 2012)
(2 per Trailer)



FV-465TR

BALL HITCH



FVO-437TR

PINTLE HITCH



FVO-438TR

SUPPORT JACK



FVO-435TR

EMERGENCY BREAKAWAY KIT



FV-EBK

LICENSE PLATE LIGHT



FVO-439TR

SAFETY CHAINS (set)



FVO-436TR

SNAP ACTION SWITCH



FV-440TR

**VENT DEFLECTOR/
VENT PIPE
(2 PER TRAILER)**



FV-464TR/FV-463TR

TAILPIPE



FV-457TR

MUFFLER & FLEX PIPE



FV-458TR/FV-459TR

OIL TANK CAP C/W CHAIN



FVO-417BTR

OIL TANK FUEL GAUGE



FVO-416AGTR

BATTERY & TRAY/HARNESS



FV-460TR/FV-461TR

**115V GFI WEATHERPROOF
CASE & 115V GFI
RECEPTACLE**



FV-455TR/FV-454TR

**DISTRIBUTION PANEL
(PANEL ONLY)**



FV-451TR

**20AMP BREAKER 2 POLE
15AMP BREAKER 2 POLE**



FV-452TR/FV-453TR

CONTROL PANEL

MAGNETIC SWITCH



FVO-426TR

TEMPERATURE GAUGE



FVO-425TR

OIL PRESSURE GAUGE



FVO-427TR

VOLT METER



FVO-429TR

HOUR METER



FVO-430TR

IGNITION SWITCH



FVO-428TR

YANMAR PARTS

OIL FILTER - YANMAR



FVO-440TR

FUEL FILTER - YANMAR



FVO-441TR

FUEL SCREEN - YANMAR



FVO-442TR

SLAVE SOLENOID- YANMAR



FVO-443TR

BLOCK HEATER - YANMAR



FVO-444TR

FUEL SOLENOID - YANMAR



FVO-431TR

**ANTIFREEZE RESERVOIR -
YANMAR**



FVO-445TR

DIODE - YANMAR



FVO-433TR

FAN BELT - YANMAR



FVO-446TR

AIR FILTER - YANMAR



FVO-447TR

ALTERNATOR - YANMAR



FVO-448TR

STARTER - YANMAR



FVO-449TR

KUBOTA PARTS

**SOLENOID POWER TIMER -
KUBOTA**



FVO-450TR

OIL FILTER- KUBOTA



FVO-451TR

FUEL FILTER- KUBOTA



FVO-452TR

FUEL SOLENOID- KUBOTA



FVO-453TR

LIFT PUMP - KUBOTA



FVO-454TR

SLAVE SOLENOID - KUBOTA



FVO-455TR

FAN BELT - KUBOTA



FVO-456TR

AIR FILTER - KUBOTA



FVO-457TR

ALTERNATOR- KUBOTA



FVO-458TR

STARTER - KUBOTA



FVO-459TR

**ANTIFREEZE RESERVOIR -
KUBOTA**



FVO-460TR

**LOW COOLANT LEVEL
SHUTDOWN SWITCH
YANMAR/KUBOTA**



FVO-461TR

HEATER PARTS

HIGH LIMITS



**FV-406 – 250 F
FV-437 - 150 F**

**ADJUSTABLE FAN
LIMIT**



FV-407A

TOGGLE SWITCH



FV-409TR

GREEN LIGHT



FV-410

RED LIGHT



FV-411

**THERMOSTAT
CONNECTION**



**FV-414B
(2011>)**

IGNITION CONTROL



FV0-C700-1029

PHOTO CELL



FV0-3002280

FUEL PUMP



FV0-C7001010

FAN MOTOR



FV0-C7001034

ELECTRODE ASSEMBLY



FVO-3005891

OIL NOZZLE



FV-435B 2.00 X 60W
FV-435WC 1.75 X 60W

OIL FILTER- COMPLETE



FVO-418

OIL FILTER INSERT



FVO-419

FAN MOTOR



FV-401TR

FAN BLADE



FV-402TR

FUEL LINES



FVO-420ATR – SUPPLIER HEATER 1
FVO-420BTR – RETURN HEATER 1
FVO-421ATR – FILTER TO BURNER
FVO-422ATR – RETURN/SUPPLY TO HEATER 2

TRAILER BODY PANELS



<u>P/N</u>	<u>DESCRIPTION</u>
FV-TRLR66	HEATER INLET ACCESS DOOR – RIGHT
FV-THLR67	HEATER INLET ACCESS DOOR – LEFT
FV-TRLR71	HEATER INLET BOTTOM PANEL
FV-TRLR15	HEATER OUTLET DOOR
FV-TRLR65	REAR GENSET UPPER ACCESS PANEL
FV-TRLR68	REAR GENSET DOOR – RIGHT
FV-TRLR69	REAR GENSET DOOR - LEFT
FV-TRLR70	REAR GENSET LOWER ACCESS PANEL
FV-TRLR19-CAB	DUCT CABINET ONLY
FV-TRLR19B	DUCT CABINET DOOR
FV-TRLR22	REAR GENSET SIDE PANEL – RIGHT
FV-TRLR21	REAR GENSET SIDE PANEL – LEFT
FV-TRLR34	REAR ROOF PANEL (GENSET EXHAUST) – LEFT
FV-TRLR34B	REAR ROOF PANEL- RIGHT
FV-TRLR33B	CENTRE ROOF PANEL – LEFT
FV-TRLR33	CENTRE ROOF PANEL (HEATER EXHAUST) – LEFT
FV-TRLR24B	CENTRE SIDE PANEL (FUEL INLET) – RIGHT
FV-TRLR24	CENTRE SIDE PANEL – LEFT

FVO -1000TR SERIES - WIRING SCHEMATIC

