


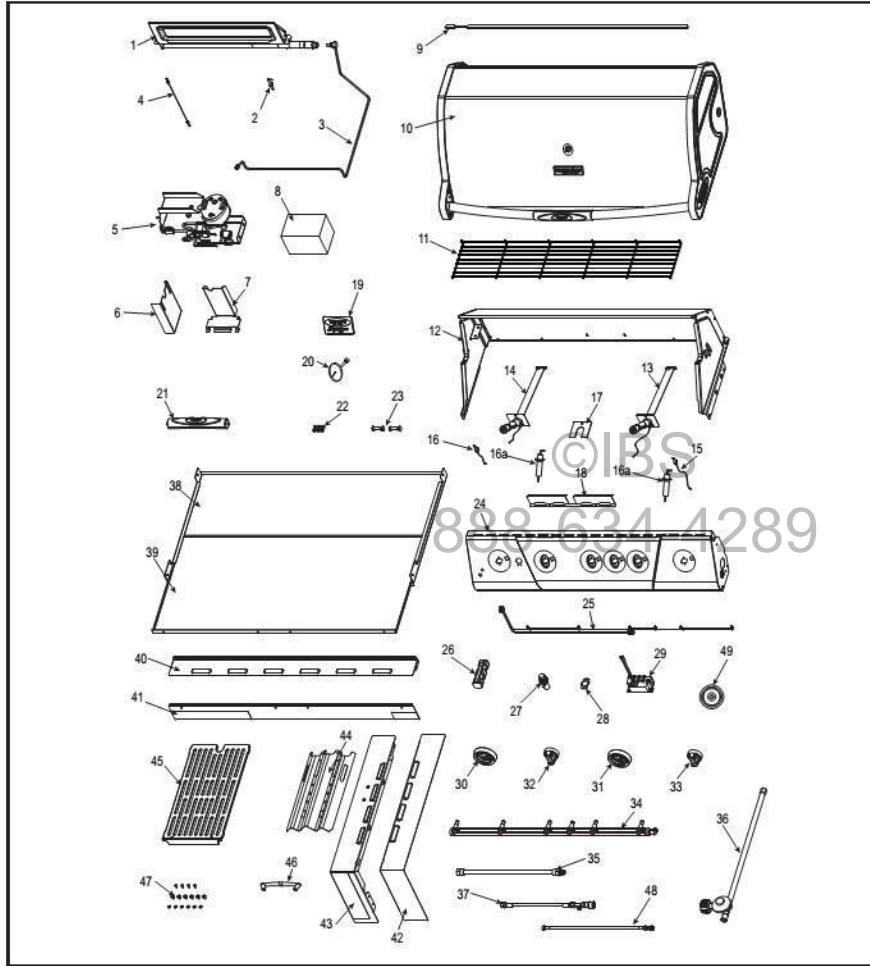

©IBS
888-634-4289

1	50003500	ROTISSERIE BURNER ASSEMBLY	1
2	50003472	ROTISSERIE ELECTRODE	1
3	50004725	TUBE & ORIFICE ASSEMBLY - LP	1
3a	50004726	TUBE & ORIFICE ASSEMBLY - NG	1
4	50003473	ROTISSERIE ELECTRODE WIRE	1
5	94D0134	ROTISSERIE KIT - w/o spit rod	1
6	20305074	ROTISSERIE MOTOR BRACKET	1
7	50000399	SPIT ROD SUPPORT BRACKET	1
8	91D0131	ROTISSERIE MOTOR	1
9	50001326	SPIT ROD - 26IN.	1
10	30005915K	FRONT LID ASSEMBLY	1
11	30005838K	WARMING RACK	1
12	30006903K	REAR LID ASSEMBLY	1
13	91D0132	BURNER MAIN ANGLE ASSEMBLY - INCL. ELECTRODE AND WIRE	3
15	91D0108	ELECTRODE WIRE MAIN LONG - NEED 91D0107 FOR ELECTRODE	3
16	91D0107	ELECTRODE MAIN	3
17	50000892	BURNER GASKET	3
18	50001300	FLASH TUBE	1
19	30005707	VC LOGO ASSEMBLY	1
20	20300394	TEMPERATURE GAUGE	1
21	50004404	CURVED HANDLE GRIP SET	1
22	50000365	LID BUMPER SET (6)	1
23	50000355	HARDWARE LID SET	1
24	30005977	CONSOLE w/RIVNUT ASSEMBLY	1
25	50004727	WIRE HARNESS	1
26	50003110	BATTERY CASE - BACKLIT KNOBS	1
27	50002788	IGNITOR PUSHBUTTON	1
28	50002533	IGNITOR PLATE	1
29	50001619	IGNITOR MODULE 6 POLE	1
30	50003002	BEZEL ASSEMBLY - BACKLIT	4
32	50003984	KNOB	4
34	50004722	VALVE MANIFOLD ASSEMBLY- LP	1
34a	20302815	VALVE MANIFOLD ASSEMBLY- NG	1
35	50000872	FLEX CONNECTOR 28IN - SS	1
36	91D0111	HOSE REGULATOR - LP	1
37	91D0112	CONNECTOR HOSE - NG	1
38	50004736	GREASE TRAY SUPPORT	1
39	50001955	GREASE TRAY	1
40	50004739	REAR COVER	1
41	50004813	GREASE TRAY FRONT	1
42	50004733	RIGHT FASCIA BRACKET	1
43	50004734	LEFT FASCIA BRACKET	1
44	20304959	HEAT PLATE	3
45	20304513K	COOK GRATES (SET OF TWO)	1
46	50004204	HANDLE CURVED - 128mm	1
47	50004855	HARDWARE BAG	1
48	50002384	NATURAL GAS HOSE - 12FT	1
49	20300395	BEZEL FOR TEMPERATURE GAUGE	1
N/S	30006824	USER MANUAL	1
N/S	30006827	ASSEMBLY MANUAL	1
N/S	30006828	PARTS LIST	1
N/S	VCS300BIC	VC GRILL COVER - BAGGED	1