


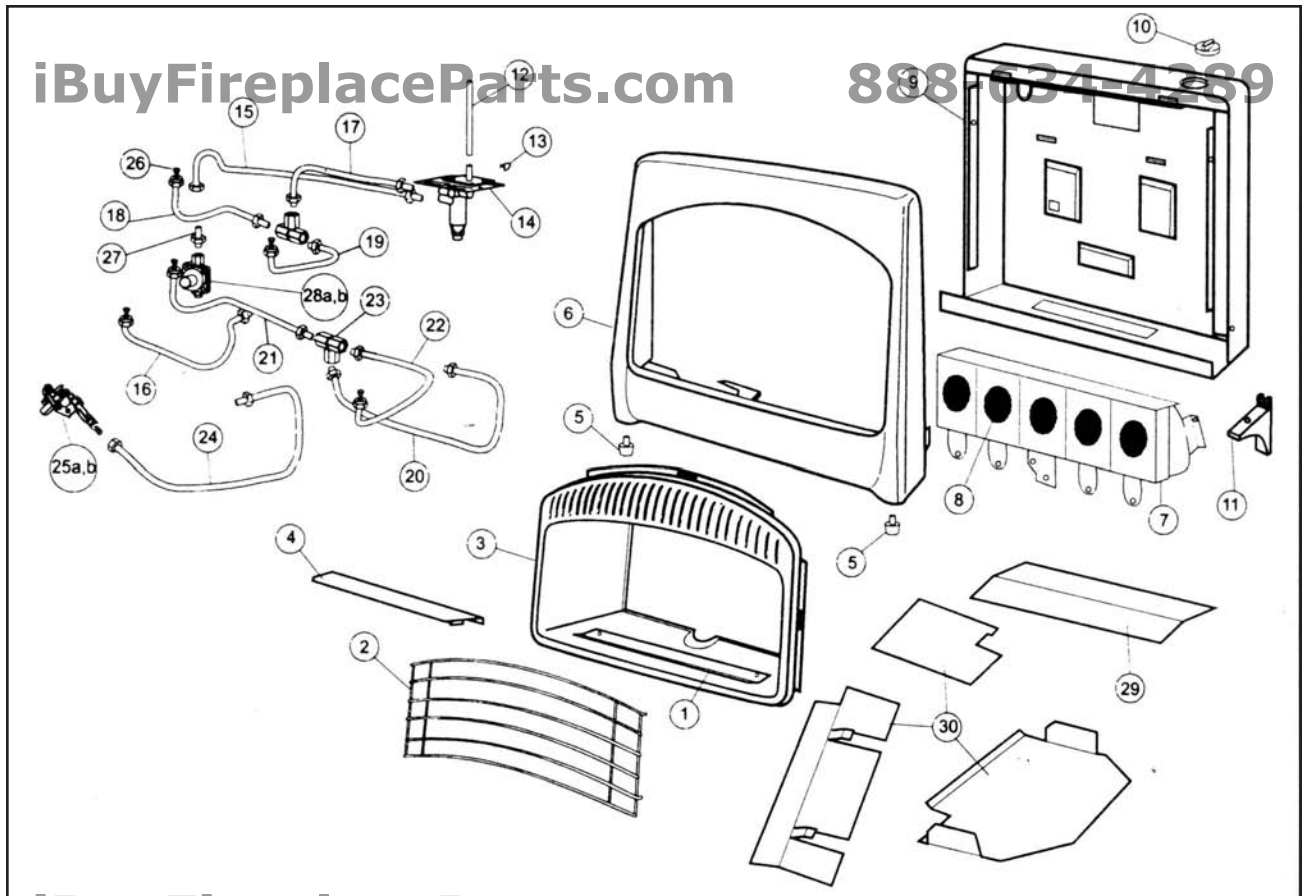

CFM Home Products reserves the right to make changes in design, materials, specifications, prices and discontinue colors and products at any time, without notice.

WARNING: Failure to position the parts in accordance with this diagram or failure to use only parts specifically approved with this heater may result in property damage or personal injury.

iBuyFireplaceParts.com

888-634-4289

RMC-LI NG/LP Unvented Room Heater


iBuyFireplaceParts.com

888-634-4289

Item/Model Number	RMC-LI06NG/LP	RMC-LI10NG(T)/LP(T)	RMC-LI18NG(T)/LP(T)	RMC-LI30NG(T)/LP(T)
1. Lower Heat Cover	LI10LP-01-01-02	LI10LP-01-01-02	LI18LPT-01-01-03	LI30NG-01-01-02
2. Guard Assembly	LC10NG-01-04	LC10NG-01-04	LI18LPT-01-04	LC30NGTF-01-04
3. Reflector	LI10LP-01-01-01	LI10LP-01-01-01	LI18LPT-01-01-01	LI30NG-01-01-01
4. Upper Heat Cover	LC10NG-01-01-02	LC10NG-01-01-02	LI18LPT-01-01-02	LC30NGTF-01-01-02
5. Leg Front	LC10NG-05	LC10NG-05	LC10NG-05	LC10NG-05
6. Front Panel	LC10NG-01-03	LC10NG-01-03	LI18LPT-01-03	LC30NGTF-01-03
7. Burner Assembly Body	LI6LP-03-00	LI10LP-03-00	LI18LPT-03-00	LI30LPTF-03-00
8. Ceramic Plate	LI18LPT-03-09	LI10LP-03-03	LI18LPT-03-09	LI18LPT-03-09
9. Body Frame Assembly	LC10NG-02-00	LC10NG-02-00	LC20NG-02-00	LC30LP-02-00
10. Knob – Valve	LC10NG-12-00	LC10NG-12-00	LC10NG-12-00	LC10NG-12-00
11. Leg – Rear	LC10NG-04	LC10NG-04	LC10NG-04	LC10NG-04
12. Valve Link	LI6LP-02	LI6LP-02	LI18LPF-02	LI30NG-02
13. Fix Pin – Link	LI6LP-03	LI6LP-03	LI6LP-03	LI6LP-03
14a. Gas Control	CK-890SL-A1/00(B)	CK-890SL-A1/00(D)	CK-890SL-A1/00(E)	CK-890SL-A1/00(E)
14b. Thermostat Gas Control		LI18LPT-04-00	LI18LPT-04-00	LI18LPT-04-00
15. Tubing Inlet Assembly	LI6LP-07-00	LI10LP-07-00	LI18LPF-07-01	LI30NG-07-01
16a. Outlet Tubing Assembly		LI10NGT-08-00	LI18LPT-08-00	LI30LPTF-08-00
16b. Tubing Outlet – A Assembly	LI6LP-08-00	LI10LP-08-00	LI18LPF-08-00	LI30NG-08-00
17. Tubing Outlet – B Assembly		LI10LP-10-00	LI18LPF-10-00	LI30NG-10-01-00
18. Tubing Outlet – BL Assembly				LI30NG-10-02-00
19. Tubing Outlet – BR Assembly				LI30NG-10-03-00
20. Tubing Outlet – C Assembly			LI18LPF-11-00	LI30NG-11-01-00
21. Tubing Outlet – CL Assembly				LI30NG-11-02-00
22. Tubing Outlet – CR Assembly				LI30NG-11-03-00
23a. Manifold – “C”				LI30NG-10-02
23b. Manifold Assembly	-	LI10NGT-03-02-00	LI18LPT-03-02-00	LI30LPTF-03-02-00
24. ODS Tubing Assembly	LI6LP-09-00	LI10LP-09-00	LI18LPF-09-00	LI30NG-09-00
25a. ODS Pilot Assembly – Natural	144NG 4-7"	NG 8224	NG 8224	NG 8224
25b. ODS Pilot Assembly – LP	158LP 8-11"	LPG 8420	LPG 8420	LPG 8420
26a. Main Nozzle – Natural	LI6NG-08-05	LI10NG-08-05	LI6NG-08-05	LI6NG-08-05
26b. Main Nozzle – LP	LI6LP-08-05	LI10LP-08-05	LI06LP-08-05	LI06LP-08-05
27. Connector – “B”	LC10NG-05-02	LC10NG-05-02	LC10NG-05-02	LC10NG-05-02
28a. Pressure Regulator – Natural	RTZ-11/20B3	RTZ-11/20B1	RTZ-11/20B3	RTZ-11/20B3
28b. Pressure Regulator – LP	RTZ-11/20B4	RTZ-11/20B2	RTZ-11/20B4	RTZ-11/20B4
29. Rear Radiant Heat Shield	LC10NG-01	LC10NG-01	-	LC30NGTF-01
30. Shield	-	-	LI18LPT-01	-
31. Optional Fan-Natural/LP	-	-	RMA-FT	RMA-FT

iBuyFireplaceParts.com

888-634-4289

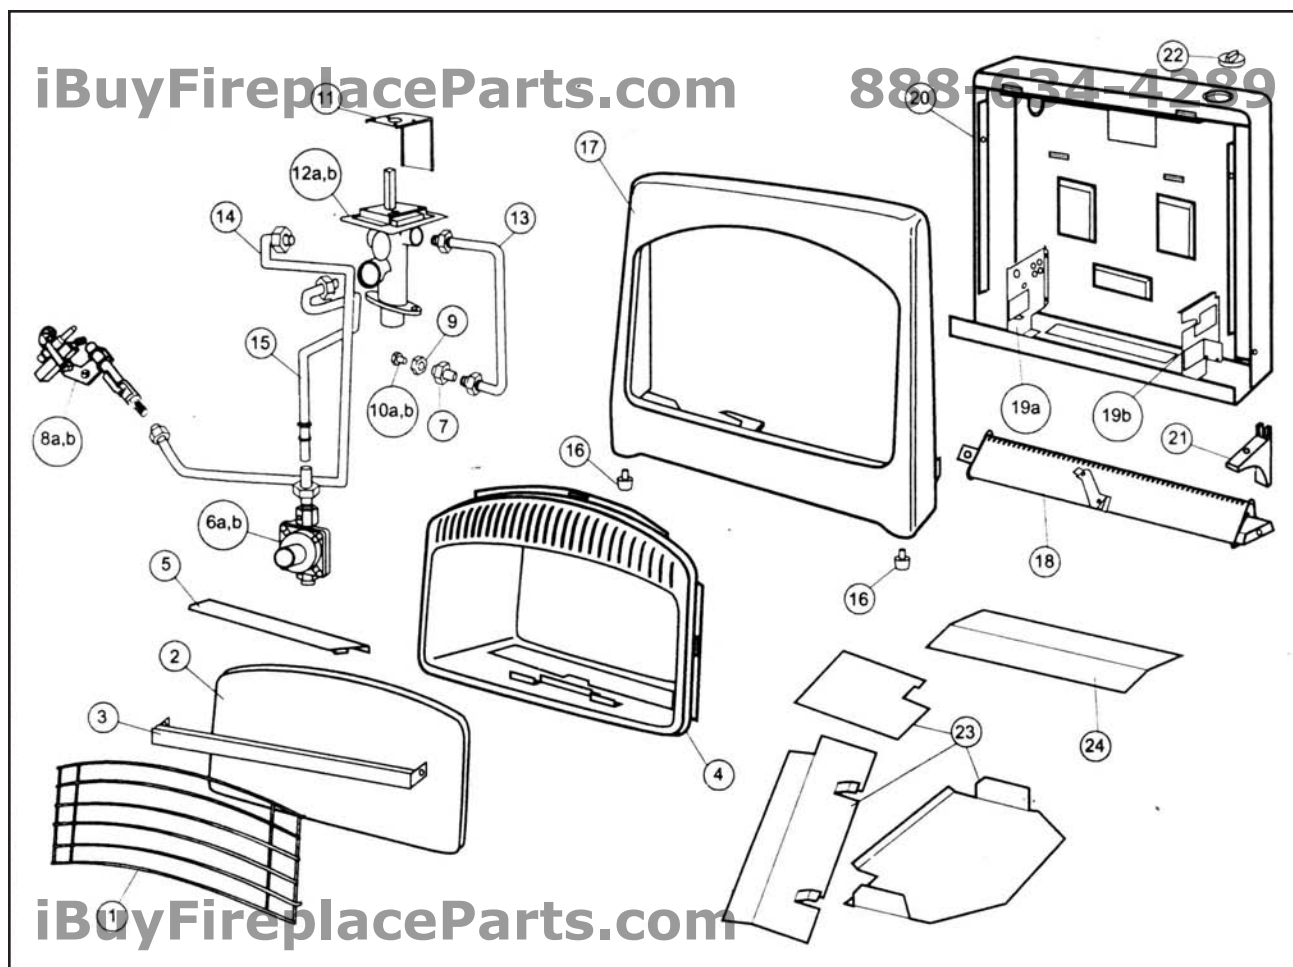

CFM Home Products reserves the right to make changes in design, materials, specifications, prices and discontinue colors and products at any time, without notice.

WARNING: Failure to position the parts in accordance with this diagram or failure to use only parts specifically approved with this heater may result in property damage or personal injury.

Accessories continued

CAUTION: Damaged power cord can cause a fire or electric shock.

Prior to installing the blower, check for blower for any shipping damage. If blower is damaged, promptly inform dealer where you bought the blower.

INSTALLATION: Plug the blower power cord into a 110-120V properly grounded type outlet (three prong receptacle) protected by a 15 amp time delay or Circuit Saver fuse for circuit breaker.

WARNING: Do not let your fingers touch the prongs of plug when installing or removing the plug from the power outlet.

OPERATION:

Manually Operated: Use the ON/OFF rocker switch to manually switch the blower ON or OFF as desired.

Manually & Thermostatically Controlled: Use the MAN/OFF/AUTO rocker switch to MAN for manual ON or AUTO

for thermostatically controlled operation as desired. Thermostat turns the blower ON when the temperature near the discharge area reaches 105F and turns it OFF when the temperature at the aforementioned location goes down to 86F.

MAINTENANCE:

WARNING: For your safety, turn switch "OFF" and remove plug from power source outlet before cleaning and maintaining blower. If power cord is worn, cut, or damaged in any way, have it replaced immediately.

CARE OF BLOWER

In normal use, blower may accumulate excessive lint or dust, so the blower should be vacuumed or brushed and checked for proper operation at least once each year by a qualified service personnel. Excessive accumulation of lint and dust can cause the blower motor to overheat frequently and burn out.

RMC-LC NG/LP Unvented Room Heater

Item/Model Number	RMC-LC10NG/LP	RMC-LC20NG/LP	RMC-LC30NG/LP
1. Guard Assembly	LC10NG-01-04	LI18LPT-01-04	LC30NGTF-01-04
2. Glass Panel	LC10NG-01-02-01	LC20NGT-01-02-01	LC30NGTF-01-02-01
3. Glass Holder	LC10NG-01-02-02	LC10NG-01-02-02	LC10NG-01-02-02
4. Reflector	LC10NG-01-01-01	LC20NGT-01-01-01	LC30NGTF-01-01-01
5. Heat Cover – Upper	LC10NG-01-01-02	LI18LPT-01-01-02	LC30NGTF-01-01-02
6a. Pressure Regulator – Natural	RTZ-11/20B5	RTZ-11/20B1	RTZ-11/20B1
6b. Pressure Regulator – LP	RTZ-11/20B2	RTZ-11/20B2	RTZ-11/20B2
7. Nozzle Holder	LC10NG-03-13	LC10NG-03-13	LC10NG-03-13
8a. ODS Pilot Assembly – Natural	NG 8224	NG 8224	NG 8224
8b. ODS Pilot Assembly – LP	LPG 8420	LPG 8420	LPG 8420
9. Fix Nut – Nozzle Holder	LC10NG-03-11	LC10NG-03-11	LC10NG-03-11
10a. Main Nozzle – Natural	LC10NG-03-12	LC20NG-03-12	LC30NGTF-03-12
10b. Main Nozzle – LP	LC10LP-03-12	LC20LP-03-12	LC30LP-03-12
11a. Valve Bracket-Manual Gas Control	LC10NG-04-02	LC10NG-04-02	LC10NG-04-02
11b. Valve Bracket-Thermostat Gas Control	LI18LPT-04-02	LI18LPT-04-02	LI18LPT-04-02
12a. Manual Gas Control-Natural	CK-890SL-A1/00(C)	CK-890SL-A1/00(F)	CK-890SL-A1/00(F)
12b. Manual Gas Control-LP	CK-890SL-A1/00(C)	CK-890SL-A1/00(F)	CK-890SL-A1/00(F)
12c. Thermostat Gas Control-Natural	LC10NGT-04-00	LC20NGT-04-00	LC30NGTF-04-00
12d. Thermostat Gas Control-LP	LC10NGT-04-00	LC20NGT-04-00	LC30NGTF-04-00
13. Outlet Tubing Assembly	LC10NG-08-00	LC20NG-08-00	LC30LP-08-00
14. ODS Tubing Assembly	LC10NG-09-00	LC20NG-09-00	LC30LP-09-00
15. Inlet Tubing Assembly	LC10NG-07-00	LC20NG-07-00	LC30LP-07-00
16. Leg – Front	LC10NG-05	LC10NG-05	LC10NG-05
17. Front Panel	LC10NG-01-03	LI18LPT-01-03	LC30NGTF-01-03
18. Burner Assembly	LC10NG-03-00	LC20NGT-03-00	LC30NGTF-03-00
19a. Burner Support – Left	LC10NG-03-08	LC10NG-03-08	LC10NG-03-08
19b. Burner Support – Right	LC10NG-03-09	LC10NG-03-09	LC10NG-03-09
20. Body Frame Assembly	LC10NG-02-00	LC20NG-02-00	LC30LP-02-00
21. Leg – Rear	LC10NG-04	LC10NG-04	LC10NG-04
22. Knob – Valve	LC10NG-12-00	LC10NG-12-00	LC10NG-12-00
23. Shield	-	LI18LPT-01	-
24. Rear Radiant Shield	LC10NG-01		LC30NGTF-01
25. Optional Fan-Natural/LP	-	RMA-FT	RMA-FT

The following accessories are available from your local distributors/dealer. Each accessory comes with a separate installation instruction. Be sure to read each instruction thoroughly before installation.

Accessories

OPERATION & MAINTENANCE INSTRUCTIONS

FMA-(F,FT) MANUALLY & THERMOSTATICALLY CONTROLLED BLOWERS

IMPORTANT: The blower power cord is equipped with a three prong grounding plug for your safety and protection against electric shock. Do not modify the plug provided if it will not fit the outlet source. Have the proper source outlet installed near the heater location to avoid damage to the power cord. Source outlet and grounding plug are illustrated in the Fig. 12.

Description	Model Number
Manual Fan Kit	FMA-F
Thermostat Fan Kit	FMA-FT



Fig. 12