



461

ITEM	DESCRIPTION	PART NO.
1	SCREW - SOC BUTT. HD	46141
2	DEFLECTOR	46109
3	SCREW - SOC HEAD	46159
4	SEAL	46016
5	WASHER - SPRING	46065
6	CAP	46119
7	SEAL	46101
8	O-RING	46147
9	GASKET - CAP	46124
10	SPRING	46103
11	VALVE - PISTON HEAD	46120
12	O-RING	46150
13	COLLAR	46125
14	C-RING	46123
15	O-RING	46153
16	O-RING - PISTON	46122
17	E-RING	46051
18	PISTON RAM ASSEMBLY	46135
19	O-RING	46148
20	GUIDE - RAM	46102
21	SPACER - CYLINDER	46117
22	O-RING	46149
23	O-RING	46151
24	E-RING	46145
25	SAFETY	46136
26	CYLINDER	46116
27	FOOT - REAR	46138
28	SCREW - SOC HEAD	46067
29	SCREW - SOC HEAD	46157
30	PIN - SPRING	46144
31	COVER - QUICK RELEASE	46126
32	BUMPER	46118
33	NUT - LOCK	46142

ITEM	DESCRIPTION	PART NO.
34	CONNECTOR - AIR	46050
35	CAP - END	46121
36	O-RING	46152
37	BODY - GUN	46115
38	TRIGGER - SECONDARY	46104
39	TRIGGER - PRIMARY	46110
40	PIN - SPRING	46143
41	PIN - STEPPED	46111
42	ROD	46112
43	PIN - ROLL	46133
44	MAGAZINE	46130
45	NOSE	46139
46	COVER - NOSE B	46114
47	WASHER - SPRING	46064
48	O-RING	46155
49	VALVE - TRIGGER	46106
50	SPRING	46108
51	O-RING	46154
52	STEM - TRIGGER VALVE	46107
53	FRONT FOOT	46137
54	O-RING	46146
55	GUIDE - TRIGGER VALVE	46105
56	SPRING	46113
57	BUTTON	46134
58	PLATE	46129
59	ROLLING ELEMENT	46132
60	SPRING - ROLLER	46131
61	PUSHER	46127
62	COVER - NOSE ASSEMBLY	46140
63	BRACKET - LATCH	46128
64	SCREW - SOC HEAD	46156
65	SCREW - SOC HEAD	46158