




IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.

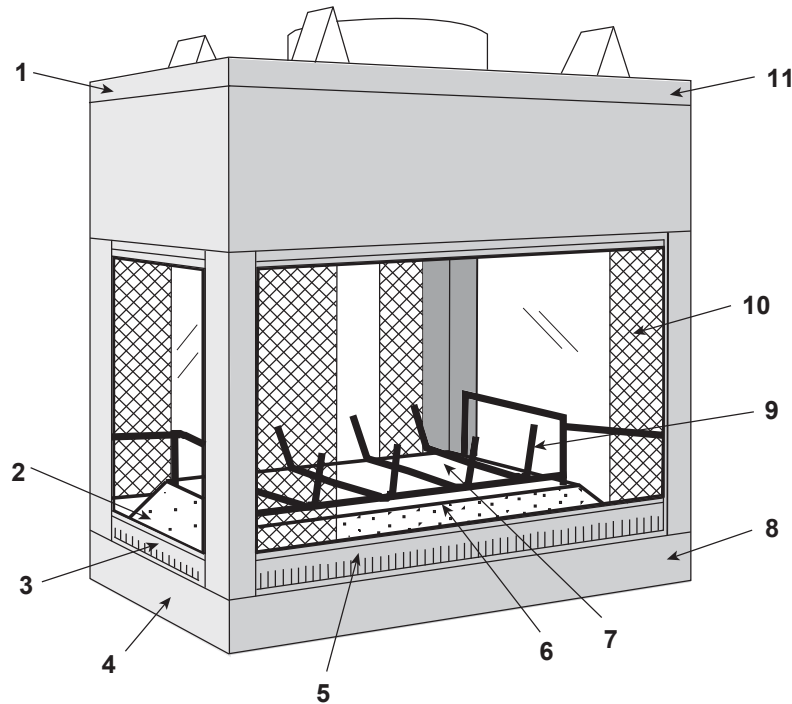

**Stocked
at Depot**

ITEM	DESCRIPTION	COMMENTS	PART NUMBER	
1	Face, Upper End (overlay)	No longer available	13233C	
2	Ashlip, End	Qty. 2 req.	13215A	
3	Door Support	No longer available	13274D	
4	Face, Lower End (overlay) .	No longer available	13234B	
5	Door Track	No longer available	15424A	
6	Ashlip	Qty. 2 req.	13214A	
7	Refractory, Hearth	No longer available	13213A	
8	Face, Lower Front (overlay)	No longer available	12847B	
9	Grate		GR3	Y
10	Firescreen Assembly	Qty 4 req	11855A	Y
11	Face, Upper Front (overlay)	No longer available	13232D	
	Damper Repair Kit	No longer available	14023A	Y
	Firescreen - Hairpin Clips	Pkg of 24	101025/24	Y
	Firescreen Rod	Qty. 4 req.	SRV11866	Y
	Glass Door Assembly	No longer available	15931B	
	Glass Panel (End)	No longer available	13259A	
	Glass Panel (Front)	No longer available	13714B	
	Door Assembly (Left)	No longer available	15408A	
	Door Asembly (Right)	No longer available	15407	