


# PARTNER

ConstructionParts.com

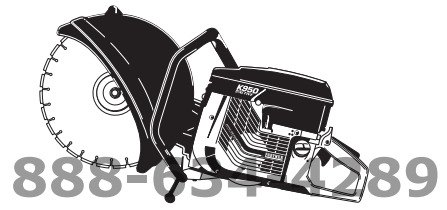

IPL, K 650 Active II, K 700 Active II, 2001-06, 106 27 55-61

ConstructionParts.com

*K 650 Active II*  
*K 700 Active II*

*Reservdelar*

*Spare parts*

*Ersatzteile*

*Pieces de rechange*

*Piezas de repuesto*

*Ricambi*

*Peças*  
*sobresselente*

ConstructionParts.com

888-634-4289

106 27 55-61

---

# **PARTNER®**


| No.          | Pos. | Description          | No.          | Pos. | Description            |
|--------------|------|----------------------|--------------|------|------------------------|
| 501 22 02-01 | L    | Plug                 | 503 25 00-01 | K    | Ball bearing MFG SKF   |
| 501 22 03-01 | L    | Plug                 | 503 25 21-01 | A    | Ball bear. 6202 DDU/C3 |
| 501 22 04-01 | L    | Ball                 | 503 26 02-04 | K    | Sealing ring           |
| 501 22 05-01 | L    | Spring               | 503 26 30-21 | M    | O-ring                 |
| 501 22 08-01 | L    | Gasket               | 503 28 90-17 | J    | Piston ring            |
| 501 22 09-01 | L    | Diaphragm            | 503 40 13-02 | C    | Bracket left           |
| 501 22 12-01 | L    | Fuel pump diaphragm  | 503 40 17-01 | C    | Contact spring         |
| 501 22 13-01 | L    | Gasket, pump side    | 503 40 27-01 | K    | Spacer                 |
| 501 22 14-01 | L    | Cap                  | 503 41 18-02 | F    | Cable                  |
| 501 22 15-01 | L    | Screw                | 503 44 31-01 | K    | Gasket                 |
| 501 22 17-01 | L    | Spring               | 503 49 10-01 | J    | Gasket                 |
| 501 22 20-01 | L    | Lever                | 503 53 40-01 | L    | Nipple                 |
| 501 22 21-01 | L    | Shaft                | 503 55 22-01 | J    | Plug                   |
| 501 22 24-01 | L    | Filter               | 503 57 86-01 | L    | Ball                   |
| 501 22 25-01 | L    | Spring               | 503 57 87-01 | L    | Screw                  |
| 501 26 85-01 | L    | Idle adj. screw      | 503 57 89-01 | K    | Holder                 |
| 501 26 89-01 | L    | Needle H             | 503 65 27-01 | L    | Screw                  |
| 501 42 71-01 | L    | Bushing              | 503 65 30-01 | L    | Washer                 |
| 501 48 50-01 | L    | Gasket               | 503 65 31-01 | L    | Washer                 |
| 501 48 52-01 | L    | Screw                | 503 71 53-01 | J    | Valve decompr.         |
| 501 48 54-02 | F    | Spark plug conn. kit | 503 77 98-01 | L    | Valve                  |
| 501 49 48-02 | L    | Diaphragm/gasket set | 503 84 50-01 | F    | Cable                  |
| 501 63 48-01 | F    | Spring               | 503 90 17-01 | F    | Ignition module        |
| 501 67 32-03 | F    | Pawl                 | 504 35 72-01 | K    | Fuel filter            |
| 501 69 17-02 | H    | Comb. tool           | 505 26 76-73 | B    | Spacer                 |
| 501 76 83-04 | K    | Hose                 | 505 26 83-03 | B    | Cover                  |
| 501 76 83-26 | K    | Hose, 245 mm         | 505 26 94-27 | B    | Throttle rod           |
| 501 81 99-01 | F    | Screw M5x14          | 505 27 75-16 | F    | Insulating cap         |
| 501 82 18-01 | L    | Retaining ring       | 505 27 90-60 | G    | Insul. flange          |
| 503 12 79-02 | E    | Starter handle       | 505 27 91-03 | B    | Throttle control       |
| 503 15 59-02 | C    | Bracket right        | 505 27 91-04 | B    | Throttle catch         |
| 503 15 80-01 | K    | Crankshaft           | 505 27 95-11 | C    | Absorber               |
| 503 20 00-01 | BC   | Screw M6SF 5x20      | 505 27 95-13 | C    | Absorber               |
| 503 20 00-03 | AD   | Screw M6SF 5x12      | 505 29 56-14 | B    | Spring                 |
| 503 20 00-04 | AC   | Screw M6SF 5x16      | 505 30 23-33 | K    | Needle bearing         |
| 503 20 00-05 | CJ   | Screw M6SF 5x25      | 505 30 24-15 | B    | Needle bearing         |
| 503 20 00-07 | CK   | Screw M6SF 5x40      | 505 30 32-37 | B    | Clutch                 |
| 503 20 00-08 | BCK  | Screw M6SF 5x30      | 505 30 32-47 | B    | Centrif. weight        |
| 503 20 00-09 | J    | Screw M6SF 5x45      | 505 31 61-14 | L    | Shutter                |
| 503 20 00-10 | C    | Screw M6SF 5x55      | 505 31 64-58 | L    | Pressure spring        |
| 503 20 00-12 | B    | Screw M6SF 5x70      | 505 31 64-95 | L    | Sealing ring           |
| 503 20 00-35 | C    | Screw                | 505 31 65-50 | L    | Needle                 |
| 503 20 00-45 | A    | Screw                | 505 31 66-05 | L    | Spring                 |
| 503 20 02-90 | D    | Screw                | 505 31 66-19 | L    | Throttle shaft         |
| 503 20 21-75 | G    | Screw                | 505 34 07-54 | B    | Handle, left half      |
| 503 20 25-20 | F    | Screw                | 505 34 07-95 | B    | Handle, right          |
| 503 20 30-09 | A    | Screw                | 505 34 11-62 | J    | Piston cpl 50 mm       |
| 503 20 34-19 | E    | Screw                | 505 35 01-50 | J    | Silencer               |
| 503 20 34-25 | E    | Screw                | 505 39 75-13 | A    | Information label      |
| 503 20 34-42 | D    | Screw                | 505 39 75-88 | B    | Decal                  |
| 503 21 06-19 | M    | Screw                | 506 02 84-01 | A    | Washer                 |
| 503 21 06-32 | C    | Screw                | 506 02 85-64 | A    | Shaft                  |
| 503 21 07-22 | E    | Screw                | 506 02 86-01 | A    | Spacer                 |
| 503 21 28-10 | CE   | Screw                | 506 02 87-01 | A    | Washer                 |
| 503 22 00-01 | AB   | Nut M6MF M5          | 506 02 88-30 | A    | Bushing                |
| 503 22 04-01 | F    | Lock nut             | 506 02 91-02 | A    | Bearing housing        |
| 503 22 65-04 | C    | Nut                  | 506 02 92-01 | A    | Guard                  |
| 503 22 66-01 | A    | Nut                  | 506 02 95-01 | A    | Hose                   |
| 503 23 00-05 | A    | Washer 6.5x11        | 506 02 95-03 | A    | Hose                   |
| 503 23 00-11 | B    | Washer 5.3x12        | 506 02 96-01 | A    | Spring                 |
| 503 23 00-35 | C    | Washer               | 506 02 98-01 | A    | Control knob           |
| 503 23 00-42 | FG   | Washer               | 506 02 98-04 | A    | Control knob           |
| 503 23 01-04 | A    | Washer 15x21         | 506 03 00-01 | A    | Pulley                 |
| 503 23 01-11 | B    | Washer               | 506 03 06-02 | A    | Adjuster               |
| 503 23 04-01 | B    | Washer               | 506 03 32-02 | AK   | Screw                  |
| 503 23 51-08 | F    | Spark plug RCJ7Y     | 506 03 45-01 | A    | Washer                 |

| No.          | Pos. | Description      | No.          | Pos. | Description        |
|--------------|------|------------------|--------------|------|--------------------|
| 506 03 62-01 | A    | Spacer           | 506 26 41-01 | K    | Fuelfilter         |
| 506 03 62-02 | A    | Spacer           | 506 26 41-11 | K    | Fuel filter cpl    |
| 506 03 62-04 | A    | Spacer           | 506 26 75-01 | A    | Washer             |
| 506 03 88-01 | A    | Warning label    | 506 26 85-01 | G    | Rubber seal        |
| 506 03 95-20 | A    | Bushing          | 506 27 11-01 | K    | Fuel filter weight |
| 506 03 95-22 | A    | Bushing          | 506 27 14-01 | L    | Screw              |
| 506 03 95-25 | A    | Bushing          | 506 27 56-01 | L    | Choke shaft        |
| 506 03 99-01 | C    | Support          | 506 27 57-01 | L    | Felt seal          |
| 506 07 07-01 | A    | Flange, support  | 506 27 61-01 | L    | Cup                |
| 506 07 11-13 | K    | Hose             | 506 27 67-41 | A    | Belt               |
| 506 07 25-01 | B    | Cutting arm      | 506 27 84-12 | D    | Decal              |
| 506 07 26-04 | C    | Handle           | 506 27 84-21 | D    | Decal              |
| 506 07 37-01 | B    | Drive wheel      | 506 27 84-23 | D    | Decal              |
| 506 07 66-03 | K    | Crankcase cpl    | 506 28 39-30 | D    | Sealing            |
| 506 09 56-02 | M    | Clamp            | 506 29 21-01 | K    | Gasket             |
| 506 09 64-01 | G    | Gasket           | 506 29 56-01 | M    | Nipple             |
| 506 09 82-01 | B    | Spring           | 506 29 57-01 | M    | Nipple             |
| 506 09 90-01 | J    | Piston cpl 50 mm | 506 29 65-01 | C    | Absorber           |
| 506 09 92-12 | J    | Cylinder cpl     | 506 29 88-01 | M    | Screw              |
| 506 13 82-01 | A    | Guard            | 506 31 15-01 | L    | Insert             |
| 506 13 95-11 | A    | Washer           | 506 31 15-02 | L    | Insert             |
| 506 13 96-01 | A    | Screw            | 506 31 61-01 | L    | Cover              |
| 506 14 32-01 | A    | Catch            | 506 31 74-01 | K    | Bushing            |
| 506 14 42-01 | C    | Support          | 506 31 77-11 | M    | Valve cpl          |
| 506 14 43-01 | C    | Support          | 506 31 88-01 | G    | Intake pipe        |
| 506 14 90-01 | C    | Protection       | 506 31 88-02 | G    | Intake pipe        |
| 506 21 21-01 | A    | Washer           | 506 32 02-01 | G    | Gasket             |
| 506 21 27-02 | J    | Gasket           | 506 32 03-01 | G    | Gasket             |
| 506 21 77-14 | D    | Cylinder cover   | 506 32 12-01 | L    | Repair kit         |
| 506 21 78-12 | D    | Filter holder    | 506 32 15-01 | GL   | Carburetor cpl     |
| 506 21 79-01 | D    | Filter cover     | 506 32 87-01 | M    | Y-tube             |
| 506 21 86-02 | F    | Flywheel compl.  | 506 32 89-03 | M    | Wet cutting kit    |
| 506 21 89-02 | E    | Starter housing  | 506 32 99-01 | GL   | Carburetor cpl     |
| 506 21 90-01 | E    | Air conductor    | 506 33 56-15 | E    | Starter rope       |
| 506 21 91-01 | K    | Grommet          | 506 34 07-01 | J    | Deflector          |
| 506 21 95-01 | A    | Spring           | 506 34 46-03 | M    | Handle             |
| 506 21 98-01 | D    | Air jet          | 506 34 66-01 | L    | Governor           |
| 506 22 23-01 | D    | Sealing          | 720 13 07-10 | K    | Pin                |
| 506 22 24-01 | D    | Sealing          | 721 42 58-20 | C    | Spring pin 4x24    |
| 506 22 42-01 | D    | Air filter       | 725 52 95-55 | D    | Screw MC6S 4x20    |
| 506 22 44-01 | C    | Guide            | 732 21 14-01 | C    | Locknut            |
| 506 22 45-01 | C    | Choke control    | 735 31 09-20 | A    | E-ring 5           |
| 506 22 48-01 | C    | Holder           | 735 58 18-00 | B    | Lock washer 2.4    |
| 506 22 63-01 | D    | Filter           | 735 88 06-00 | K    | Woodruff key       |
| 506 22 88-03 | G    | Guide            | 737 43 12-00 | J    | Retaining ring     |
| 506 23 52-02 | H    | Gasket set       | 740 42 01-00 | G    | O-ring             |
| 506 23 53-04 | D    | Decal            | 740 43 13-00 | E    | O-ring             |
| 506 23 53-05 | D    | Decal            |              |      |                    |
| 506 23 54-02 | E    | Decal            |              |      |                    |
| 506 23 61-01 | K    | Tank vent.       |              |      |                    |
| 506 23 83-01 | L    | Choke flap       |              |      |                    |
| 506 23 93-01 | D    | Decal            |              |      |                    |
| 506 24 37-13 | J    | Cylinder cpl     |              |      |                    |
| 506 25 14-01 | E    | Washer           |              |      |                    |
| 506 25 30-01 | E    | Spring           |              |      |                    |
| 506 25 59-32 | K    | Tank cap         |              |      |                    |
| 506 25 61-01 | K    | Tank unit        |              |      |                    |
| 506 25 81-02 | E    | Starter pulley   |              |      |                    |
| 506 25 82-01 | D    | Guard            |              |      |                    |
| 506 25 89-01 | E    | Return spring    |              |      |                    |
| 506 25 95-01 | E    | Starter device   |              |      |                    |
| 506 26 00-02 | A    | Guard            |              |      |                    |
| 506 26 28-01 | C    | Spring           |              |      |                    |
| 506 26 29-01 | K    | Protector        |              |      |                    |
| 506 26 30-01 | C    | Knob             |              |      |                    |
| 506 26 31-01 | E    | Sleeve           |              |      |                    |


A

ConstructionParts.com

888-634-4289

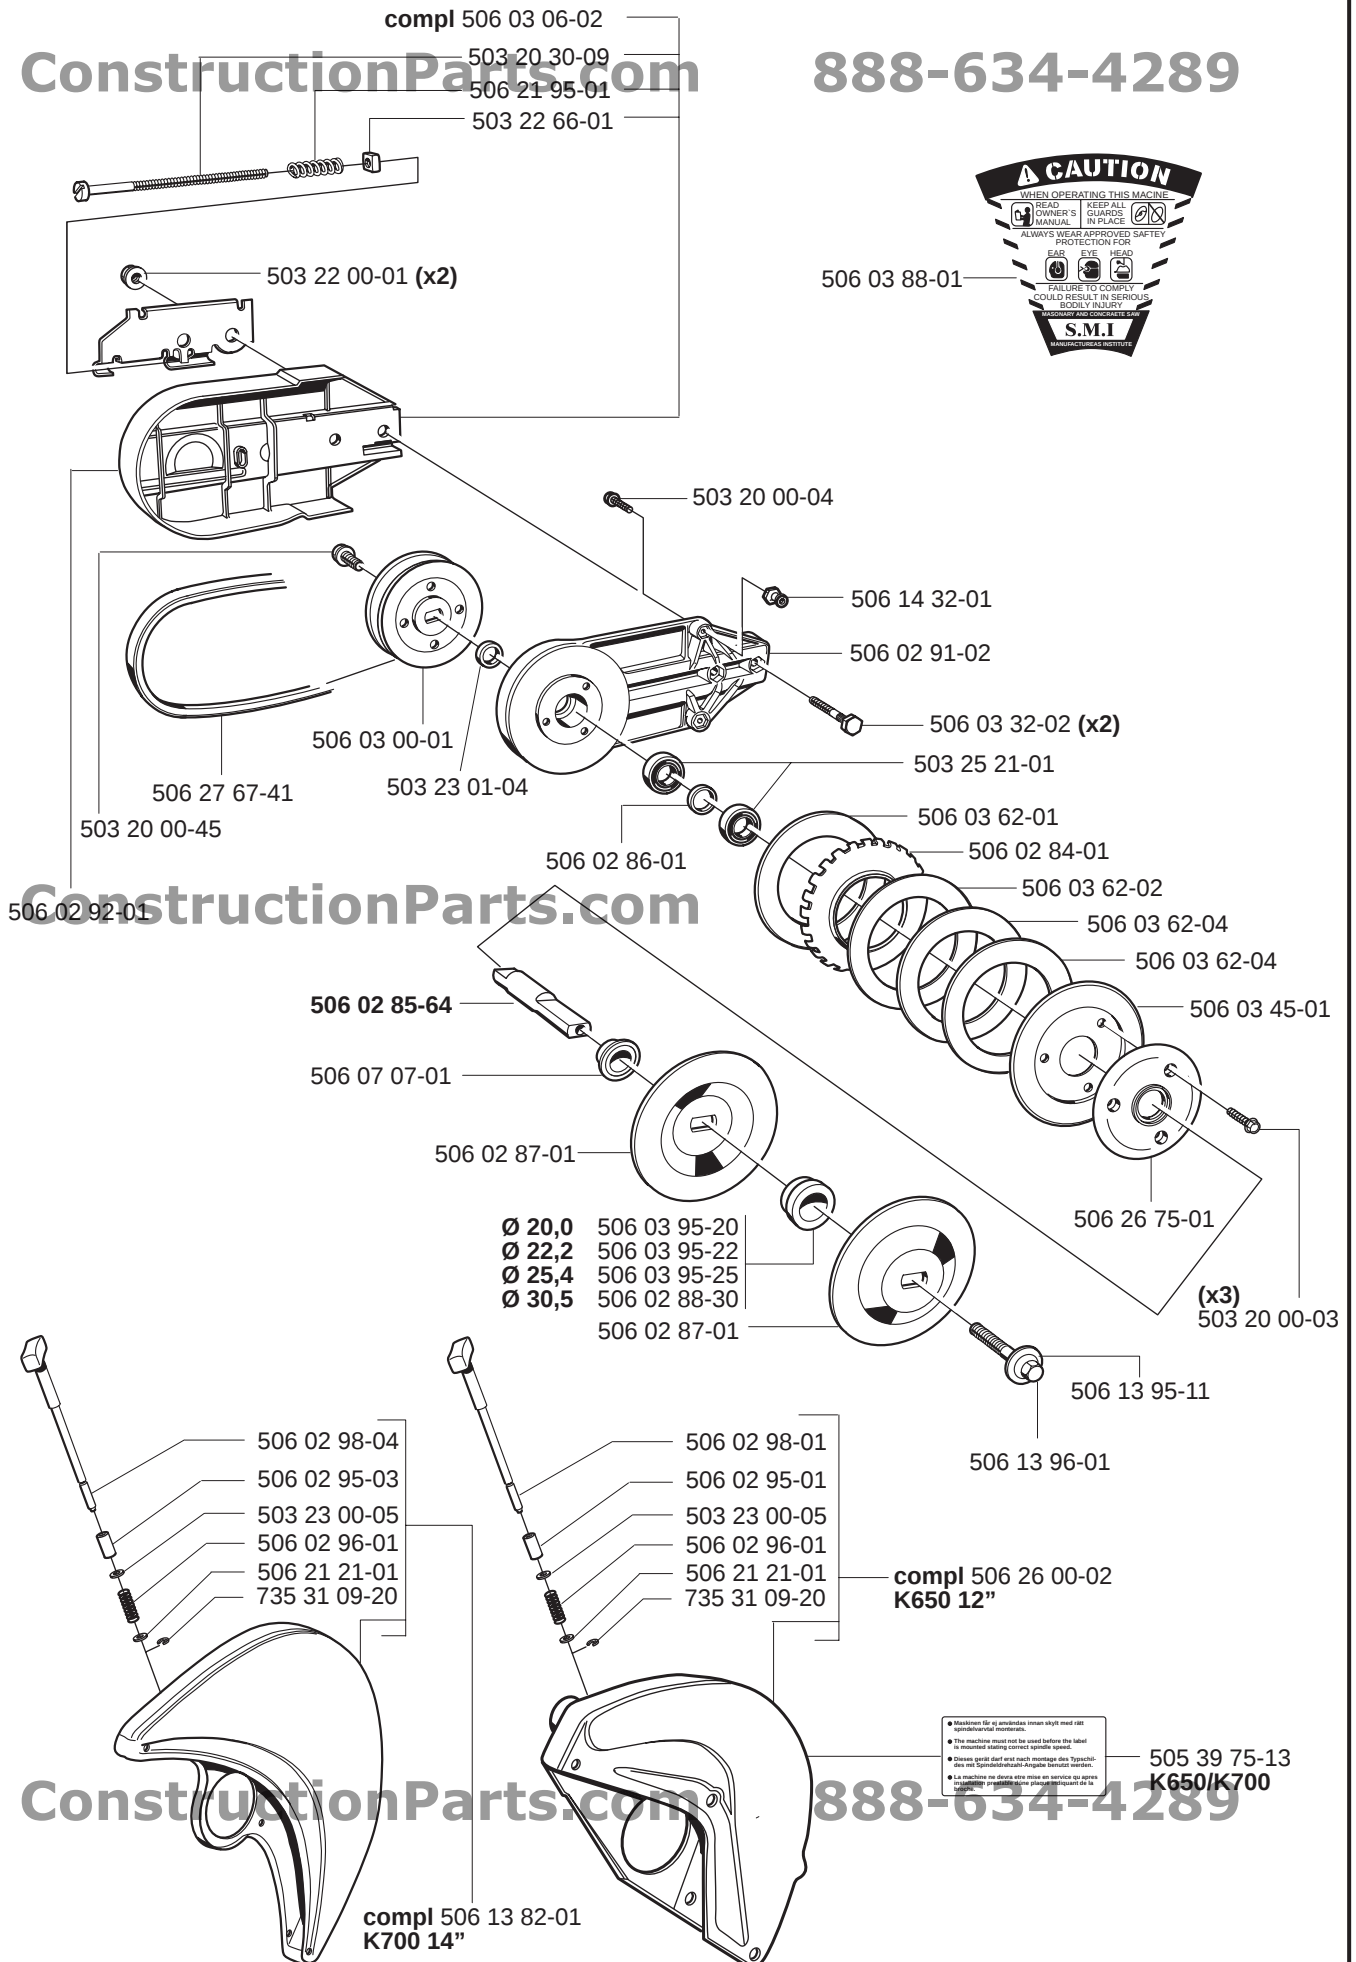


**B**

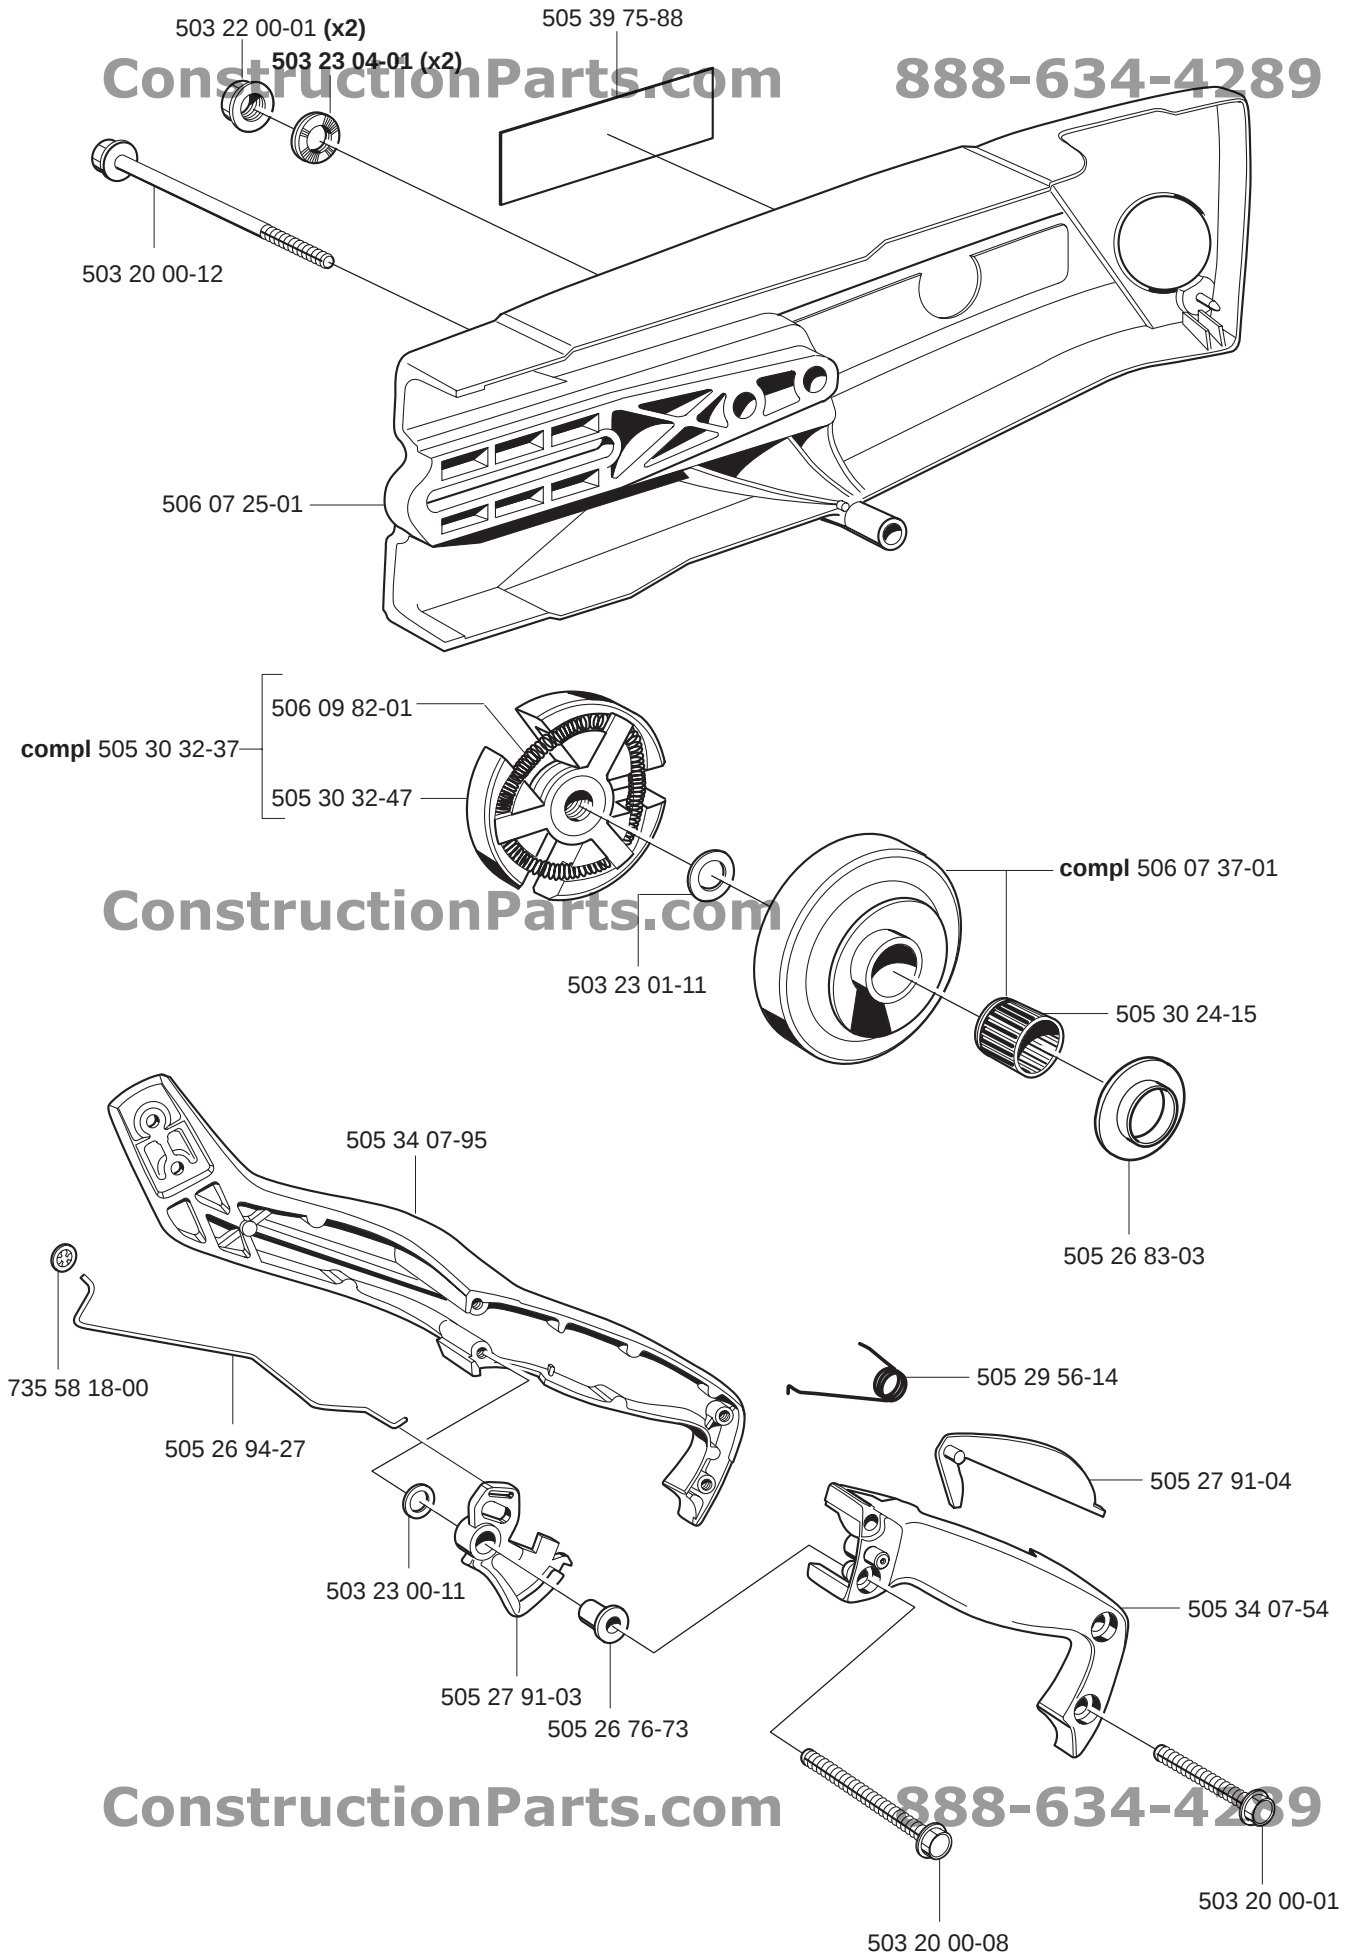


C

ConstructionParts.com

888-634-4289

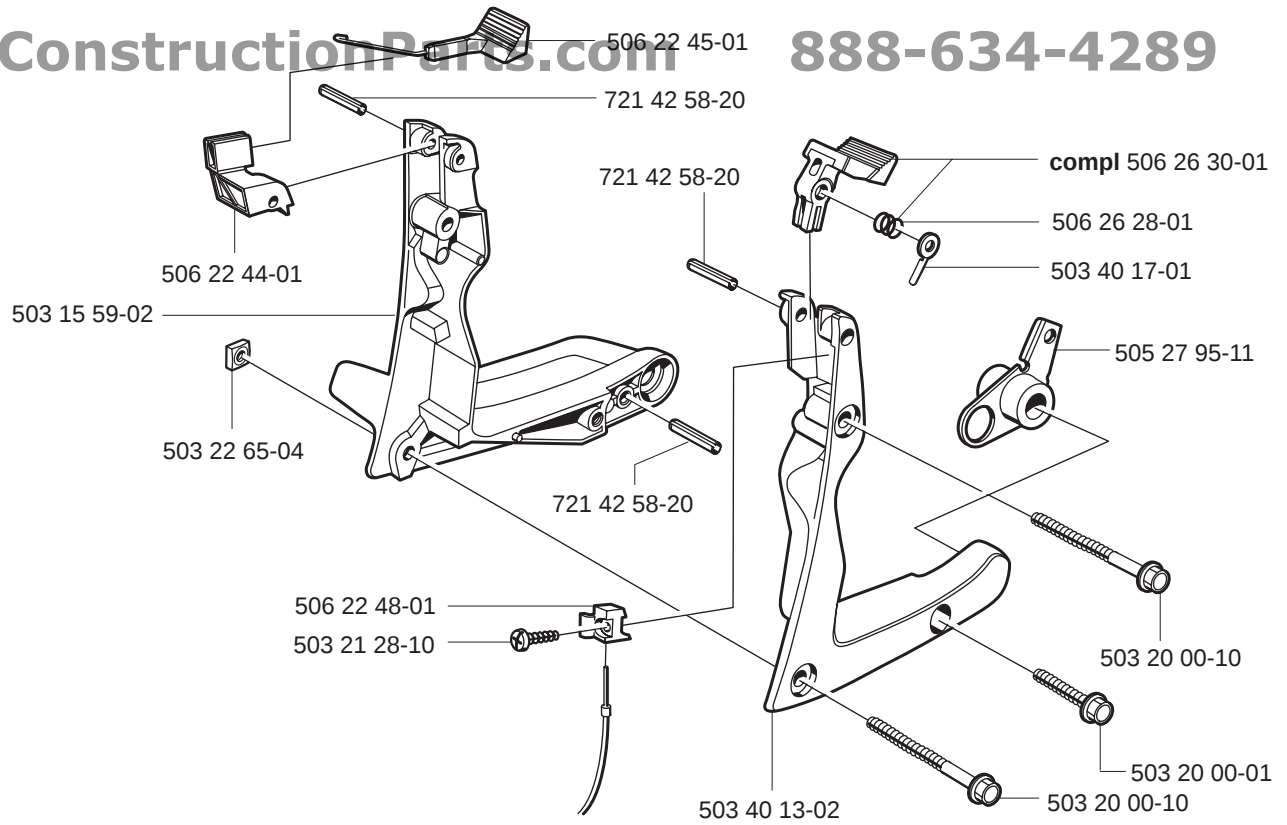

ConstructionParts.com

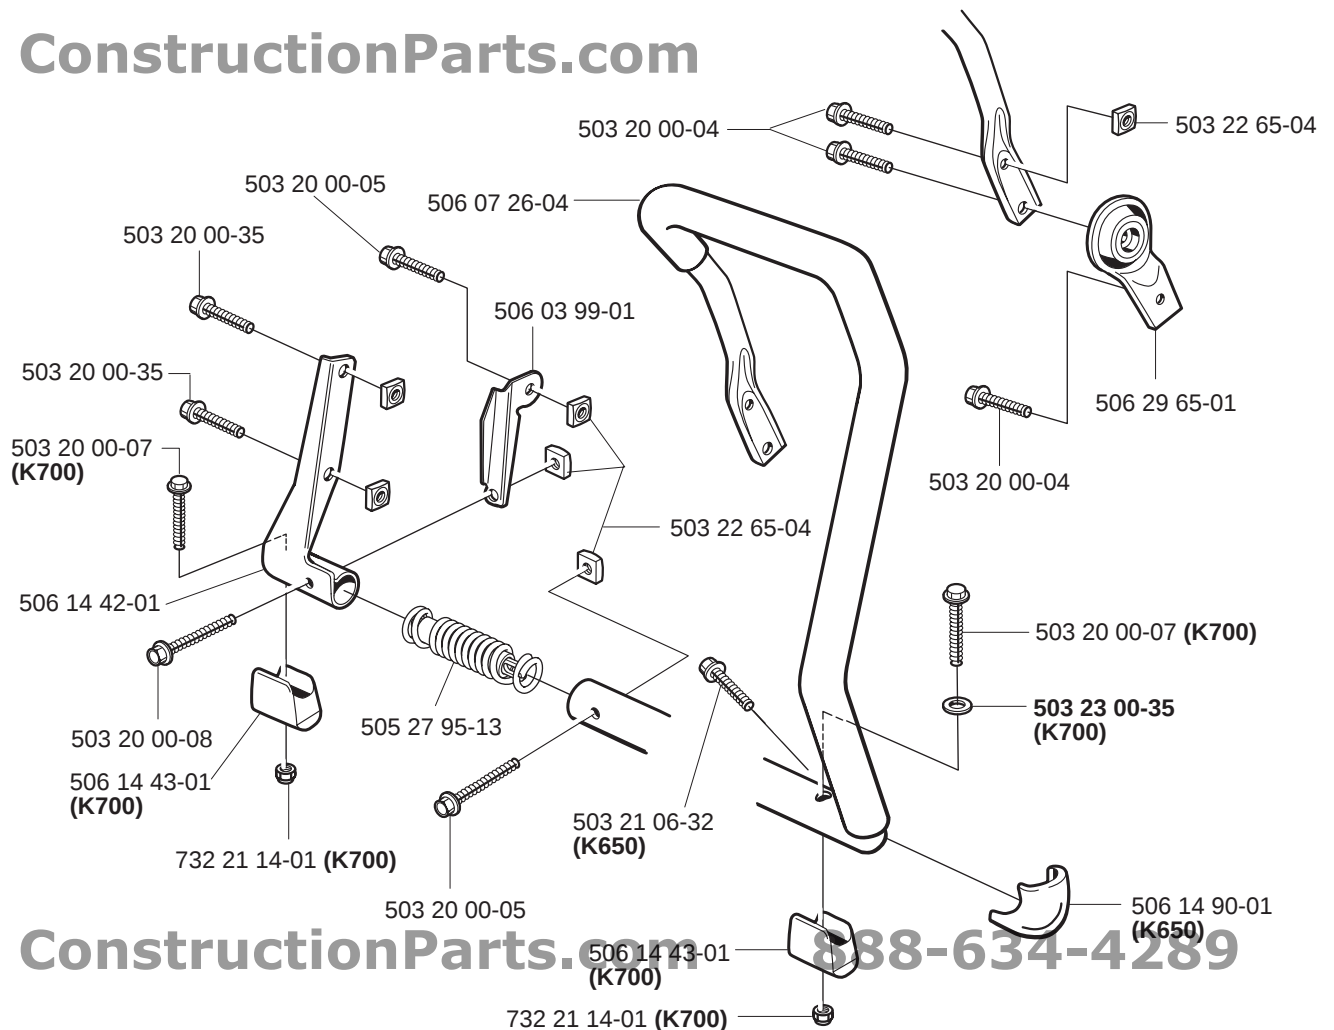

ConstructionParts.com

888-634-4289

D

506 27 84-12  
CE

506 27 84-23  
EPA Canada


506 27 84-21  
EPA USA



ConstructionParts.com

888-634-4289

503 20 34-42

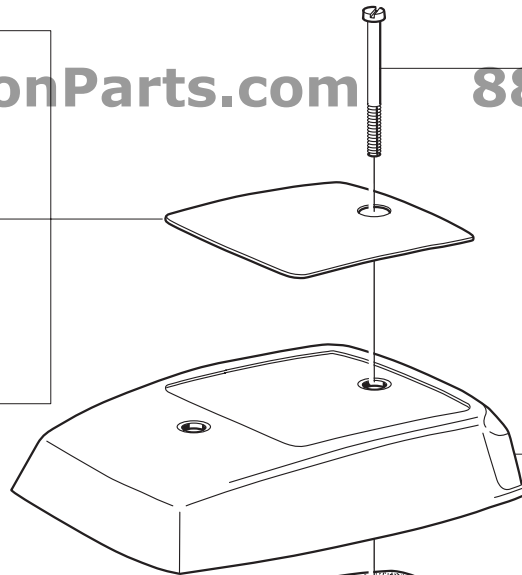


506 21 79-01


\*\*506 25 82-01



\*\*506 28 39-30

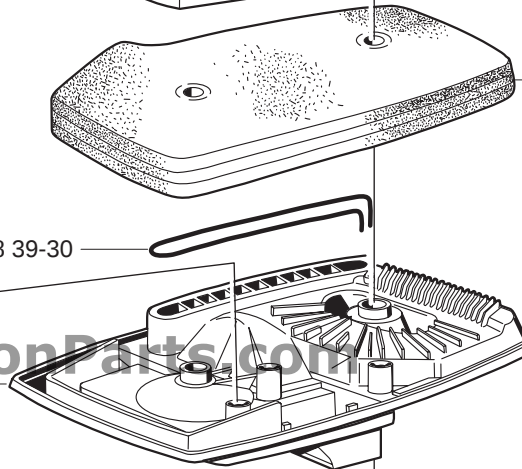

506 22 63-01

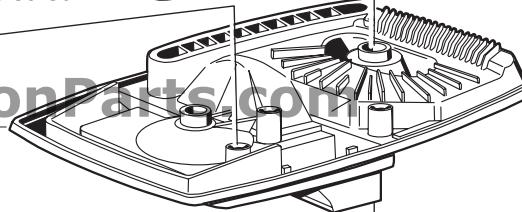


\*\*compl 506 21 78-12


503 20 02-90



506 22 42-01

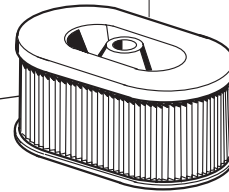

506 28 39-30\*

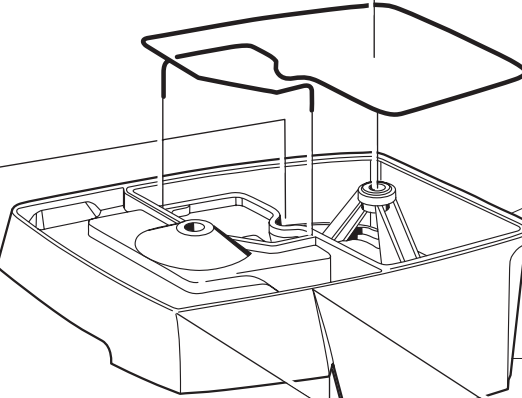

506 23 93-01\*

\*compl 506 21 77-14

506 22 23-01



**K650**  
ACTIVE II

506 23 53-04

**K700**  
ACTIVE II

506 23 53-05

ConstructionParts.com


888-634-4289

506 22 24-01

725 52 95-55

503 20 00-03

506 21 98-01

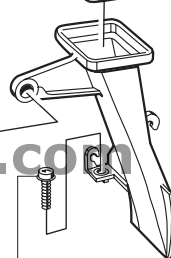



ConstructionParts.com 888-634-4289

506 21 90-01

503 21 07-22\*

740 43 13-00\*

\*506 25 14-01

\*506 26 31-01

\*506 25 30-01

\*506 25 81-02

\*506 25 89-01

503 21 28-10\* (x2)

\*506 33 56-15

503 12 79-02\*

503 20 34-25 (x2)

\*506 21 89-02


503 20 34-19 (x2)

\*506 23 54-02

ConstructionParts.com

ConstructionParts.com



# F

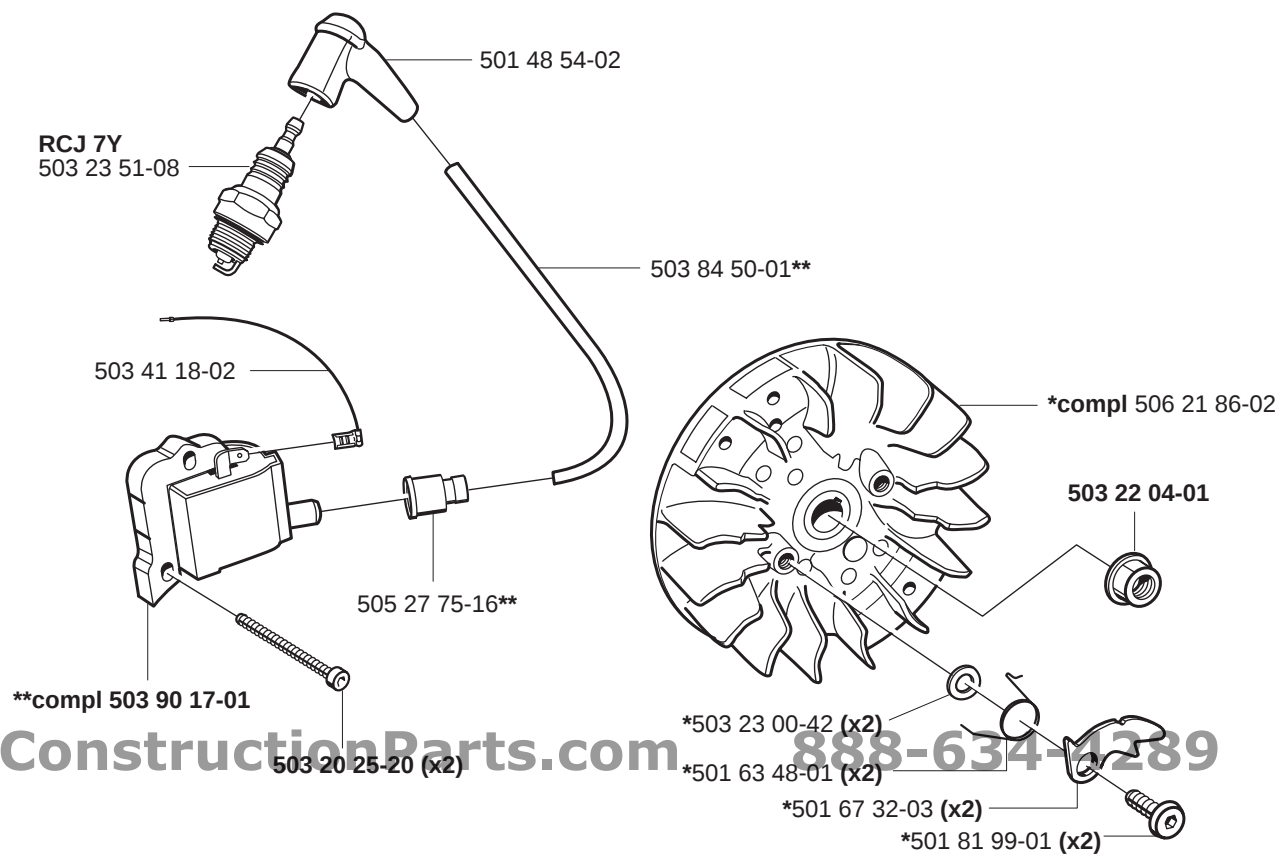

ConstructionParts.com

888-634-4289

**G**

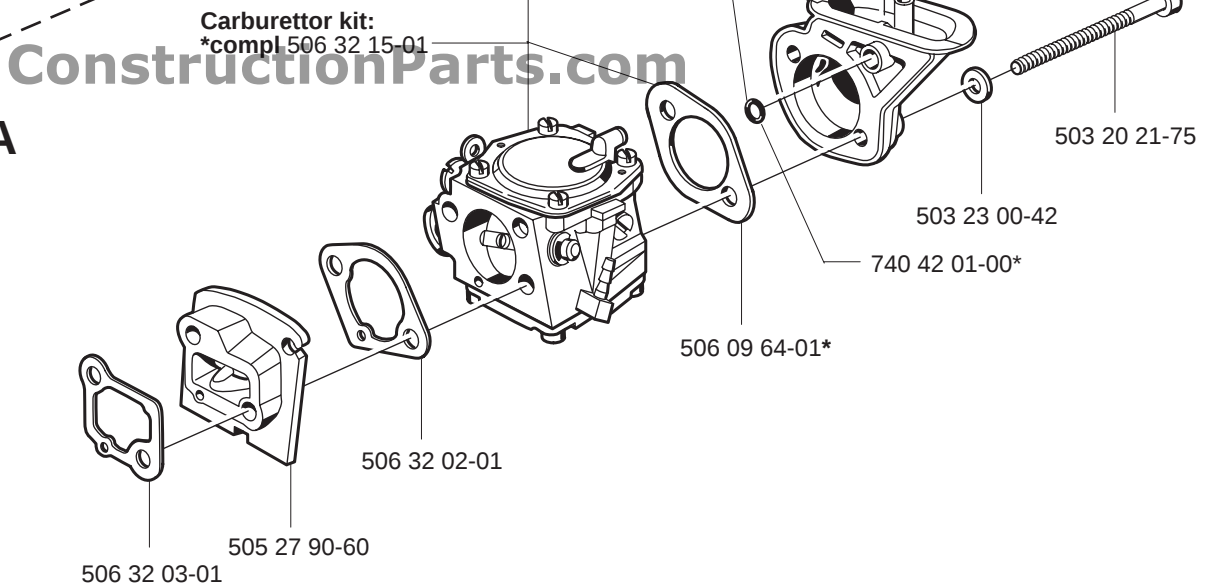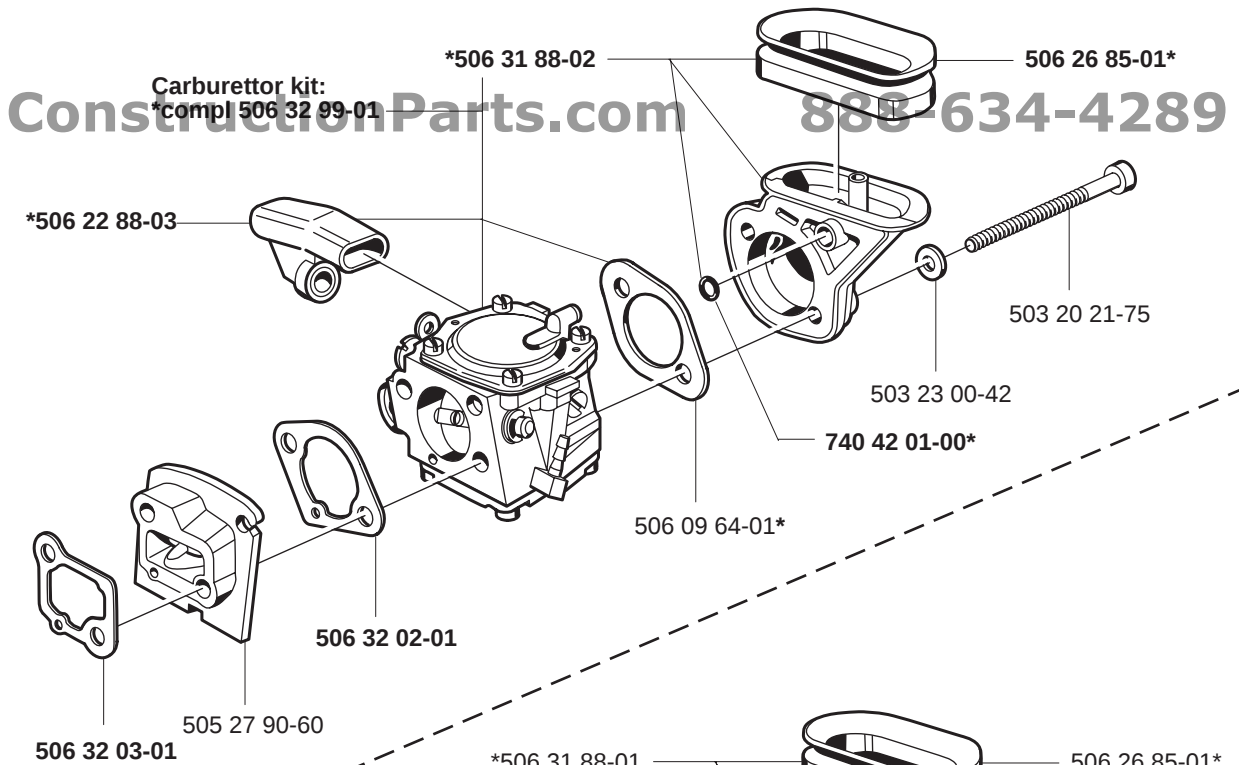


**EPA**

**H**




506 23 52-02

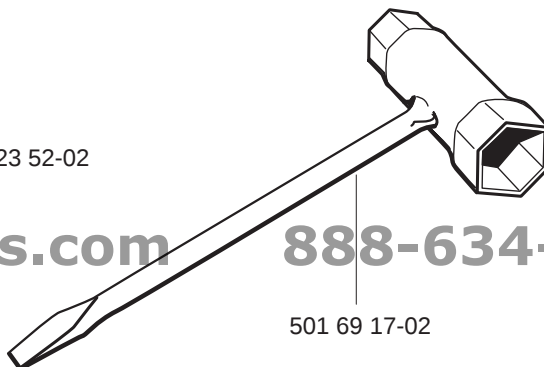

ConstructionParts.com 888-634-4289


**J**

\*compl 506 09 92-12  
\*compl 506 24 37-13 (EPA)

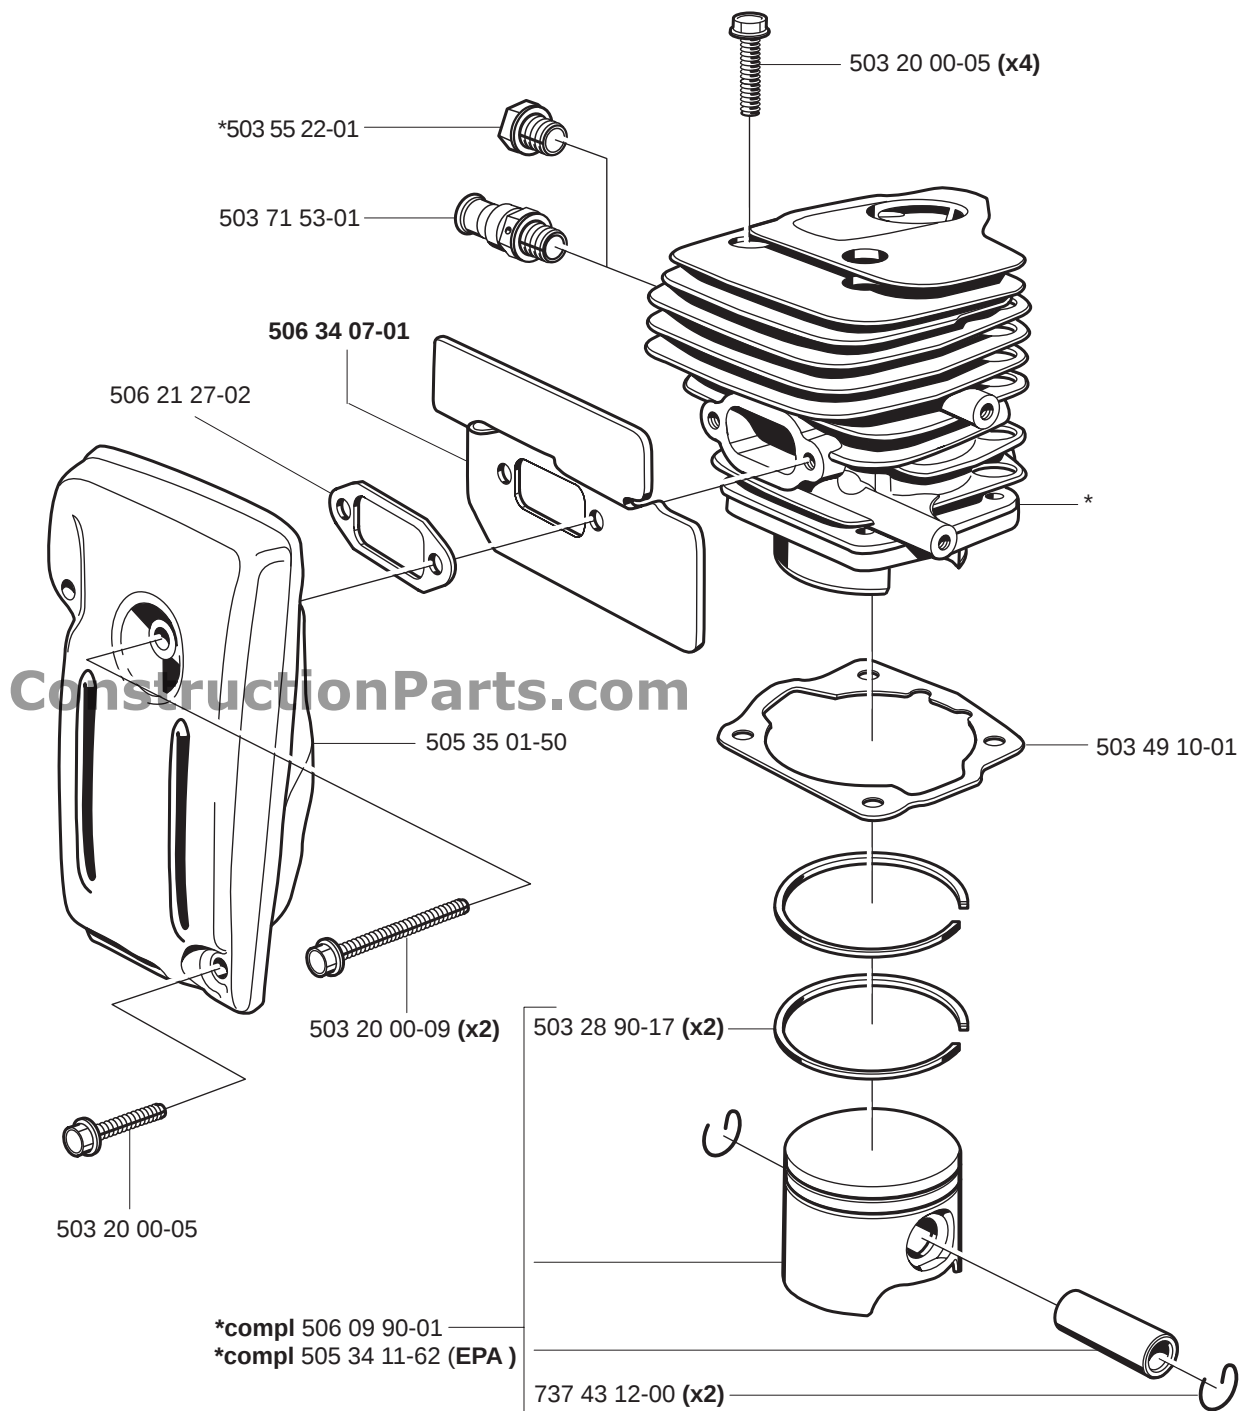**ConstructionParts.com****888-634-4289****ConstructionParts.com****888-634-4289**

ConstructionParts.com

888-634-4289

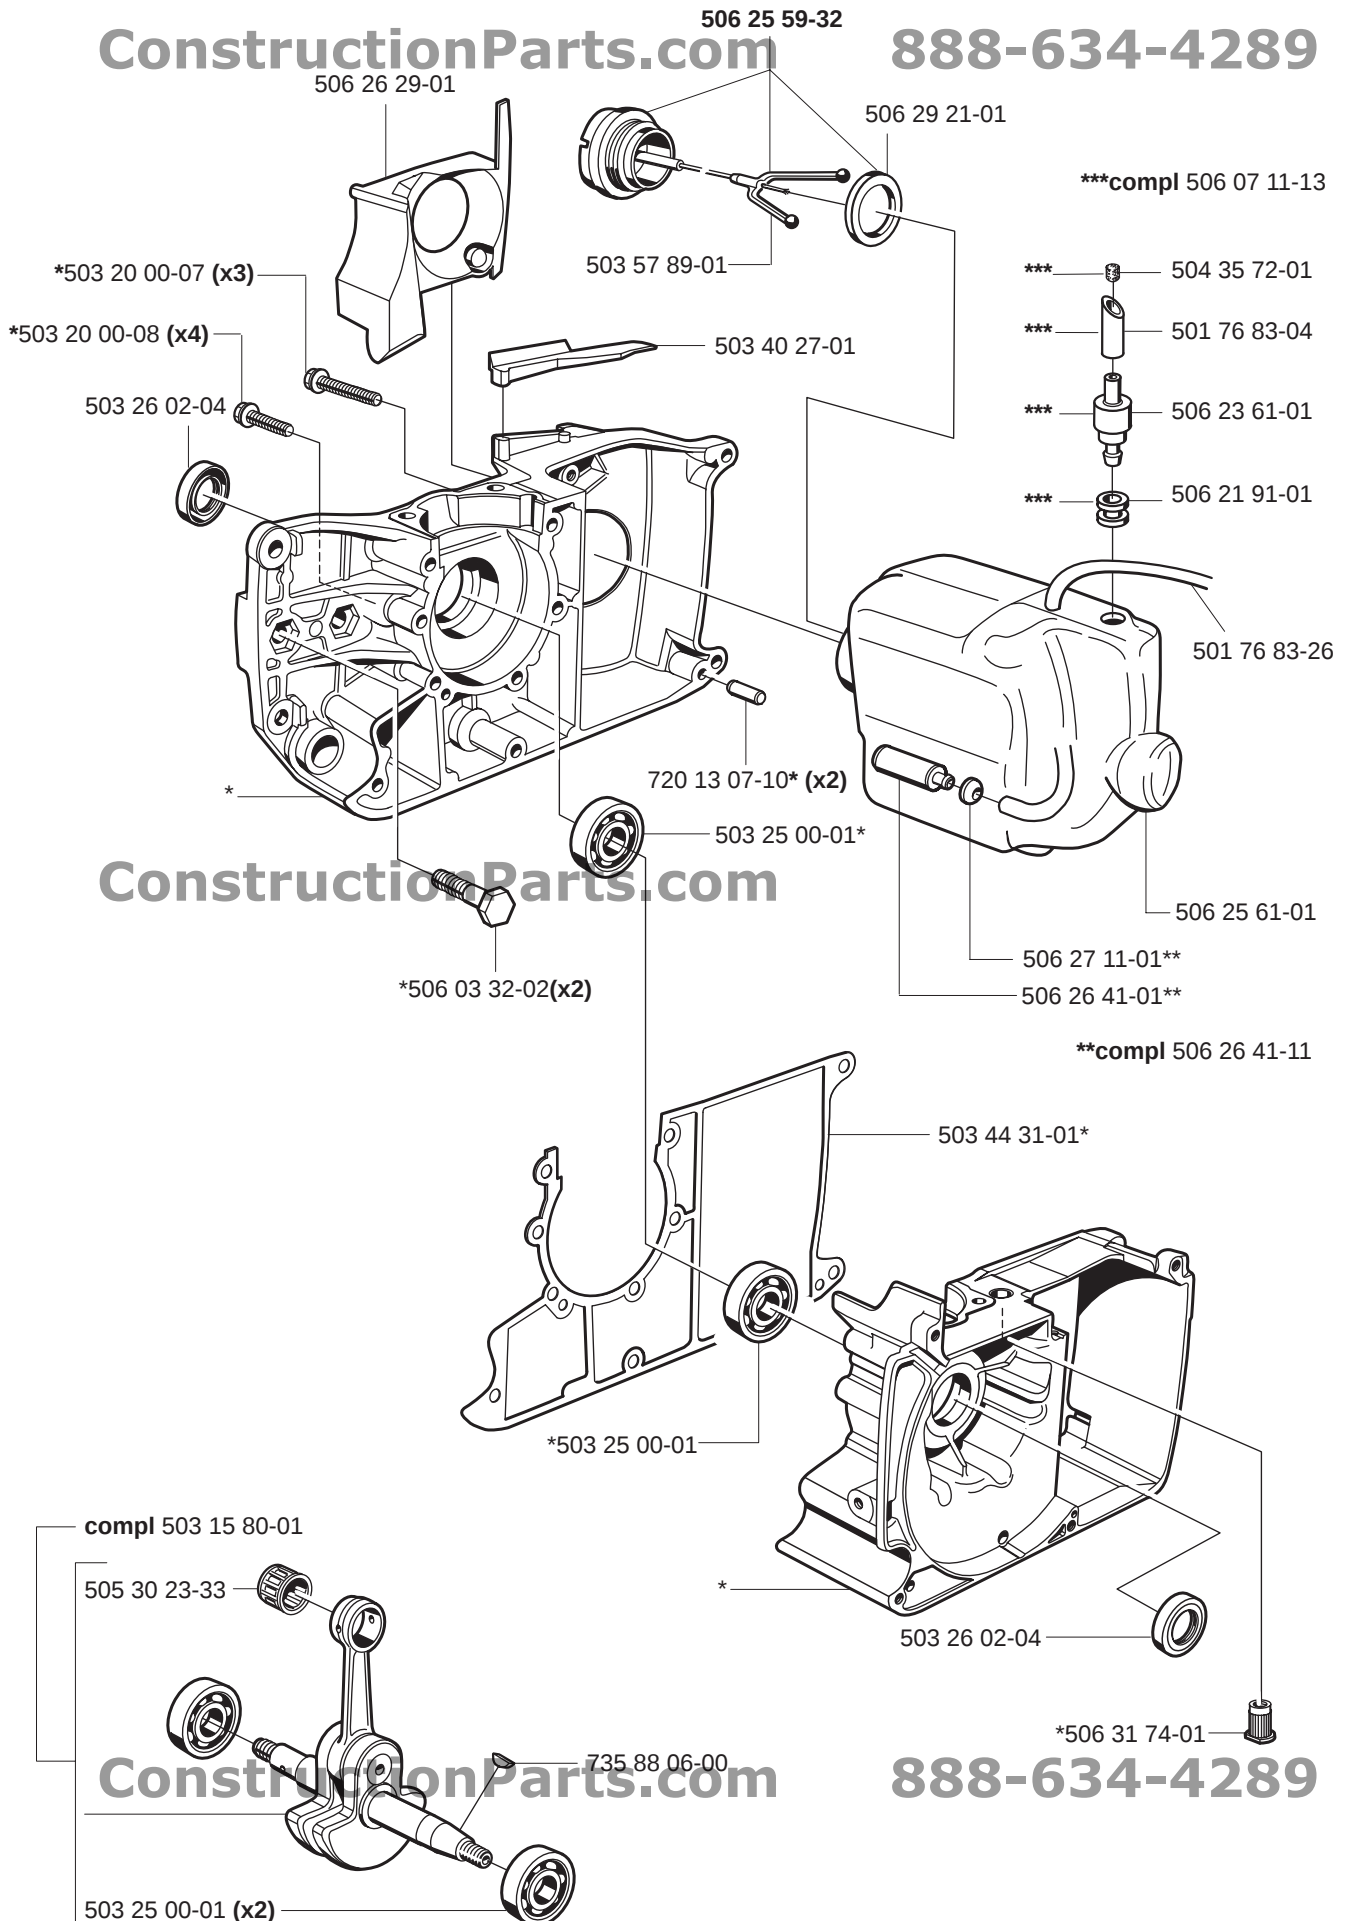


**L** compl 506 32 99-01 Tillotson HS 175M  
compl 506 32 15-01 Tillotson HS 175K (EPA)

# Tillotson HS 175M Tillotson HS 175K

ConstructionParts.com


888-634-4289

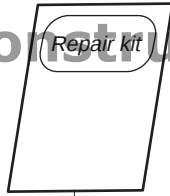

506 32 12-01



\*compl 501 49 48-02

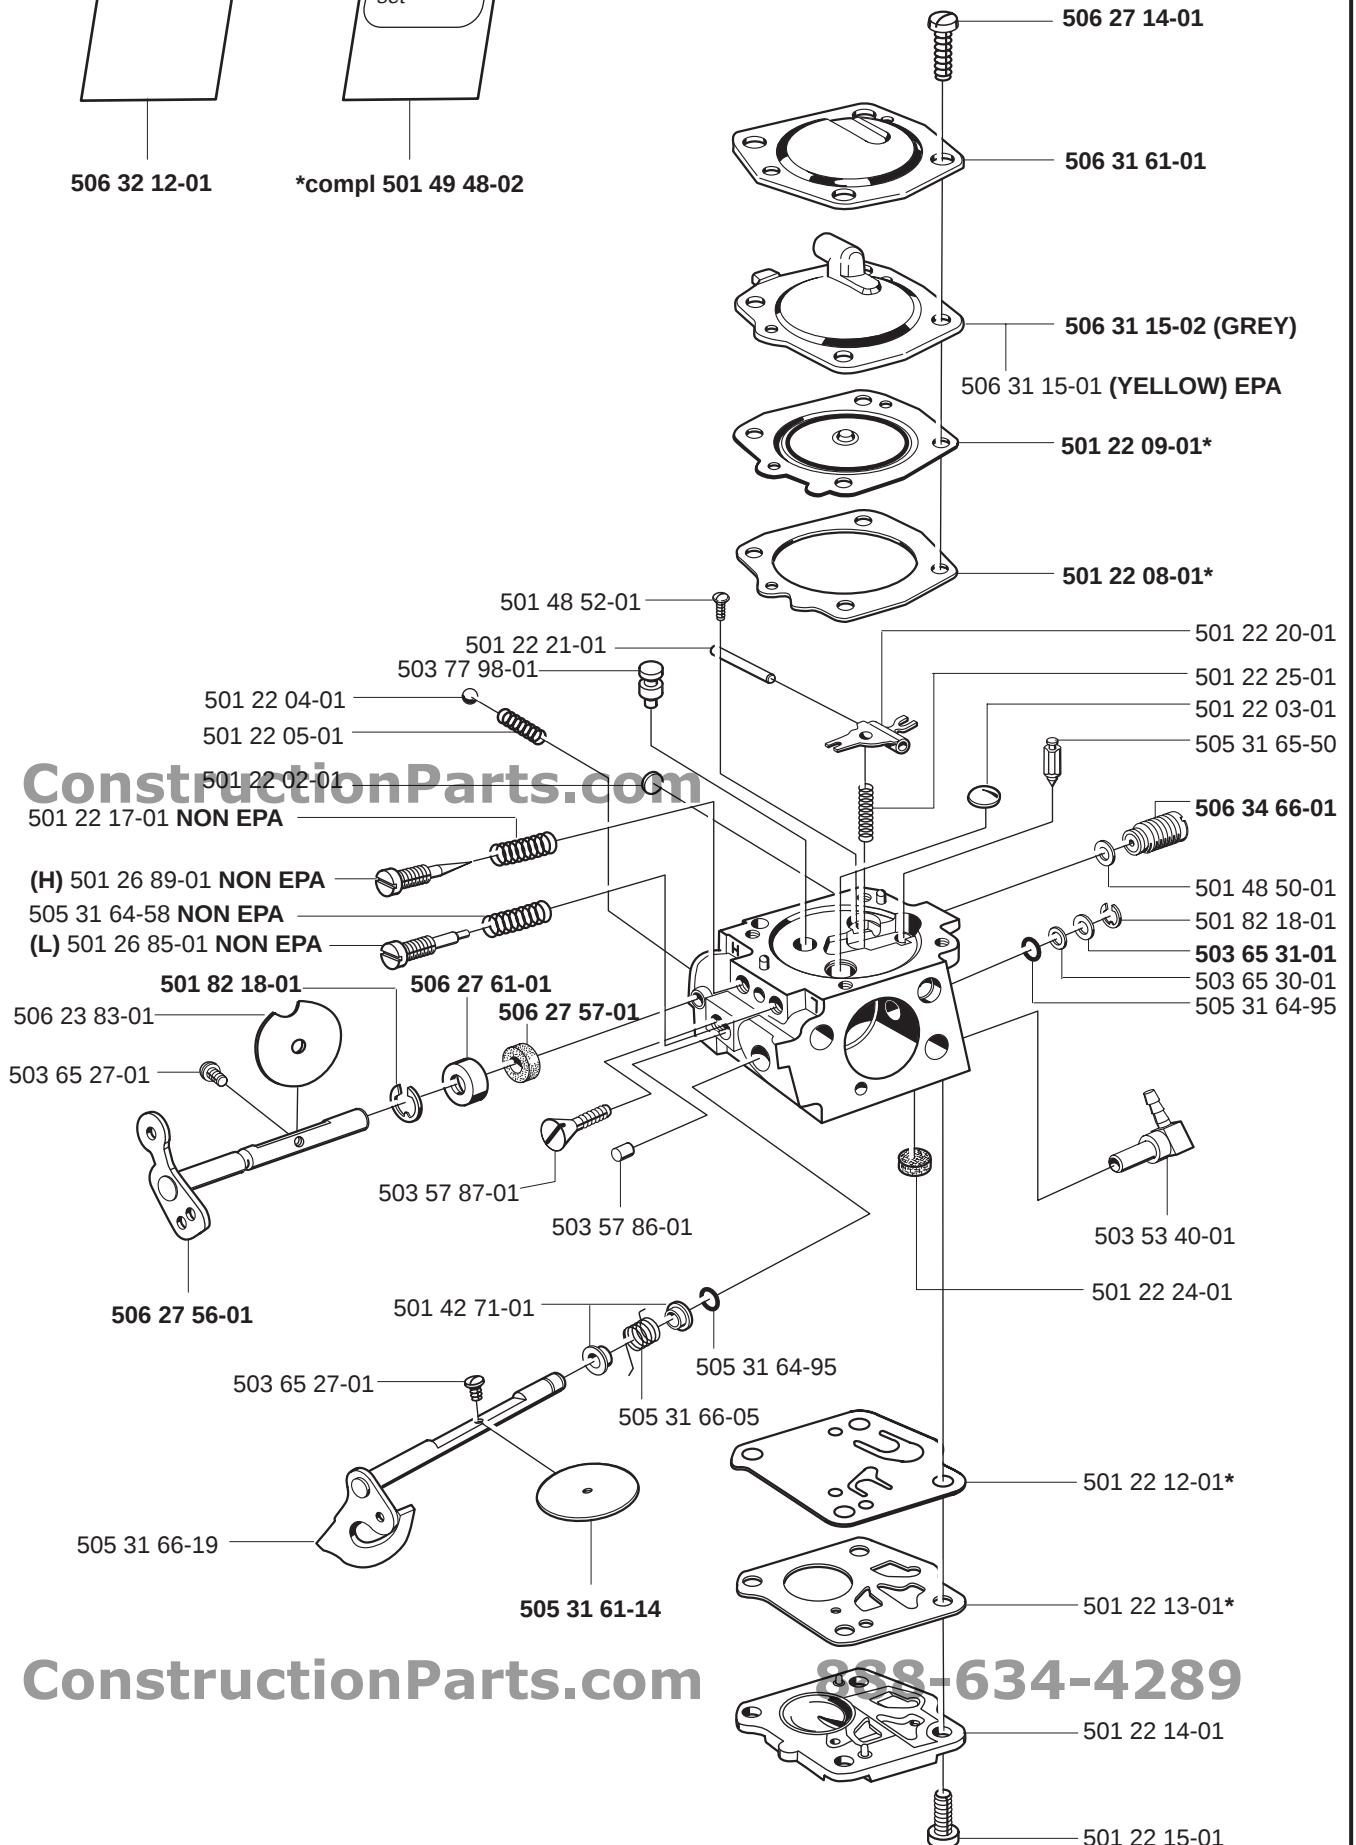

ConstructionParts.com



888-634-4289

M

# Wet cutting kit 506 32 89-03

ConstructionParts.com

888-634-4289

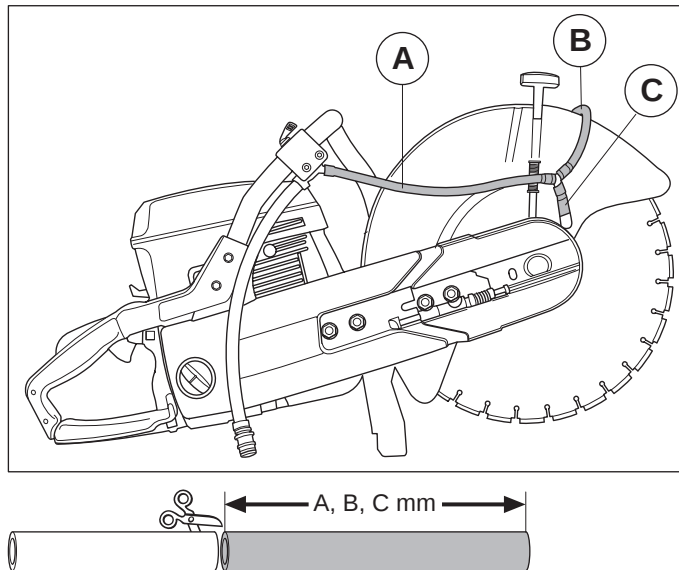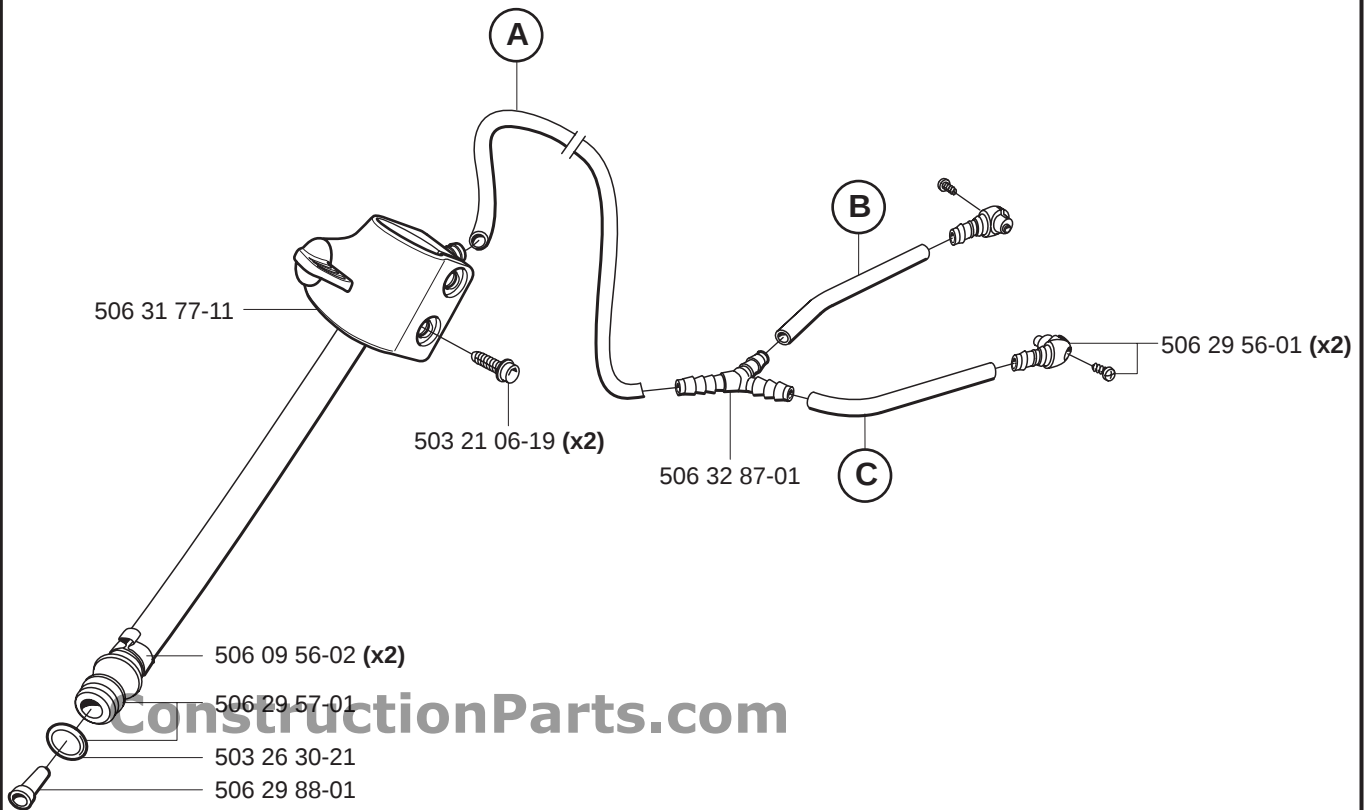

ConstructionParts.com 888-634-4289

| Product  |     | A (mm) | B (mm) | C (mm) |
|----------|-----|--------|--------|--------|
| K650A-II | 12" | 270    | 210    | 45     |
| K700A-II | 14" | 270    | 300    | 45     |