





## Cylinder Head Subassembly

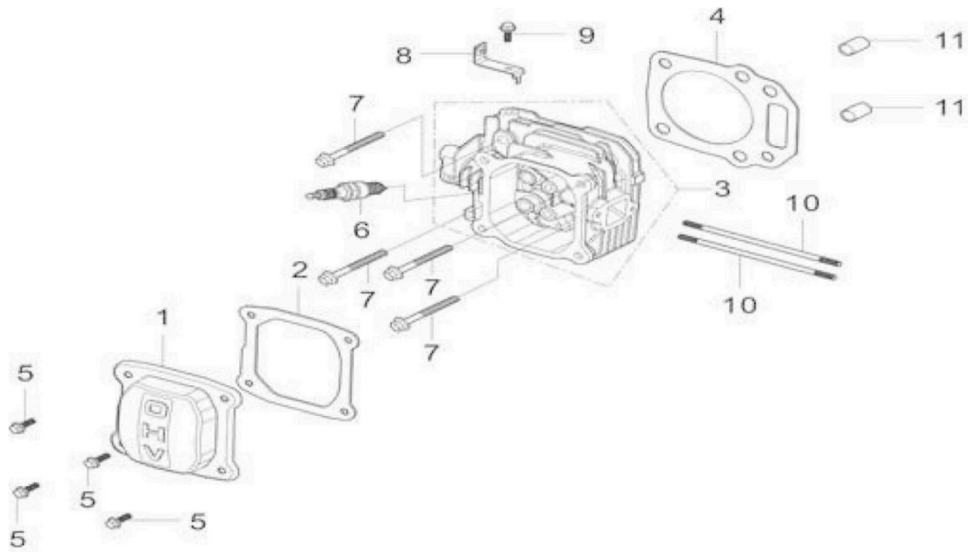

Id	Item #	Description	Quantity
1	45-0190	CYLINDER HEAD COVER SUBASSY	1
2	45-0191	GASKET- CYLINDER HEAD COVER	1
3	45-0598	CYLINDER HEAD SUBASSY	1
4	45-0599	GASKET- CYLINDER HEAD	1
5	80-0060	BOLT-STOPPER BRACKET	4
6	45-0192	SPARK PLUG	1
7	45-0600	BOLT-CYLINDER HEAD	4
8	45-0193	BRACKET- MUFFLER SHIELD	1
9	80-0060	BOLT-STOPPER BRACKET	1
10	45-0601	STUD- CARBURETOR	2
11	45-0602	PIN- CYLINDER HEAD	2



## Crankcase/governor gear Assembly

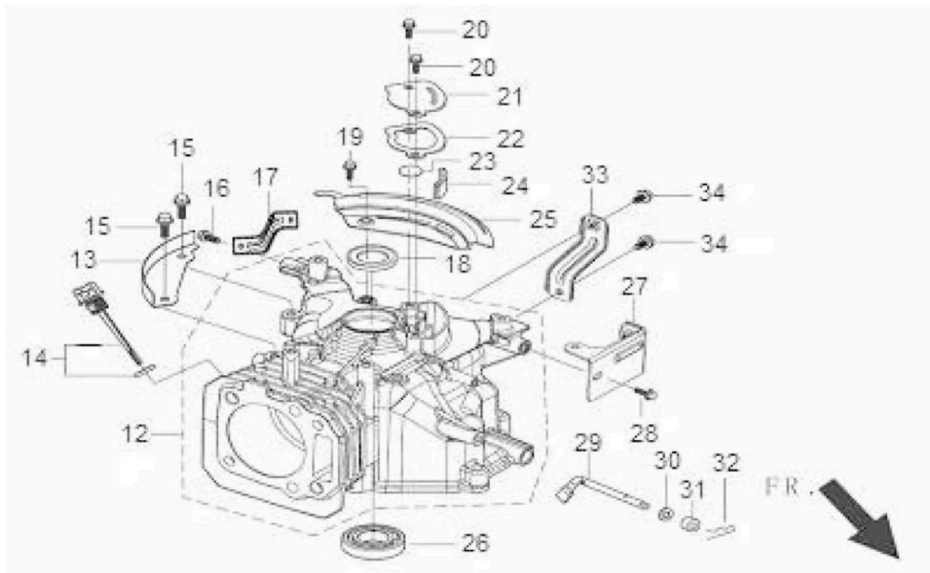


Id	Item #	Description	Quantity
12	45-0603	CRANKCASE SUBASSY	1
13	45-0604	CRANKCASE SHIELD	1
14	45-0194	OIL DIPSTICK SUBASSY	1
15	80-0060	BOLT-STOPPER BRACKET	2
16	80-0060	BOLT-STOPPER BRACKET	1
17	45-0605	BRACKET-FUEL TANK	1
18	45-0195	SEALING, OIL	1
19	80-0060	BOLT-STOPPER BRACKET	1
20	80-0060	BOLT-STOPPER BRACKET	2
21	45-0606	PLATE-BREATHER GROOVE COVER	1
22	45-0607	GASKET- BREATHER GROOVE	1
23	45-0608	BREATHER RING	1
24	45-0609	STRAINER	1

<b>Id</b>	<b>Item #</b>	<b>Description</b>	<b>Quantity</b>
25	45-0610	SHIELD- CRANKCASE REAR	1
26	45-0611	BALL BEARING	1
27	45-0675	BRACKET- FUEL TANK	1
28	80-0060	BOLT-STOPPER BRACKET	1
29	45-0613	GOVERNOR ARM	1
30	45-0480	WASHER- GOVERNOR ARM	1
31	45-0614	OIL- SEAL	1
32	45-0328	PIN	1
33	45-0615	CRANKCASE BRACKET	1
34	80-0060	BOLT-STOPPER BRACKET	2




## Crankcase Cover Subassembly

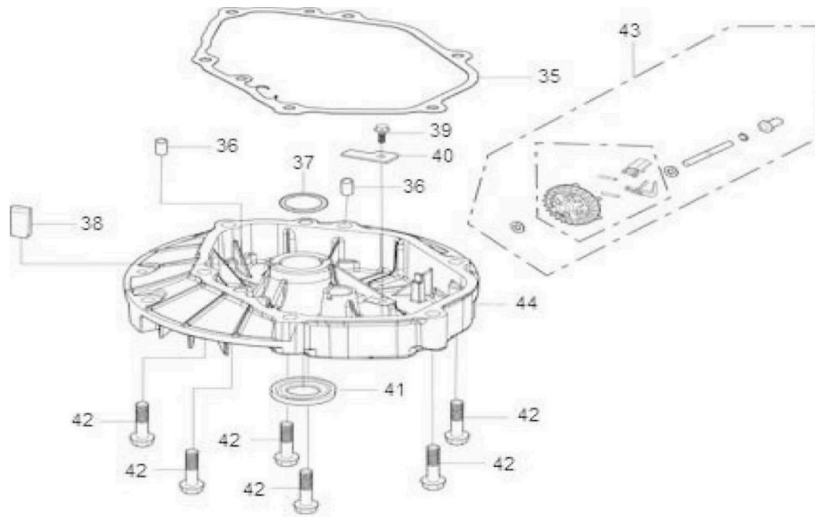

Id	Item #	Description	Quantity
35	45-0196	GASKET- CRANKCASE	1
36	45-0570	PIN	2
37	45-0616	WASHER- CRANKCASE COVER	1
38	45-0617	BLOCK- RETURNING OIL	1
39	80-0060	BOLT- STOPPER BRACKET	1
40	45-0618	GOVERNOR PLATE SPINDLE	1
41	45-0197	SEAL- OIL	1
42	45-0619	BOLT- CRANKCASE	6
43	45-0620	GOVERNOR GEAR ASSY	1
44	45-0621	CRANKCASE COVER	1




## Piston Subassembly

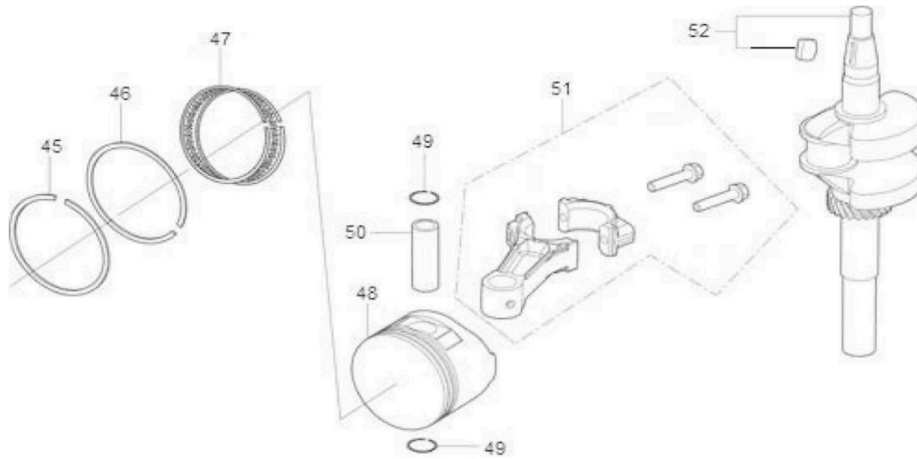

Id	Item #	Description	Quantity
45	1	RING- THE FIRST	45-0622
46	1	RING- THE SECOND	45-0623
47	1	RING SET- OIL	45-0624
48	1	PISTON	45-0625
49	2	PISTON- RING	45-0350
50	1	PIN- PISTON	45-0486
51	1	ROD- CONNECTING	45-0626
52	1	CRANKSHAFT ASSY	45-0627




## Valve Train//Camshaft Subassembly

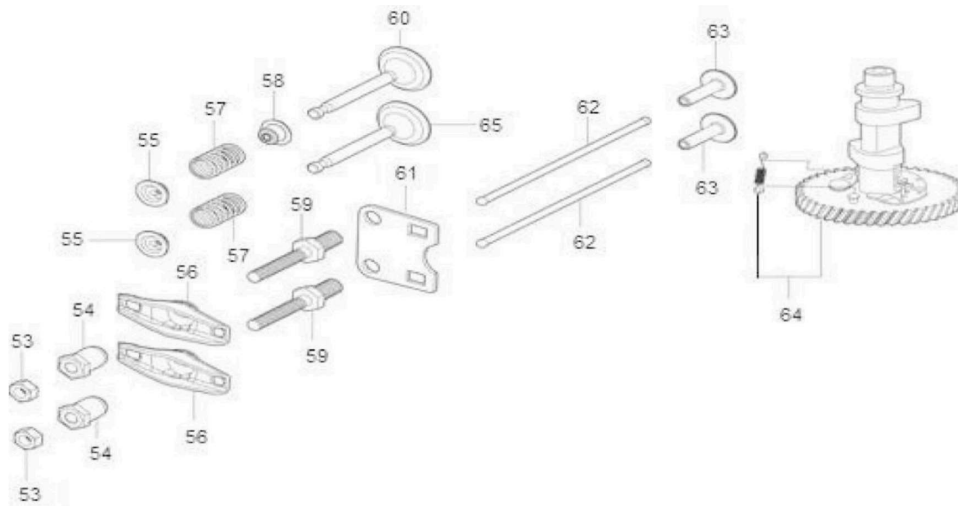

Id	Item #	Description	Quantity
53	45-0269	NUT- VALVE LOCK	2
54	45-0271	NUT- VALVE ADJUSTING	2
55	45-0628	RETAINER- VALVE SPRING	2
56	45-0500	VALVE- ROCKER	2
57	45-0501	VALVE- SPRING	2
58	45-0629	GUIDE- SEAL	1
59	45-0270	BOLT- VALVE ADJUSTING	2
60	45-0630	VALVE- INTAKE	1
61	45-0631	LIFTER STOPPER PLATE SUBASSY	1
62	45-0632	VALVE- LIFTER	2
63	45-0633	VALVE- TAPPET	2
64	45-0634	CAMSHAFT ASSY	1
65	45-0635	VALVE- EXHAUST	1




## Recoil Starter

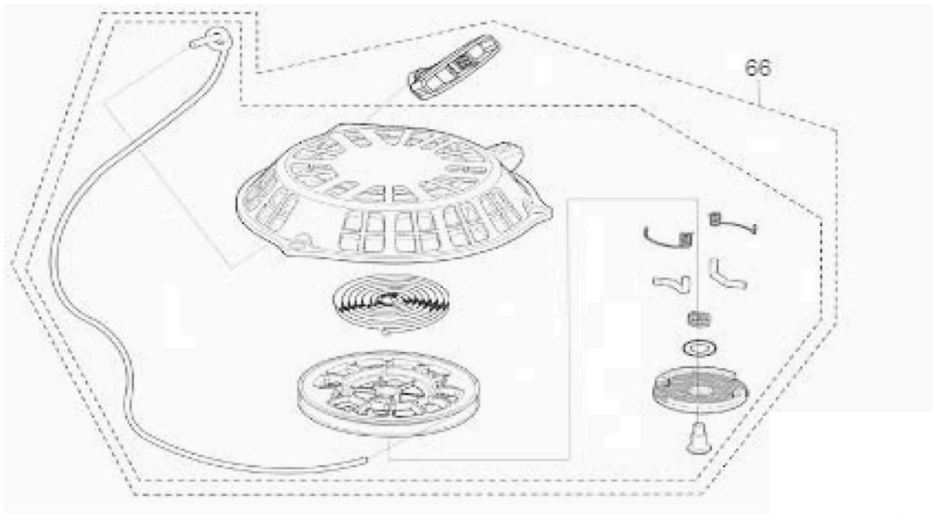

Id	Item #	Description	Quantity
66	45-0198	RECOIL STARTER ASSY	1




## Shrouds

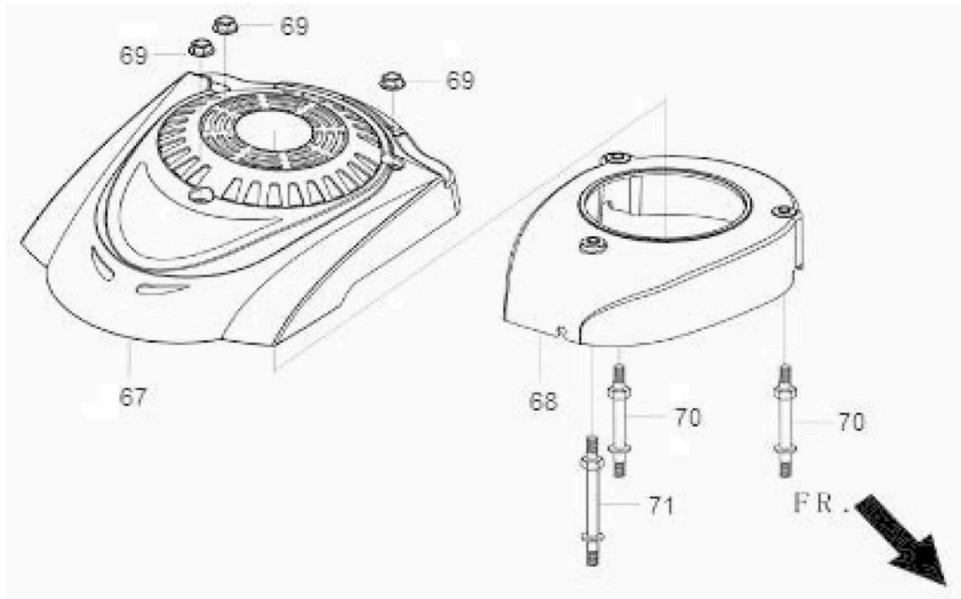

Id	Item #	Description	Quantity
67	45-0215	ENGINE HOUSING- 170CC	1
68	45-0636	SHROUD- INNER	1
69	45-0324	NUT- GOVERNOR SUPPORT	3
70	45-0637	STUD- SHROUD MOUNTING	2
71	45-0638	STUD- LONG- SHROUD MOUNTING	1




## Carburetor Assembly

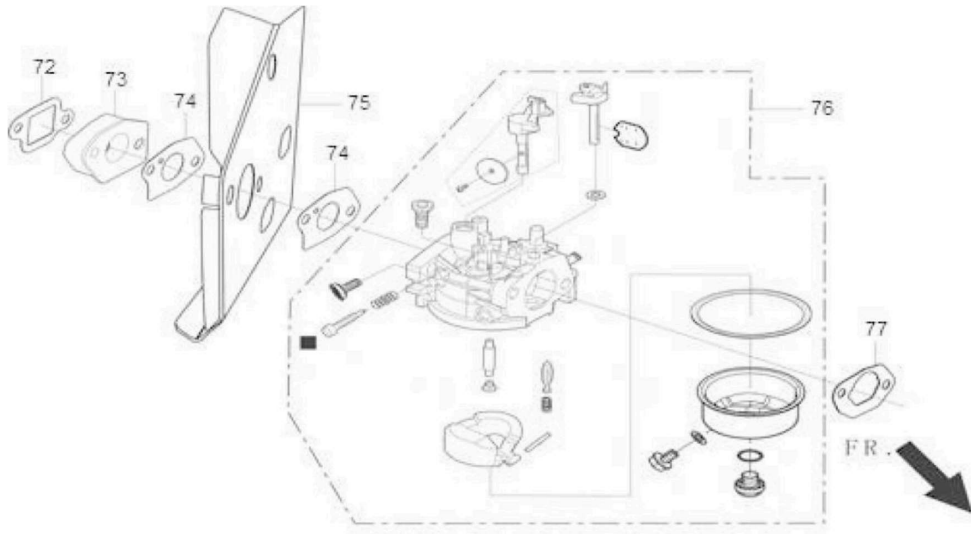

Id	Item #	Description	Quantity
72	45-0200	GASKET- INSULATOR PLATE	1
73	45-0639	PLATE- CARBURETOR INSULATOR	1
74	45-0201	GASKET- CARBURETOR	2
75	45-0640	GASKET- CARBURETOR INSULATOR	1
76	45-0216	CARBURETOR ASSY	1
77	45-0203	GASKET- AIR CLEANER	1




## Air Cleaner

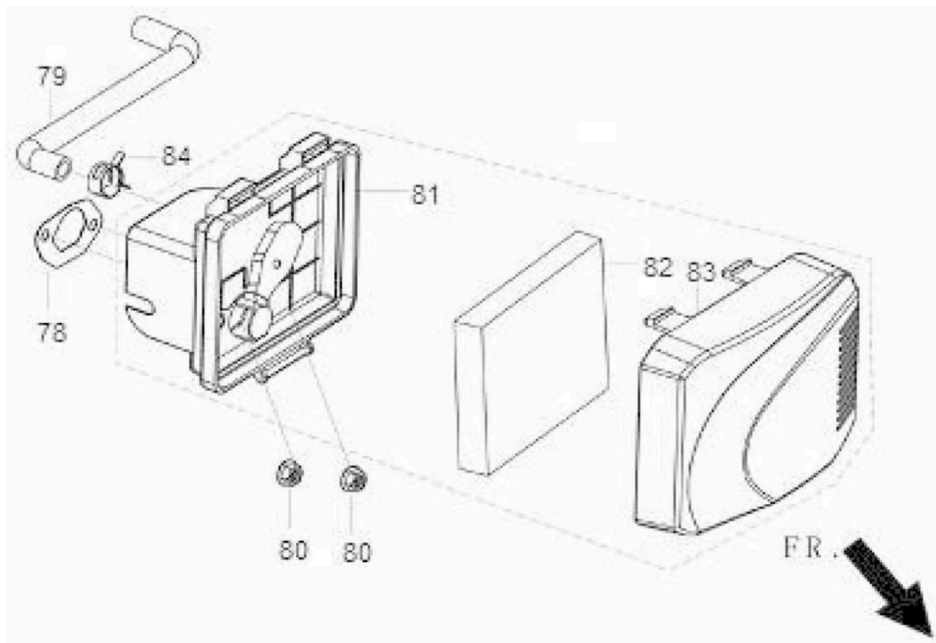

Id	Item #	Description	Quantity
78	45-0203	GASKET-AIR CLEANER	1
79	45-0204	BREATHER- TUBE	1
80	45-0324	NUT- GOVERNOR SUPPORT	2
81	45-0217	AIR CLEANER CASE- 170CC	1
82	45-0206	AIR FILTER ELEMENT- 170CC	1
83	45-0207	AIR CLEANER- CASE COVER	1
84	45-0641	CLIP- AIR CLEANER	1




## Muffler Assembly

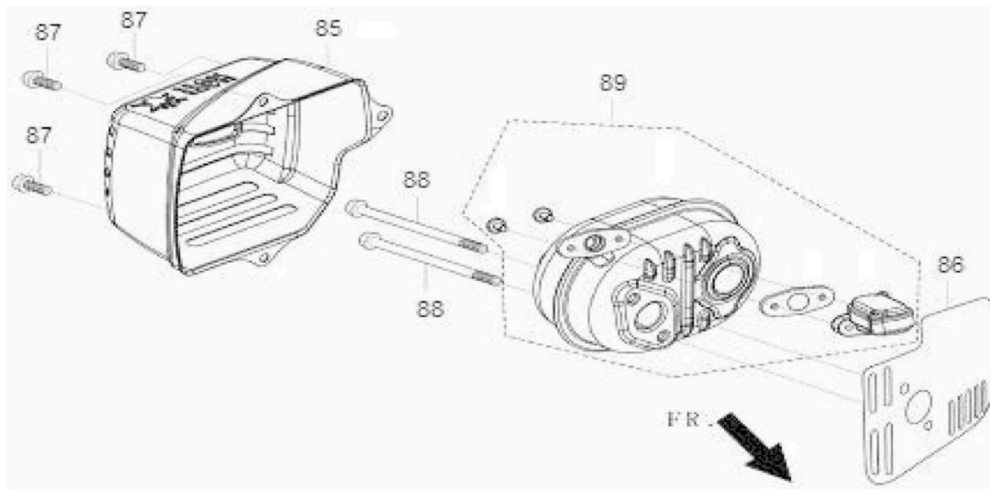

Id	Item #	Description	Quantity
85	45-0208	OUTER MUFFLER- COVER 170CC	1
86	45-0210	EXHAUST PORT GASKET	1
87	80-0060	BOLT- STOPPER BRACKET	3
88	45-0642	BOLT- MUFFLER	2
89	45-0218	MUFFLER ASSY	1



## Fuel Tank Assembly

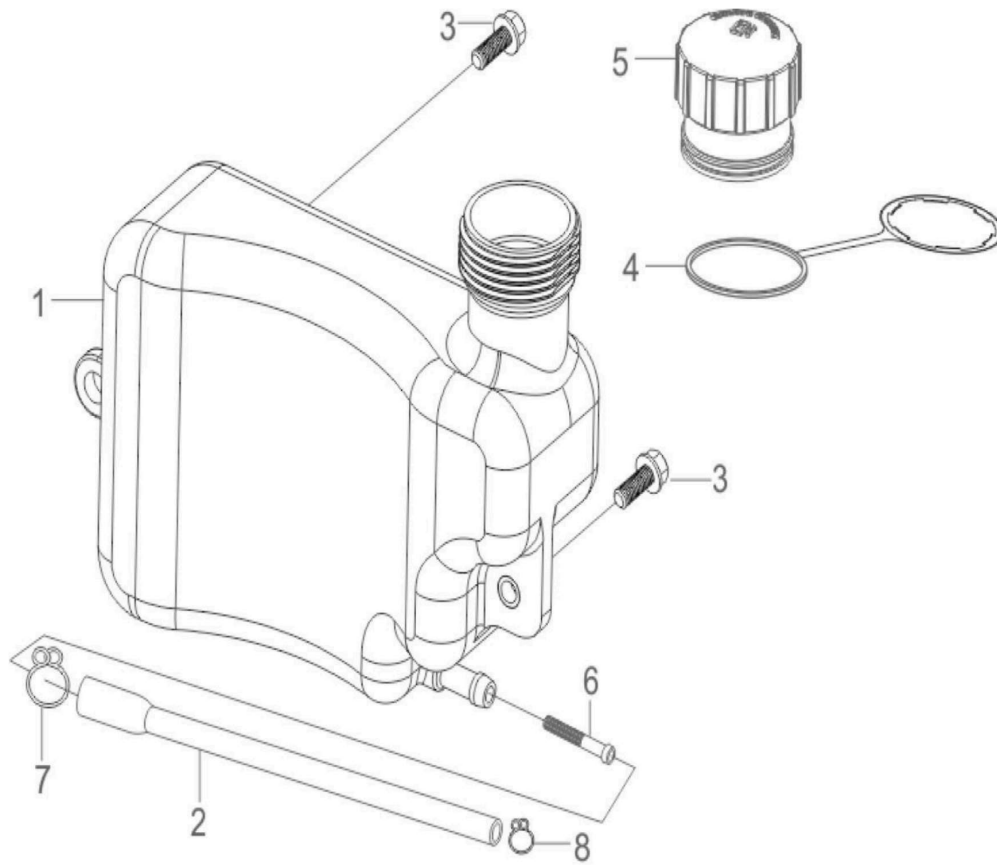


Id	Item #	Description	Quantity
1	45-0683	FUEL TANK - 170CC	1
2	45-0646	TUBE-FUEL	1
3	45-0643	BOLT-FUEL TANK	2
4	45-0689	FUEL TANK CHAIN	1
5	45-0690	FUEL TANK CAP- 170CC	1
6	45-0644	STRAINER-FUEL	1
7	45-0645	CLIP-HOSE	1
8	45-0338	CLAMP	1

<b>Id</b>	<b>Item #</b>	<b>Description</b>	<b>Quantity</b>
9	45-0675	BRACKET-FUEL TANK	1
10	45-0612	BRACKET-CRANKCASE FRONT	1
11	39-0248	PLUG	1



## Flywheel//Impeller/Starter Pulley/Ignition Coil

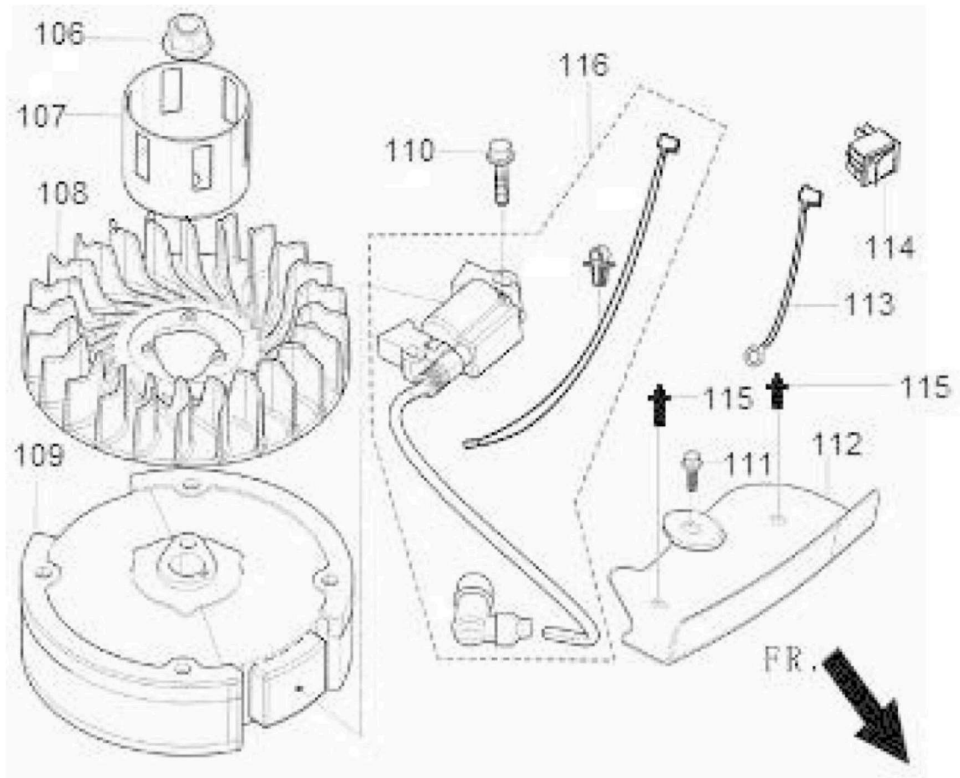


Id	Item #	Description	Quantity
106	45-0520	NUT- FLYWHEEL	1
107	45-0654	PULLE-STARTER	1
108	45-0655	IMPELLER	1
109	45-0656	FLYWHEEL SUBASSY	1
110	45-0657	BOLT- IGNITION COIL	1
111	80-0060	BOLT- STOPPER BRACKET	1
112	45-0658	SHIELD- FUEL TANK LEFT	1
113	45-0659	WIRE- GROUND	1
114	45-0212	ENGINE SWITCH- 170CC	1

<b>Id</b>	<b>Item #</b>	<b>Description</b>	<b>Quantity</b>
115	-	CLIP	2
116	45-0213	IGNITION COIL- 170CC	1



## Throttle Control Assembly

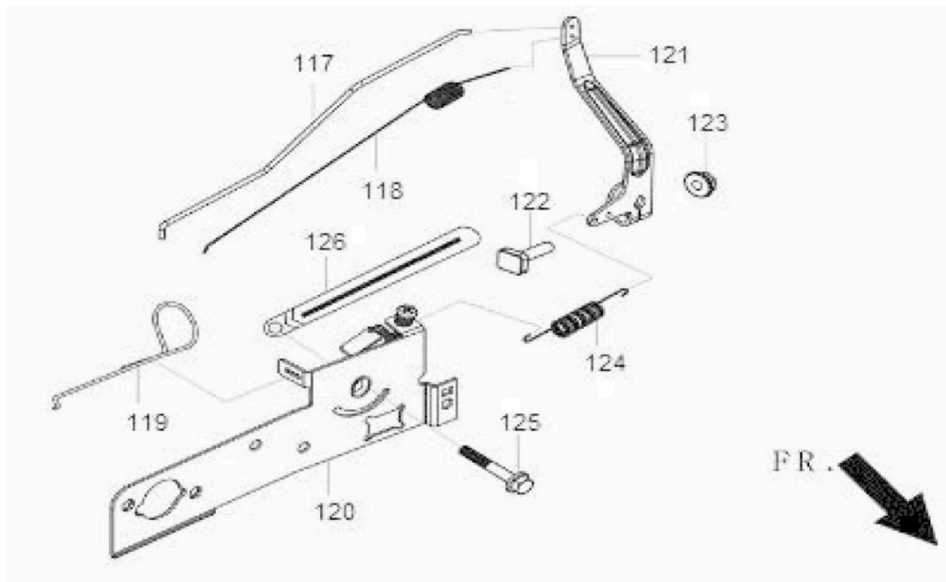

Id	Item #	Description	Quantity
117	45-0660	ROD- GOVERNOR	1
118	45-0661	SPRING- THROTTLE VALVE RETURN	1
119	45-0662	ROD- CHOKE	1
120	45-0663	THROTTLE CONTROL ASSY	1
121	45-0664	GOVERNOR SUPPORT ASSY	1
122	45-0282	BOLT- GOVERNOR SUPPORT	1
123	45-0324	NUT	1
124	45-0665	SPRING- GOVERNOR	1
125	45-0666	BOLT- GOVERNOR PLATE	1
126	45-0335	CLIP	1