




# Tethered Float Switch

INSTRUCTION AND OPERATING MANUAL

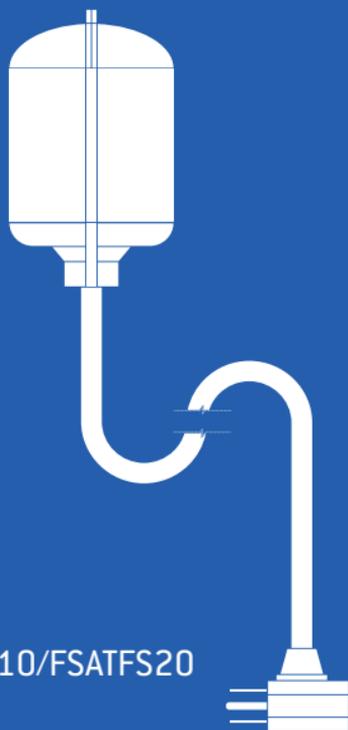

MODELS: FSATFS10/FSATFS20

FloodStop® Pump Tech Support: 1-833-786-7779

## GENERAL INFORMATION

To ensure safe and reliable operation, please carefully read this service and installation manual in its entirety before installing and/or using this product. Reasonable care and safe methods in according with sound plumbing practices should be strictly adhered to. Before installation, refer to and understand all relevant local plumbing and electrical codes.

**DO NOT THROW AWAY THIS MANUAL.** Keep it in a safe place so that you may refer to it for periodic service and maintenance.

**Always disconnect the power before servicing this product. Failure to do so may result in serious injury or death. Consult with a qualified electrician if you are unsure of the power source or cannot determine whether power has been properly disconnected.**

## SAFETY INFORMATION

Please review and follow the safety information listed below.






### **WARNING**

- Risk of electric shock. Always disconnect power before servicing.
- Do not make any electrical connections while standing on a wet surface or with wet hands.
- Electrical connections and wiring for a pump installation should only be made by qualified personnel.
- This equipment is equipped with an approved 3-conductor cord and 3-prong grounding-type plug, and is only for use with a grounded 110/120VAC receptacle.
- DO NOT bypass grounding wires or remove the ground prong from the plug.
- DO NOT use an extension cord.
- NEVER attempt to open or service this unit.

## INSTALLATION

1. Wrap the hose clamp around the discharge pipe. Use a screwdriver to tighten and secure the hose clamp.
2. Feed the tether cord through the cord bracket. Determine the appropriate tether length. The tether length may vary depending on the product or application specifications.
3. Using a screwdriver, tighten the cord bracket with the screw located on the top of the bracket. Do not overtighten.
4. Connect the Tether Float Switch power cord to a 120VAC outlet. Then, connect the pump power cord into the Tether Float Switch piggyback receptacle.
5. Test the pump for proper operation by lifting the Tether Float Switch bulb past a 45 degree angle. Release the bulb to its resting position after 3 seconds of proper operation.

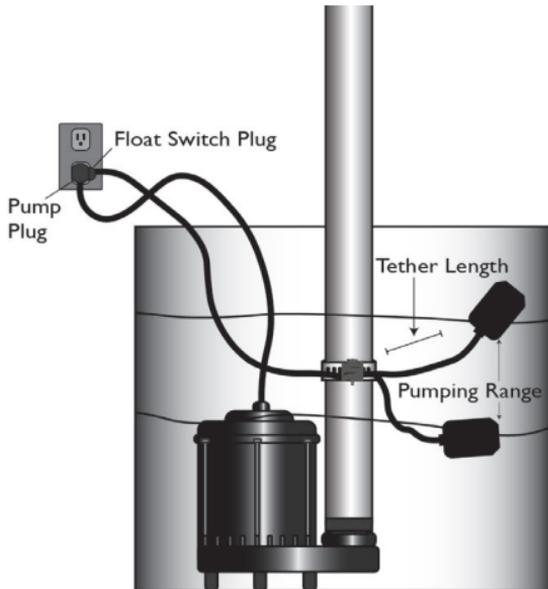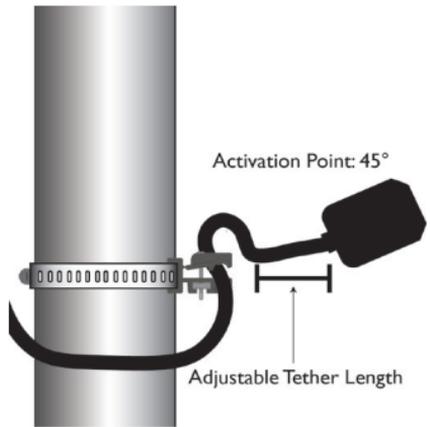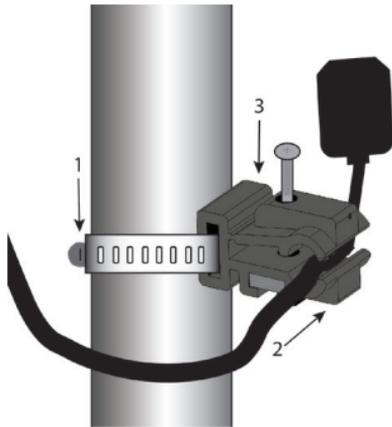

## SPECIFICATIONS

Amp Rating	10
Input Voltage	120VAC
Output Voltage	120VAC
Circuit	Normally Open
Minimum Tether Length	3-1/2"
Maximum Tether Length	22"
Minimum Float Range	8"
Maximum Float Range	36"

## TERMS AND CONDITIONS OF SALE

Orders for this product are expressly made conditional on buyer's assent to company's terms and conditions of sale, which can be found at <https://ipscorp.com/pdf/ipmdp-tc.pdf>, or are available upon request by mail. Any terms and conditions in any of buyer's documents that are inconsistent with or add to seller's terms and conditions of sale are hereby rejected and are not binding upon company.



<https://ipscorp.com/pdf/ipmdp-tc.pdf>



**IPS**  
CORPORATION

500 Distribution Parkway  
Collierville, TN 38017  
Phone: 800-888-8312  
Fax: 901-853-5008  
[www.ipscorp.com](http://www.ipscorp.com)

78501-02