

# ASSEMBLING INSTRUCTIONS

UTV PUSH FRAME

Nº CLIENT

**WZ-AUF-PF**

UTV BLADES (66" & 72")

Nº CLIENT

**WZ-AUF-PB66 (66)**


**WZ-AUF-PB72 (72)**

**WARNING** (to avoid injury to others and to yourself):

- Read this entire leaflet, as well as the User's manual of your vehicle.
- Always wear a proper helmet, safety glasses and protective footwear when using your vehicle.
- Keep a safe distance from all people or vehicles when you are in motion.

**IMPORTANT:** The installation of the plow system on the vehicle requires a mounting plate kit. The mounting plate must be assembled before. See the corresponding instruction for your vehicle.

UTV PUSH FRAME BOM

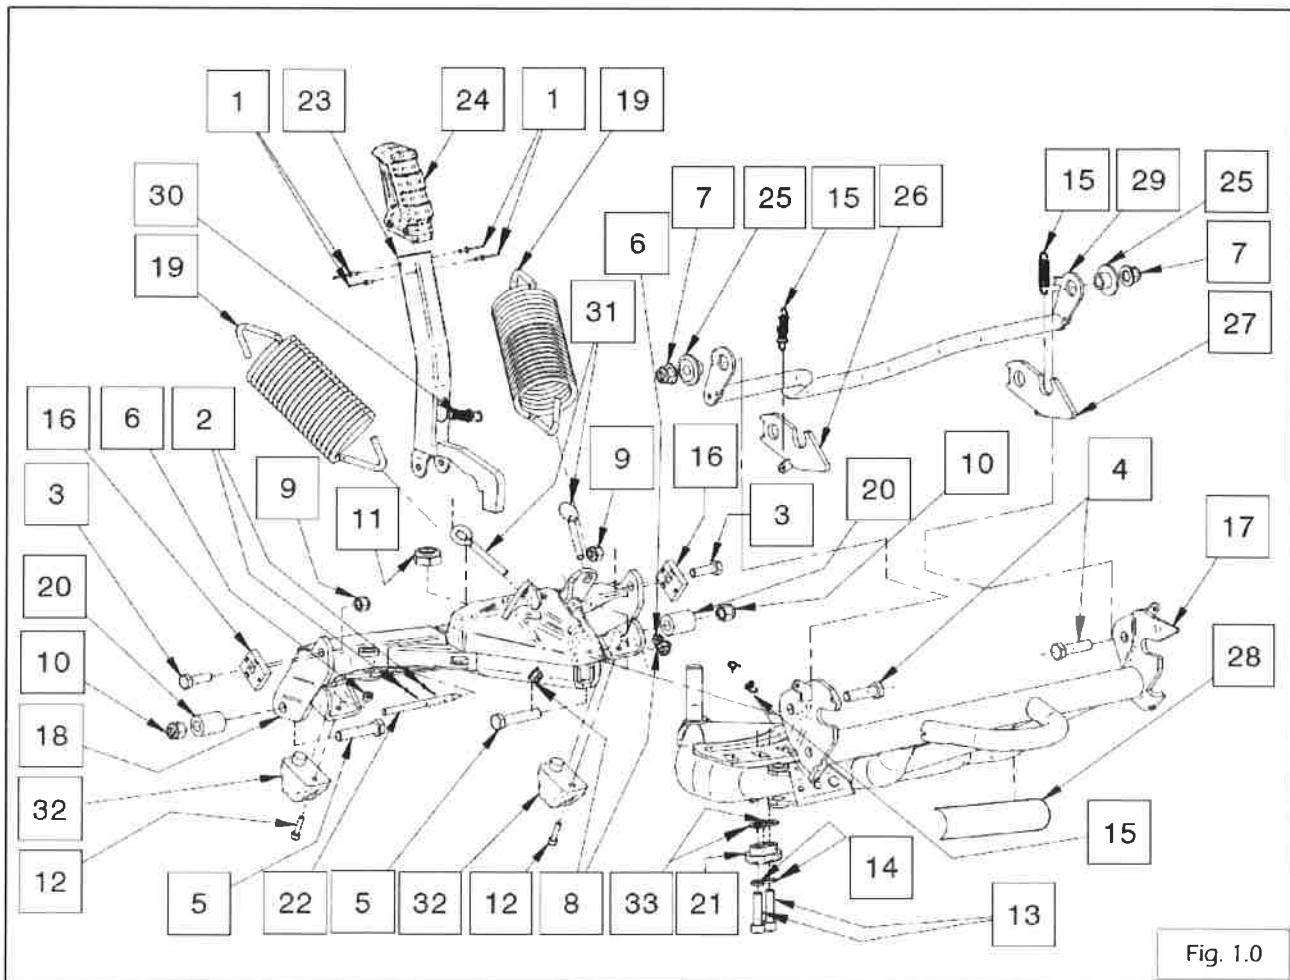

# ASSEMBLING INSTRUCTIONS

**UTV PUSH FRAME**

Nº CLIENT

**WZ-AUF-PF**

**UTV BLADES (66" & 72")**

Nº CLIENT

**WZ-AUF-PB66 (66)**

**WZ-AUF-PB72 (72)**

REF.	DESCRIPTION	QTY	SERVICE KIT
1	Rivet dia. 3.2mm	4	WZ-AUF-PFAH
2	Cotter pin dia 1.5 X 15mm	2	WZ-AUF-PFK
3	Hexagonal bolt M10-1.5 X 35	2	WZ-AUF-PFK
4	Hexagonal bolt M12-1.75 X 45	2	WZ-AUF-PFHR
5	Hexagonal bolt M12-1.75 X 60	2	WZ-AUF-PFK
6	Hexagonal nylon nut M6-1	2	WZ-AUF-PFBS
7	Hexagonal nylon nut M12-1.75	2	WZ-AUF-PFHR
8	Hexagonal nylon nut M8-1.25	2	WZ-ACF-PFEB
9	Hexagonal nylon nut M10-1.5	2	WZ-AUF-PFK
10	Hexagonal nylon nut M12-1.75	2	WZ-AUF-PFK
11	Thin hexagonal nylon nut M20-2.5	1	WZ-AUF-PFK
12	Allen cylindrical hollow bolt M6-1 X 25	2	WZ-AUF-PFBS
13	Allen cylindrical hollow bolt M10-1.5 X 40	2	WZ-AUF-PFK
14	Spring washer M10	2	WZ-AUF-PFK
15	Spring dia. 13mm	3	WZ-AUF-PFHR
16	Adjustment bloc (4 positions)	2	WZ-AUF-PFK
17	Push frame	1	N/A
18	Push frame pivot	1	N/A
19	Spring dia. 80mm	2	WZ-ACF-PFSS
20	Pivot sleeve	2	WZ-AUF-PFK
21	Sliding guide	1	WZ-AUF-PFK
22	Angulation handle pivot	1	WZ-AUF-PFK
23	Angulation handle (Lock)	1	WZ-AUF-PFAH
24	Plastic handle	1	WZ-AUF-PFAH
25	Sleeve hook	2	WZ-AUF-PFHR
26	Left hook	1	WZ-AUF-PFHR
27	Right hook	1	WZ-AUF-PFHR
28	Decal	1	N/A
29	Lock handle	1	WZ-AUF-PFHR
30	Spring dia. 15mm	1	WZ-AUF-PFAH
31	Eye bolt M8-1.25 X dia. 10 X 60	2	WZ-ACF-PFEB
32	Stopper	2	WZ-AUF-PFBS
33	Washer M10	2	WZ-AUF-PFK

# ASSEMBLING INSTRUCTIONS

UTV PUSH FRAME

N° CLIENT

**WZ-AUF-PF**

UTV BLADES (66" & 72")

N° CLIENT

**WZ-AUF-PB66 (66)**

**WZ-AUF-PB72 (72)**

SERVICE KITS ; UTV PUSH FRAME

WZ-ACF-PFSS : SPRING KIT 	WZ-ACF-PFEB : EYE BOLT KIT 
WZ-AUF-PFHK : HARDWARE KIT 	WZ-AUF-PFAH : ANGULATION HANDLE KIT 
WZ-AUF-PFHR : HOOK AND HANDLE LOCK KIT 	WZ-AUF-PFBS : STOPPER KIT 

# ASSEMBLING INSTRUCTIONS

**UTV PUSH FRAME**

Nº CLIENT

**WZ-AUF-PF**



**UTV BLADES (66" & 72")**

Nº CLIENT

**WZ-AUF-PB66 (66)**

**WZ-AUF-PB72 (72)**

BOM FOR 66" & 72" BLADES

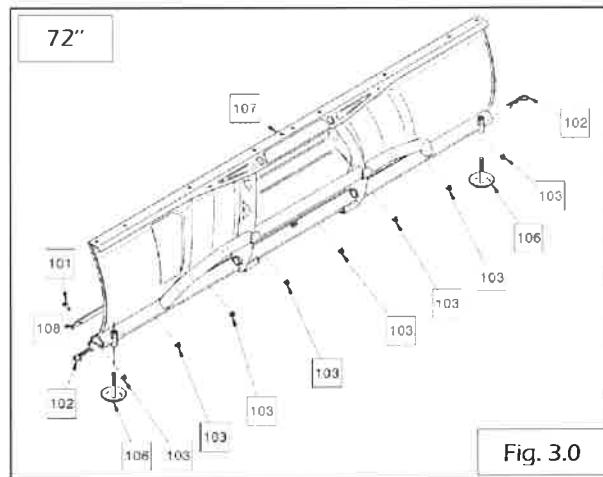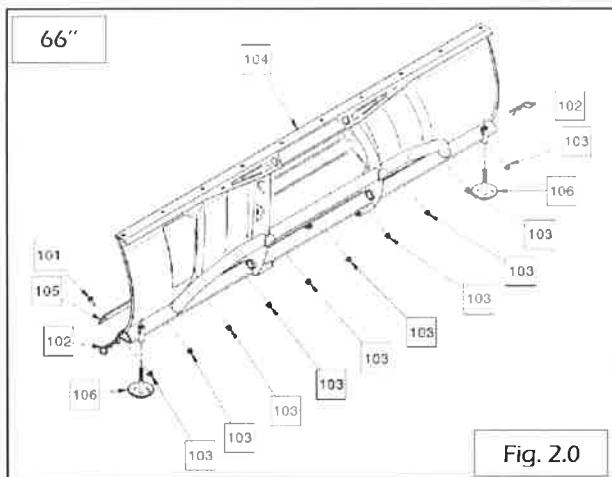

66"				
REF.	DESCRIPTION	QTY	SERVICE KIT	
101	Carriage bolt M 8 - 1.25 X 25	10	WZ-AUF-WB-66	
102	«R» shaped pin	2	WZ-ACF-PBSS	
103	Nylon nut M 8 - 1.25	10	WZ-AUF-WB-66	
104	Blade 66"	1	N/A	
105	Wear bar 66"	1	WZ-AUF-WB-66	
106	Plow shoes	2	WZ-ACF-PBSS	

72"				
REF.	DESCRIPTION	QTY	SERVICE KIT	
101	Carriage bolt M 8 - 1.25 X 25	8	WZ-AUF-WB-72	
102	«R» shaped pin	2	WZ-ACF-PBSS	
103	Nylon nut M 8 - 1.25	8	WZ-AUF-WB-72	
106	Plow shoes	2	WZ-ACF-PBSS	
107	Blade 72"	1	N/A	
108	Wear bar 72"	1	WZ-AUF-WB-72	

# ASSEMBLING INSTRUCTIONS

UTV PUSH FRAME

Nº CLIENT

**WZ-AUF-PF**

UTV BLADES (66" & 72")


Nº CLIENT

**WZ-AUF-PB66 (66)**


**WZ-AUF-PB72 (72)**

SERVICE KITS ; 66" & 72" UTV BLADES


WZ-AUF-WB-66 : 66" WEAR BAR KIT

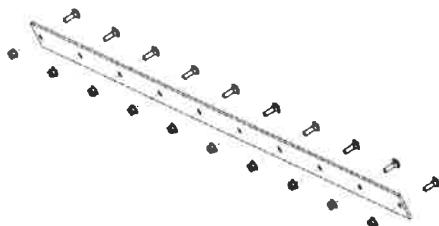

WZ-AUF-WB-72 : 72" WEAR BAR KIT

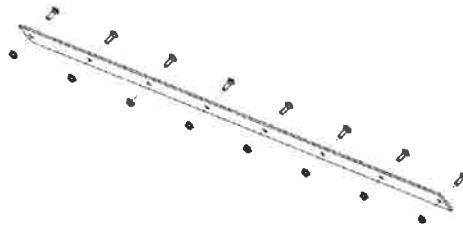

WZ-ACF-PBSS : PLOW SHOE KIT

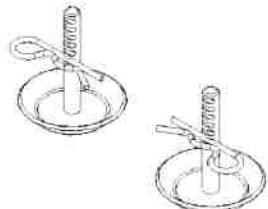

# ASSEMBLING INSTRUCTIONS

UTV PUSH FRAME

N° CLIENT

WZ-AUF-PF

UTV BLADES (66" & 72")

N° CLIENT

WZ-AUF-PB66 (66)

WZ-AUF-PB72 (72)

## 1. BLADE INSTALLATION (66" & 72") (Fig 4.0)

- 1.1. Put the blade [104/107] face down on the ground or on a table.
- 1.2. Position the pivot [18] of the push frame [17] in the middle of the blade [104/107].

ATTENTION : There is a risk of your fingers jamming due to the pivot [18] on which the push frame [17] is attached and free of movement

- 1.3. Insert the pivot sleeves [20] in the holes of the blade [104/107].
- 1.4. Insert the bolts M12-1.75x60 [5] in the holes of the pivot [18] and through the sleeves [20].
- 1.5. Assemble the nylon nuts M12-1.75 [10] and tighten.

IMPORTANT NOTE: Assemble the nuts so that they are on the exterior side to prevent damage in case of impact.

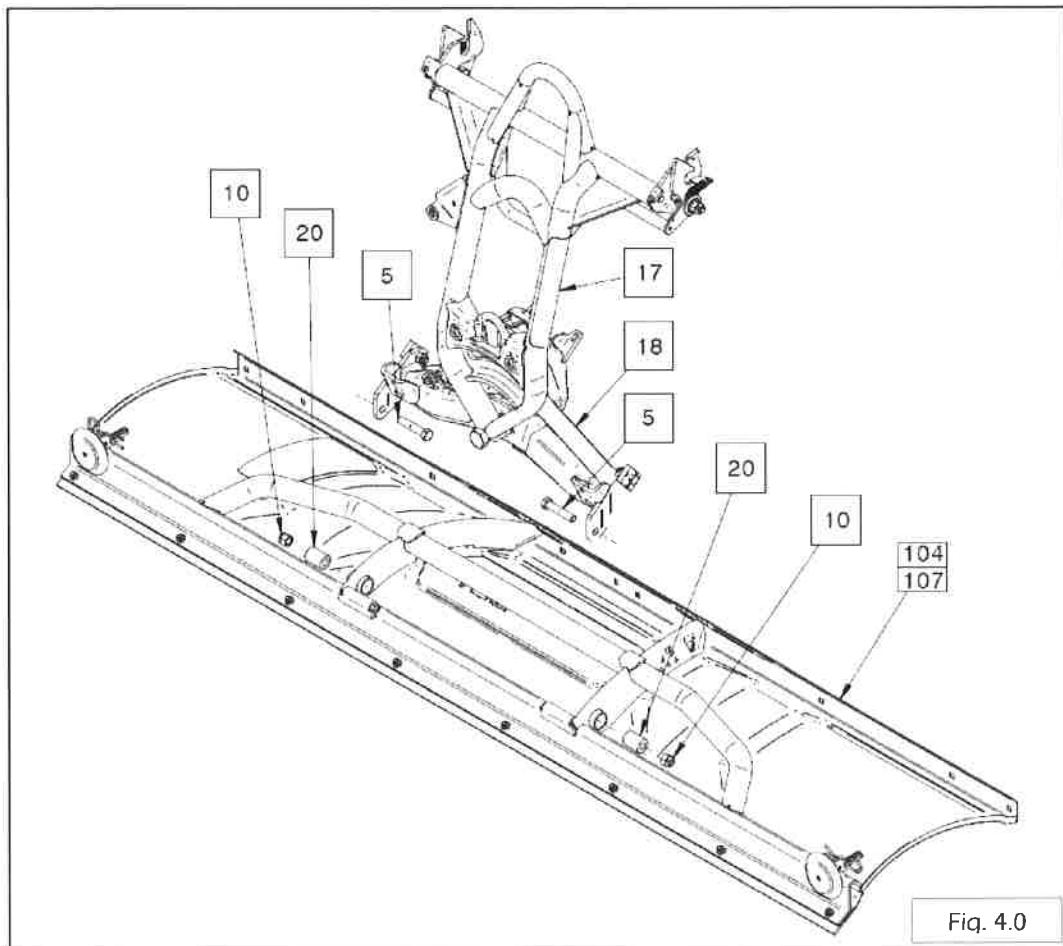


Fig. 4.0

# ASSEMBLING INSTRUCTIONS

UTV PUSH FRAME

N° CLIENT

**WZ-AUF-PF**

UTV BLADES (66" & 72")


N° CLIENT

**WZ-AUF-PB66 (66)**

**WZ-AUF-PB72 (72)**

## BLADE INSTALLATION (66" & 72") (CONTINUATION) (Fig 4.1)

- 1.6. Install the springs **19** on the blade **104/107**.
- 1.7. Insert the eye bolts **31** in the holes of the pivot **18** of the push frame **17**.
- 1.8. Installer l'autre extrémité des ressorts **19** dans les boulons à œil **31**.
- 1.9. Assemble the nuts M8-1.25 **8** and tighten until there is a minimum tension in the springs; the coils must not come off.

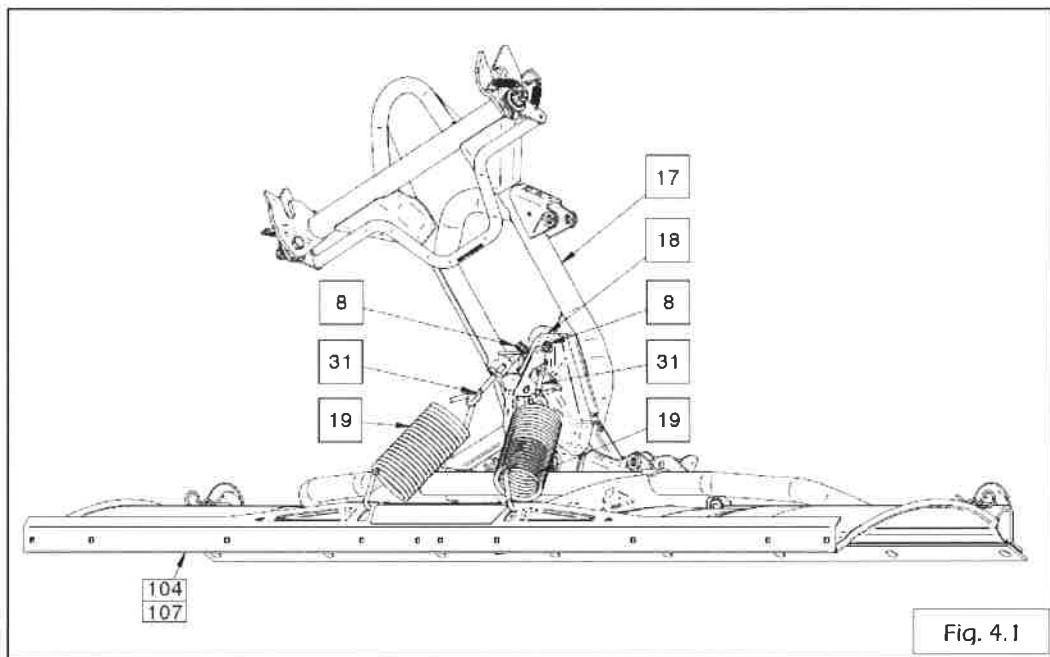

The blade **104/107** designed to flip forward when it hits an obstacle (Fig. 4.2). Once passed the obstacle, the blade will reposition itself on its own. The tension in the springs **19** can be increased by tightening the nylon nuts M8-1.25 **8**. For less tension release the nut.

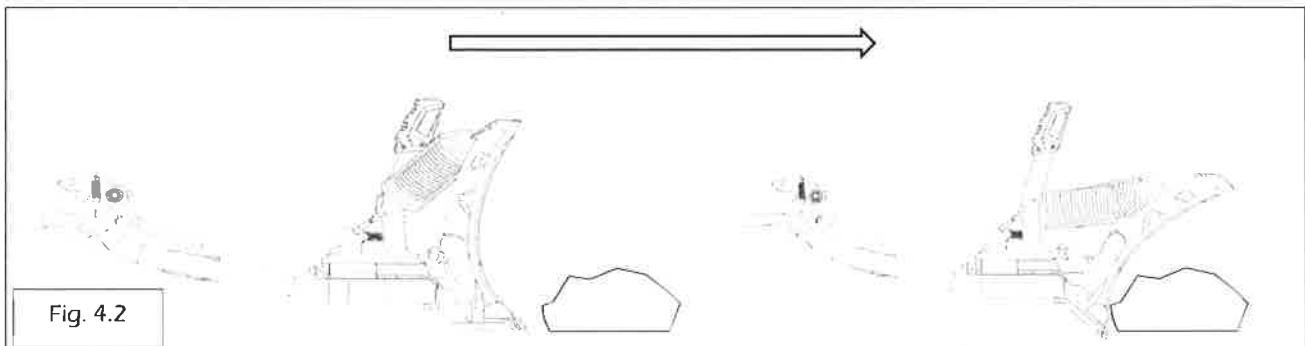


Fig. 4.2

# ASSEMBLING INSTRUCTIONS

UTV PUSH FRAME

N° CLIENT

WZ-AUF-PF

UTV BLADES (66" & 72")

N° CLIENT


WZ-AUF-PB66 (66)

WZ-AUF-PB72 (72)

## 2. INSTALLATION OF THE ANGULATION HANDLE (Fig. 5.0)

- 2.1. Before installing the angulation handle [23] on the pivot [18], insert the spring [30] in the hole of the handle [23] (Fig.5.1).
- 2.2. Align the holes of the handle [23] with the holes of the pivot [18] (Fig. 5.2).
- 2.3. Assemble the other end of the spring [30] into the holes of the pivot [18] (Fig 5.3).
- 2.4. Insert the pivot handle [22] in the opening on the side of the pivot [18] and let it go through the 4 holes of the pivot [18] and of the handle [23] (Fig. 5.4).
- 2.5. Then, under the pivot [18], insert the cotter pins Ø1.5 x 15mm [2] in the holes of the pivot handle [22] (Fig. 5.5).

IMPORTANT NOTE : Each end of the cotter pins [2] must be folded so that they stay in place.

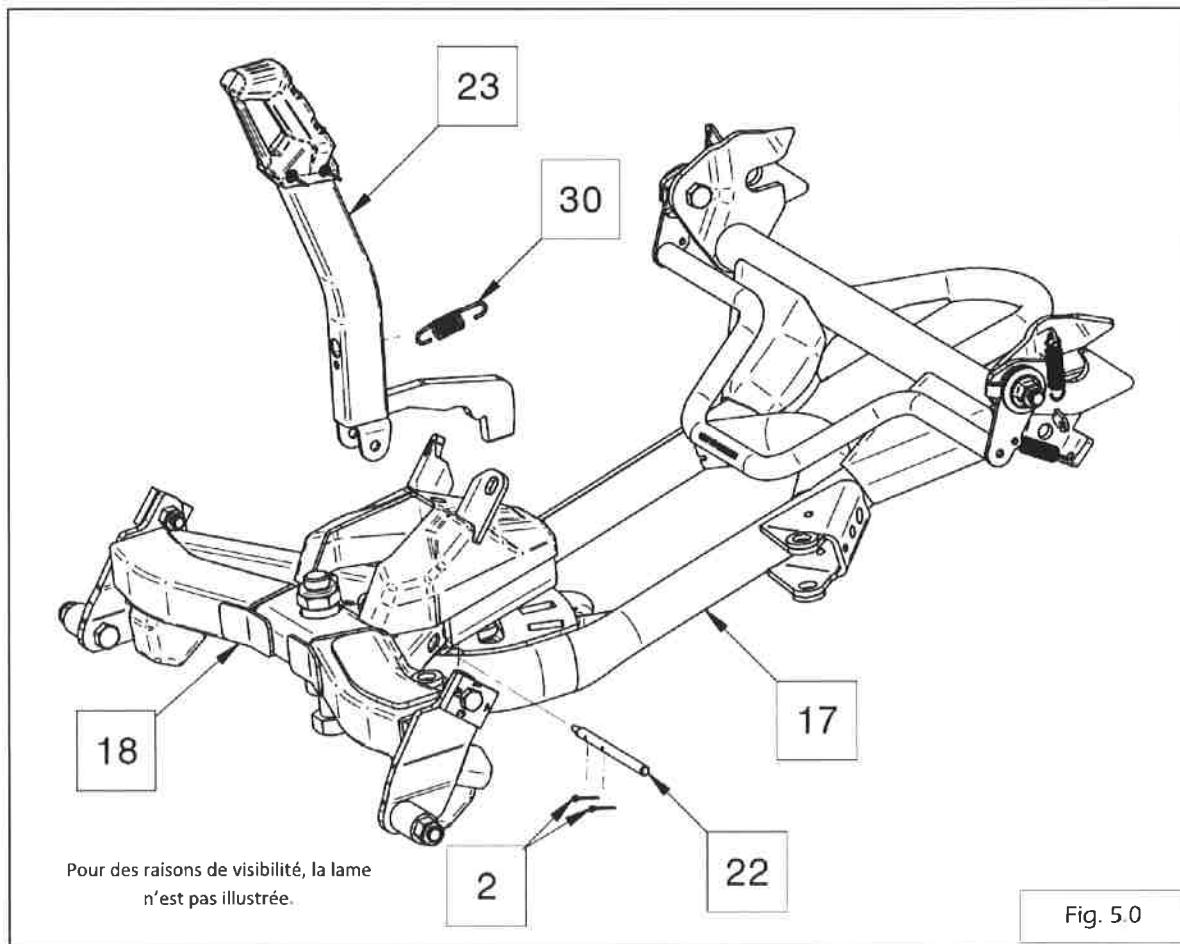

# ASSEMBLING INSTRUCTIONS

UTV PUSH FRAME

Nº CLIENT

**WZ-AUF-PF**




UTV BLADES (66" & 72")

Nº CLIENT

**WZ-AUF-PB66 (66)**

**WZ-AUF-PB72 (72)**

## INSTALLATION OF THE HANDLE (CONTINUATION)

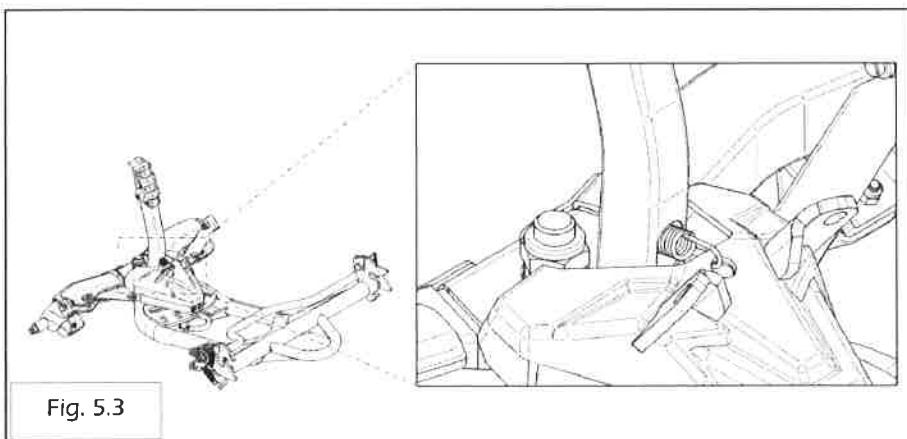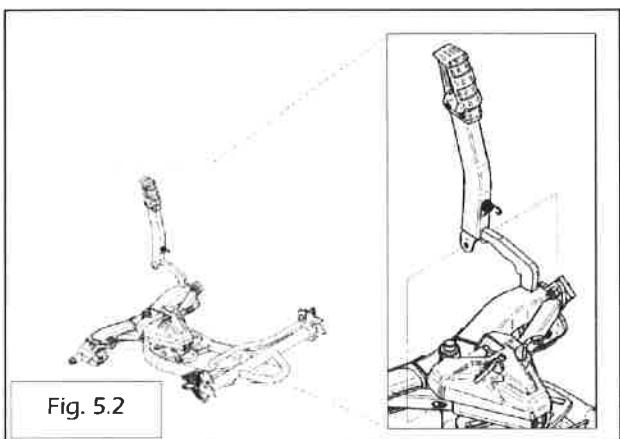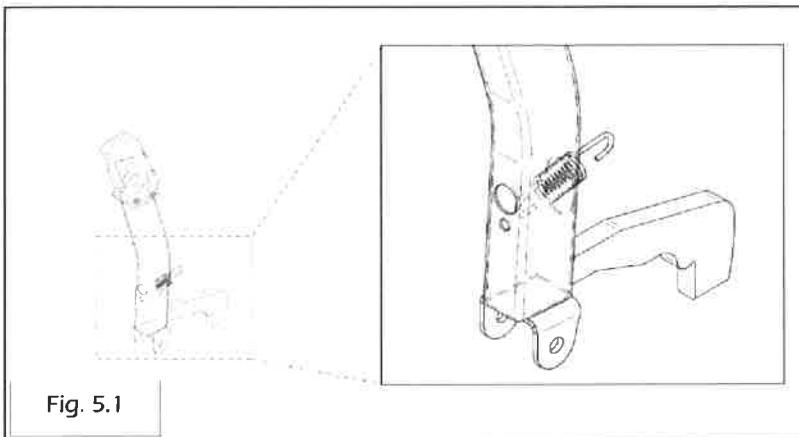

# ASSEMBLING INSTRUCTIONS

UTV PUSH FRAME

Nº CLIENT

WZ-AUF-PF



UTV BLADES (66" & 72")

Nº CLIENT

WZ-AUF-PB66 (66)

WZ-AUF-PB72 (72)

## INSTALLATION OF THE HANDLE (CONTINUATION)

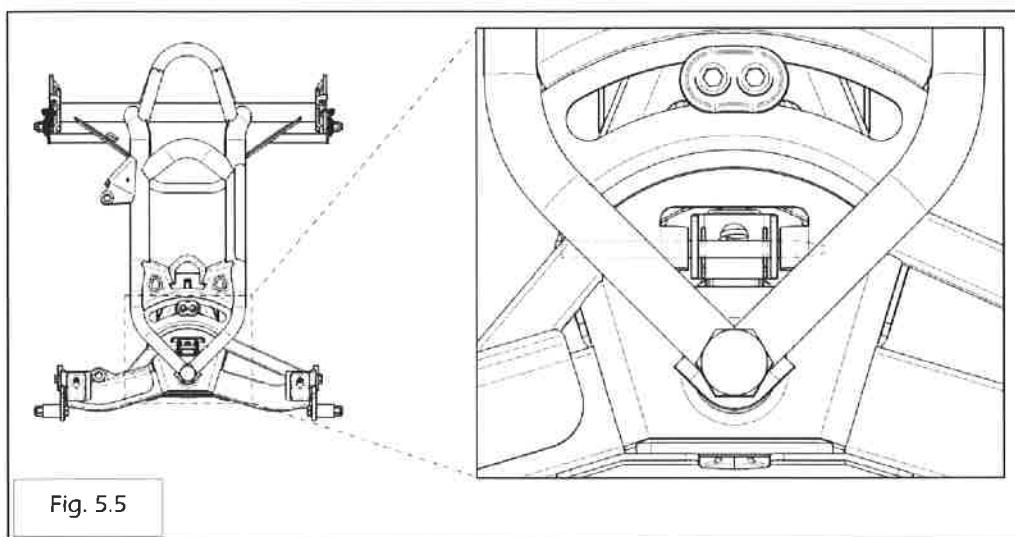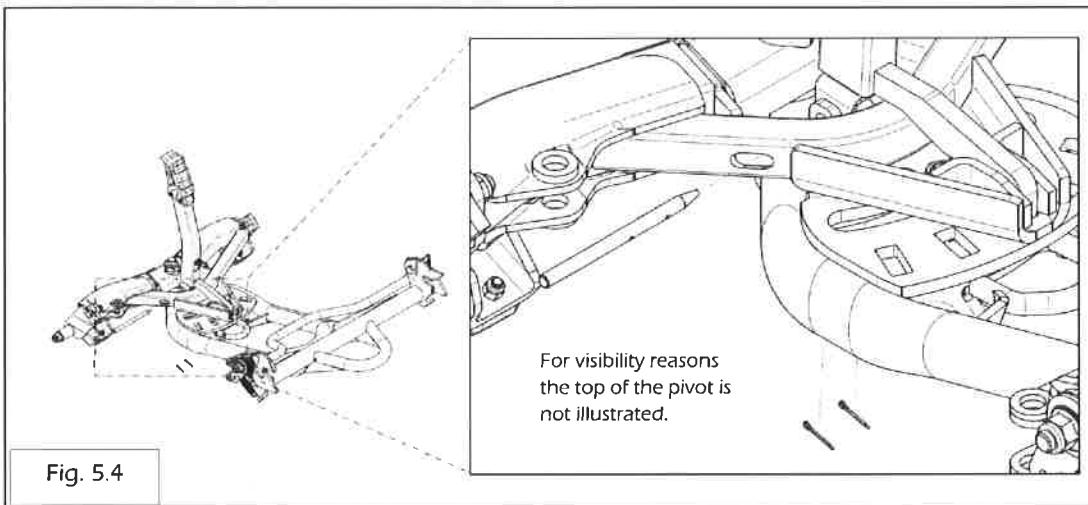

# ASSEMBLING INSTRUCTIONS

UTV PUSH FRAME

Nº CLIENT

**WZ-AUF-PF**

UTV BLADES (66" & 72")



Nº CLIENT

**WZ-AUF-PB66 (66)**

**WZ-AUF-PB72 (72)**

## 3. INSTALLATION OF THE PLOW SYSTEM ON THE VEHICLE

- 3.1. Raise the rear of the plow system by grabbing the lock handle [29]. This will allow both hooks [26/27] to open up at same time (Fig. 6.1).
- 3.2. Approach the plow system until the U-plates of the push frame [17] are completely inserted in the rods of vehicle's mount plate (Fig. 6.2).
- 3.3. Release the lock handle [29] and make sure both hooks [26/27] are completely closed on the rods of the mount plate (Fig. 6.3).

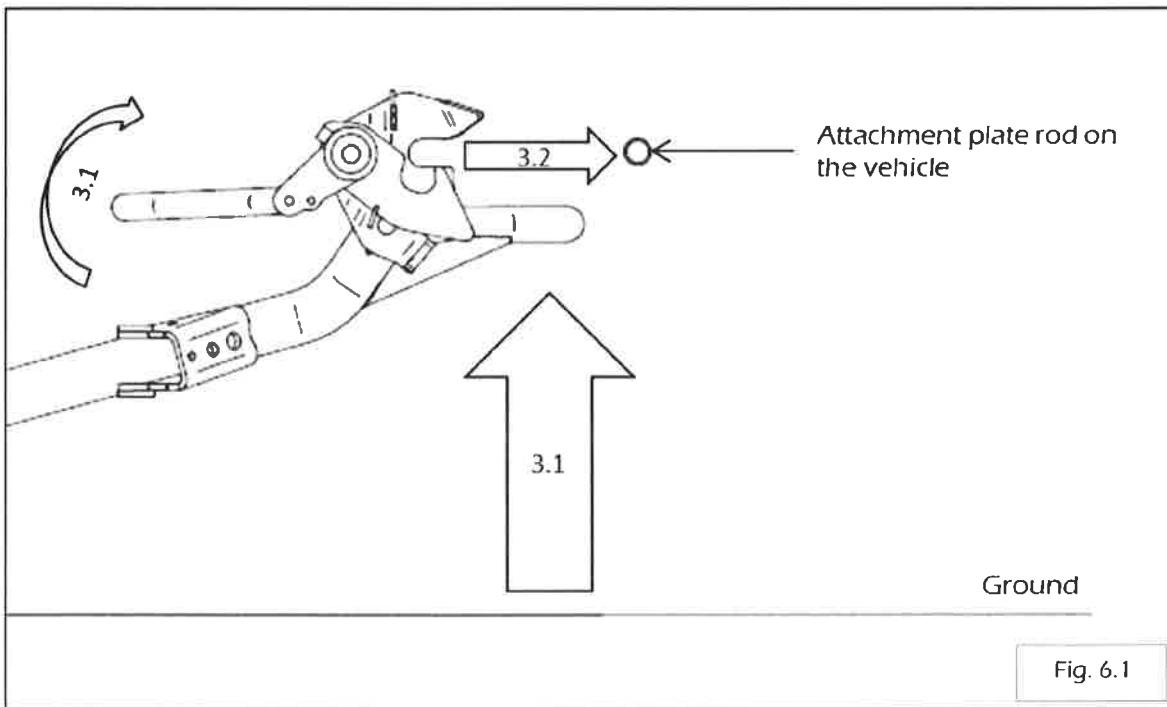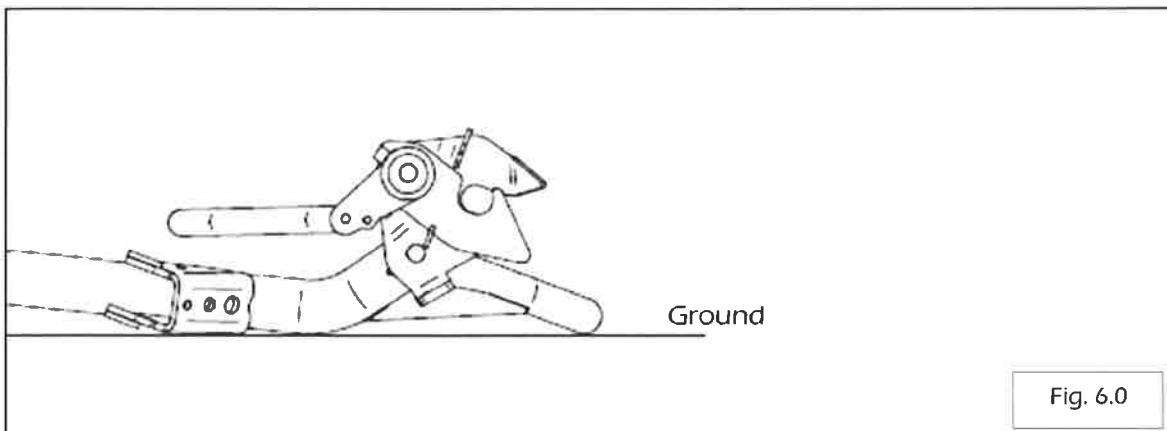

# ASSEMBLING INSTRUCTIONS

UTV PUSH FRAME

Nº CLIENT

WZ-AUF-PF



UTV BLADES (66" & 72")

Nº CLIENT

WZ-AUF-PB66 (66)

WZ-AUF-PB72 (72)

INSTALLATION OF THE PLOW SYSTEM ON THE VEHICLE (CONTINUATION)

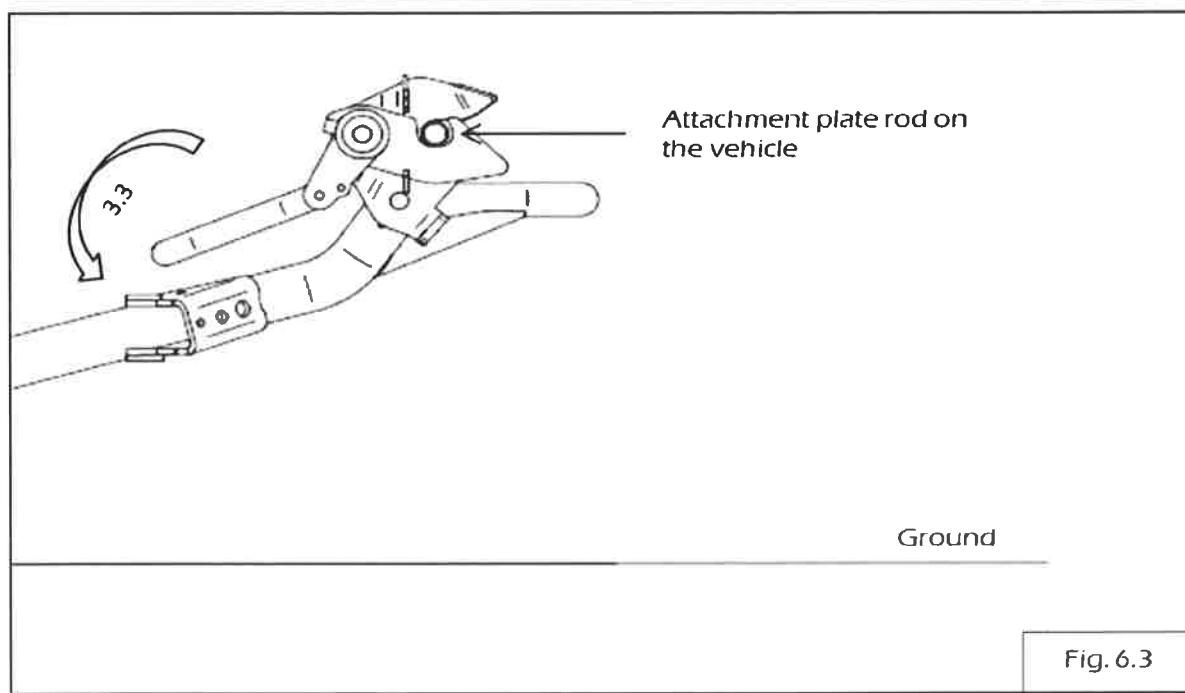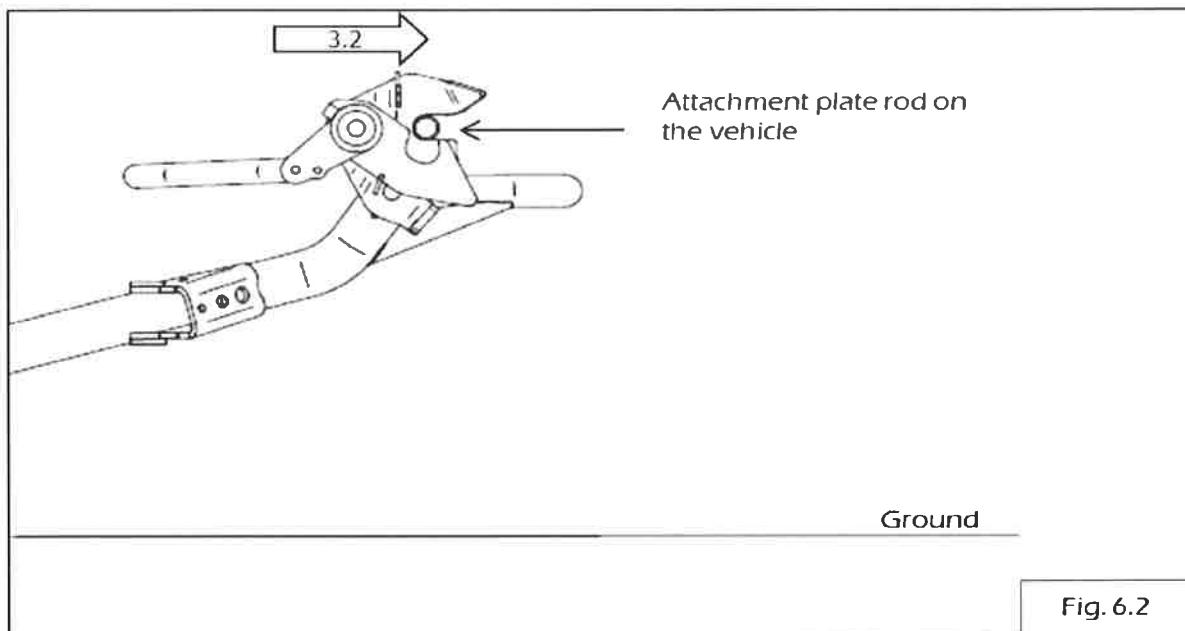

# ASSEMBLING INSTRUCTIONS

UTV PUSH FRAME

N° CLIENT

**WZ-AUF-PF**

UTV BLADES (66" & 72")

N° CLIENT

**WZ-AUF-PB66 (66)**

**WZ-AUF-PB72 (72)**

## 4. ADJUSTEMENT OF THE BLADE ANGLE (Fig. 7.0)


- 4.1. Raise the plow system with the vehicle's winch so that it can rotate freely.

**WARNING :** Breakage of the winch cable may occur at any time. Never leave your feet under the blade in case the plow system falls. This could cause serious injury.

- 4.2. Pull the handle [23] towards the blade [104/107].

- 4.3. Rotate the blade [104/107] on desired side.

- 4.4. Release handle [23] and make sure that the lock fits into one of the holes of the angulation handle of the push frame [17].

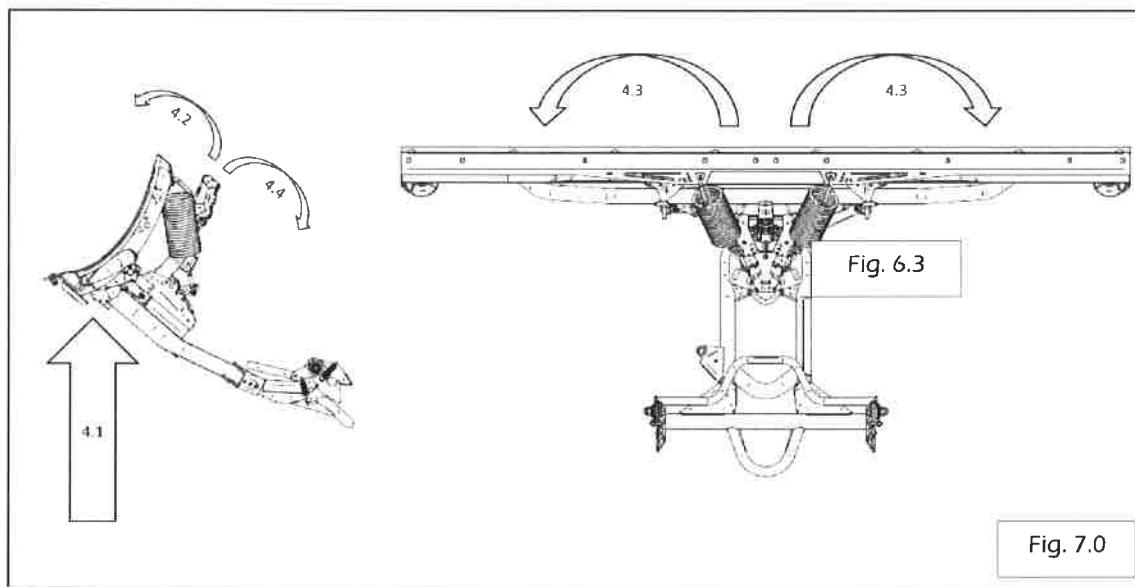

## 5. ADJUSTMENT OF SETTING BLOCKS (ATTACK ANGLE)

- 5.1. Remove the springs [19] in order to release the tension on the blade [104/107].

- 5.2. Loosen the bolts M10-1.5 x 30 [3] and the nuts M10-1.5 [9] on each side so that the setting blocks [16] may rotate freely.

- 5.3. Push the top of the blade [104/107] and rotate the setting blocks [16] to the desired position (1-2-3-4).

- 5.4. Tighten the bolts M10-1.5 x 30 [3] and the nuts M10-1.5 [9] and put the springs [19] back in place (see instructions 1.6 to 1.9).

**NOTE :** Setting blocks are at position 2 by default.

#1 → less aggressive attack angle

#4 → more aggressive attack angle