


CLOSET FLANGE STABILIZER

Specifications:

Furnish and install Water-Tite closet flange stabilizer to eliminate water closet rocking. Optimal for concrete slab or wooden floors. Product shall be Water-Tite product code checked below as

manufactured by IPS Corporation.



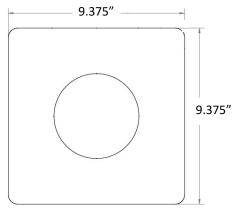


Installation Instructions:




Mark and cut pipe so that top of pipe is slightly above floor level. Use the base of the stabilizer to measure proper pipe height.



Push stabilizer flush to floor.

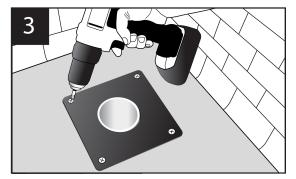

Secure stabilizer to sub floor with screws or nails.

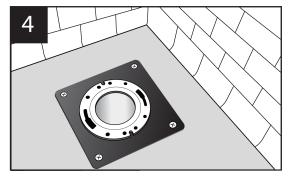

Install closet flange on top of Closet Flange Stabilizer.

	1	Product Code#	Model#	Product Description	Case Qty
		86133	CS4	4" Closet Flange Stabilizer	25

