


Tub Box

INSTALLATION INSTRUCTIONS:

One piece box method for typical slab


STEP ONE

Locate tub box and tie down with rebar. Cut hole and install tub trap arm assembly

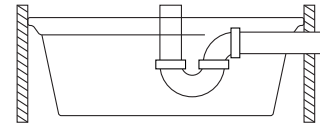


STEP TWO

Backfill dirt to top of the tub box to prevent concrete from filling in around tub assembly.

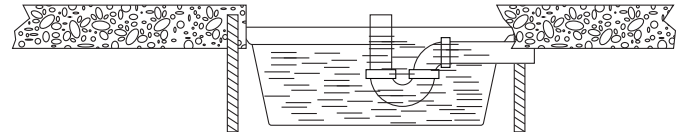

STEP THREE

Chip out any excess concrete that may lie on top of dirt. Dig out dirt filling to access trap assembly.

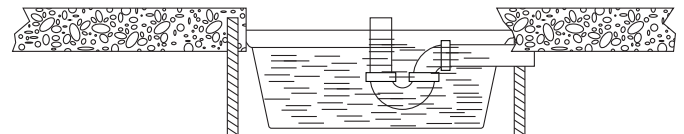

Completed unit that is vermin/rodent proof and water proof.

