
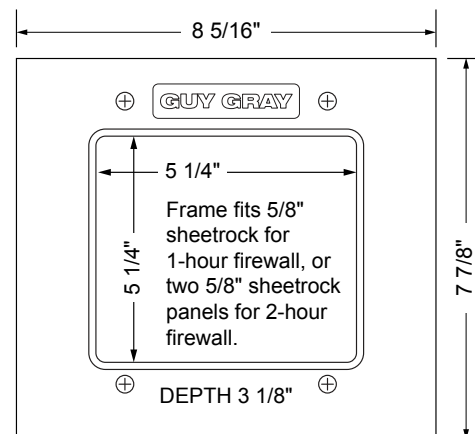


"FR-12" Plastic WMOB with Single Lever Valve with Hammer Arresters

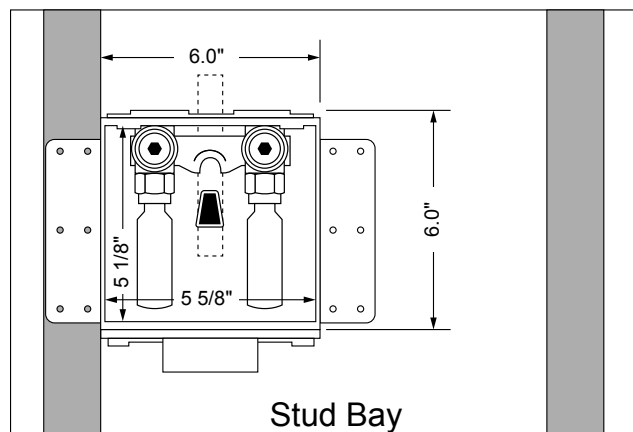

Ice Maker Box Installation Instructions

- 1) Remove faceplate that is attached to the washing machine outlet box and save for future installation once sheet rock has been completed.
- 2) Using either nails or screws, mount the box to the either wood or metal studs via the flanges on the side of the box.
 - a) 1 hour firewall construction consisting of each stud face being finished with 5/8 gypsum.
 - b) 2 hour firewall construction consisting of each stud face being finished with 2 layers of 5/8 gypsum.
- 3) Box can be mounted:
 - a) On either side of the stud bay.
 - b) At a height determined by builder/installer.
- 4) Make sure washer box drain is above the water level of the washing machine, approximately 42".
- 5) Connect pipe (PVC or ABS) to the 2" female stub at the bottom of the box via solvent weld connection.
 - a) All piping systems should be made to local codes which require a P-trap installation below washer box.
- 6) Connect the water supply piping to the washing machine box valves using appropriate piping for valve connections. Check all local codes.
- 7) Test all piping joints for leaks. Test drain line if required by local code.
- 8) Attach washing machine water supply hoses to the 3/4 hose bibb outlets on the front of the appropriate valves and insert the washing machine drain hose into opening of the 2" drain line from inside the washer box. Make sure drain hose is secured so it does not push out of the box due to the water being forced out of the hose from the washing machine.
- 9) Check all local codes for appropriate approvals and requirements.
- 10) After sheet rock has been installed, snap trim ring/ faceplate into the opening of the ice maker box.
- 11) Do not remove Intumescent Pads from box.

Part #	Description of Replacement Parts	Where Used
88269	Single Lever Sweat Valve w/Hammer Arrester	Sweat
88302	Single Lever F1807 PEX Valve w/Hammer Arrester	F1807 PEX
89282	Replacement Faceplate for Model FR, Plastic	All
89917	1/2-14 Hex Locknut (for Sweat & PEX valves)	All
90193	Valve Spacer	All

Item #	Product Description	Model #	Case Qty	Packaging
82379	Single-lever Arrester Valve, 1/2" Sweat Connection	FR12SSHA	5	Standard Pack
82381	Single-lever Arrester Valve, 1/2" F1807 Connection	FR12PSHA	5	Standard Pack
82380	Single-lever Arrester Valve, 1/2" Sweat Connection	FR12SSHACP	5	Contractor Pack
82382	Single-lever Arrester Valve, 1/2" F1807 Connection	FR12PSHACP	5	Contractor Pack