

ACCESSORY SETUP INSTRUCTION

REAR RACK ASSEMBLY -- PN 5ASV-806200-6000

VALID FOR: MY2021 and Newer UFORCE 600 UTVs

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface, put the transmission gear into Park (P) and turn off the key switch.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

MEANING OF SYMBOLS




- Indicates information with more details or tips.



- Indicates information of warning or danger.


PARTS LIST:

ITEM	PART NAME	PART NUMBER	QTY.	REMARK
1	REAR RACK ASSEMBLY	5ASV-806200-6000	1	
2	REAR RACK	5ASV-806210-6000	2	
3	BASE SEAT, CF CONNECT CLAMP	9DQV-809100-3000	2	
4	INNER HEX SCREW M6×16	9DQV-809100-3000-20	8	
5	SCREW M6×16	30102-060016870	4	
6	NUT M6	30202-060170	4	
7	CF CONNECT CLAMP	9DS#-809000-6000	4	

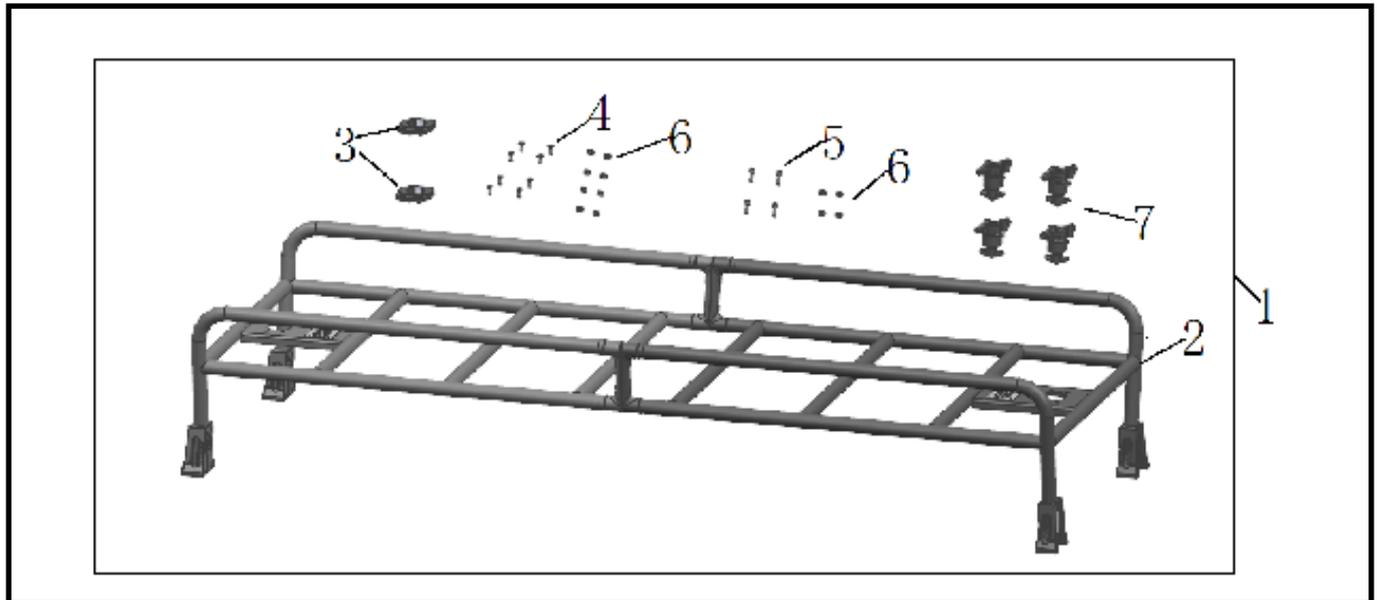


TOOL LIST:


ITEM	DESCRIPTION	QTY.	REMARK
1	PROTECTIVE GLOVES	1	Recommended Tools
2	4mm ALLEN WRENCH	1	

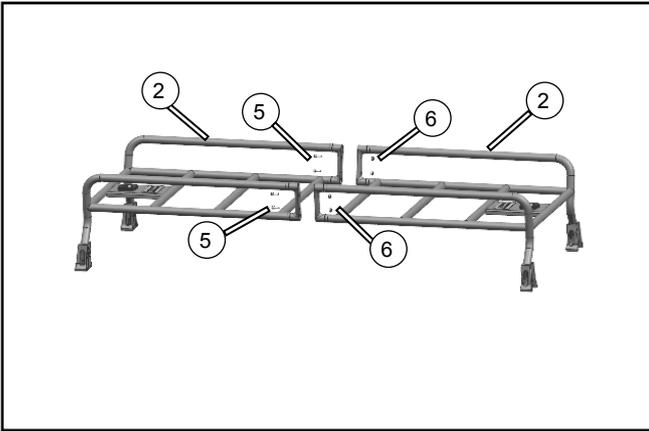ASSEMBLY and INSTALLATION


// Install the two rear racks (2) together with screws (5) and nuts (6). *Do not fully tighten them at this time.*

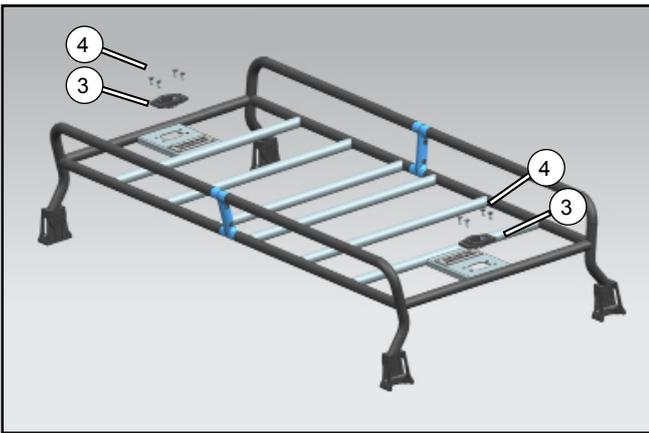


// Install the CF connect clamp bases (3) onto the rear rack with screws (4).

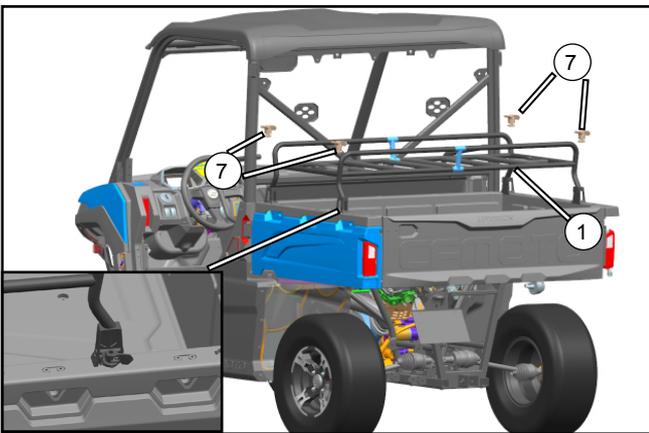

// As shown in the picture, position the rear rack assembly (1) on the rear bed, and then install the CF connect clamps (7), tighten screws (5) and nuts (6).

i The height of CF connect clamp can be adjusted to lock the rear rack assembly well.

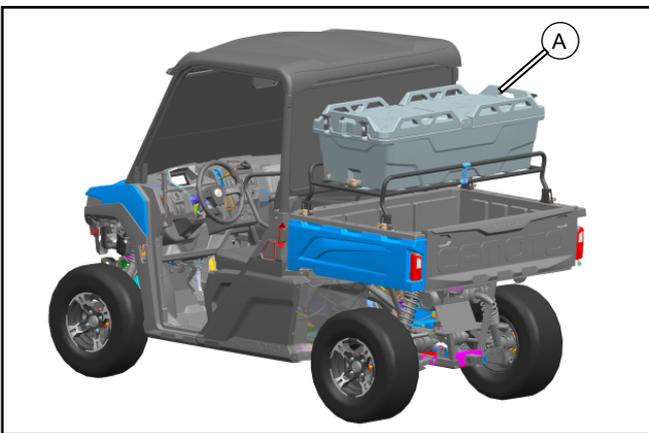

// Function expansion show! Rear cargo box assembly 5ASV-806100-6000 (A).