

ACCESSORY SETUP INSTRUCTION

BRACKET ASSY, SNOW PLOW -- PN 5HYV-804100-1000

VALID FOR: MY2019 and Newer UFORCE 1000

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface, put the transmission gear into Park (P) and turn off the key switch.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

MEANING OF SYMBOLS




- Indicates information with more details or tips.



- Indicates information of warning or danger.


PARTS LIST:

ITEM	PART NAME	PART NUMBER	QTY.	REMARK
1	BRACKET ASSY, SNOW PLOW	5HYV-804100-1000	1	
2	BRACKET, SNOW PLOW	5HYV-804110-1000	4	
3	BOLT M8×25	30006-080025870	2	

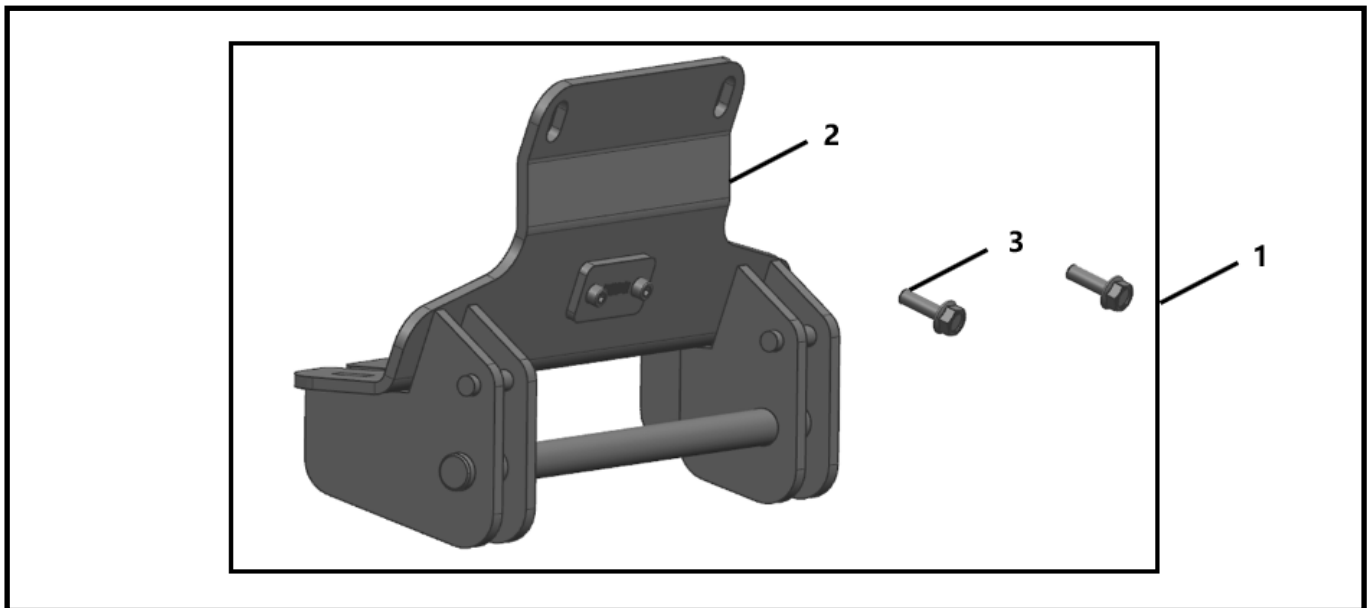


TOOL LIST:

ITEM	DESCRIPTION	QTY.	REMARK
1	12mm SOCKET	1	Recommended Tools
2	16mm SOCKET	1	
3	PROTECTIVE GLOVES	1	

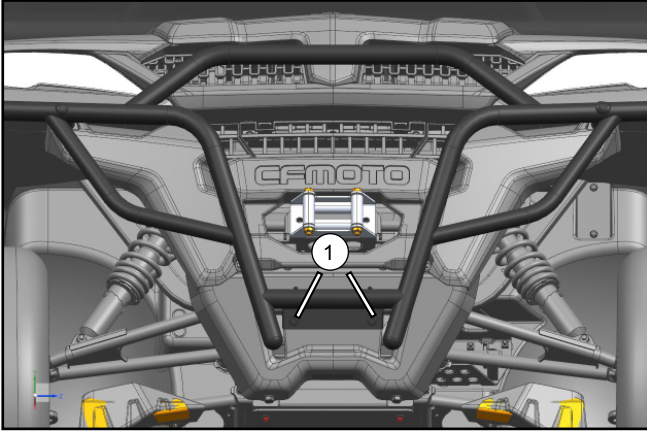


// Remove bolts (1) at the front lower bumper.


i - Save the bolts for reinstallation if the plow bracket is removed.

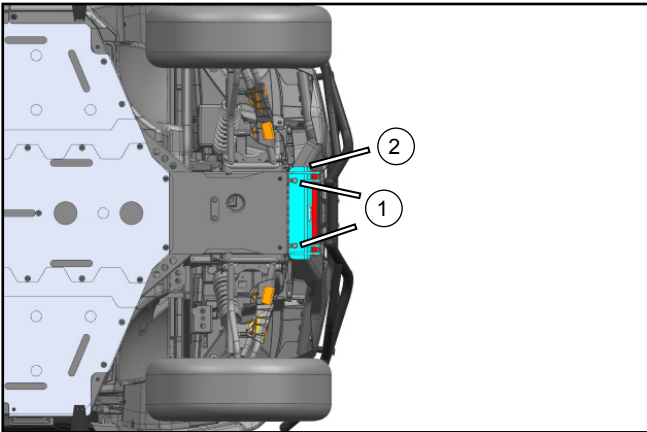

// Loosen front skid plate bolts (1) at the location shown. Align the snow plow bracket slots and push the bracket (2) onto the bolts. Tighten bolts (1).

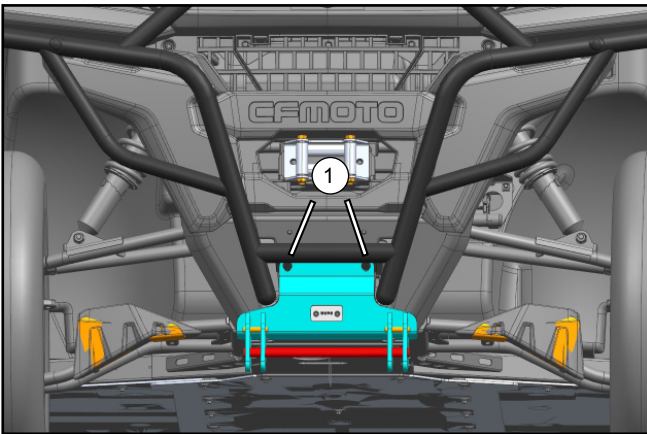


// Align the snow plow bracket mount to the vehicle bumper front holes, and secure it with bolts (1).

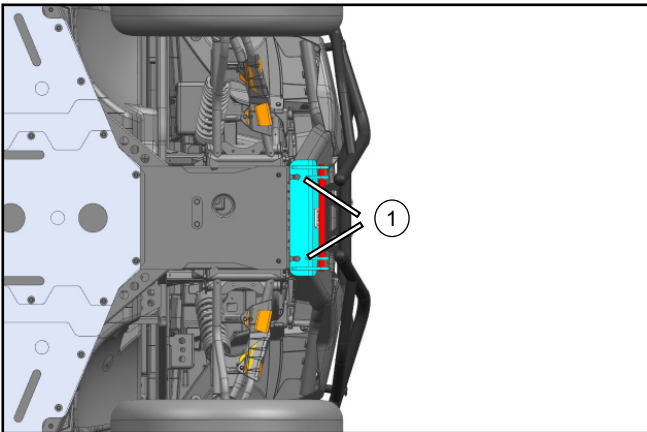

// Tighten bolts (1) at the front skid plate.

ASSEMBLY and INSTALLATION

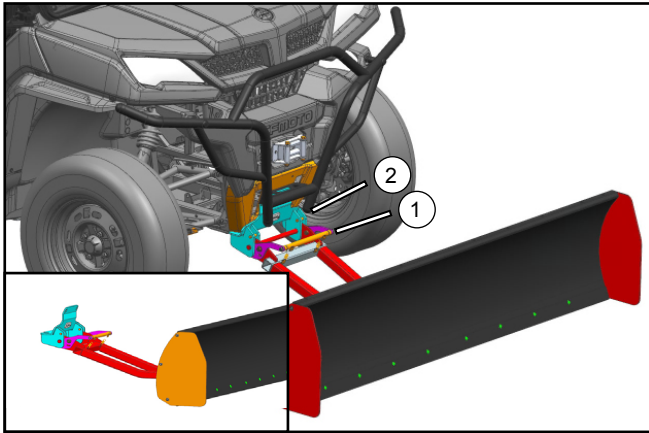

// Insert snow plow assembly (1) into the slots of the snow plow bracket (2).