


How to Burnout snap tab

Materials:
Medium weight cut away or tear away stabilizer
(2) pieces marine vinyl
(1) piece quilt batting
Kam snaps
Slip ring or lobster claw




Step 1: Hey, guess what step 1 is? If you guessed “hoop a piece of stabilizer” YOU WIN!

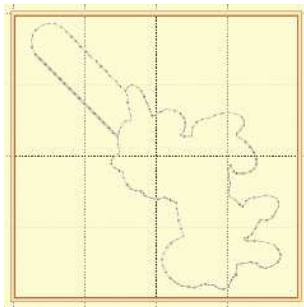


Step 2: Run the first step of the pattern. This is usually the outline of the design so you can align the vinyl.



Step 3: Float a piece of quilt batting over the die line and run color stop 2

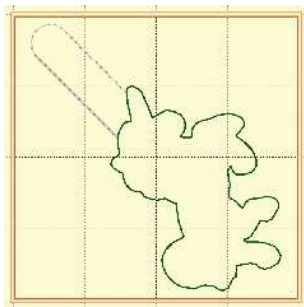

Step 4: Applique trim quilt batting as close to tack down as possible.

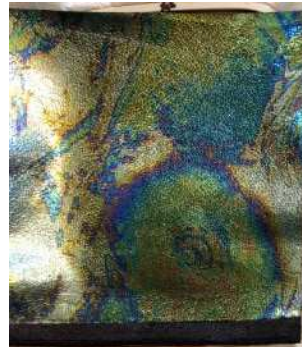

Step 6: Float “floppy” vinyl over the quilt batting and run color stop 3



Step 7: Color stop 3 is the tatami (fill) stitch that causes the batting to *poof* up



Step 8: tape the other piece of marine vinyl to the BACK of your hoop and run color stops 4 (bean high light) 5 (Kam snap die lines) and 6 (final “tack together)



Step 9: unhoop



Step 10: trim



Step 11: Using an awl, punch or crop-a-dial, pre-punch holes for your Kam snaps



Step 12: make sure the hole goes all the way through!

Step 13: Slide one of the spikey bits through one hole. Seat one of the butt ends on the spikey bit. Make sure it's the narrow side down one.

Step 14: Grab your pliers and carefully smash it all together.

Step 15: Thread the other spikey bit through the other hole and seat the "fat side down" but end on this one.

Step 16: *smoosh* part two



Step 17: Almost done!



Step 18: loop your lobster claw or slip ring and then SNAP your tab!

DONE!



STRING THEORY
FABRIC ART

Be sure to check out our YouTube channel:

<https://www.youtube.com/c/StringTheoryFabricArt>

Our store: <https://stringtheoryfabricart.com/>

AND our Facebook Fan Group where you will find more helpful hints, discounts, and coupons:

<https://www.facebook.com/groups/STFANFanGroup/>