



# Frame and Yoke Assembly

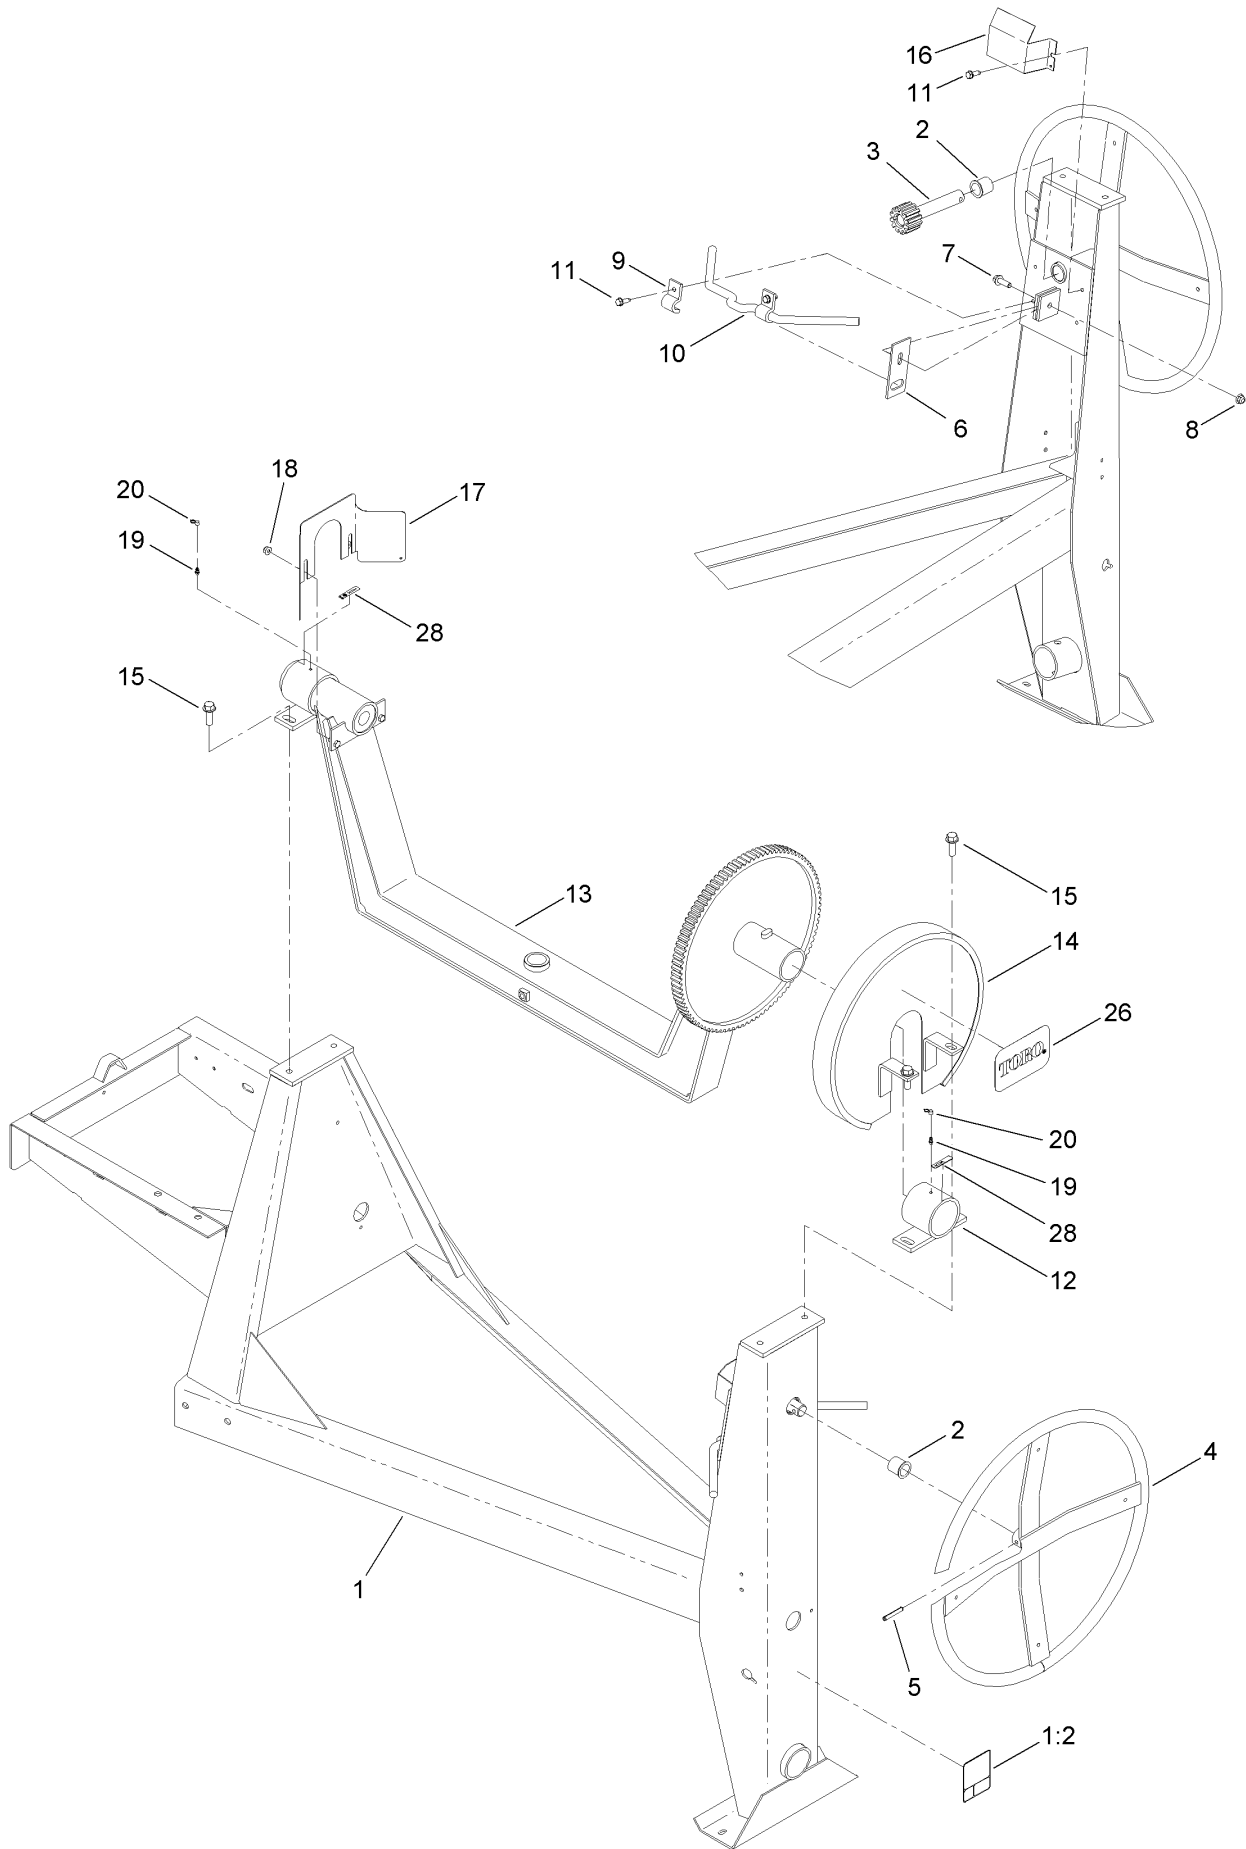

## Frame and Yoke Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-2814	1	Frame ASM	12	ST24349-03	2	Trunnion
1:2	125-8216	1	Decal-Safety Chain, Towing	13	125-6308	1	Yoke ASM
2	ST32032	2	Bushing-Nylon	14	ST27617-03	1	Guard-Brake, Upper
3	ST22029	1	Shaft-Tilt	15	ST80031	4	Screw-HWH
4	ST22096-03	1	Handwheel	16	ST27618-03	1	Guard-Brake, Lower
5	32121-27	1	Pin-Roll	17	ST27144-03	1	Guard-Pinion
6	ST27619-03	1	Dog-Brake	18	104-8300	2	Nut-Flange, NI
7	3234-24	1	Screw-HHF	19	ST46042	2	Fitting-Grease
8	104-8301	1	Nut-Flange, NI	20	ST47001	2	Cap-Plug
9	ST27559-03	2	Bracket-Handle	26	99-4693	1	Decal
10	ST27621	1	Handle-Brake	28	125-8175	2	Decal-Grease
11	701243	4	Screw-HWHTF				


# Axle Assembly

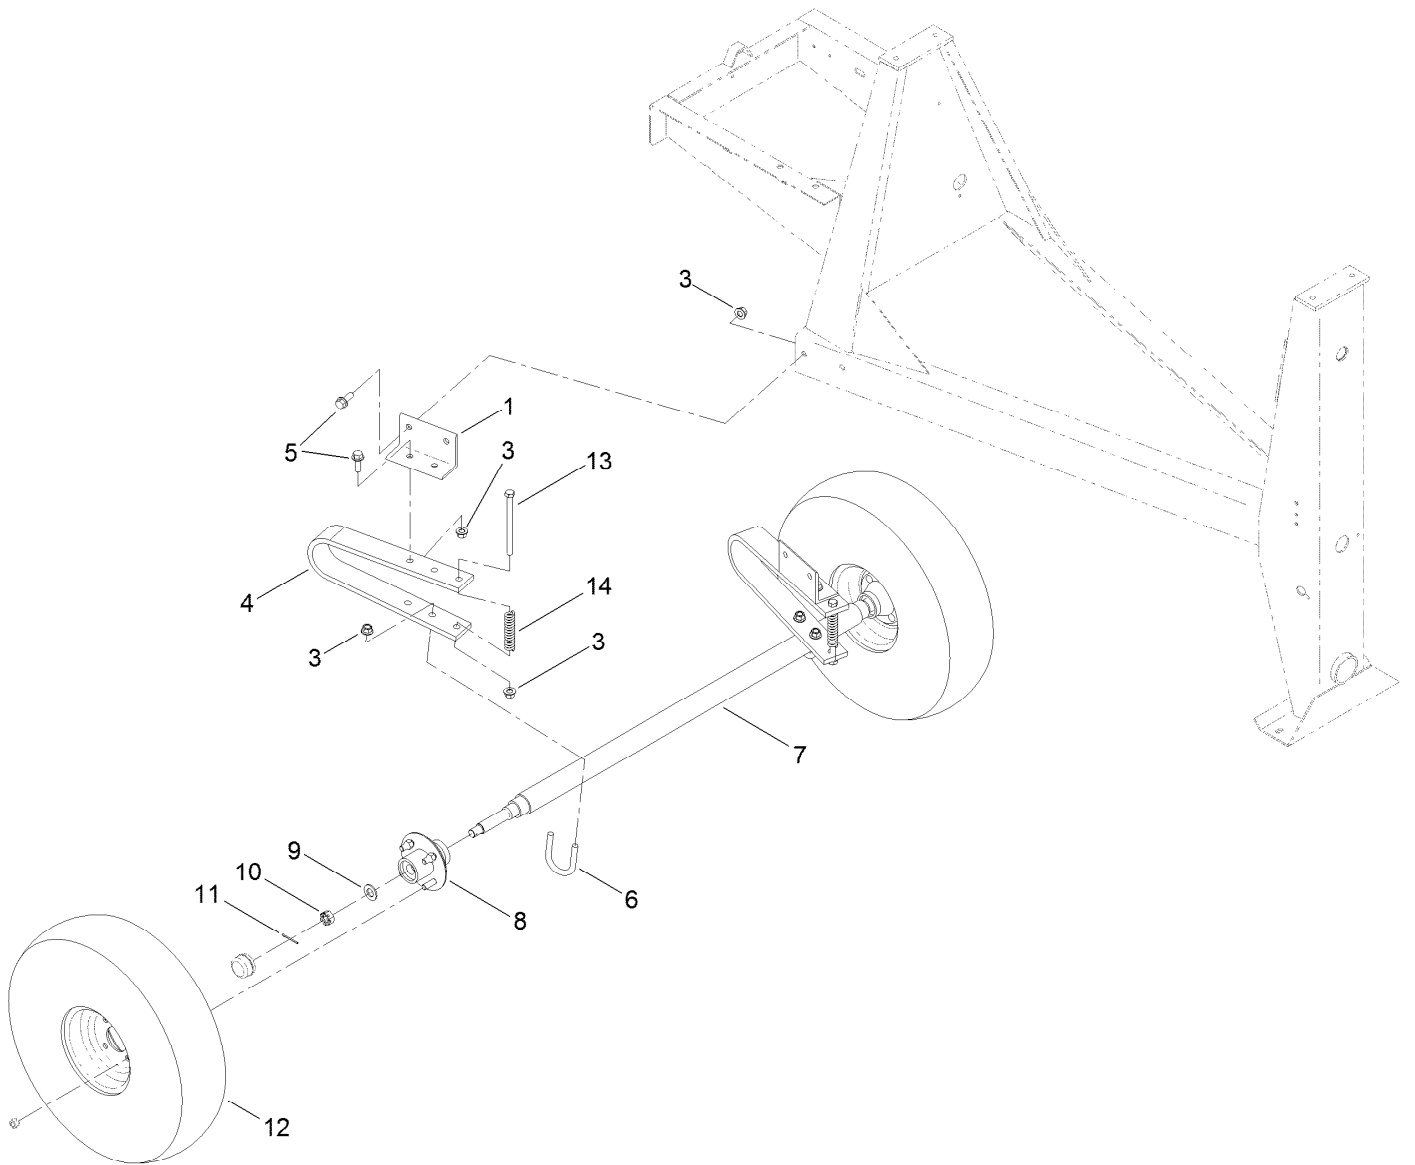

## Axle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	ST26949-03	2	Bracket-Axle, Spring	9	3256-28	2	Washer-Flat
3	99-5107	14	Nut-Lock	10	ST80054	2	Nut
4	ST26971	2	Spring-Leaf	11	3272-13	2	Pin-Cotter
5	100-6116	8	Screw-HHF	12	ST32307	2	Tire And Rim ASM
6	ST26195	2	Bolt-U	13	325-33	2	Screw-HH
7	ST21460-03	1	Axle-Spring	14	ST34972	2	Spring-Coil
8	125-8171	2	Hub ASM				

# Hub Assembly No. 125-8171

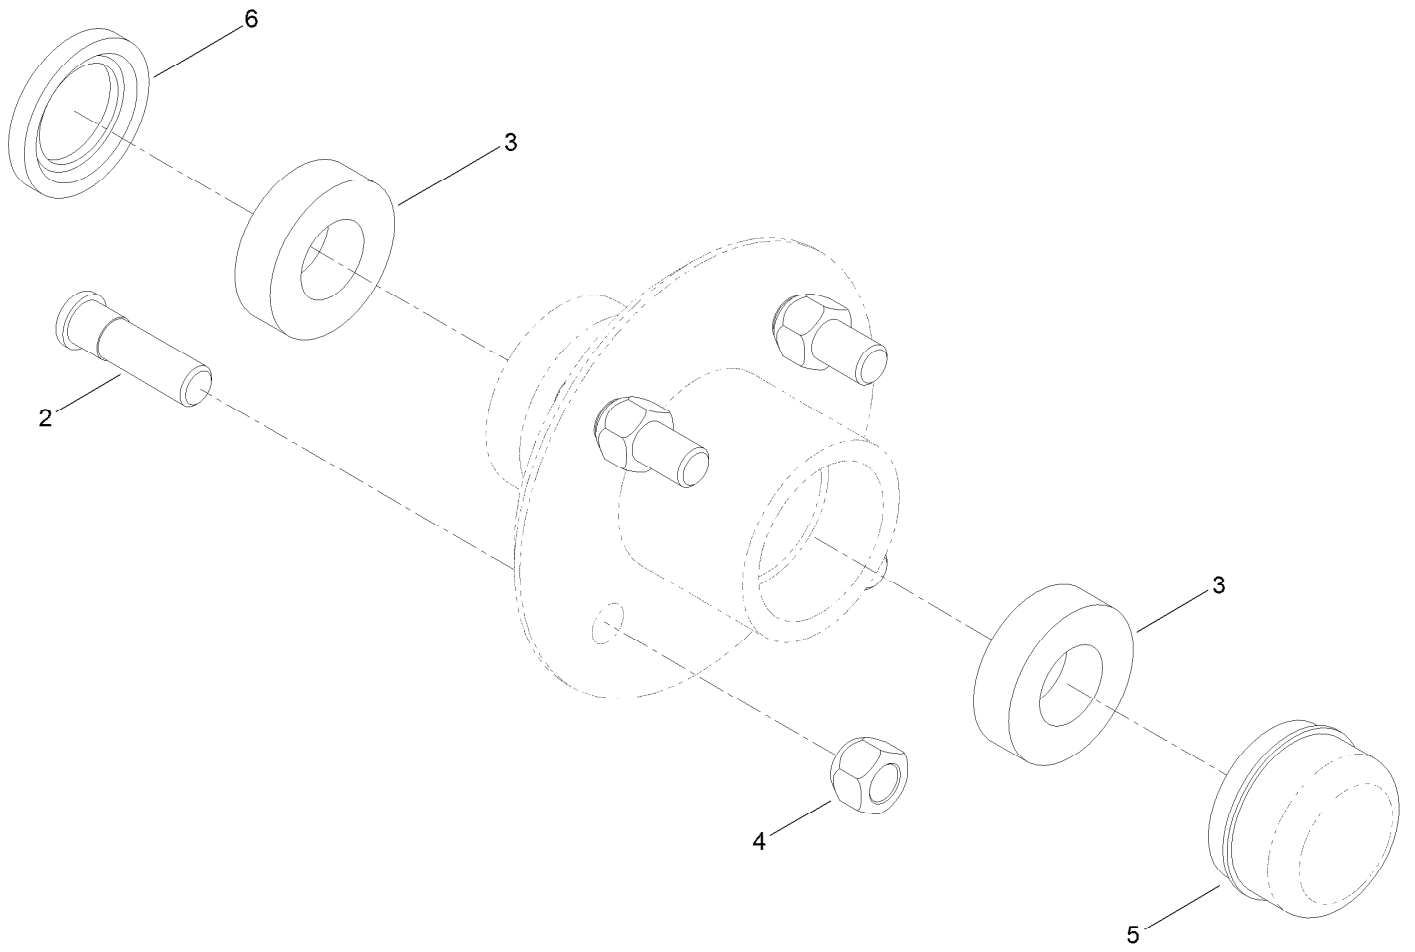


## Hub Assembly No. 125-8171 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	ST39190	4	Stud-Wheel
3	ST32233	2	Bearing-Roller
4	ST80045	4	Nut-Lug

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	ST34573	1	Cap-Dust
6	ST32052	1	Seal-Hub, Wheel

# Engine and Belt Assembly

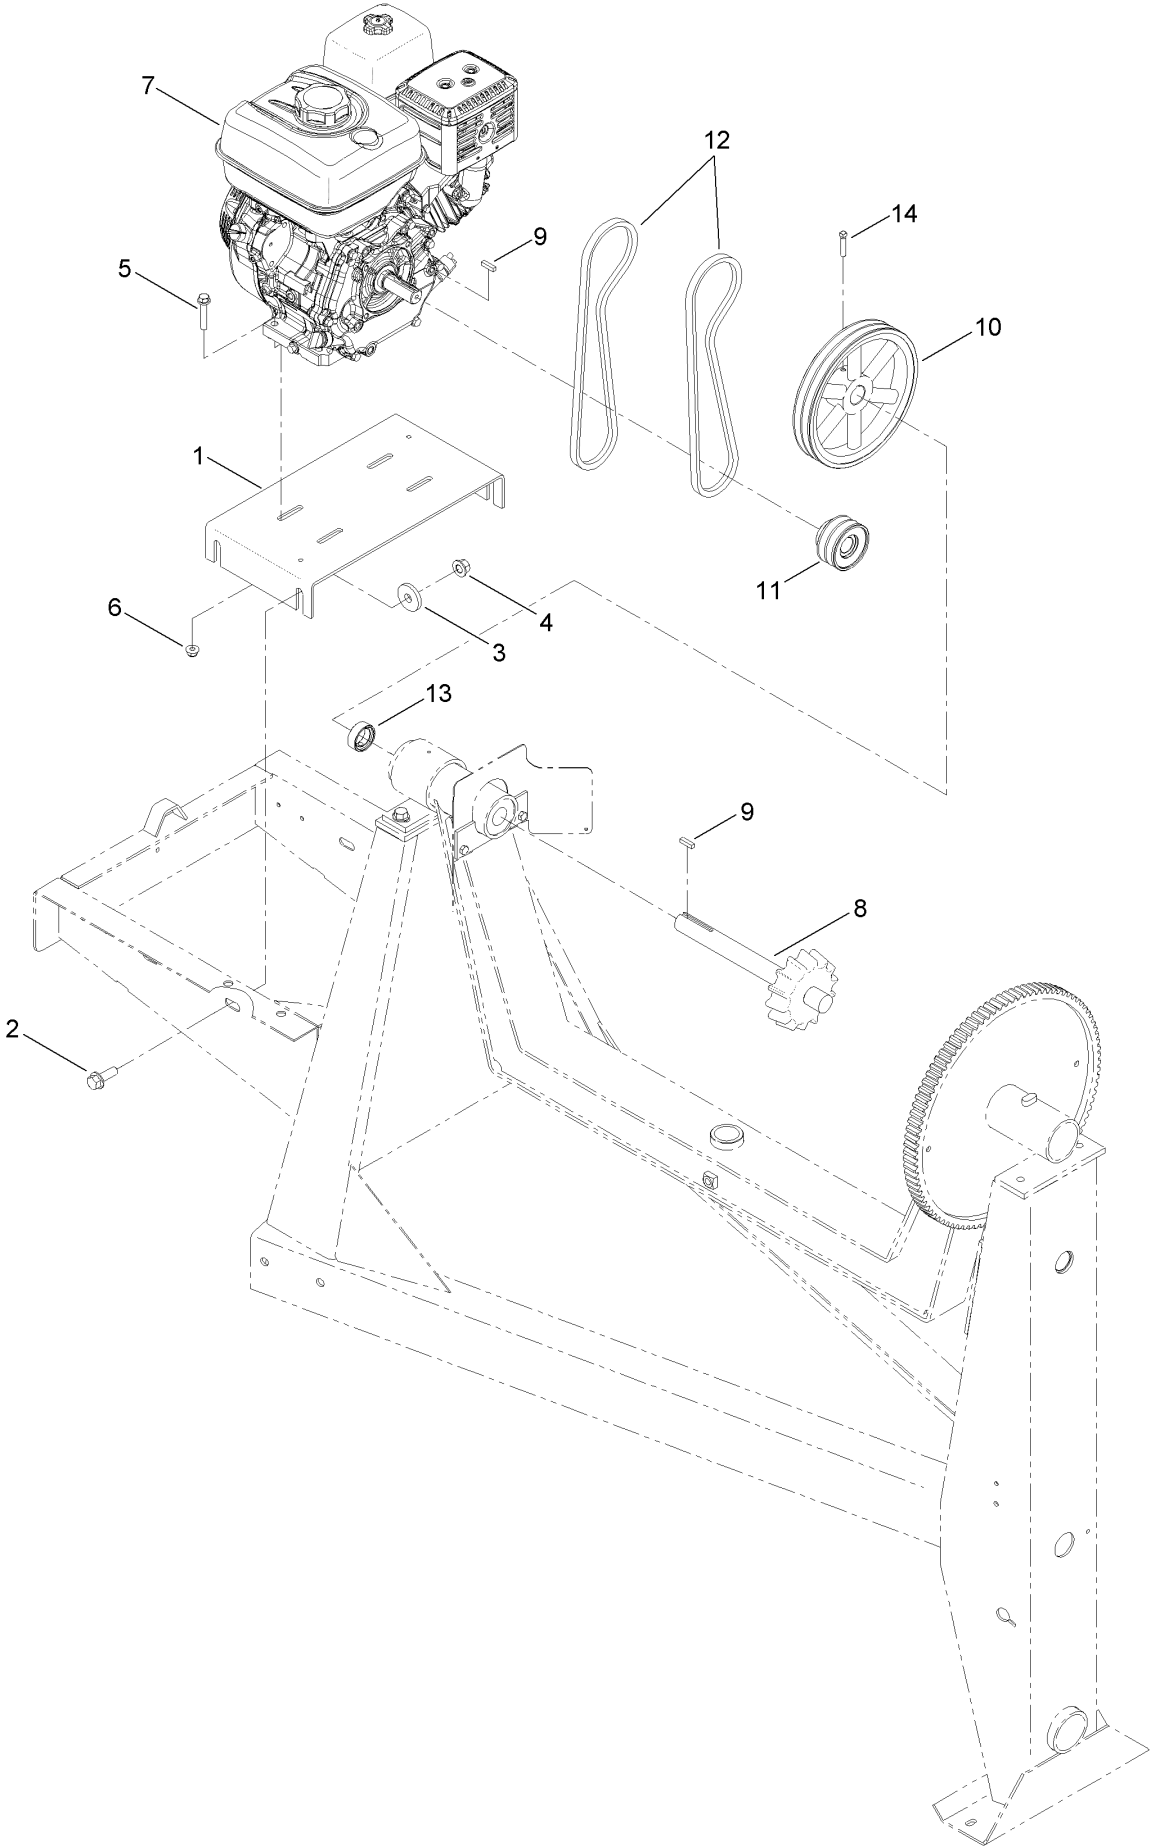


## Engine and Belt Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-7579-03	1	Base-Engine, 95Cm	8	ST21487	1	Shaft-Drive
2	100-6116	4	Screw-HHF	9	5-7280	2	Key
3	ST26326	4	Washer-Flat	10	ST34986-03	1	Sheave
4	99-5107	4	Nut-Lock	11	ST34984	1	Sheave
5	108-3742	4	Screw-HHF	12	127-0075	2	Belt-V
6	104-8301	4	Nut-Flange, NI	13	ST32176	1	Collar-Locking
7	125-4812	1	Engine-Honda, Gx240 ●	14	909546	2	Screw-Set

● Obtain parts from [www.honda-engines.com](http://www.honda-engines.com)


# Drum Assembly

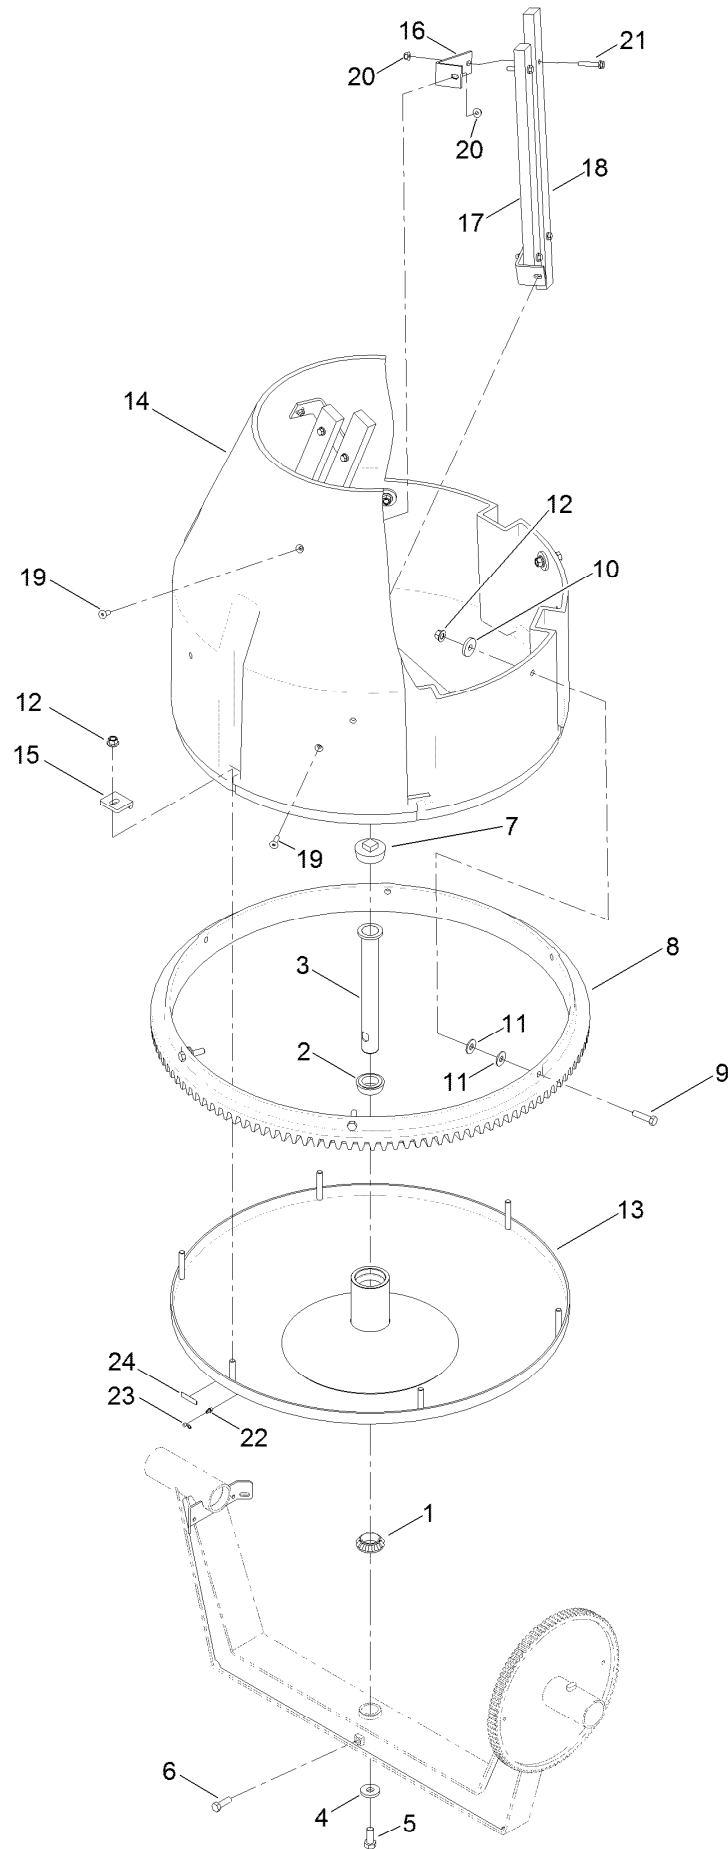

## Drum Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	ST32161	1	Bearing-Roller	13	125-8170-01	1	Dish
2	ST32086	1	Bearing	14	131-2908	1	Drum
3	ST27267	1	Spindle	15	ST42781-01	6	Clamp-Drum
4	ST27413	1	Washer-Flat	16	ST42810-01	6	Bracket-Paddle
5	327-4	1	Screw-HH	17	ST47341	3	Paddle
6	325-6	1	Screw-HH	18	ST47342	3	Paddle
7	ST46022	1	Plug	19	99-8051	6	Screw-HSFH
8	ST26317-01	1	Gear-Ring	20	104-8301	18	Nut-Flange, NI
9	325-8	6	Screw-HH	21	108-3742	12	Screw-HHF
10	ST26326	6	Washer-Flat	22	ST46057	1	Fitting
11	3256-6	12	Washer-Flat	23	ST47001	1	Cap-Plug
12	99-5107	6	Nut-Lock	24	125-8175	1	Decal-Grease

# Cowl Assembly

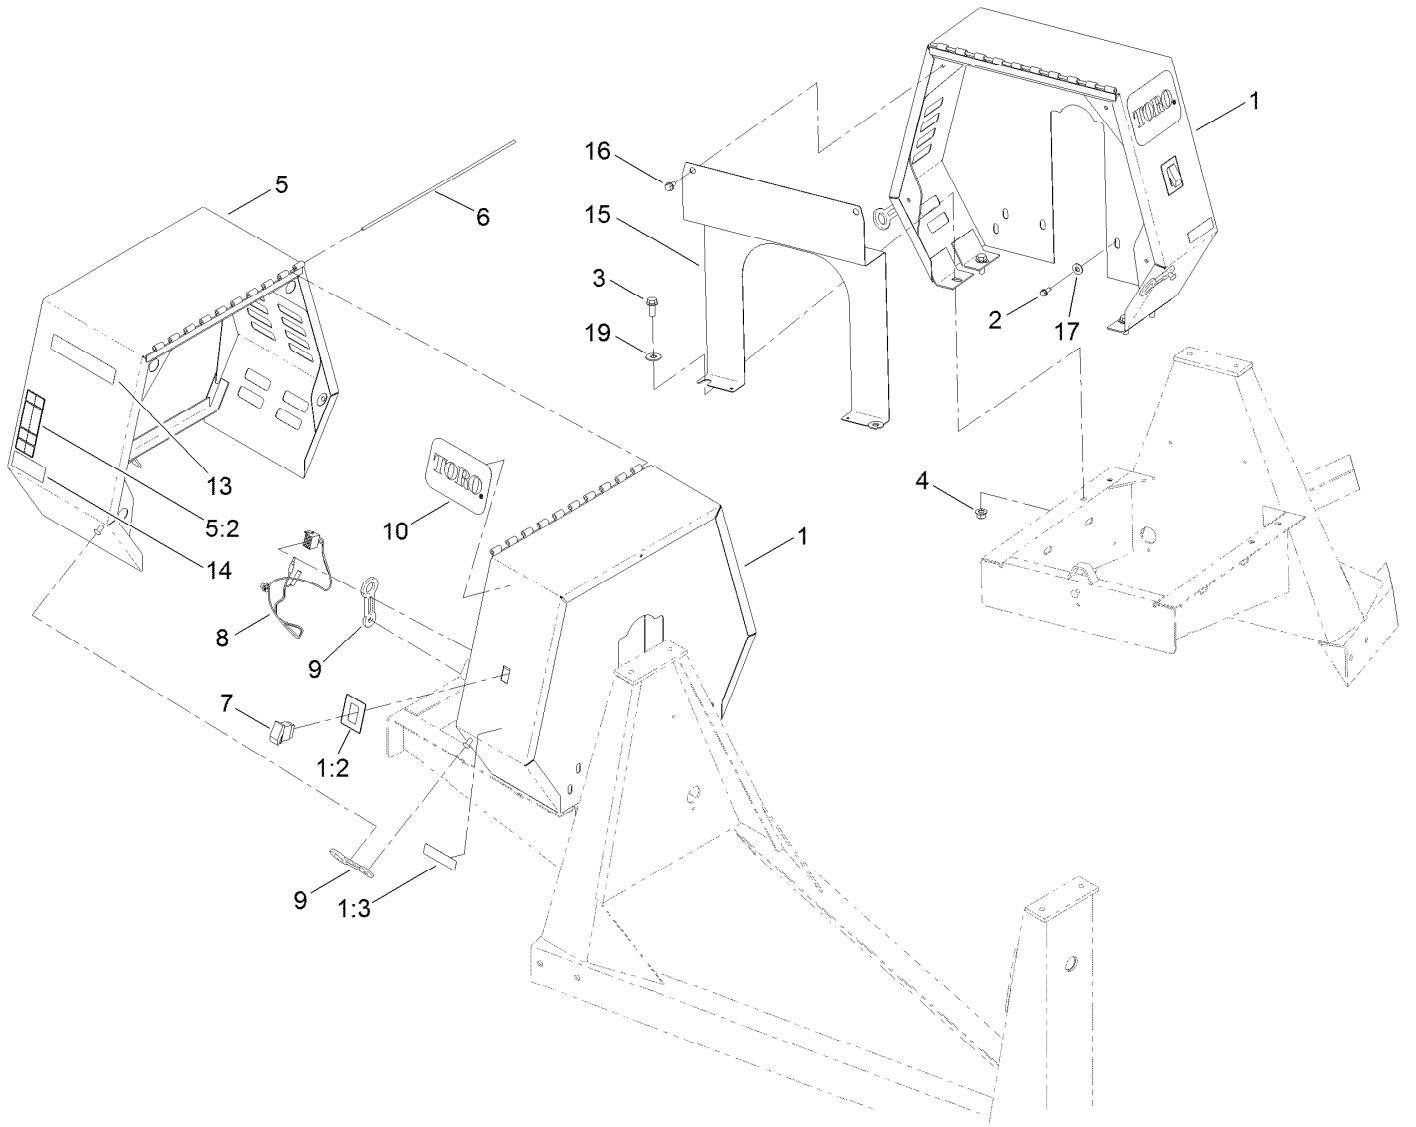

## Cowl Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-2811	1	Stationary Cowl ASM	8	125-4877	1	Harness-Wire, Mixer
1:2	125-4940	1	Decal-Stop, Engine	9	ST47182	3	Latch-Rubber
1:3	117-2718	1	Decal-Arrester, Spark	10	67-7320	2	Decal
2	701243	2	Screw-HWHTF	13	125-4937	2	Decal
3	3234-38	4	Screw-HHF	14	125-4942	1	Decal
4	99-5107	4	Nut-Lock	15	125-8218-03	1	Plate-Engine
5	127-1685	1	Movable Cowl ASM	16	110-9380	2	Screw-HWH
5:2	125-4939	1	Decal-Warning	17	3256-4	2	Washer-Flat
6	ST44368	1	Pin	19	3256-6	2	Washer-Flat
7	95-8999	1	Switch				

# Attachments and Accessories

## For 68009 CM-958H-P Concrete Mixer

<b>Product Name</b>	<b>Model/Part</b>
31in Forged Tow Pole Hitch .....	68056
31in Pintel Tow Pole Hitch .....	68058
31in Stamped Tow Pole Hitch .....	68060
Trailer Light Kit.....	68062