

Figure 11 - Machine Assembly, Left Side View

Ref. No.	Part No.	Description	Qty.
1	375448	Chassis	1
2	646089	Decal Warnings	1
3	444469	Decal Shark Detergent	1
4	Fig. 16	Coil Inlet Assembly	1
5	829980	Shark Logo Plate	2
6	926598	Rivet	8
7	213044	Burner Exhaust Vent	1
8	268004	Insulation	1
9	860102	Retaining Ring	1
10	824115	Vent Clip	4
11	Fig. 17	Pump Assembly	1
12	■	Bolt 3/8" - 16 x 1-3/8"	4
13	■	Lock Washer 3/8"	4

Ref. No.	Part No.	Description	Qty.
14	Fig. 14	Control Box Assembly	1
15	826167	Strain Relief	2
16	703127	Strain Relief Nut	2
17	Fig. 19	Fuel Tank Assembly	1
18	834153	Decal Fuel Type	1
19	■	Bolt 1/4" - 20 x 1/2"	2
20	■	Flat Washer 1/4"	6
21	220119	Battery Box	1
22	890904	Battery Terminal	2
23	375292	Mounting Plate	1
24	■	Locknut 1/4" - 20	4

■ Standard hardware item available locally.

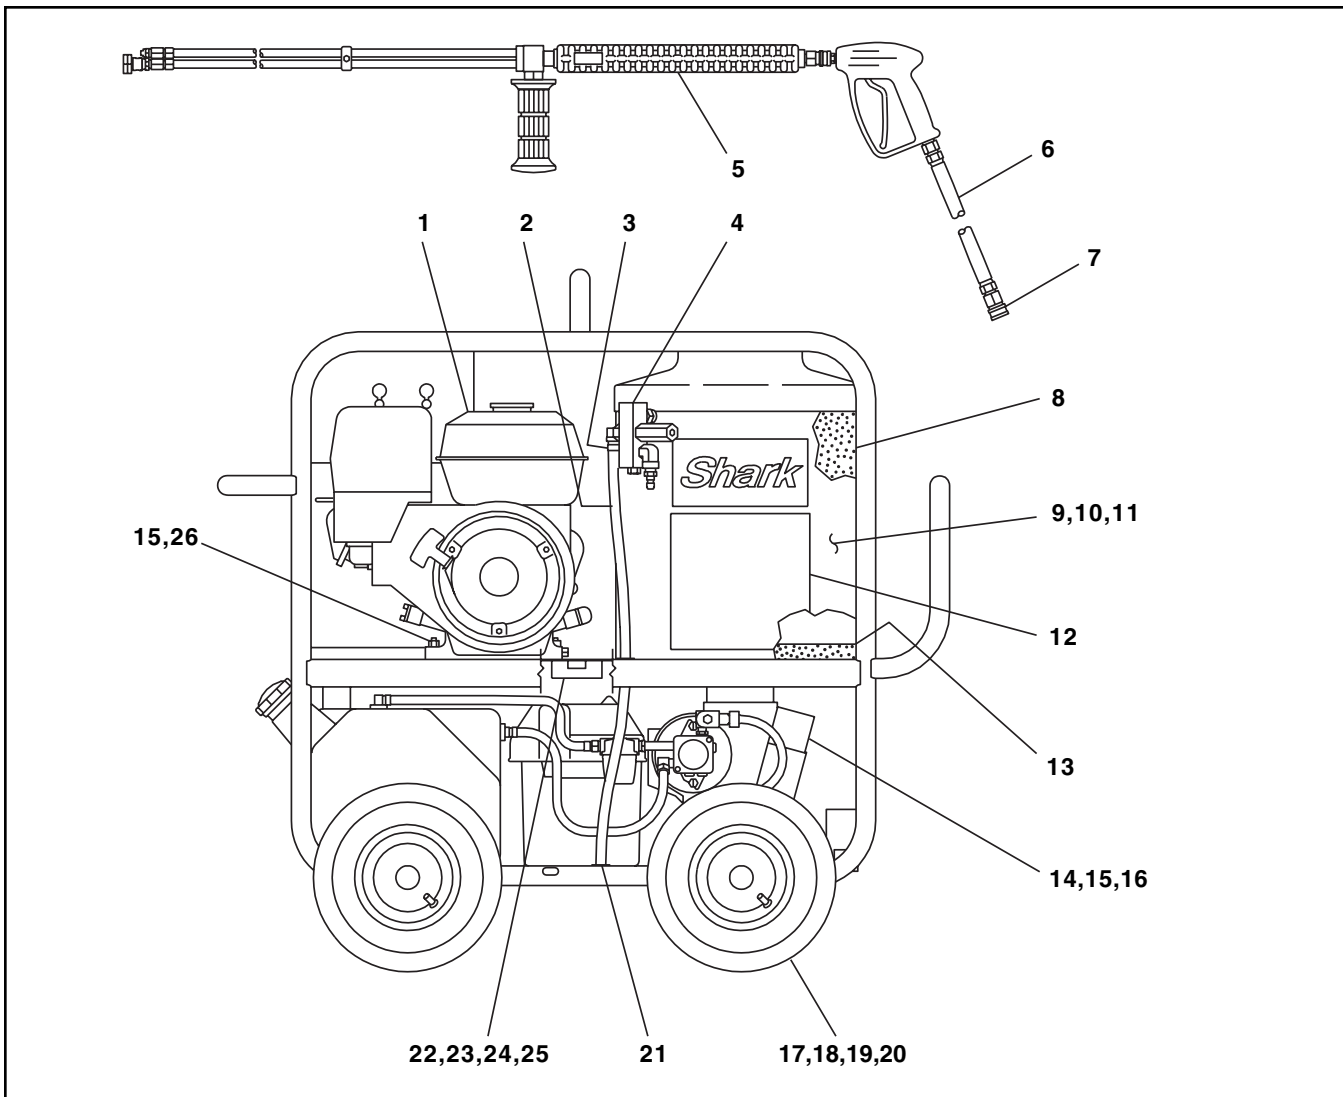


Figure 12 - Machine Assembly, Right Side View

Ref. No.	Part No.	Description	Qty.
1	661254	Engine 9 HP	1
2	961532	Tubing 3/8"]
3	823987	Hose Clamp	1
4	Fig. 15	Coil Outlet Assembly	1
5	Fig. 20	Trigger Gun/Dual Lance Wand	1
6	707226	Pressure Hose	1
7	826176	Quick Disconnect	1
8	268006	Insulation	1
9	375444	Coil Tank (925A)	1
	375449	Coil Tank (925SS)	1
10	■	Fender Washer 5/16"	4
11	■	Flange Nut 5/16" - 18	4
12	646047	Decal Troubleshooting	1
13	213191	Insulation	1
14	Fig. 21	Burner Assembly	1

Ref. No.	Part No.	Description	Qty.
15	■	Flat Washer 5/16"	7
16	799362	Crownlock Nut 5/16" - 18	3
17	817322	Hubcap	4
18	848616	Push Nut	4
19	■	Flat Washer 5/8"	8
20	983013	Wheel	4
21	815329	Snap Bushing	1
22	860232	Voltage Regulator	1
23	218189	Regulator Harness	1
24	■	Locknut 1/4" - 20	2
25	■	Flat Washer 1/4"	2
26	■	Locknut 5/16" - 18	4

* Order amount needed in feet.

■ Standard hardware item available locally.

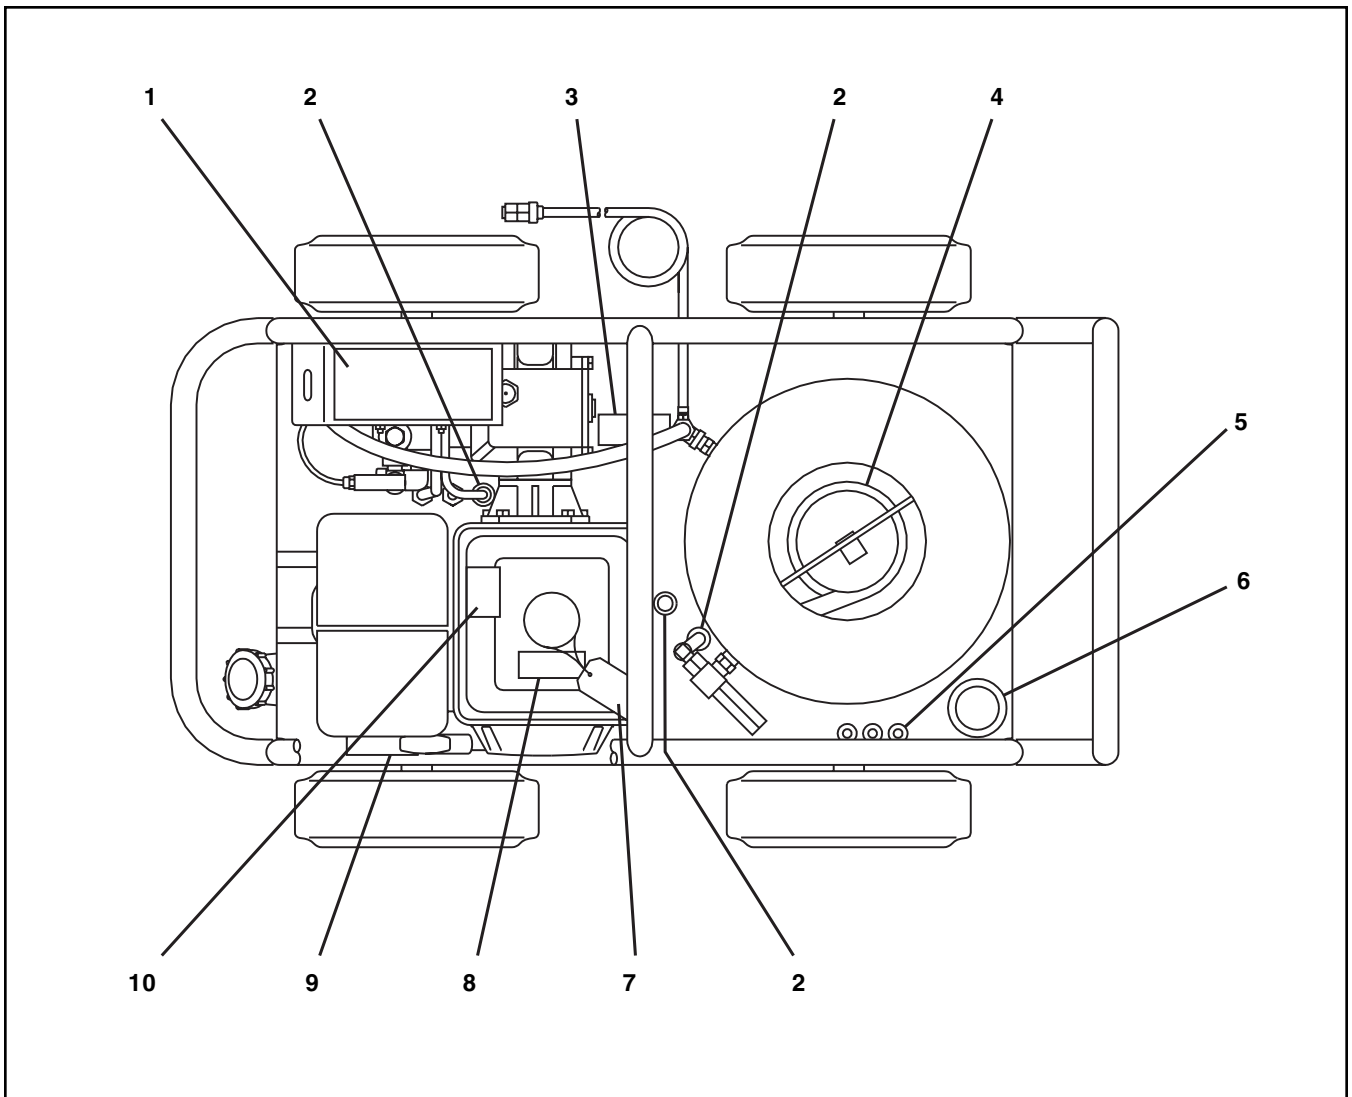


Figure 13 - Machine Assembly, Top View

Ref. No.	Part No.	Description	Qty.
1	646088	Decal Operating Instruction	1
2	815329	Snap Bushing	3
3	834154	Decal Winterize	1
4	226222	Coil	1
5	859815	Grommet (Nozzle Holder)	3
6	859806	Grommet	1

Ref. No.	Part No.	Description	Qty.
7	890783	Tag Gasoline Engine	1
8	444462	Decal Caution Gasoline	1
9	232025	Decal Important Battery	1
10	646026	Decal Carbon Monoxide	1
11	646115	Decal Hot Surface	1

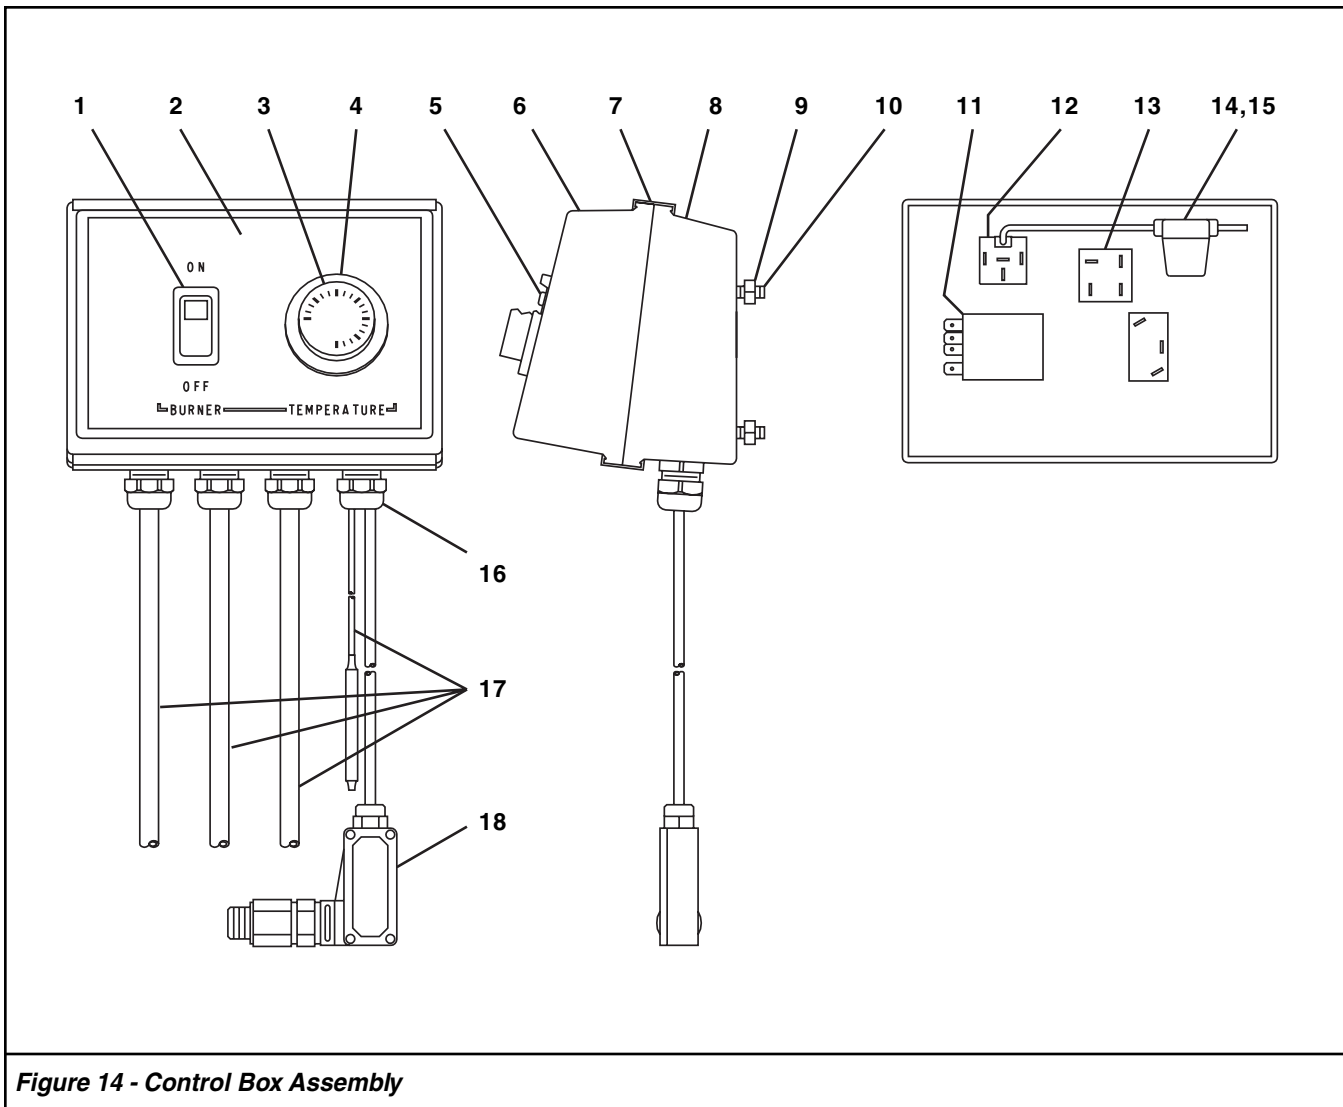


Figure 14 - Control Box Assembly

Ref. No.	Part No.	Description	Qty.
1	875465	Burner Switch	1
2	645932	Decal Control Box	1
3	835150	Thermostat Dial	1
4	915390	Thermostat Mounting Plate	1
5	■	Screw (4 mm x 6 mm)	2
6	615413	Control Box Front	1
7	630649	Channel	2
8	615414	Control Box Back	1
9	■	Locknut 1/4" - 20	4
10	■	Bolt 1/4" - 20 x 3/4"	4
11	955940	Thermostat	1
12	860140	Isolation Relay	1

Ref. No.	Part No.	Description	Qty.
13	645990	Bridge Rectifier	1
14	676638	Fuse 30A	1
15	707146	Fuse Holder	1
16	826184	Strain Relief	4
17	847750	Wire Cover]
18	⊛ 875651	Pressure Switch	1

■ Standard hardware item available locally.

* Order amount needed in feet

Replacement Parts

⊛	753134	O-Ring Kit	1
⊛	875653	Switch	1

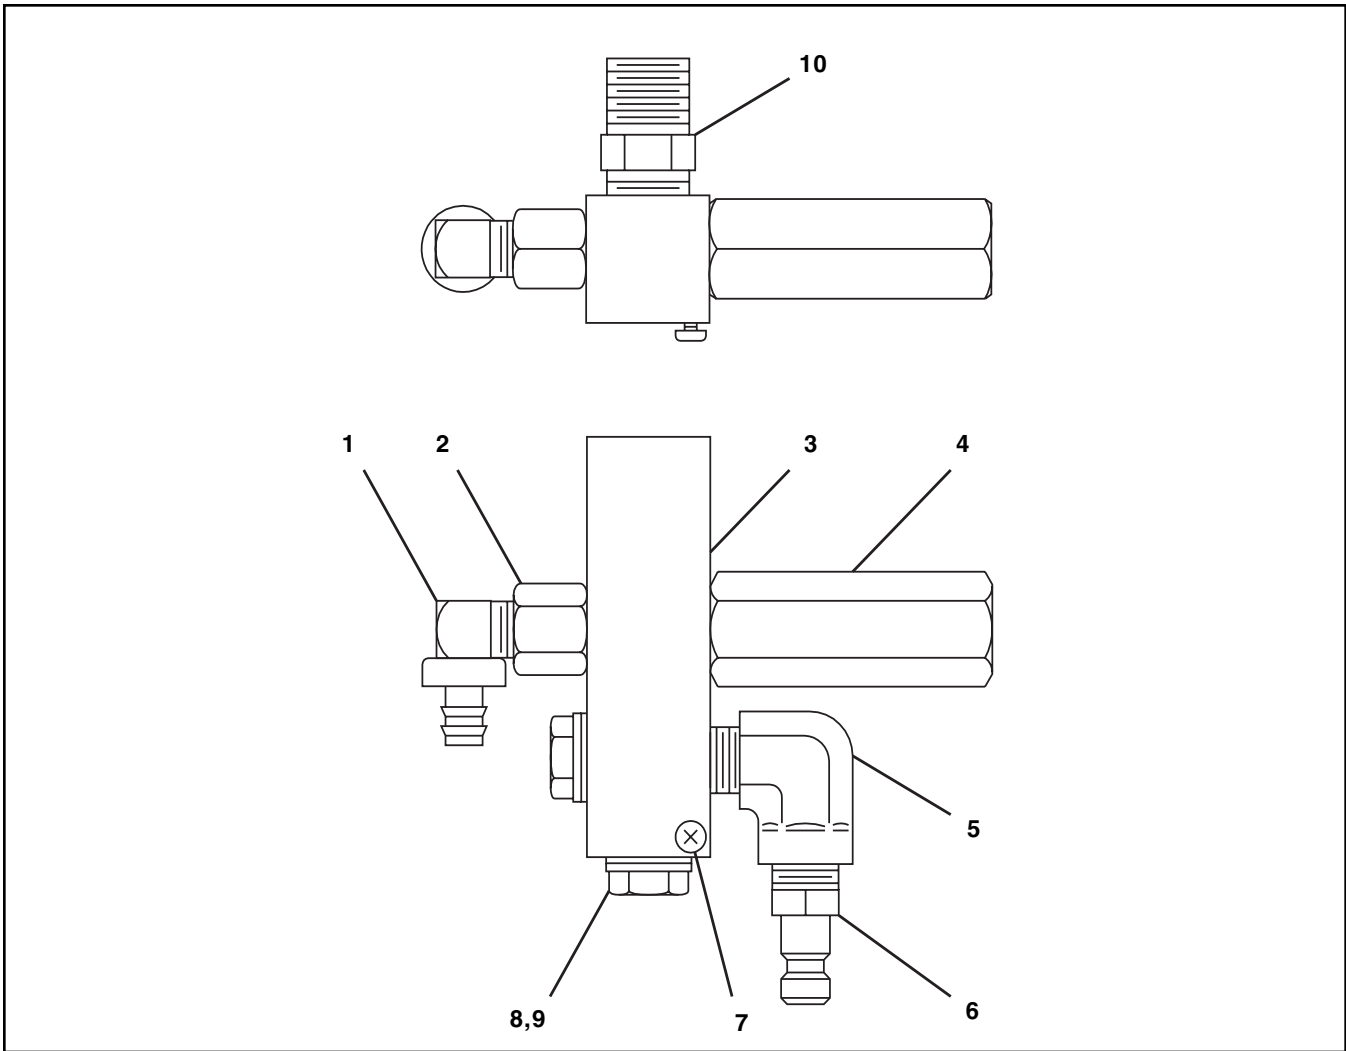


Figure 15 - Coil Outlet Assembly

Ref. No.	Part No.	Description	Qty.
1	799501	Elbow 1/4" x 3/8" Hose	1
2	875555	Relief Valve Seat	1
3	783845	Relief Valve Manifold	1
4	630720	Relief Valve Cartridge	1
5	644802	Street Elbow 3/8"	1
6	844806	Quick Disconnect Plug	1

Ref. No.	Part No.	Description	Qty.
7	■	Screw (4 mm x 6 mm)	1
8	780565	Copper Washer	2
9	915630	Plug 3/8"	2
10	698247	Hex Nipple 1/2" x 2"	1

■ Standard hardware item available locally.

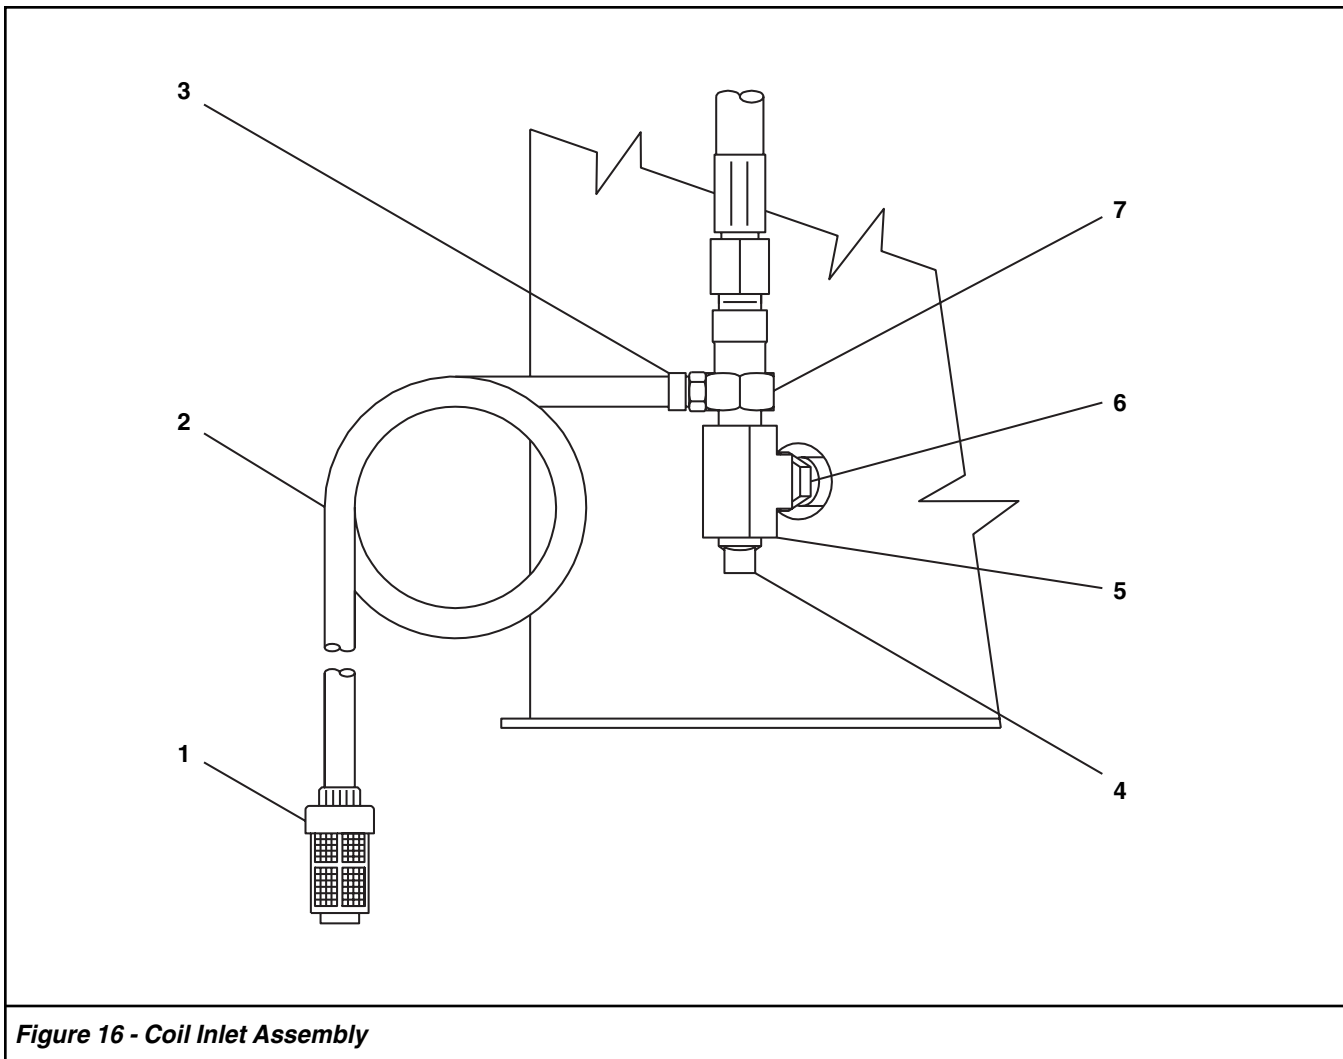


Figure 16 - Coil Inlet Assembly

Ref. No.	Part No.	Description	Qty.
1	935159	Filter Screen	1
2	961534	Tubing 1/4"	*
3	823989	Hose Clamp	1
4	715744	Coil Drain Plug	1

Ref. No.	Part No.	Description	Qty.
5	754711	Tee 3/8"	1
6	801102	Hex Nipple 3/8" x 1-1/2"	1
7	873594	Detergent Injector	1
* Order amount needed in feet.			

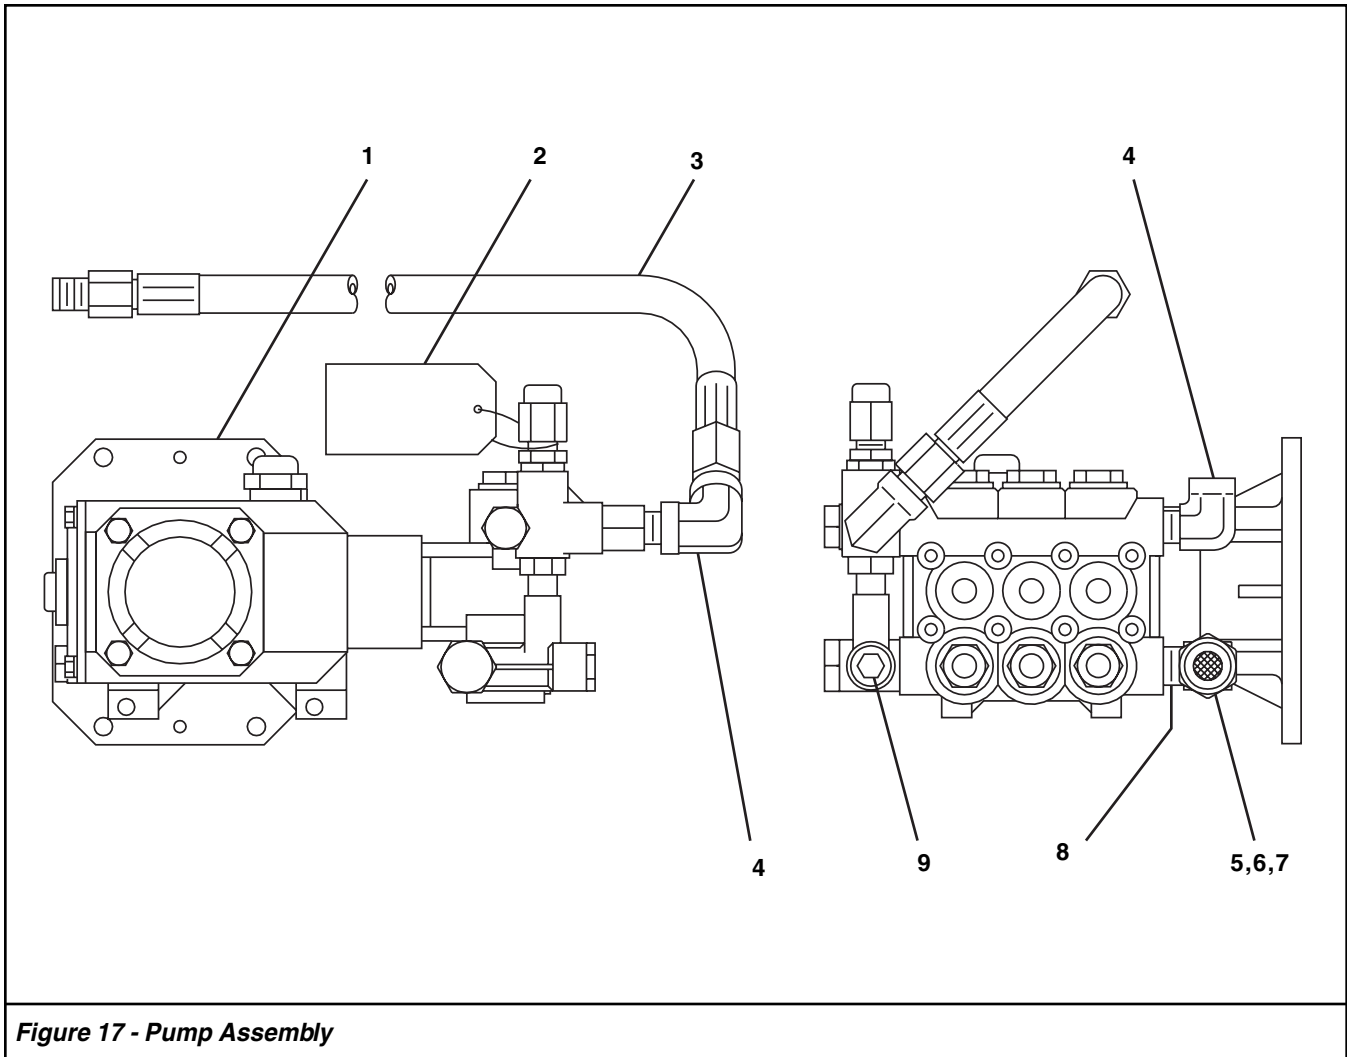


Figure 17 - Pump Assembly

Ref. No.	Part No.	Description	Qty.
1	829938	Pump Fig. 18	1
2	890769	Tag Unloader	1
3	707179	Hose 3/8" x 30"	1
4	644802	Street Elbow 3/8"	2
5	875575	Garden Hose Connector Spring	1

Ref. No.	Part No.	Description	Qty.
6	801139	Garden Hose Connector	1
7	856035	Garden Hose Connector Gasket	1
8	844758	Street Elbow 1/2"	1
9	915567	Plug Pipe 1/2"	1

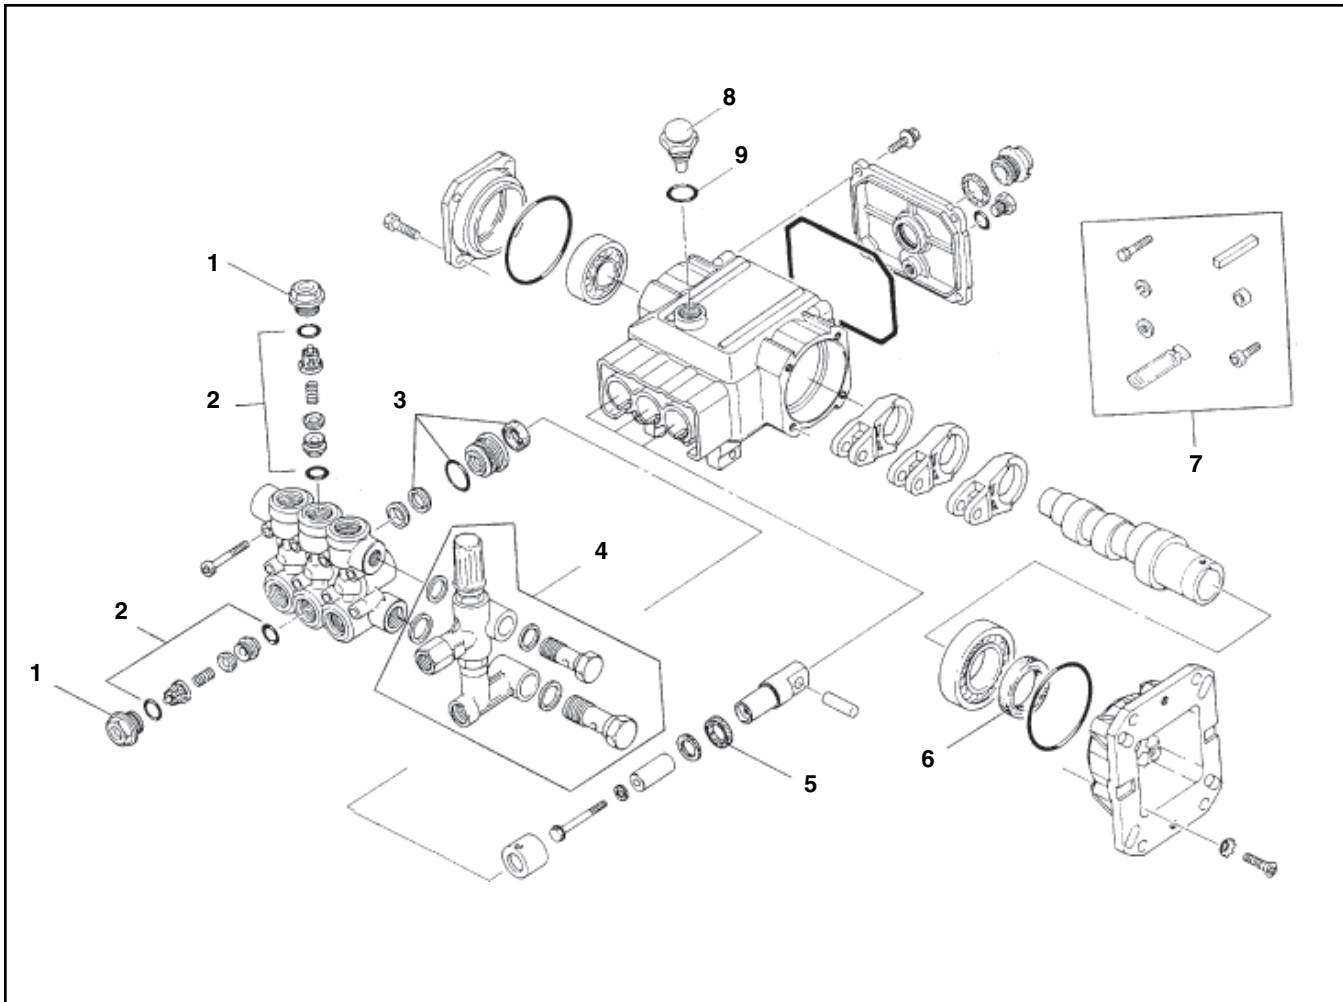


Figure 18 - Pump, Exploded View

Ref. No.	Part No.	Description	Qty.
1	835225	Valve Plug	6
2	753164	Check Valve Kit	6
3	753165	Plunger Seal Kit	3
4	⊕ 755250	Unloader Assembly	1
5	885426	Crankcase Oil Seal	3
6	885425	Crankshaft Oil Seal	1

Ref. No.	Part No.	Description	Qty.
7	755256	Pump Mounting Kit	1
8	646327	Oil Fill/Dipstick	1
9	814285	Gasket	1
Replacement Parts			Qty/Pump
	⊕ 755255	Unloader O-Ring Kit	1

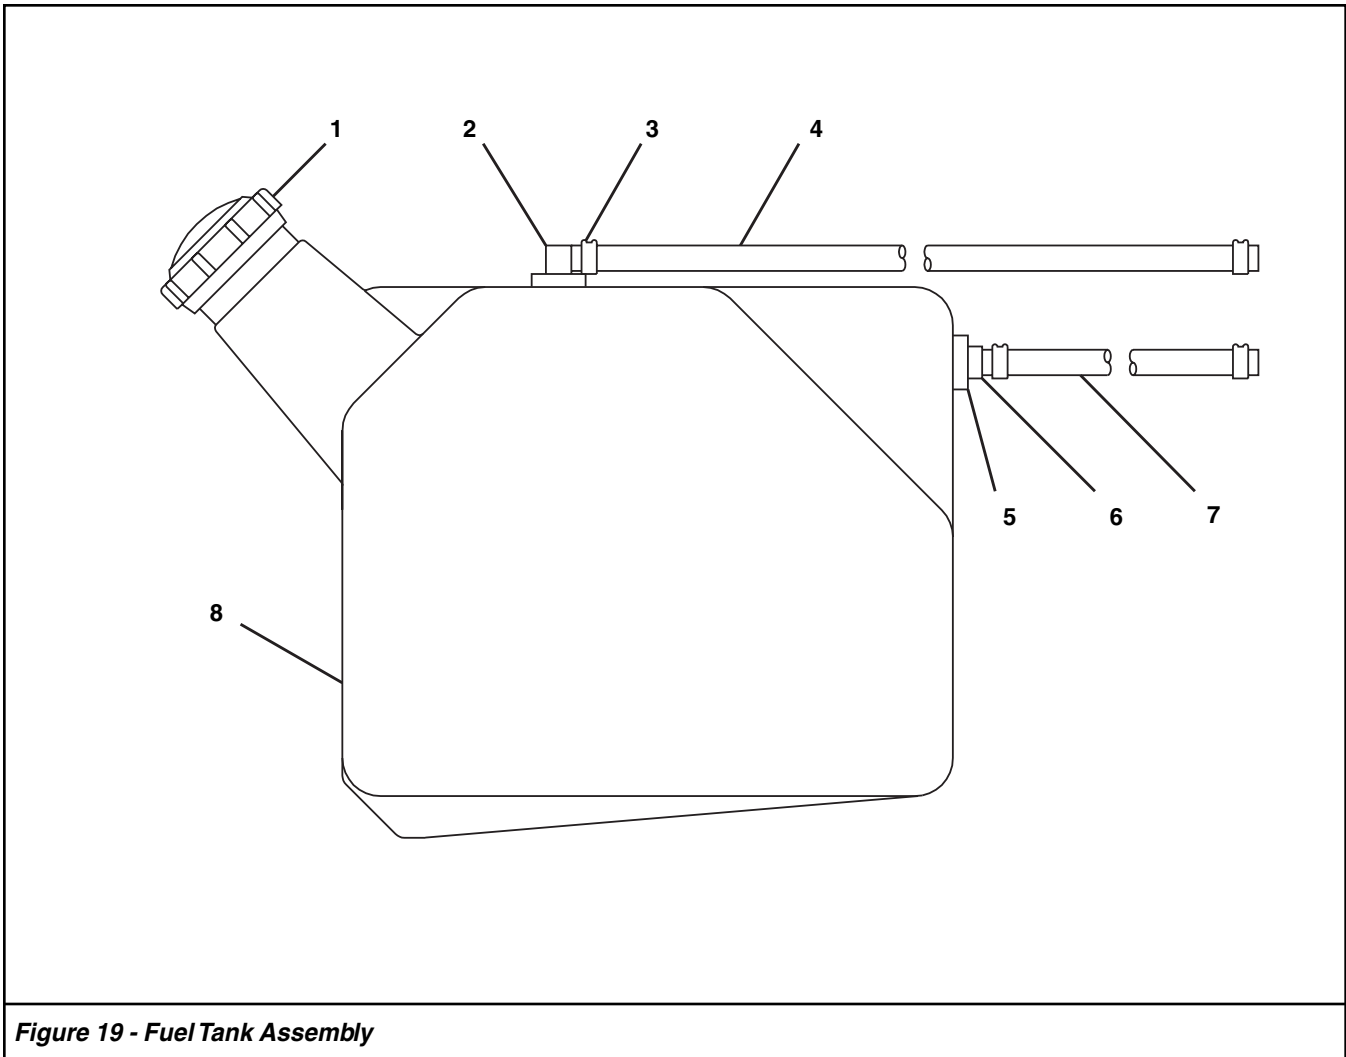


Figure 19 - Fuel Tank Assembly

Ref. No.	Part No.	Description	Qty.
1	817312	Fuel Tank Cap	1
2	661277	Elbow 1/4" Hose x Stand Pipe	1
3	823988	Hose Clamp	4
4	707116	Hose 1/4" Green	*
5	815230	Bushing	2

Ref. No.	Part No.	Description	Qty.
6	309294	Nipple 3/8" Hose x 1/4" Hose	1
7	867368	Hose 1/4" Black	*
8	890890	Fuel Tank	1

* Order amount needed in feet.

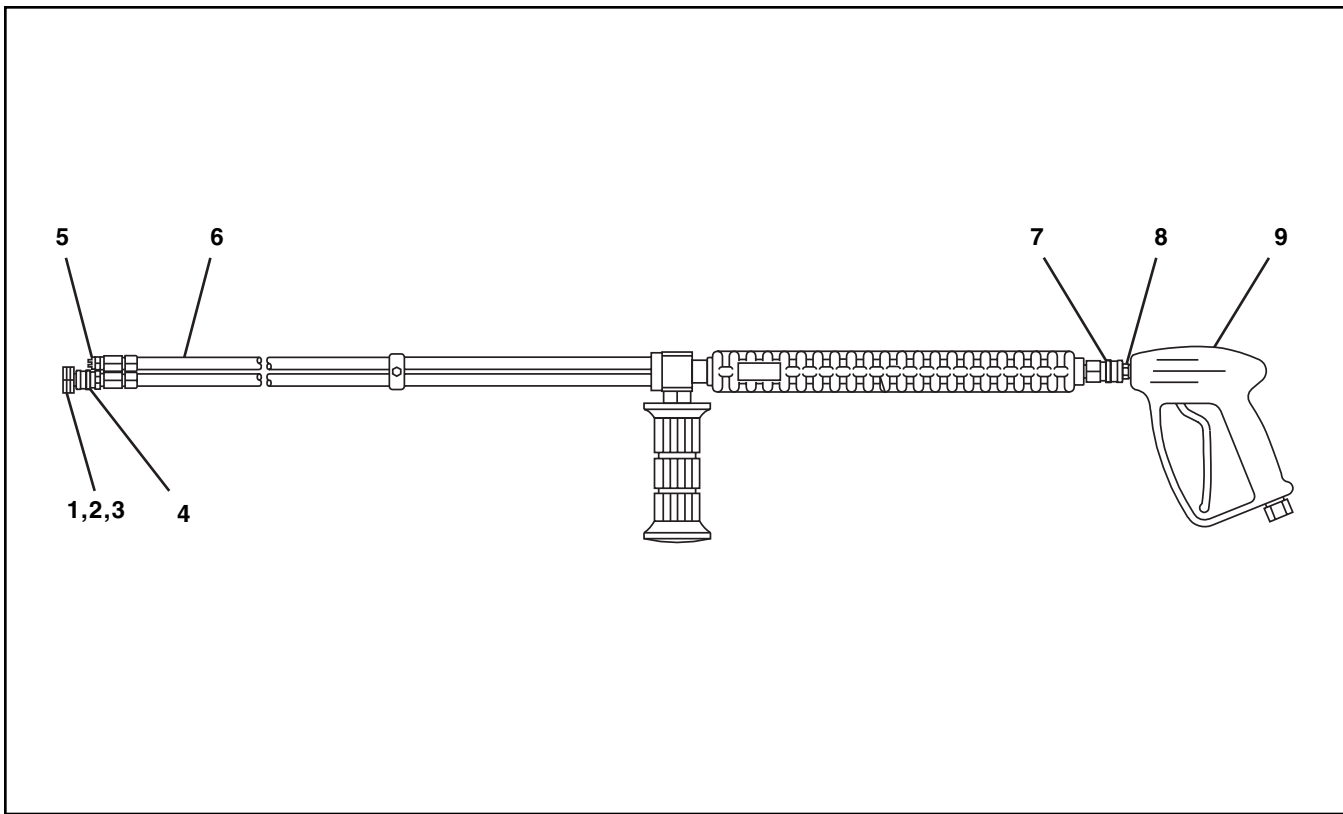


Figure 20 - Trigger Gun/Dual Lance Wand Assembly

Ref. No.	Part No.	Description	Qty.
1	799177	Pressure Nozzle (Red)	1
2	799178	Pressure Nozzle (Yellow)	1
3	799179	Pressure Nozzle (White)	1
4	826170	Quick Disconnect	1
5	900958	Detergent Nozzle	1
6	☼ 936686	Dual Lance Wand	1

Ref. No.	Part No.	Description	Qty.
7	826169	Quick Disconnect	1
8	915786	Quick Disconnect Plug	1
9	* 691867	Trigger Gun	1
Replacement Parts			
	☼ 859762	Insulator Grip Assembly	1
	* 753179	Trigger Gun Repair Kit	1

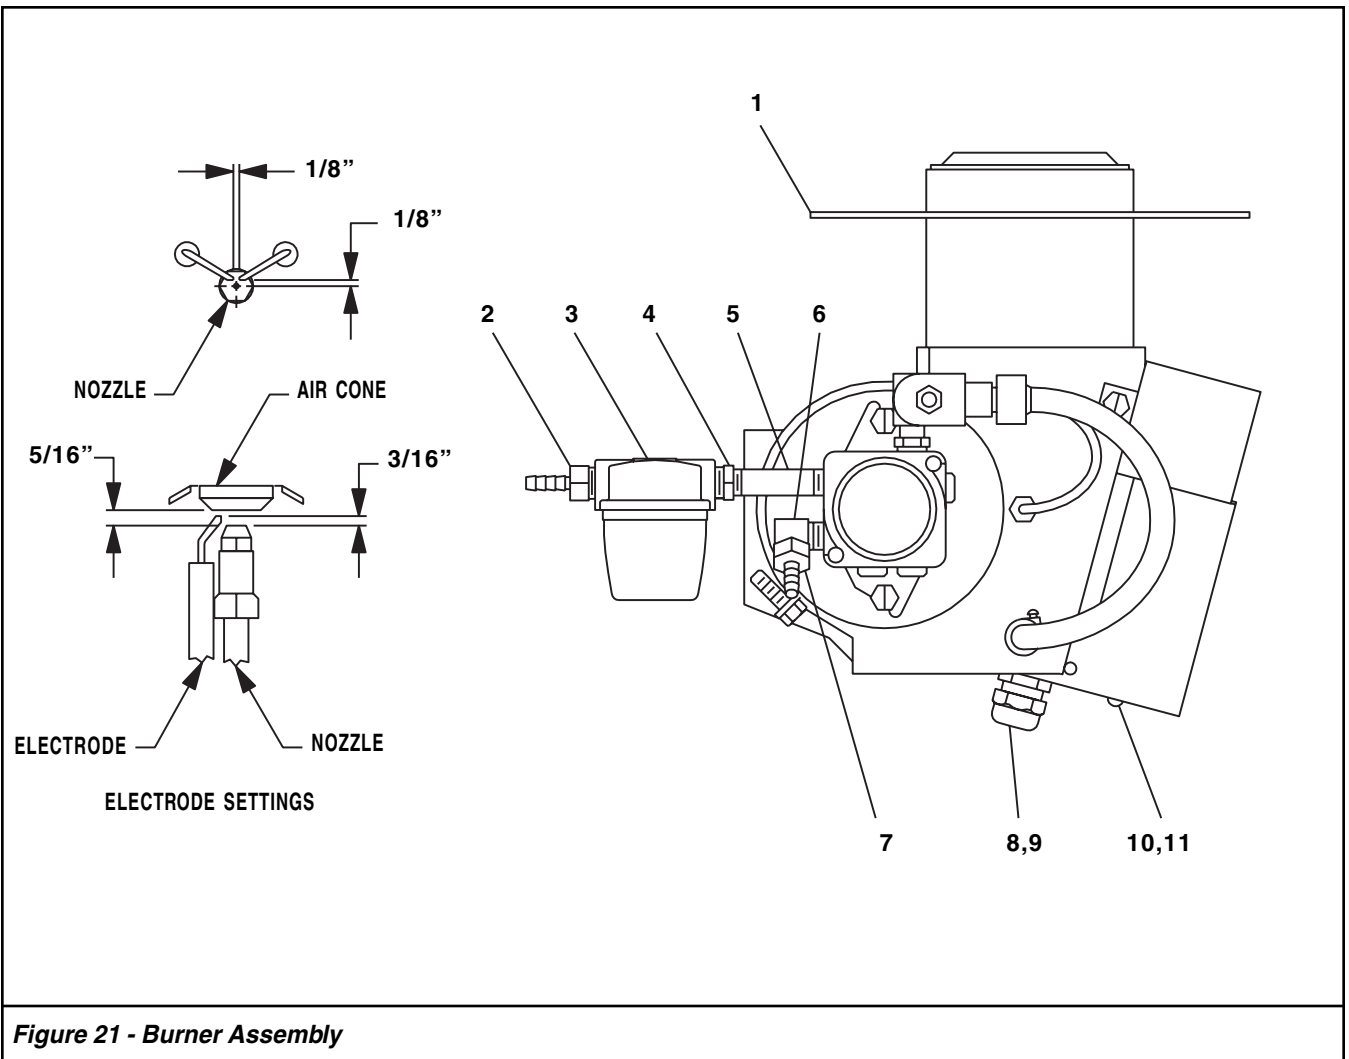


Figure 21 - Burner Assembly

Ref. No.	Part No.	Description	Qty.
1	615850	Burner Fig. 22	1
2	698023	Nipple 3/8" x 1/4" Hose	1
3	⊕ 851080	Fuel Filter	1
4	615279	Reducer Bushing 3/8" x 1/4"	1
5	698200	Pipe Nipple 1/4" x 2-1/2"	1
6	661257	Street Elbow 1/4"	1
7	698020	Nipple 1/4" x 1/4" Hose	1

Ref. No.	Part No.	Description	Qty.
8	826167	Strain Relief	1
9	703127	Strain Relief Nut	1
10	■	Screw #6 - 32 x 1"	1
11	■	Locknut #6 - 32	1

■ Standard hardware item available locally.

Replacement Parts

⊕	875490	Filter Element	1
---	--------	----------------	---

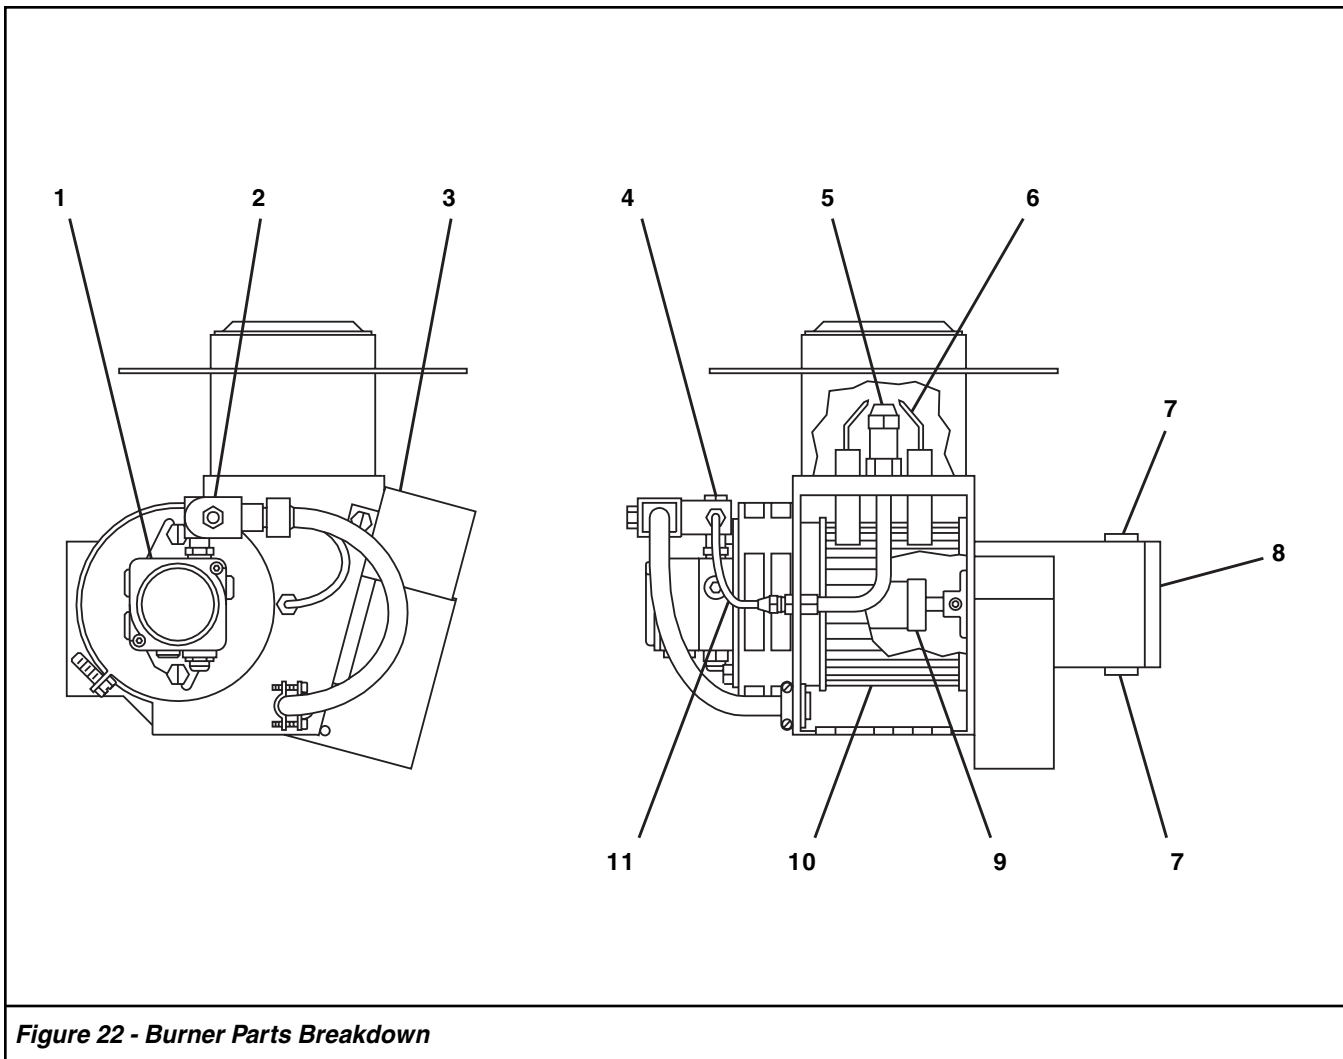


Figure 22 - Burner Parts Breakdown

Ref. No.	Part No.	Description	Qty.
1	919791	Fuel Pump	1
2	944422	Solenoid Valve	1
3	890906	Ignitor	1
4	901230	Solenoid Metering Bolt	1
5	900650	Nozzle	1
6	661302	Electrode (Pair)	1
7	753167	Brush Kit	2
8	784353	Motor	1

Ref. No.	Part No.	Description	Qty.
9	825924	Coupling	1
10	676865	Blower Fan	1
11	880806	Fuel Line	1
NS	875312	Relay	1
NS	895312	Timer	1
NS	890916	Terminal Block	1
NS	877667	Tune Up Repair Kit	1
NS = Not Shown			