

Figure 6 - Machine Assembly, Top View

Ref. No.	Part No.	Description	Qty.
1	Fig. 10	Trigger Gun/Wand Assembly	1
2	915774	Quick Disconnect Plug	1
3	707226	Pressure Hose	1
4	375495	Chassis	1
5	444469	Decal Shark Detergent	1
6	646103	Decal Nozzle Identification	1
7	■	Flat Washer 5/16"	8
8	■	Locknut 5/16"-18	4
9	859815	Grommet (Nozzle Holders)	5
10	834154	Decal Winterize	1
11	375493	Belt Tensioning Bracket	1
12	646026	Decal Carbon Monoxide	1
13	646115	Decal Hot Surface	1
14	444461	Decal Caution Gasoline	1

Ref. No.	Part No.	Description	Qty.
15	■	Flat Washer 5/8"	2
16	983050	Wheel	2
17	834180	Decal Beltguard	1
18	646102	Decal Instructions	1
19	Fig. 8	Pump Assembly	1
20	■ ●	Bolt 8mm x 16mm	4
21	■	Lock Washer 5/16"	4
22	780451	Mounting Washer	4
23	■	Bolt 1/2"-13 x 5"	1
24	■	Flat Washer 1/2"	1
25	826176	Quick Disconnect	1

■ Standard hardware item available locally.

● Use thread locking compound.

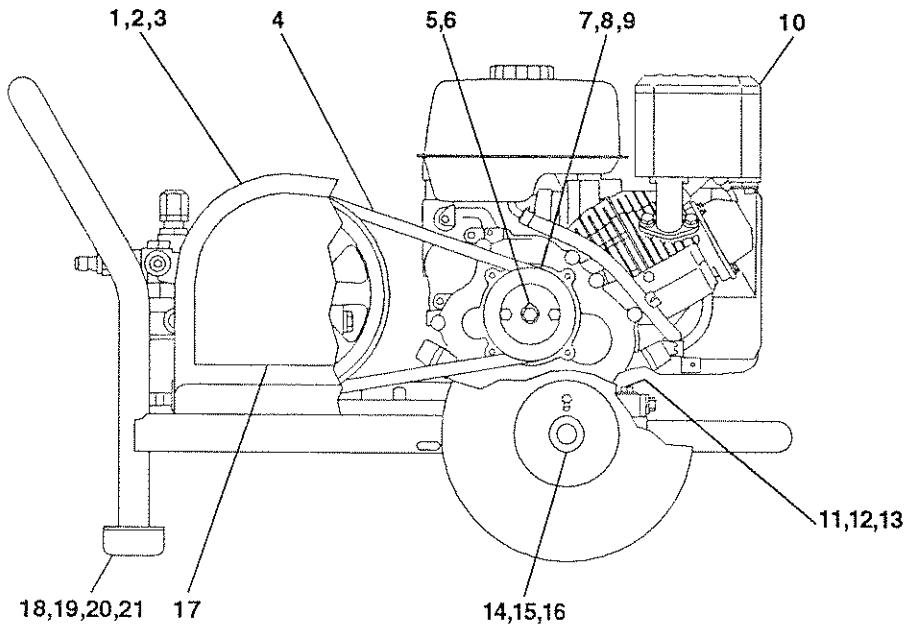


Figure 7 - Machine Assembly, Side View

Ref. No.	Part No.	Description	Qty.
1	615840	Beltguard	1
2	890893	Edge Guard	*
3	■	Flange Bolt 1/4"-20x3/4"	3
4	809138	Belt	1
5	780451	Mounting Washer	1
6	■	Bolt 5/16"-24x3/4"	1
7	919645	Engine Pulley	1
8	815133	Engine Pulley Bushing	1
9	753102	Engine Shaft Key	1
10	661285	Engine	1
11	■	Bolt 5/16"-18x1-3/4"	4
12	■	Flat Washer 5/16"	4

Ref. No.	Part No.	Description	Qty.
13	■	Locknut 5/16"-18	4
14	817322	Hubcap	2
15	848616	Push Nut 5/8"	2
16	345073	Axle	1
17	646642	Decal Shark Logo Beltguard	1
18	615527	Bumper	2
19	■	Flat Washer 3/8"	4
20	■	Bolt 3/8"-16 x 1-1/2"	2
21	■	Locknut 3/8"-16	2

■ Standard hardware item available locally.

\* Order amount needed in feet.

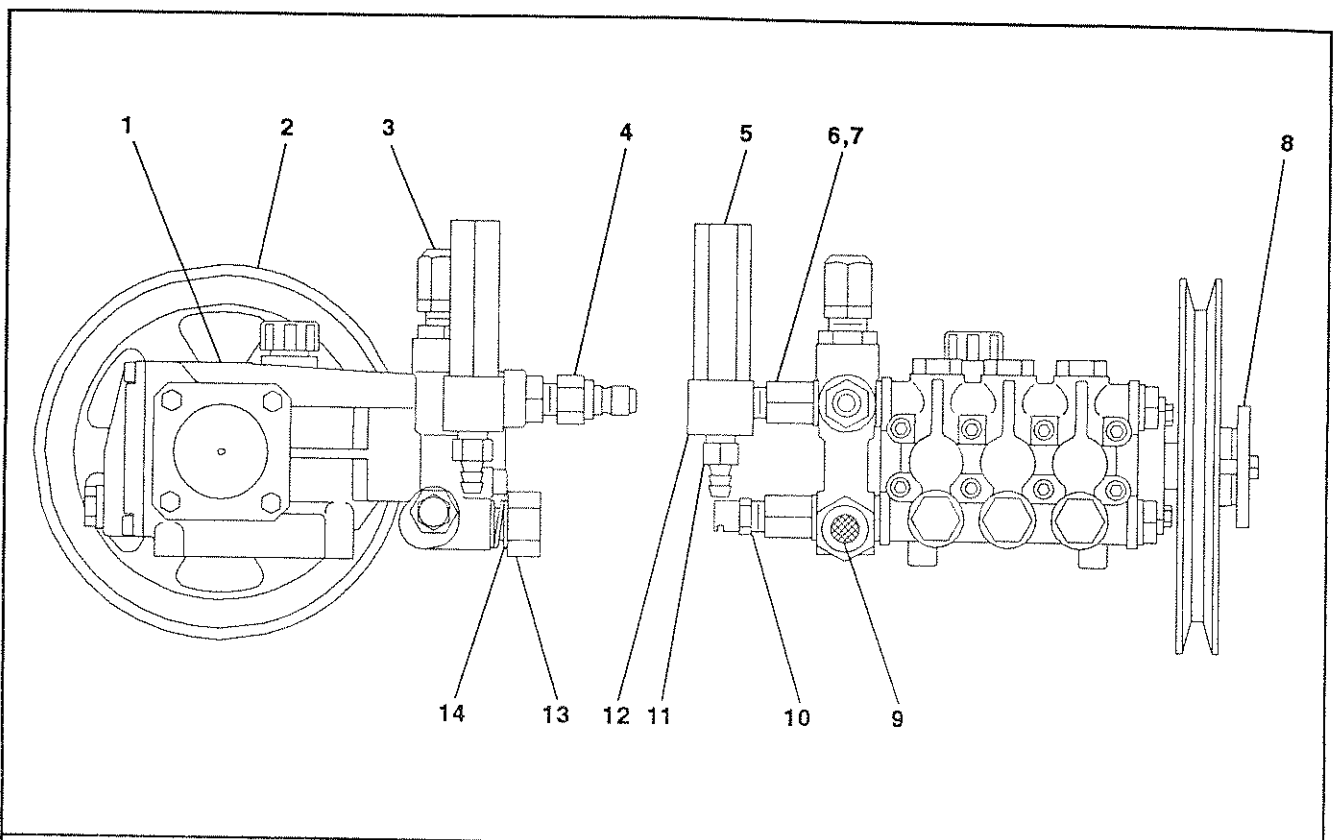


Figure 8 - Pump Assembly

Ref. No.	Part No.	Description	Qty.
1	HC340R	Pump Fig. 9	1
2	919550	Pump Pulley	1
3	921375	Unloader Valve	1
4	915774	Quick Disconnect Plug	1
5	630719	Relief Valve Cartridge	1
6	615541	Bolt Unloader Valve	1
7	936633	Flat Washer w/Seal	4
8	815202	Pump Pulley Bushing	1
9	856035	Garden Hose Connector Gasket	1

Ref. No.	Part No.	Description	Qty.
10	921421	Thermal Relief Valve	1
11	875640	Relief Valve Seat	1
12	784200	Relief Valve Manifold	1
13	801126	Garden Hose Connector	1

Replacement Parts

753025	O-Ring Repair Kit	1
753026	Discharge Repair Kit	1
753027	Stem Repair Kit	1

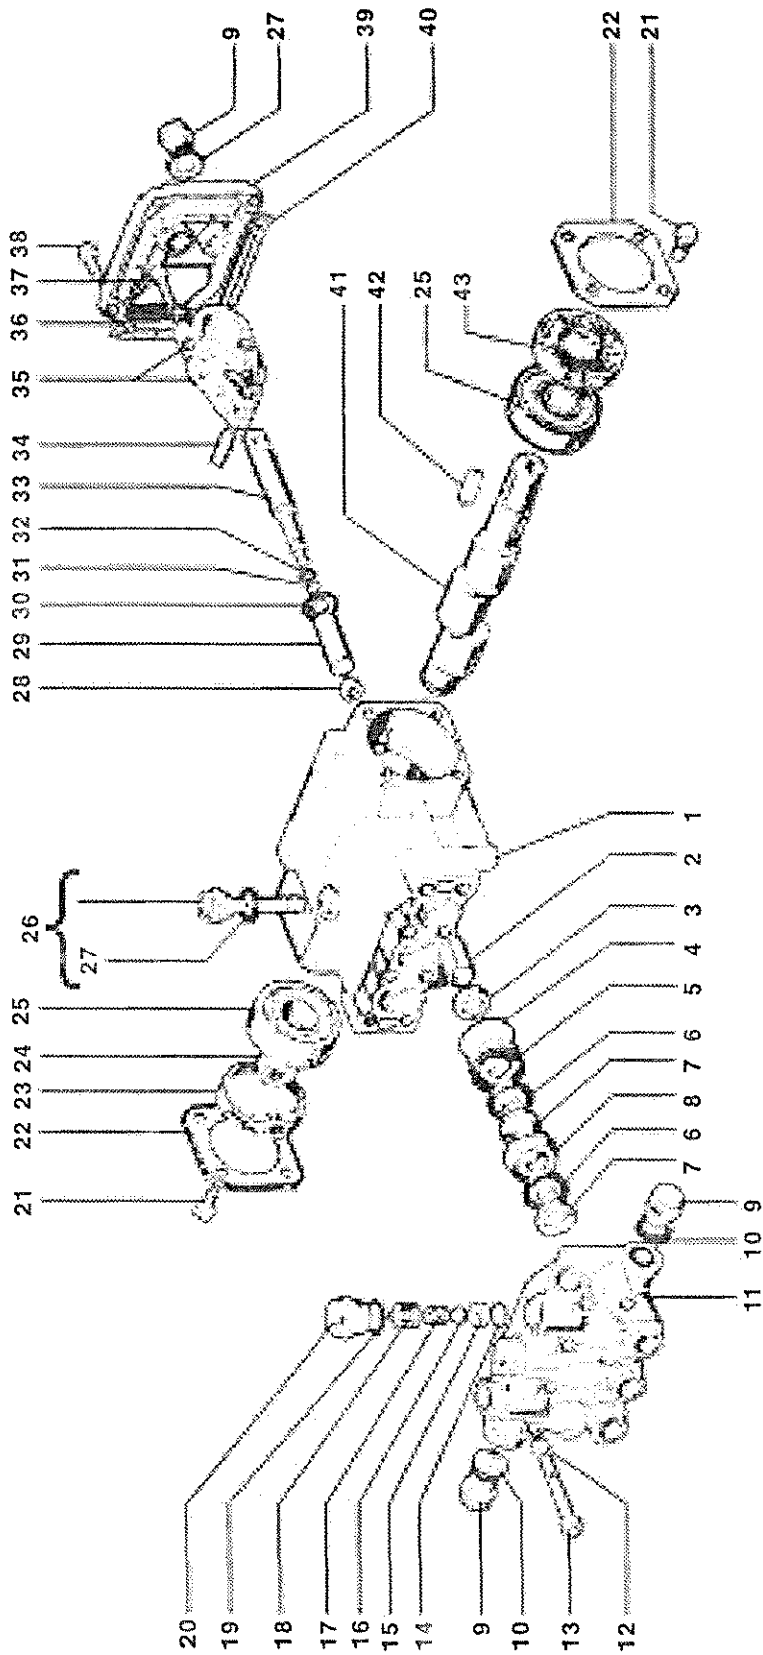


Figure 9 - Pump, Exploded View

Ref. No.	Part No.	Description	Qty.
1	630683	Crankcase	1
2	860361	Plunger Guide	3
3	▼ ➦	Plunger seal	3
4	▼ ◆	Pressure Ring O-Ring	3
5	▼	Pressure Ring (18 mm)	3
6	▼ ◆	V-Sleeve (18 mm)	6
7	▼ ◆	Support Ring (18 mm)	6
8	▼	Intermediate Ring (18 mm)	3
9	915630	Plug, 3/8"	3
10	780565	Copper Washer, 3/8"	2
11	783854	Manifold Housing	1
12	780560	Washer	8
13	875571	Manifold Stud Bolt	1
14	★	Valve Seat O-Ring	6
15	★	Valve Seat	6
16	★	Valve Plate	6
17	★	Valve Spring	6
18	★	Valve Cage	6
19	926657	Manifold Plug O-Ring	6
20	823335	Manifold Plug	6
21	875572	Hex Screw	8
22	615488	Bearing Cover	2
23	878575	Sight Glass	1
	818575	O-Ring	1
24	860141	Crankshaft Snap Ring	1

Ref. No.	Part No.	Description	Qty.
25	808895	Ball Bearing	2
26	814210	Oil Dipstick	1
27	855893	Gasket, 3/8"	2
28	◆	Plunger Nut	3
29	◆	Ceramic Plunger Sleeve (18mm)	3
30	◆	Copper Spacer	3
31	◆	Plunger Rod O-Ring	3
32	◆	Teflon Ring	3
33	829669	Plunger Rod	3
34	860142	Connecting Rod Pin	3
35	630688	Connecting Rod Assembly	3
36	780564	Spring Washer	6
37	878197	Allen Screw	6
38	735313	Crankcase Cover Allen Screw	4
39	827324	Crankcase Cover	1
40	855889	Crankcase Cover Gasket	1
41	632000	Crankshaft	1
42	877249	Pump Shaft Key	1
43	632020	Crankshaft Seal	1
<b>Replacement Parts</b>			
	▼ 753106	Complete Seal Packing Kit (18mm)	3
	◆ 877672	Seal Packing Kit (18 mm)	1
	★ 753039	Complete Valve Assembly Kit	6
	➦ 753107	Ceramic Sleeve Kit (18 mm)	3
	◆ 877655	Plunger Seal Kit	1

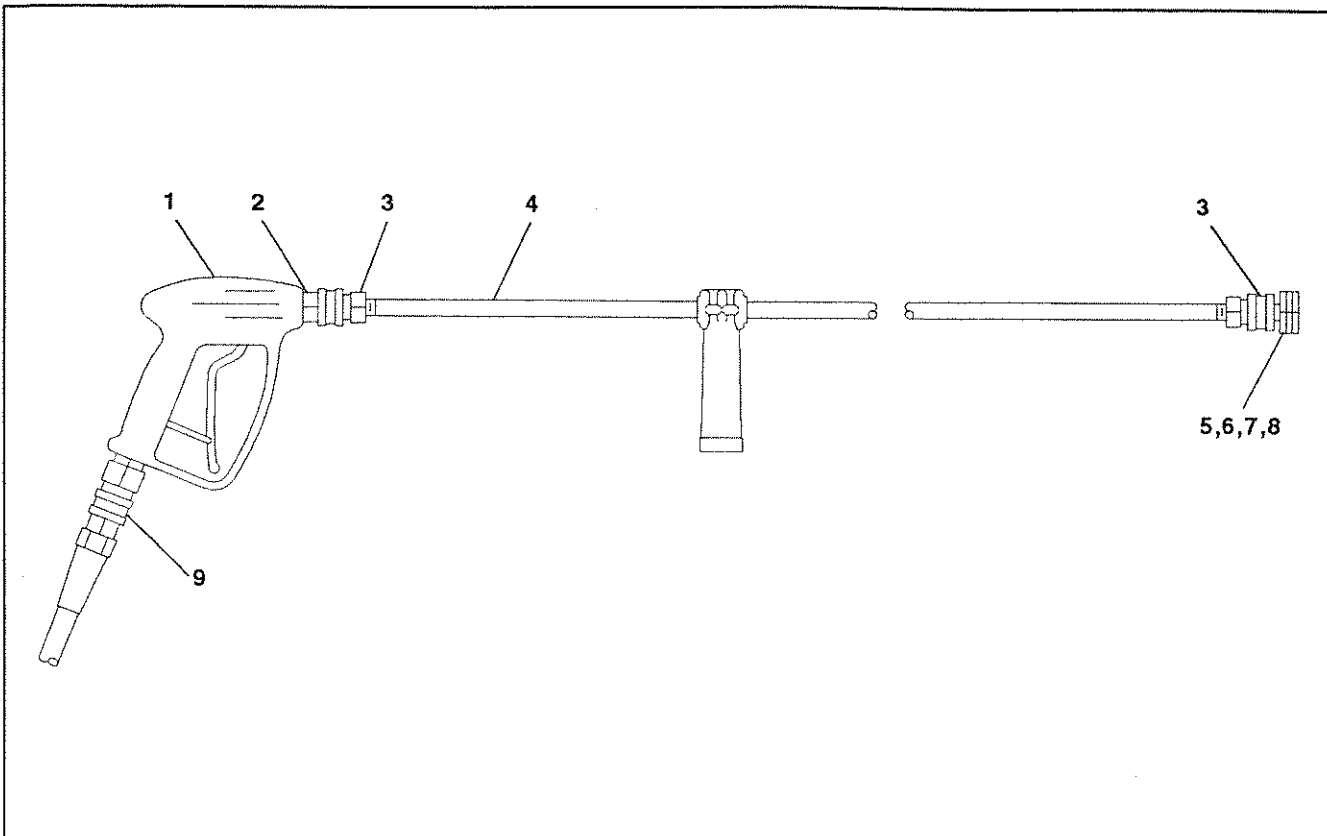


Figure 10 - Trigger Gun/Wand Assembly

Ref. No.	Part No.	Description	Qty.
1	860447	Trigger Gun, Fig. 11	1
2	915786	Quick Disconnect Plug	1
3	826169	Quick Disconnect	2
4	936701	Wand	1
5	799000	Pressure Nozzle (Red)	1

Ref. No.	Part No.	Description	Qty.
6	799012	Pressure Nozzle (Yellow)	1
7	799144	Pressure Nozzle (Green)	1
8	799024	Pressure Nozzle (White)	1
9	826177	Quick Disconnect	1

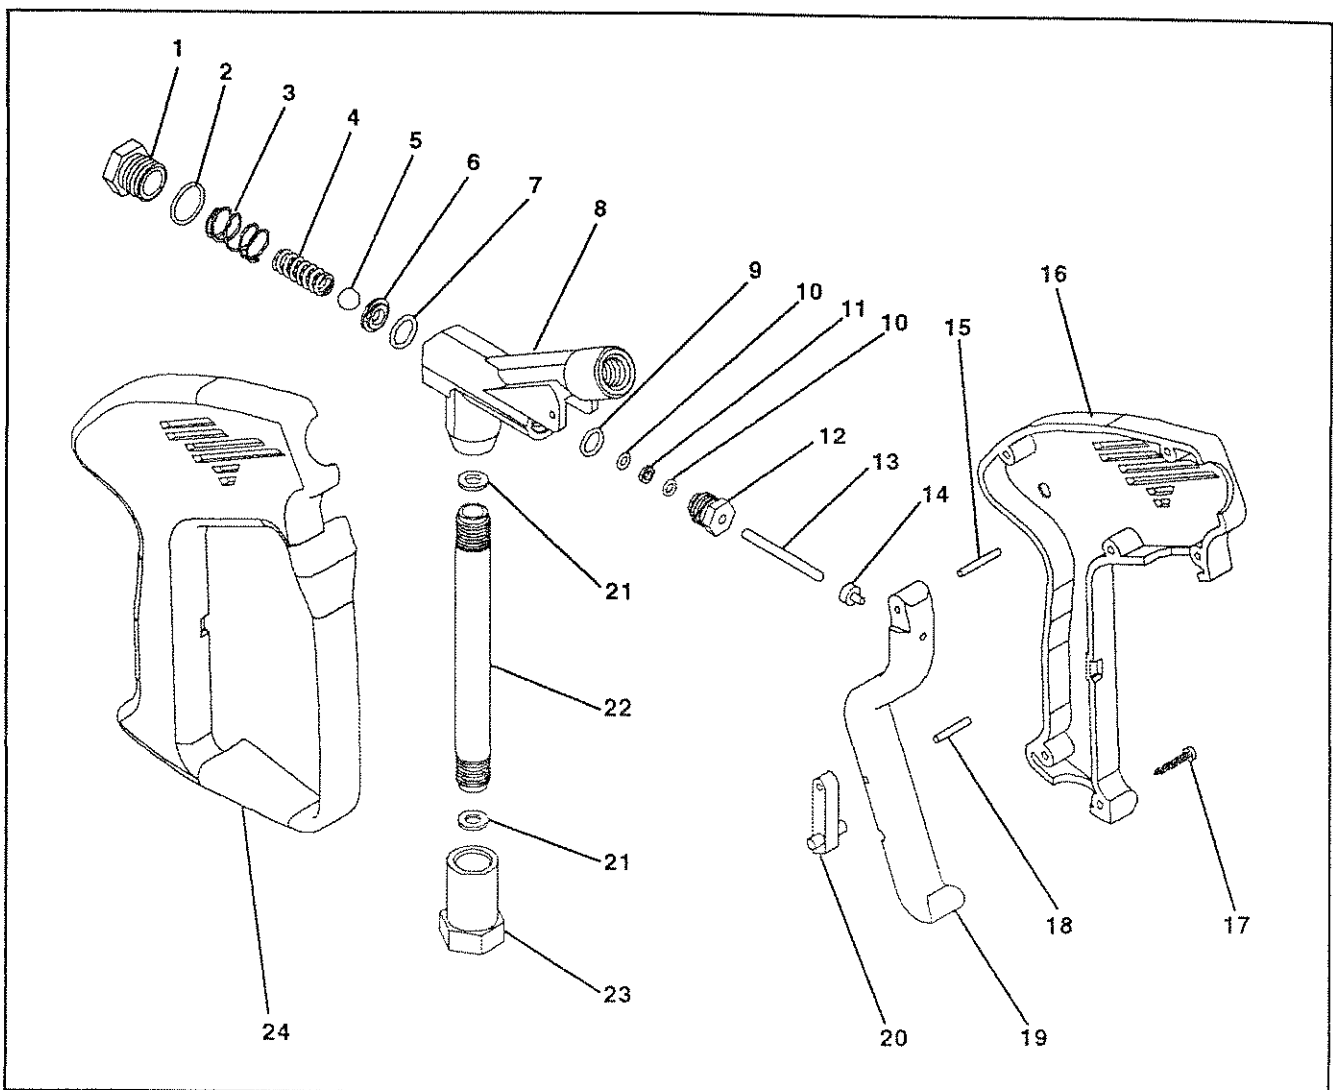


Figure 11 - Trigger Gun, Exploded View

Ref. No.	Part No.	Description	Qty.
1	817320	Valve Cap	1
2	⊙	Valve Cap O-Ring	1
3	⊙	Valve Seat Spring	1
4	⊙	Valve Spring	1
5	⊙	Ball	1
6	⊙	Valve Seat	1
7	⊙	Valve Seat O-Ring	1
8	812801	Valve Body	1
9	⊙	Plunger Guide Seat O-Ring	1
10	⊙	Plunger Guide Backring	2
11	⊙	Plunger Guide O-Ring	1
12	⊙	Plunger Guide	1
13	⊙	Plunger Rod	1

Ref. No.	Part No.	Description	Qty.
14	⊙	Plunger Seat	1
15	914141	Trigger Pin	1
16	860495	Left Gun Shell	1
17	735316	Phillips Screw	6
18	914142	Trigger Lock Pin	1
19	960271	Trigger	1
20	881941	Trigger Lock Lever	1
21	936460	Inlet Pipe Seat	2
22	914285	Inlet Pipe	1
23	851190	Inlet Fitting	1
24	860496	Right Gun Shell	1
<b>Replacement Kit</b>			
	⊙ 877471	Trigger Gun Repair Kit	