

PARTS MANUAL



JRT RIDE-ON POWER TROWEL

MODEL # _____

SERIAL # _____

Revision #1 (11/04/02)

© COPYRIGHT 2002, MULTQUIP INC.



MULTQUIP INC.

18910 WILMINGTON AVE.
CARSON, CALIFORNIA 90746
310-537-3700
800-421-1244
FAX: 310-537-3927

E-mail: mq@multiquip.com • **www:** www.multiquip.com

PARTS DEPARTMENT:

800-427-1244
FAX: 800-672-7877

SERVICE DEPARTMENT/TECHNICAL ASSISTANCE:


800-478-1244
FAX: 310-631-5032

Atlanta • Boise • Dallas • Houston • Newark
Montreal, Canada • Manchester, UK
Rio De Janeiro, Brazil • Guadalajara, Mexico

P/N 10766

JRT RIDE-ON POWER TROWEL — ENGINE & CLUTCH ASSY.

ENGINE & CLUTCH ASSY.

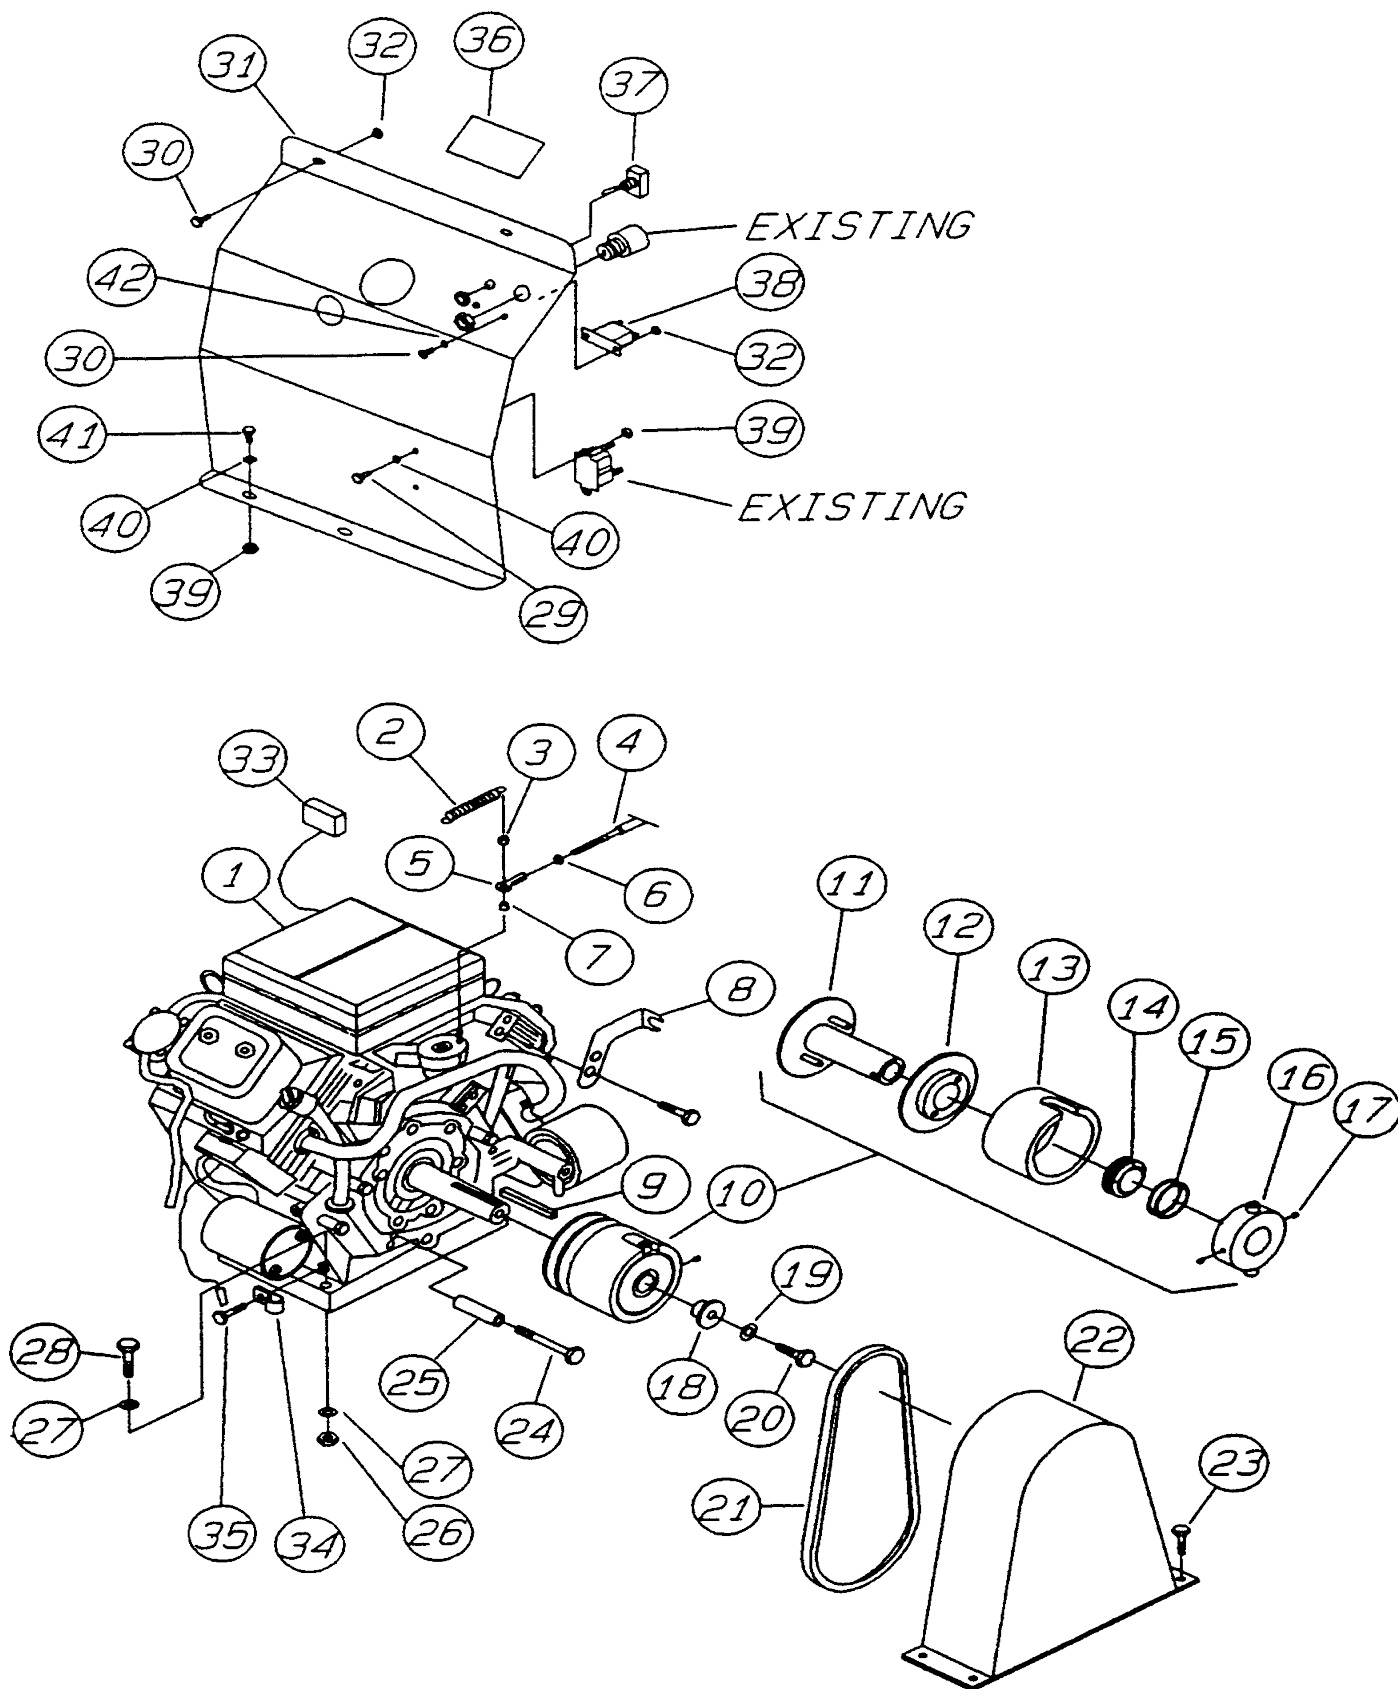


JRT RIDE-ON POWER TROWEL — ENGINE & CLUTCH ASSY.

ENGINE & CLUTCH ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1		BRIGGS /STRATTON VANGUARD 16 HP. ENGINE	1	
2	2192	THROTTLE SPRING	1	
3	2194	THROTTLE NUT	1	
4	2124	THROTTLE CABLE	1	
5	2153	SPHERICAL BEARING	1	
6	0937	HEX NUT 10- 32	1	
7	2190	SPACER	1	
8	2162	THROTTLE CABLE MOUNTING BRACKET	1	
9	0310	CLUTCH KEY	1	
10	1880	4" CLUTCH ASSEMBLY (1" BORE)	1	FROM SF16747 TO RJ23742
10	2516	4" CLUTCH ASSEMBLY (1" BORE)	1	FROM RJ23746
11	1882	CLUTCH SPINDLE	1	
12	1886	CLUTCH PULLEY ASSEMBLY	1	
13	1889	CLUTCH BOWL ASSEMBLY	1	FROM SF16747 TO RJ23742
13	2504	CLUTCH BOWL ASSEMBLY	1	FROM RJ23746
14	1890	CLUTCH WEIGHT SET	1	FROM SF16747 TO RI23564
14	2451	CLUTCH WEIGHT SET	1	FROM RI23565
15	0855	WEIGHT SPRING	2	FROM SF16747 TO RI23564
15	2450	WEIGHT SPRING	2	FROM RI23565
16	1888	CLUTCH PLATE	1	FROM SF16747 TO RJ23742
16	2506	CLUTCH PLATE (WITH ROLLERS)	1	FROM RJ23746
17	1893	SET SCREW	2	
18	9123	CLUTCH RETAINER	1	
19	0166A	3/8" LOCK WASHER	1	
20	0478	HHCS 3/8- 24X 2.1/4"	1	
21	2155	DRIVE BELT A- 37	2	
22	2134	BELT GUARD	1	
23	1273	HHSTS 8- 32X3/8"	4	
24	0169	HHCS 3/8- 16X3"	1	
25	2257	BELT GUIDE	1	

JRT RIDE-ON POWER TROWEL — ENGINE & CLUTCH ASSY.

ENGINE & CLUTCH ASSY.

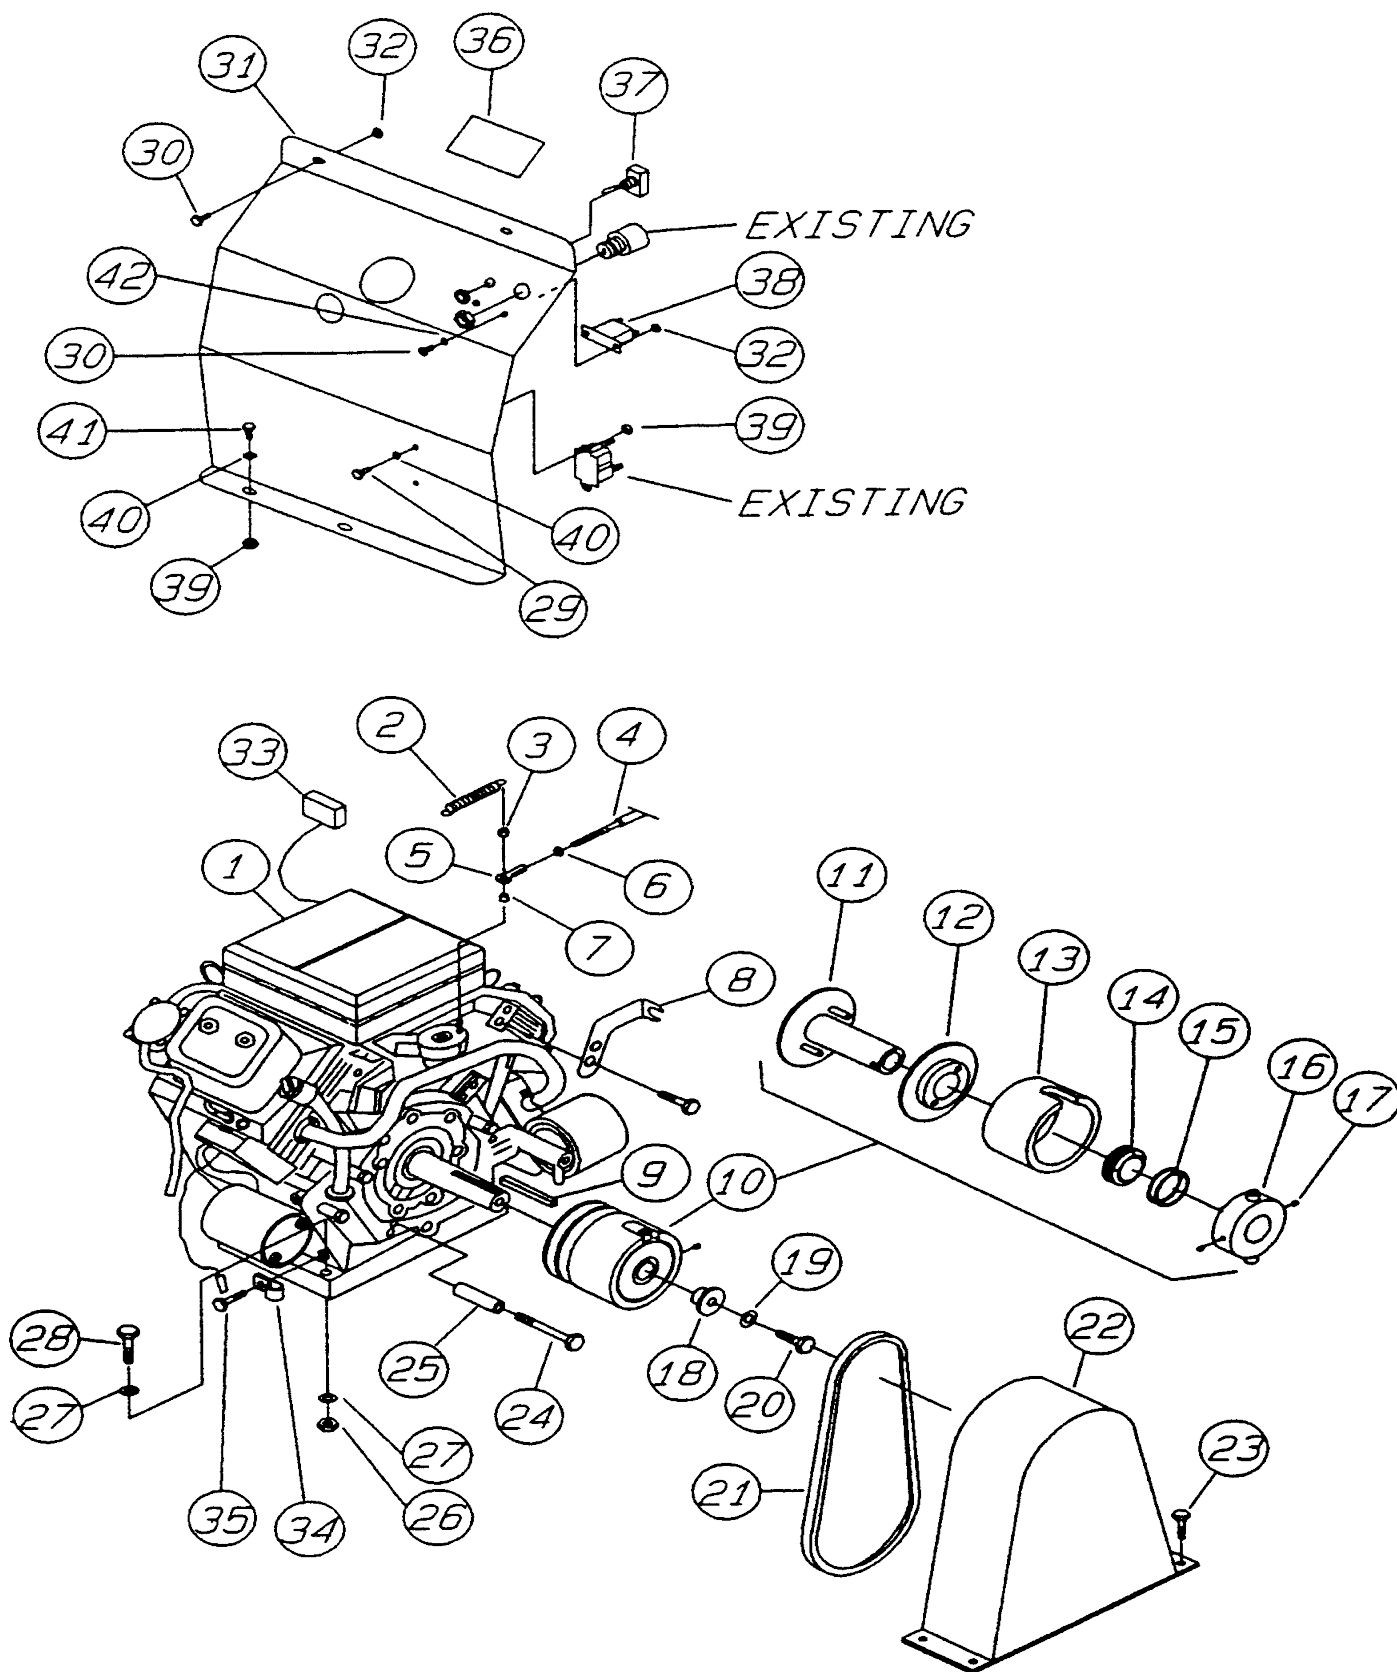


JRT RIDE-ON POWER TROWEL — ENGINE & CLUTCH ASSY.

ENGINE & CLUTCH ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
26	5283	NUT FLEXLOC 5/16- 18	4	
27	0300B	FLAT WASHER 5/16"	9	
28	1207	HHCS 5/16- 18X1.3/4"	4	
29	2198	SHCS 6MM X 1.0 X 10MM	1	
30	5065B	RHMS 10- 32 X 1/2"	4	
31	2089	FRONT HEAT SHIELD	1	TO PA27079
31	2590	CONTROL PANEL, MODEL JRT92	1	FROM PA27079
32	10019	FLEXLOC NUT 10- 32	4	
33	2655	HOUR METER	1	FROM QH26222
34	8126	HOSE CLAMP	1	
35	2299	HHCS 8MM X 1.5 X 15MM, MODEL JRT92	1	FROM PA27079
36	2697	DECAL CONTROL PANEL, MODEL JRT92	1	FROM PA27079
37	4682	LIGHT SWITCH (OPTIONAL),MODEL JRT92	1	FROM PA27079
38	2673	CIRCUIT BREAKER, MODEL JRT92	1	FROM PA27079
39	10024	FLEXLOC NUT 1/4- 20, MODEL JRT92	4	FROM PA27079
40	0948	FLAT WASHER 1/4"	4	
41	4514	HHCS 1/4- 20 X 5/8", MODEL JRT92	2	FROM PA27079
42	2203	FLAT WASHER #10, MODEL JRT92	2	FROM PA27079

JRT RIDE-ON POWER TROWEL — DRIVE ASSY.

DRIVE ASSY.

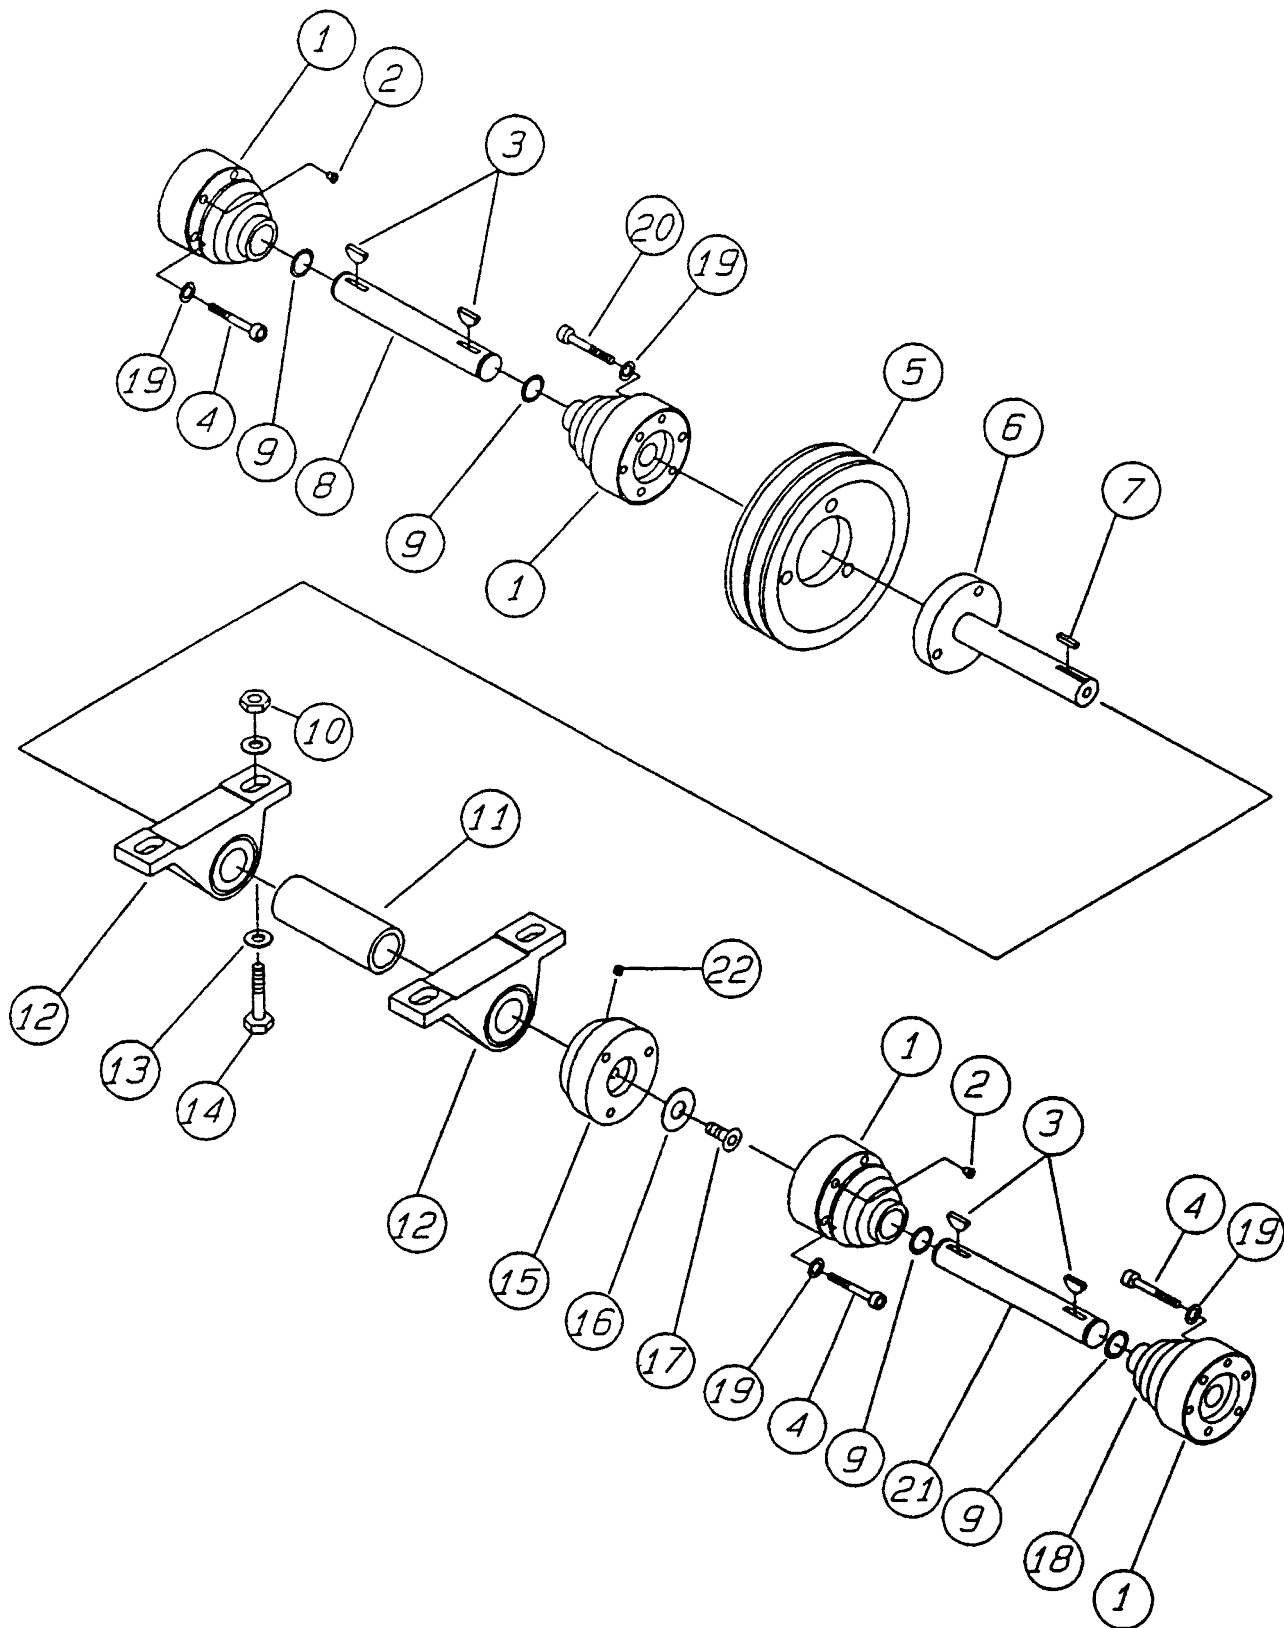


JRT RIDE-ON POWER TROWEL — DRIVE ASSY.

DRIVE ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	2052	C. V. JOINT	4	
2	2218	PLUG	12	
3	0126	WOODRUFF KEY	4	
4	2186	SHCS 5/16-18X2.1/4"	9	
5	2019	PULLEY	1	
6	2034	BEARING SHAFT	1	
7	2126	KEY	1	
8	2071	LEFT SIDE DRIVE SHAFT	1	
9	2090	SNAP RING	4	
10	10133	FLEXLOC NUT 3/8"	4	
11	2142	SPACER	1	
12	4182	PILLOW BLOCK BEARING	2	
13	10136	FLAT WASHER 3/8"	8	
14	1284	HHCS 3/8-16X1.1/2"	4	
15	2029	COUPLER 1" ID.	1	
16	2037	RETAINING WASHER	1	
17	1146	FHSCS 5/16- 18X1"	3	
18	2259	C.V. JOINT BOOT (REPLACEMENT ONLY)		
19	0161C	FLAT WASHER 5/16"	12	
20	2187	SHCS 5/16- 18X2.1/2"	3	
21	2074	RIGHT SIDE DRIVE SHAFT	1	
22	10138	SHSS 1/4- 20 X 1/2"	1	

JRT RIDE-ON POWER TROWEL — STEERING ASSY.

STEERING ASSY.

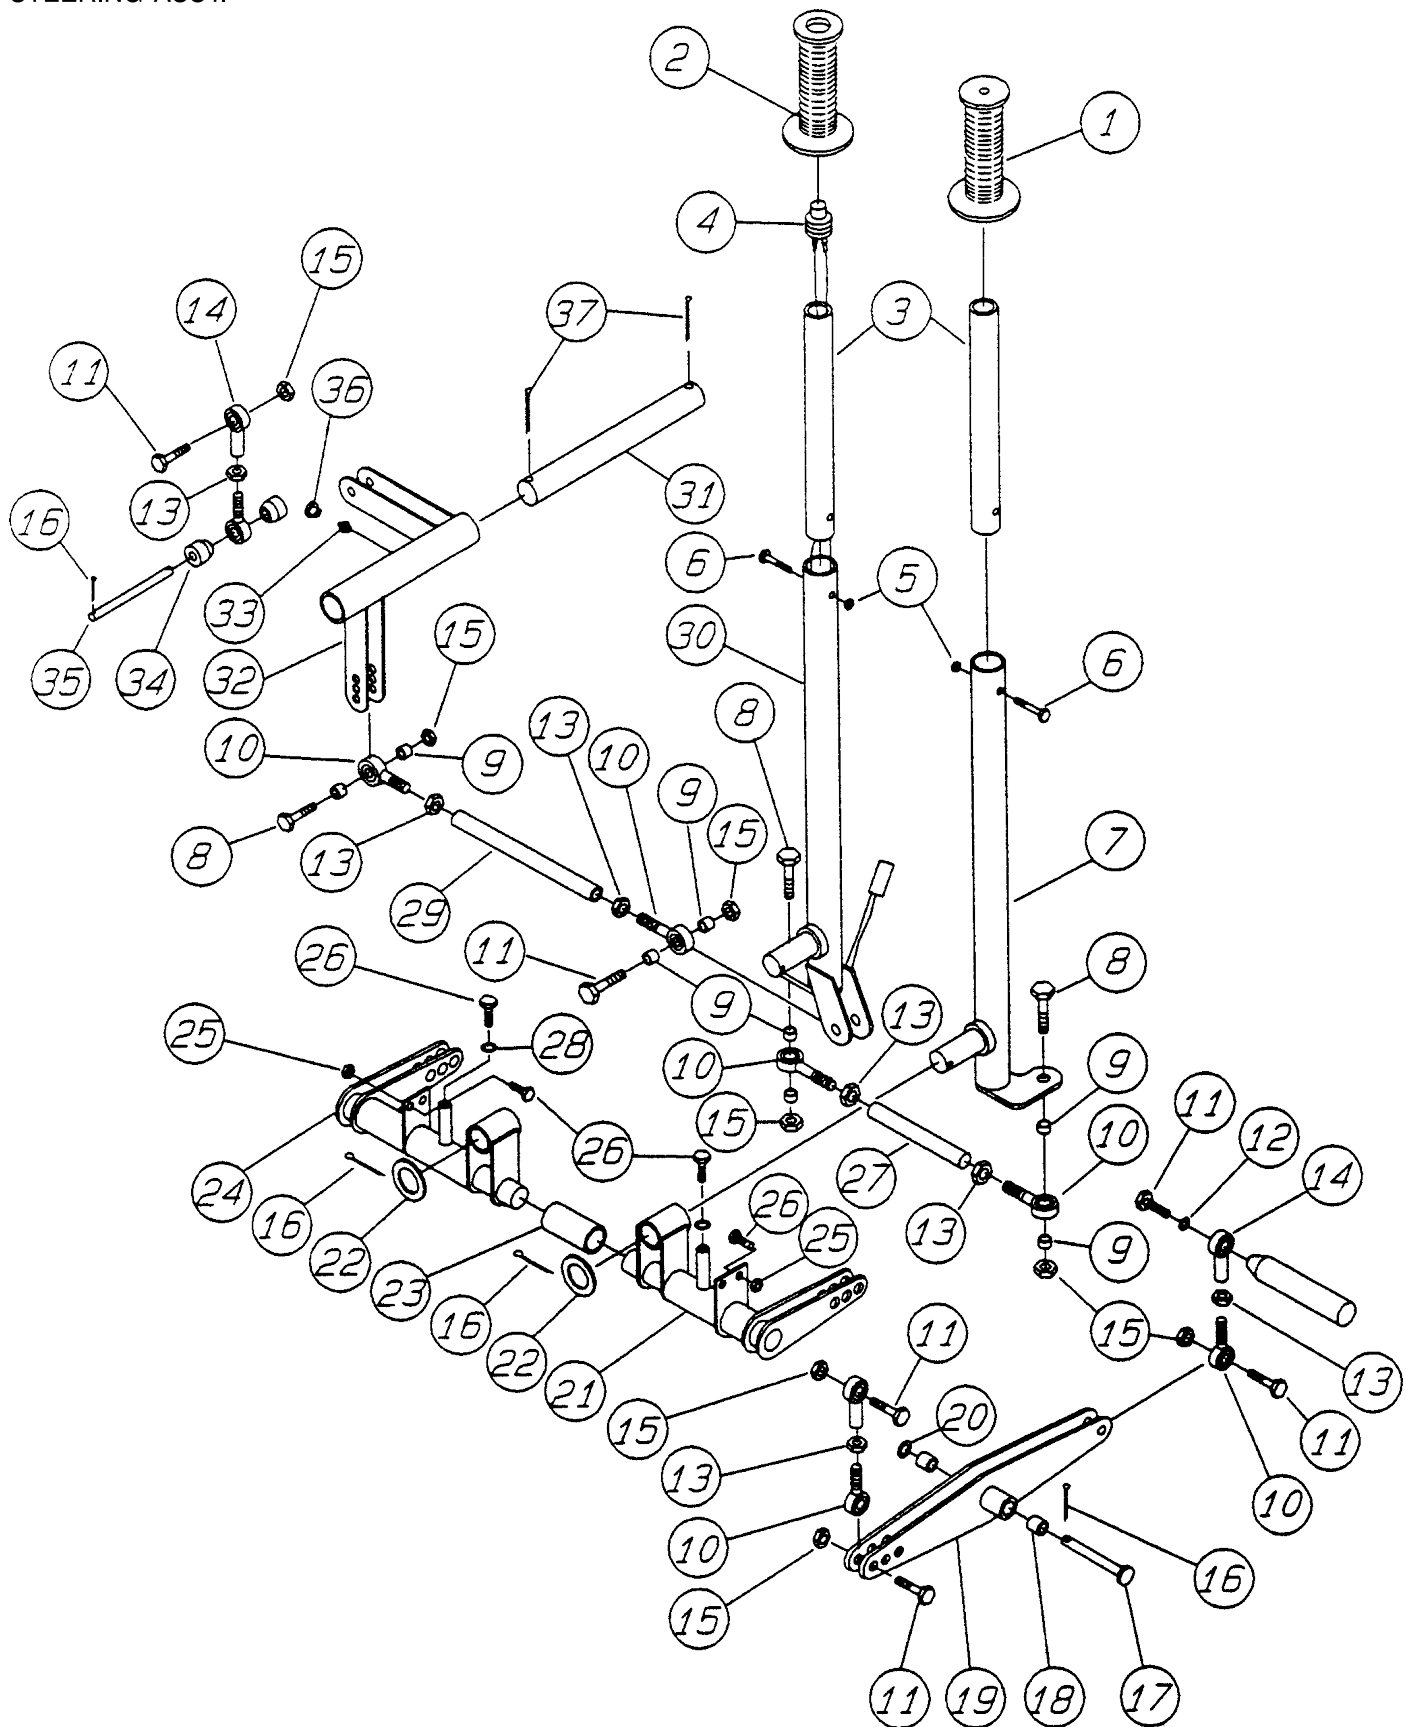


JRT RIDE-ON POWER TROWEL — STEERING ASSY.

STEERING ASSY.


<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	0189	LEFT SIDE HAND GRIP (NO OPTIONS)	1	
1	2267	LEFT SIDE HAND GRIP (RETARDANT SPRAY)	1	
2	267	RIGHT SIDE HAND GRIP	1	
3	2224	HANDLE EXTENSIONS	2	
4	2766	KILL BUTTON ASSEMBLY	1	
5	2197	ACORN NUT 1/4- 20	2	
6	424	HHCS 1/4- 20 X 1.1/4"	2	
7	2055	LEFT HANDLE	1	FROM SF16747 TO RD21688
7	2355	LEFT HANDLE	1	FROM RD21713
8	9154	HHCS 3/8- 16 X 1.3/4"	2	FROM RD21713
9	2196	SPACER	8	
10	2063	RIGHT HAND MALE SPHERICAL BEARING	7	FROM SF16747 TO RD21688
11	1023	HHCS 3/8- 16 X 1.1/4"	9	FROM RD21713
12	166A	LOCK WASHER 3/8"	2	
13	2199	JAM NUT 3/8- 24	9	
14	2064	RIGHT HAND FEMALE SPHERICAL BEARING	5	
15	10133	FLEXLOC NUT 3/8- 16	11	
16	183	COTTER PIN	5	
17	2097	CLEVIS PIN	2	
18	1484	BUSHING	4	
19	2038	STEERING CONTROL LEVER	2	
20	10136	FLAT WASHER 3/8"	2	
21	2356	LEFT SIDE STEERING ASSEMBLY	1	
22	8151	FLAT WASHER 3/4"	2	
23	2123	CENTER SPACER	1	
24	2225	RIGHT SIDE STEERING ASSEMBLY	1	
25	5283	FLEXLOC NUT 5/16- 18	4	
26	655	HHCS 5/16- 18 X 3/4"	6	
27	2352	CONNECTOR ROD	1	FROM RD21713
28	161C	LOCK WASHER 5/16"	2	
29	2004	LINKAGE ROD	1	
30	2354	RIGHT SIDE STEERING ASSEMBLY	1	
31	2080	RIGHT /LEFT MOTION SHAFT	1	
32	2036	RIGHT /LEFT MOTION ARM	1	
33	5228	GREASE FITTING	3	
34	2188	SPACER	2	
35	2193	ADAPTER PLATE PIN	1	
36	1162A	LUBRA- CAP	3	
37	2219	COTTER PIN	2	

JRT RIDE-ON POWER TROWEL — GEARBOX ADAPTER PLATES ASSY.

GEARBOX ADAPTER PLATES ASSY.

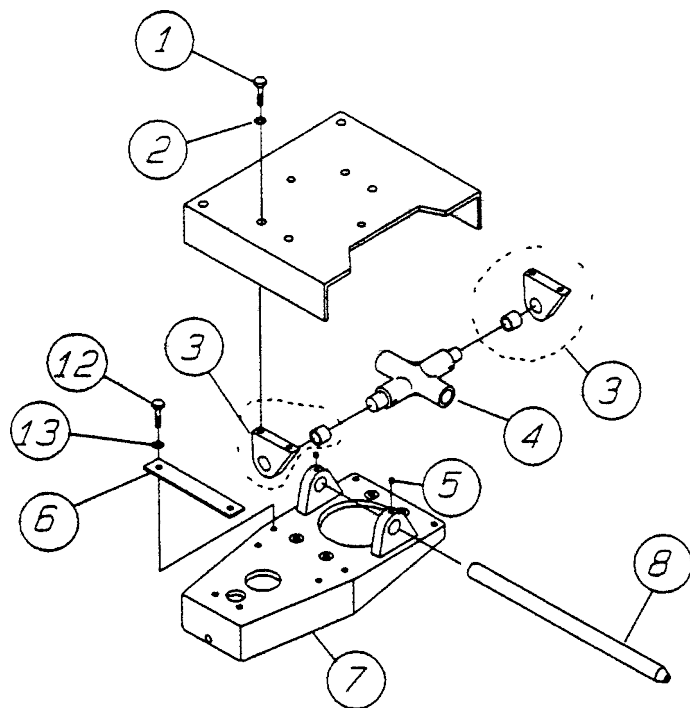

RIGHT SIDE

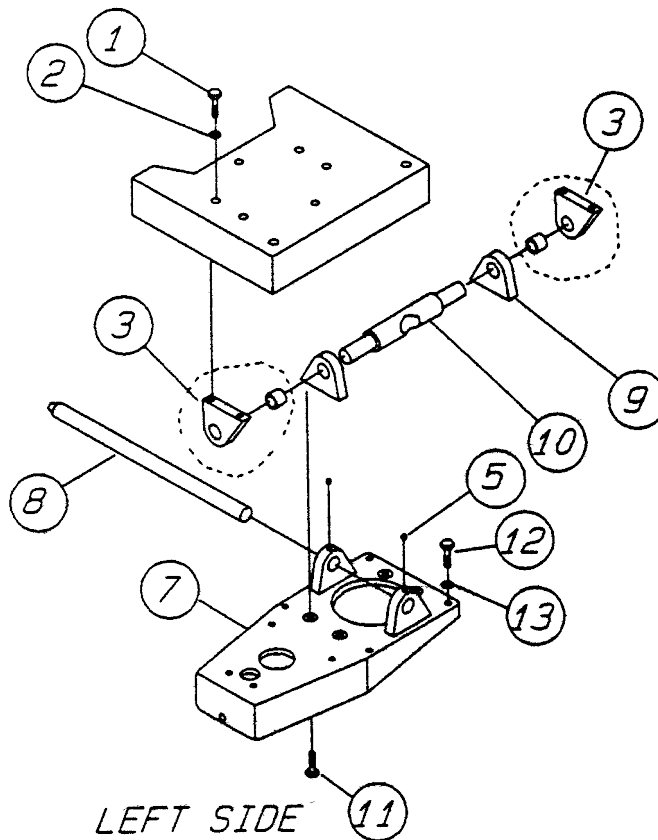

LEFT SIDE


JRT RIDE-ON POWER TROWEL — GEARBOX ADAPTER PLATES ASSY.

GEARBOX ADAPTER PLATES ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	1023	HHCS 3/8- 16 X 1.1/4"	8	
2	166A	LOCK WASHER 3/8"	8	
3	2079	ROCKER BLOCK	4	
4	2044	PIVOT ARM ASSEMBLY	1	
5	10138	SHSS 1/4- 20 X 1/2"	4	
6	1816	PLATE	1	
7	2132	ADAPTER PLATE	2	
8	2107	CONTROL PIVOT ROD	2	
9	2078	ROCKER BLOCK	2	
10	2076	PIVOT SHAFT	1	
11	1394	FHCS 3/8- 16 X 1"	4	
12	1284	HHCS 3/8- 16 X 1.1/2"	8	
13	166A	LOCK WASHER 3/8"	8	

JRT RIDE-ON POWER TROWEL — GEARBOX ASSY.

GEARBOX ASSY.

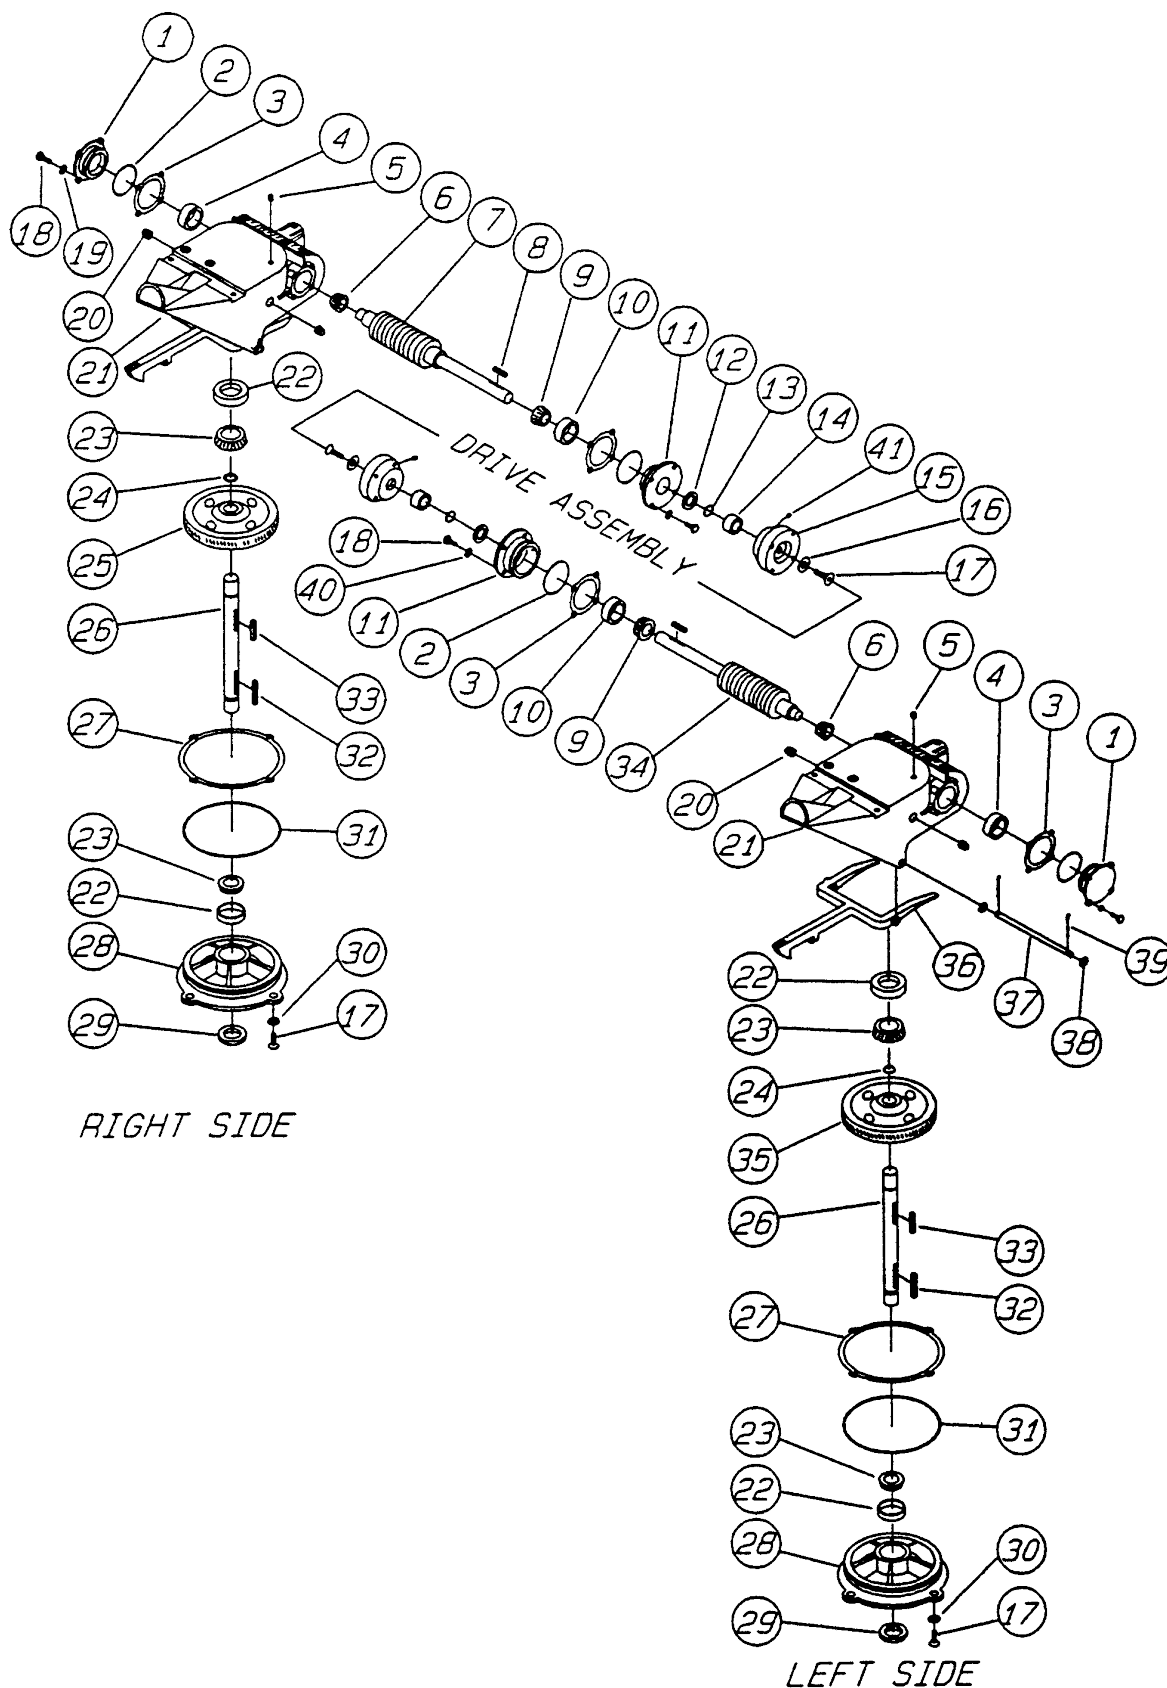


JRT RIDE-ON POWER TROWEL — GEARBOX ASSY.

GEARBOX ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	1136	END CAP	2	
2	2308	O- RING	4	
3	1134	GASKET	4	
4	735A	BEARING CUP	2	
5	1132	AIR VENT	2	
6	0735	BEARING CONE	2	
7	2031	RIGHT HAND WORM	1	
8	2126	KEY	2	
9	735	BEARING CONE	2	FROM SF16747 TO RD21397
9	2392	BEARING CONE	2	FROM RD21713
10	2391	BEARING CUP	2	FROM SF16747 TO RD21397
10	2391	BEARING CUP	2	FROM RD21713
11	2390	FLANGE	2	FROM SF16747 TO RD21397
11	2390	FLANGE	2	FROM RD21713
12	2117	OIL SEAL	2	
13	2115	O- RING	2	
14	2118	SPACER	2	
15	2030	COUPLER	2	
16	2037	RETAINING WASHER	2	
17	1146	FHSCS 5/16- 18 X 1"	10	
18	2295	HHCS 1/4- 20 X 7/8"	16	
19	181B	LOCK WASHER 1/4"	8	
20	121A	PLUG	4	
21	2112	GEARBOX	2	
22	232A	BEARING CUP	4	
23	2032	BEARING CONE	4	
24	1138	RETAINING RING	2	
25	2249	RIGHT HAND WORM GEAR	1	
26	2231	MAIN SHAFT	2	
27	1144	GASKET	2	
28	1145	COVER PLATE	2	
29	0254	SEAL	2	

JRT RIDE-ON POWER TROWEL — GEARBOX ASSY.

GEARBOX ASSY.

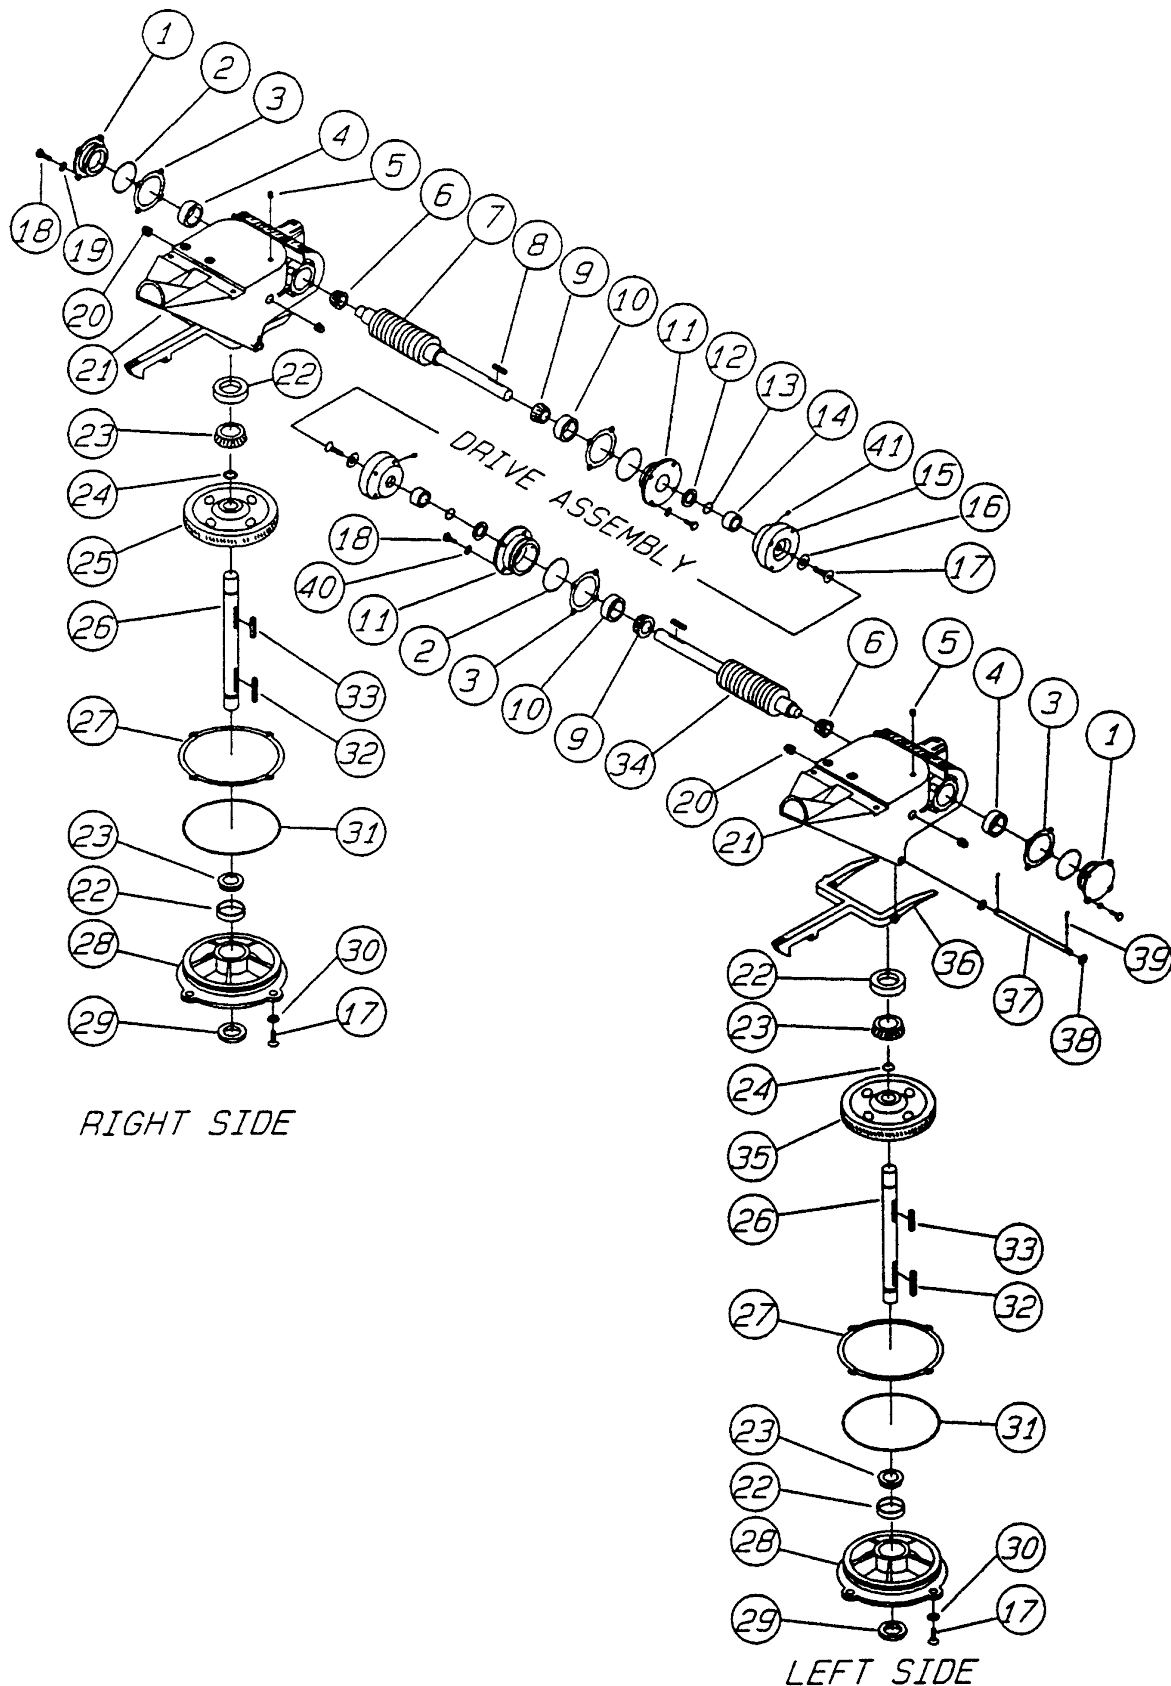


JRT RIDE-ON POWER TROWEL — GEARBOX ASSY.

GEARBOX ASSY.



<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
30	10235	INT. LOCK WASHER 5/16"	8	
31	1143	O- RING	2	
32	9183	KEY	2	
33	2229	KEY	2	
34	2003	LEFT HAND WORM	1	
35	2250	LEFT HAND WORM GEAR	1	
36	1150	YOKE ARM	2	
37	1151	YOKE PIN	2	
38	10136	FLAT WASHER 3/8"	2	
39	0683	COTTER PIN	4	
40	10031	EXT. LOCK WASHER 1/4"	8	
41	10138	SHSS 1/4- 20 X 1/2"	2	
	2633	GASKET REPLACEMENT KIT		NOT SHOWN
	2617	BEARING REPLACEMENT KIT		NOT SHOWN
	2141	RIGHT SIDE GEARBOX ASSEMBLY		NOT SHOWN
	2151	LEFT SIDE GEARBOX ASSEMBLY		NOT SHOWN

JRT RIDE-ON POWER TROWEL — SPIDER & BLADES ASSY.

LEFT SIDE

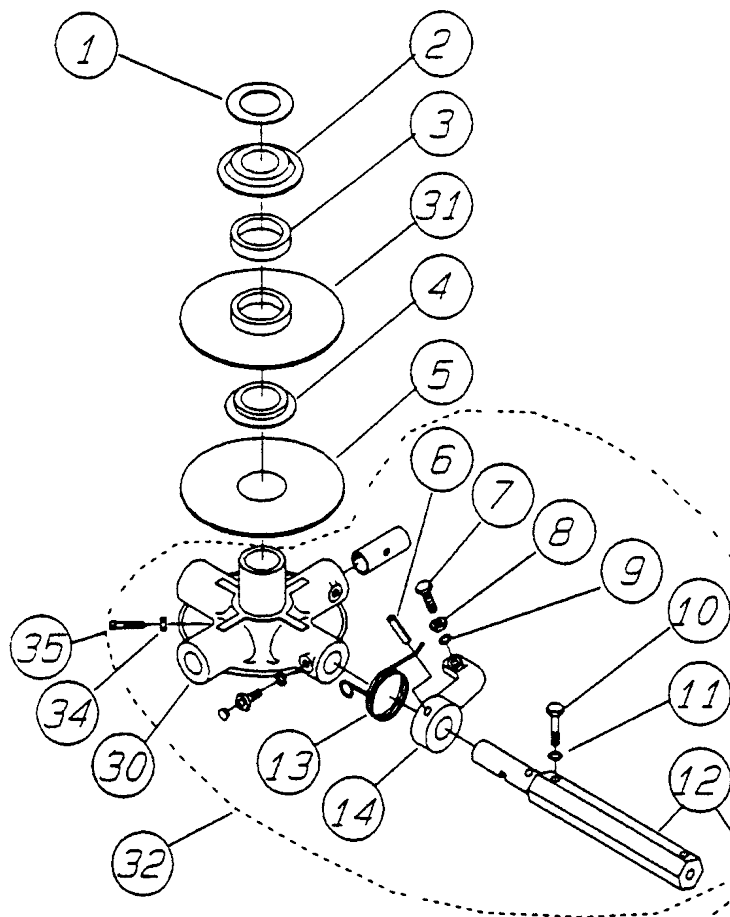

RIGHT SIDE

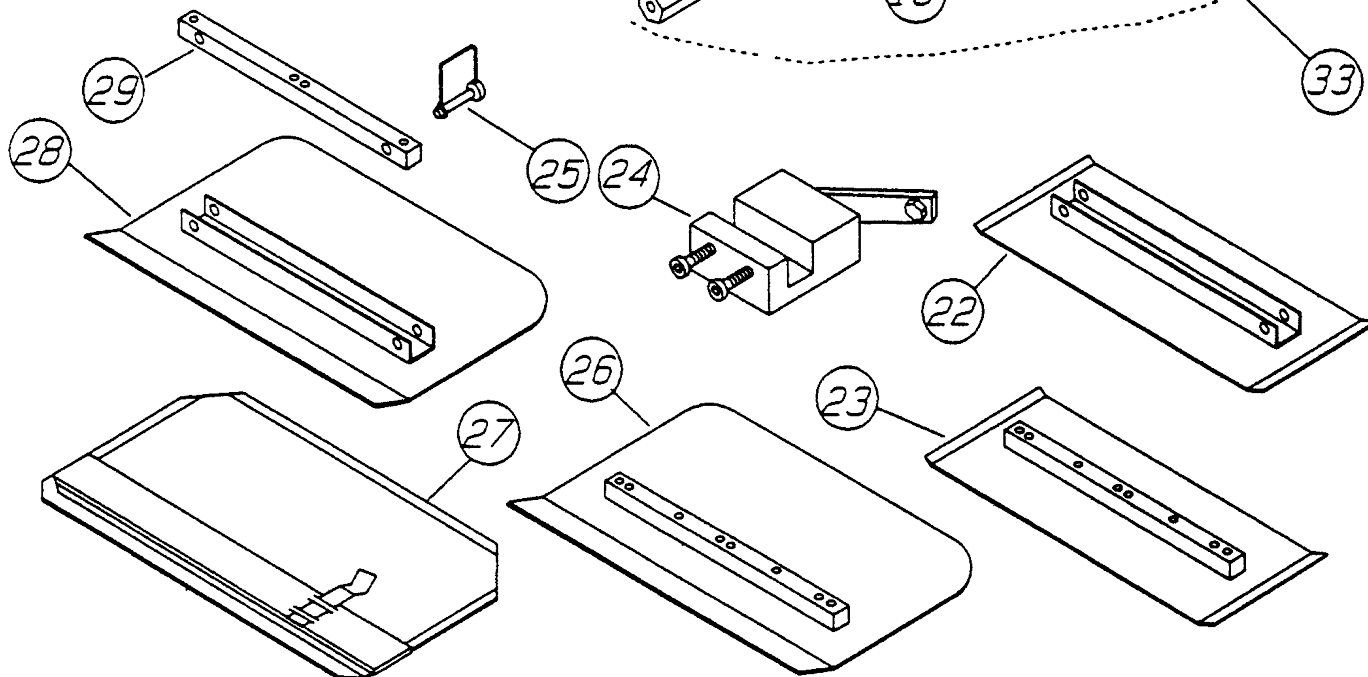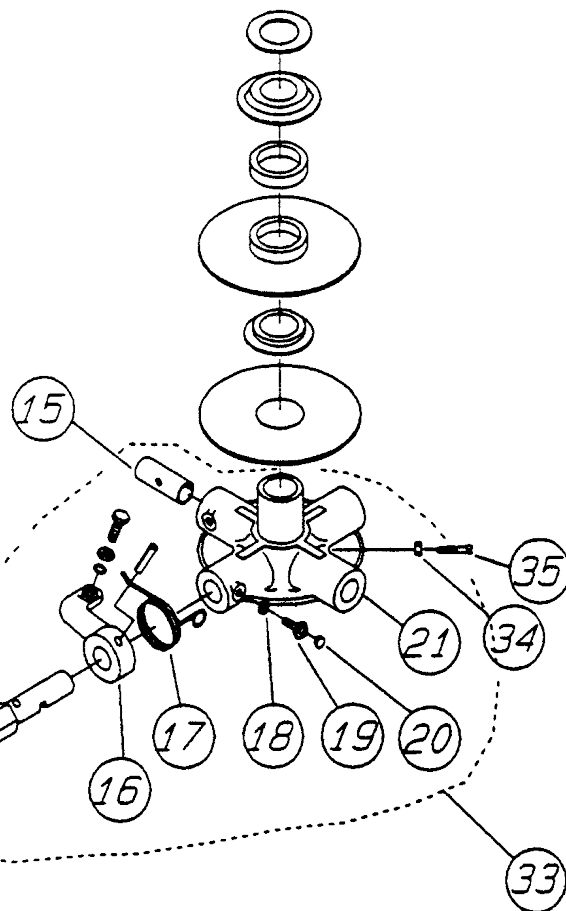


JRT RIDE-ON POWER TROWEL — SPIDER & BLADES ASSY.

SPIDER & BLADES ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	1803	WEAR PLATE	2	
2	1152	CAP- THRUST COLLAR	2	
3	1153	THRUST BEARING	2	
4	1471	THRUST COLLAR BUSHING	2	
5	1154A	WEAR PLATE	2	
6	4164	ROLL PIN	8	
7	164B	FULL THREAD RADIUS HEAD 3/8- 16 X 1.1/4	8	
8	1876	HEX JAM NUT 3/8- 16	8	
9	166A	LOCK WASHER 3/8"	8	
10	105	HHCS 5/16- 18 X 1.1/2"	16	
11	161C	LOCK WASHER 5/16"	16	
12	2826	TROWEL ARM	8	
13	1316	RIGHT HAND SPRING	4	
14	1163	RIGHT HAND TROWEL ARM LEVER	4	
15	1157A	BUSHING	8	
16	1555	LEFT HAND TROWEL ARM LEVER	8	
17	1317	LEFT HAND SPRING	4	
18	1875	INT. LOCK WASHER 3/8"	8	
19	1322	RETAINING SCREW	8	
20	1162A	LUBRA- CAP	8	
21	2136	LEFT HAND SPIDER	1	
22	1872	UNIVERSAL FIT FINISH BLADE	8	OPTIONAL
23	900	FINISH BLADE	8	OPTIONAL
24	1817	TROWEL ARM ADJUSTMENT FIXTURE	1	OPTIONAL
25	1869	SNAP PIN	16	OPTIONAL
26	844	COMBINATION FLOAT & FINISH BLADE	8	
27	954F	CLIP- ON FLOAT BLADE	8	OPTIONAL
28	1871	UNIVERSAL FIT COMBINATION BLADE	8	OPTIONAL
29	1857	UNIVERSAL FIT MOUNTING BAR	8	OPTIONAL
30	1899	RIGHT HAND SPIDER	1	
31	1898	THRUST COLLAR	2	INCLUDES ITEM #4
32	2279	LEFT SIDE SPIDER ASSEMBLY	1	RIGHT HAND ROTATION
33	2150	RIGHT SIDE SPIDER ASSEMBLY	1	LEFT HAND ROTATION
34	1456	HEX NUT 3/8- 16	2	
35	1167A	SQHSS 3/8-16 X 1.1/2"	2	

JRT RIDE-ON POWER TROWEL —TWIN PITCH CONTROL ASSY.

TWIN PITCH CONTROL ASSY.

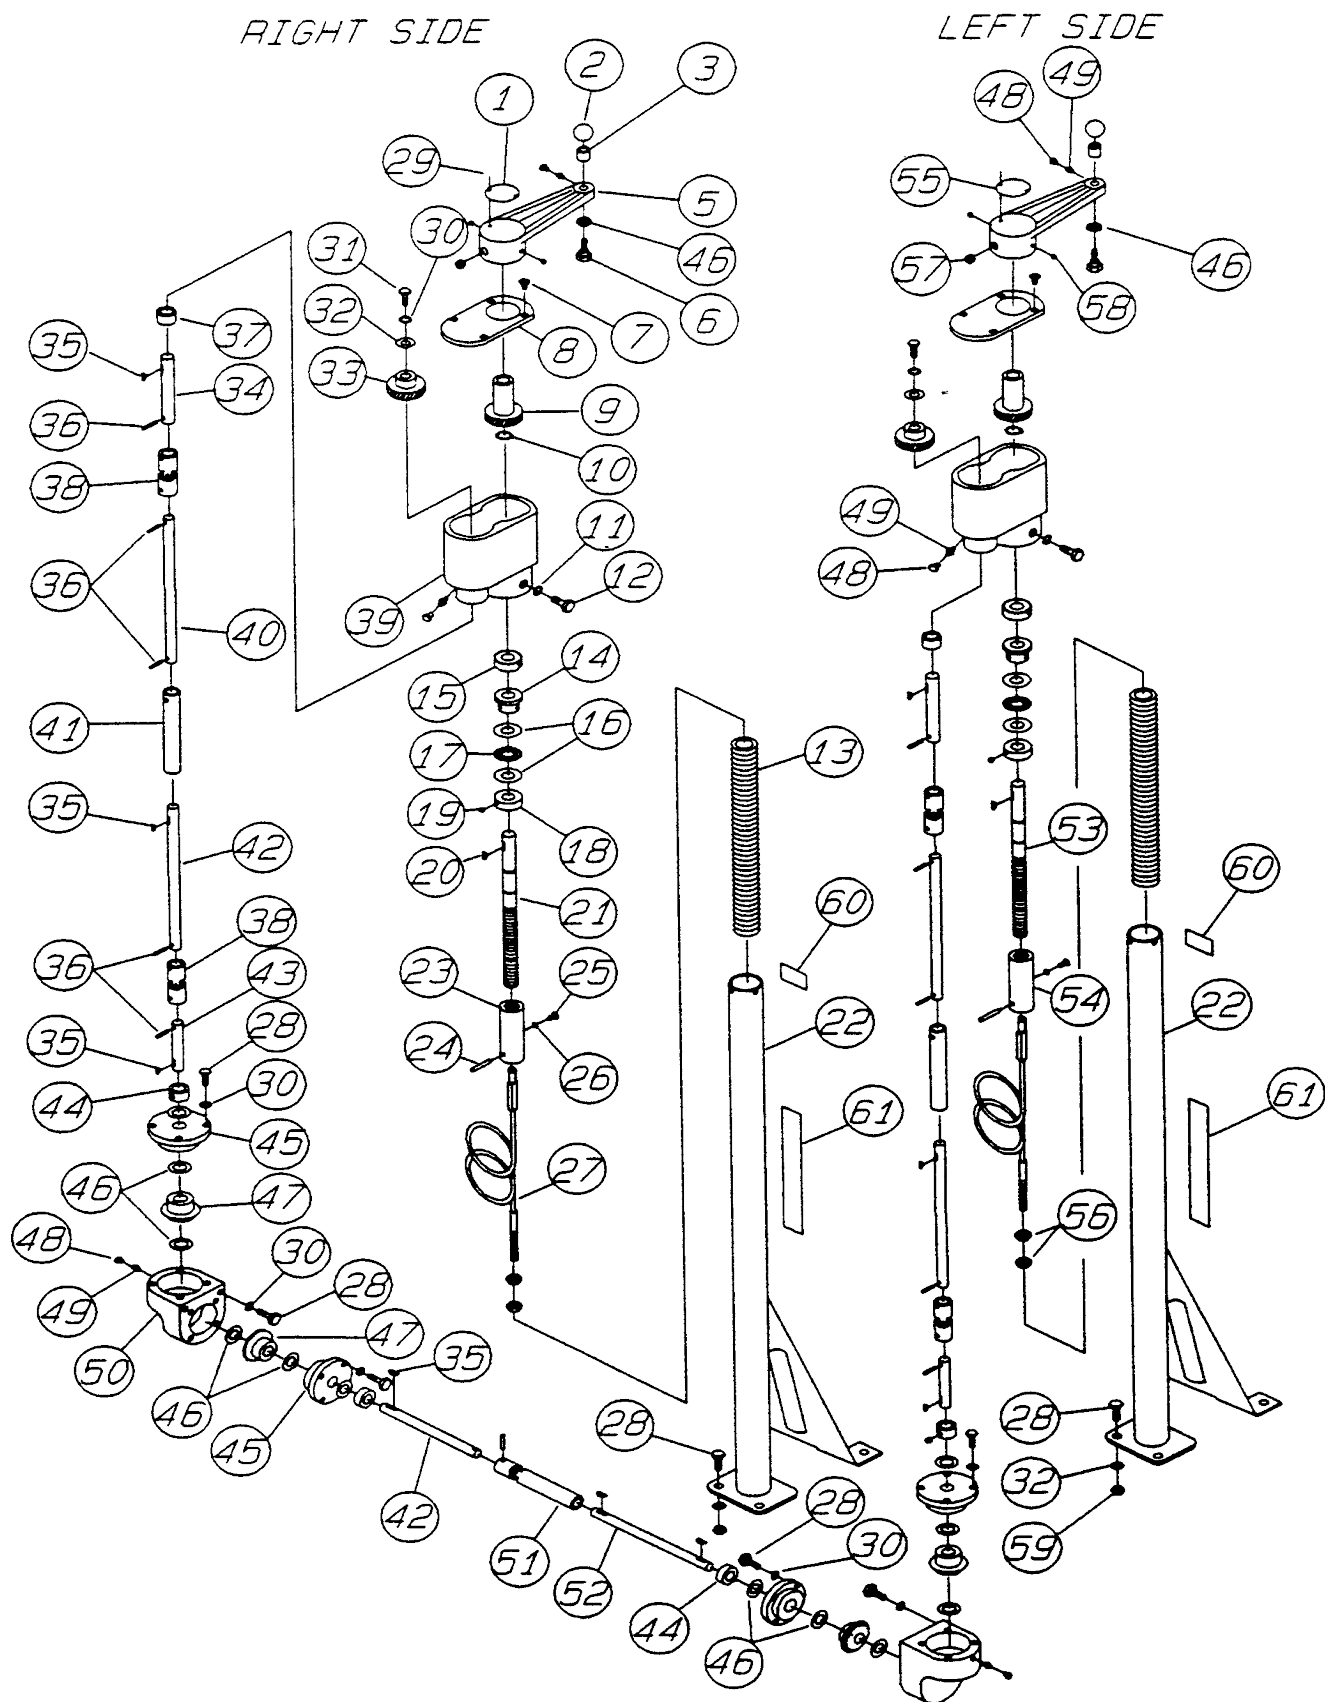


JRT RIDE-ON POWER TROWEL — TWIN PITCH CONTROL ASSY.

TWIN PITCH CONTROL ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	2300	RIGHT SIDE DECAL	1	
2	4403	CRANK KNOB	2	
3	1632	SPACER	2	
5	1615	CRANK LEVER	2	
6	1616	SHOULDER BOLT	2	
7	2620	BHMS 10- 24 X 5/8"	8	
8	2649	COVER PLATE	2	
9	1529	MASTER GEAR	2	
10	1135	RETAINING RING	4	
11	161C	LOCK WASHER 5/16"	6	
12	655	HHCS 5/16- 18 X 3/4"	6	
13	2156	SPRING	2	
14	1612	BEARING	2	
15	1604	BEARING	2	
16	2169	THRUST WASHER	4	
17	2170	THRUST BEARING	2	
18	3615	SET COLLAR	2	FROM SD16747 TO SH18636
18	2367	SET COLLAR	2	FROM SH16837
19	685	SHSS 5/16- 18 X 5/16"	4	
20	126	WOODRUFF KEY	2	
21	2601	RT. SIDE PITCH CONTROL SCREW	1	FROM SD16747 TO SH18636
21	2061	RT. SIDE PITCH CONTROL SCREW	1	FROM SH16837
22	2131	PITCH CONTROL TUBE	2	
23	2281	RIGHT SIDE SLIDE BLOCK	1	
24	1114	ROLL PIN	2	
25	786	BUTTON HEAD CAP SCREW 1/4- 20 X 3/8"	2	
26	786A	SPACER	2	
27	2008	CABLE	2	
28	730	HHCS 1/4- 20 X 1"	28	
29	4014	SCREW	4	
30	181B	LOCK WASHER 1/4"	22	

JRT RIDE-ON POWER TROWEL — TWIN PITCH CONTROL ASSY.

TWIN PITCH CONTROL ASSY.

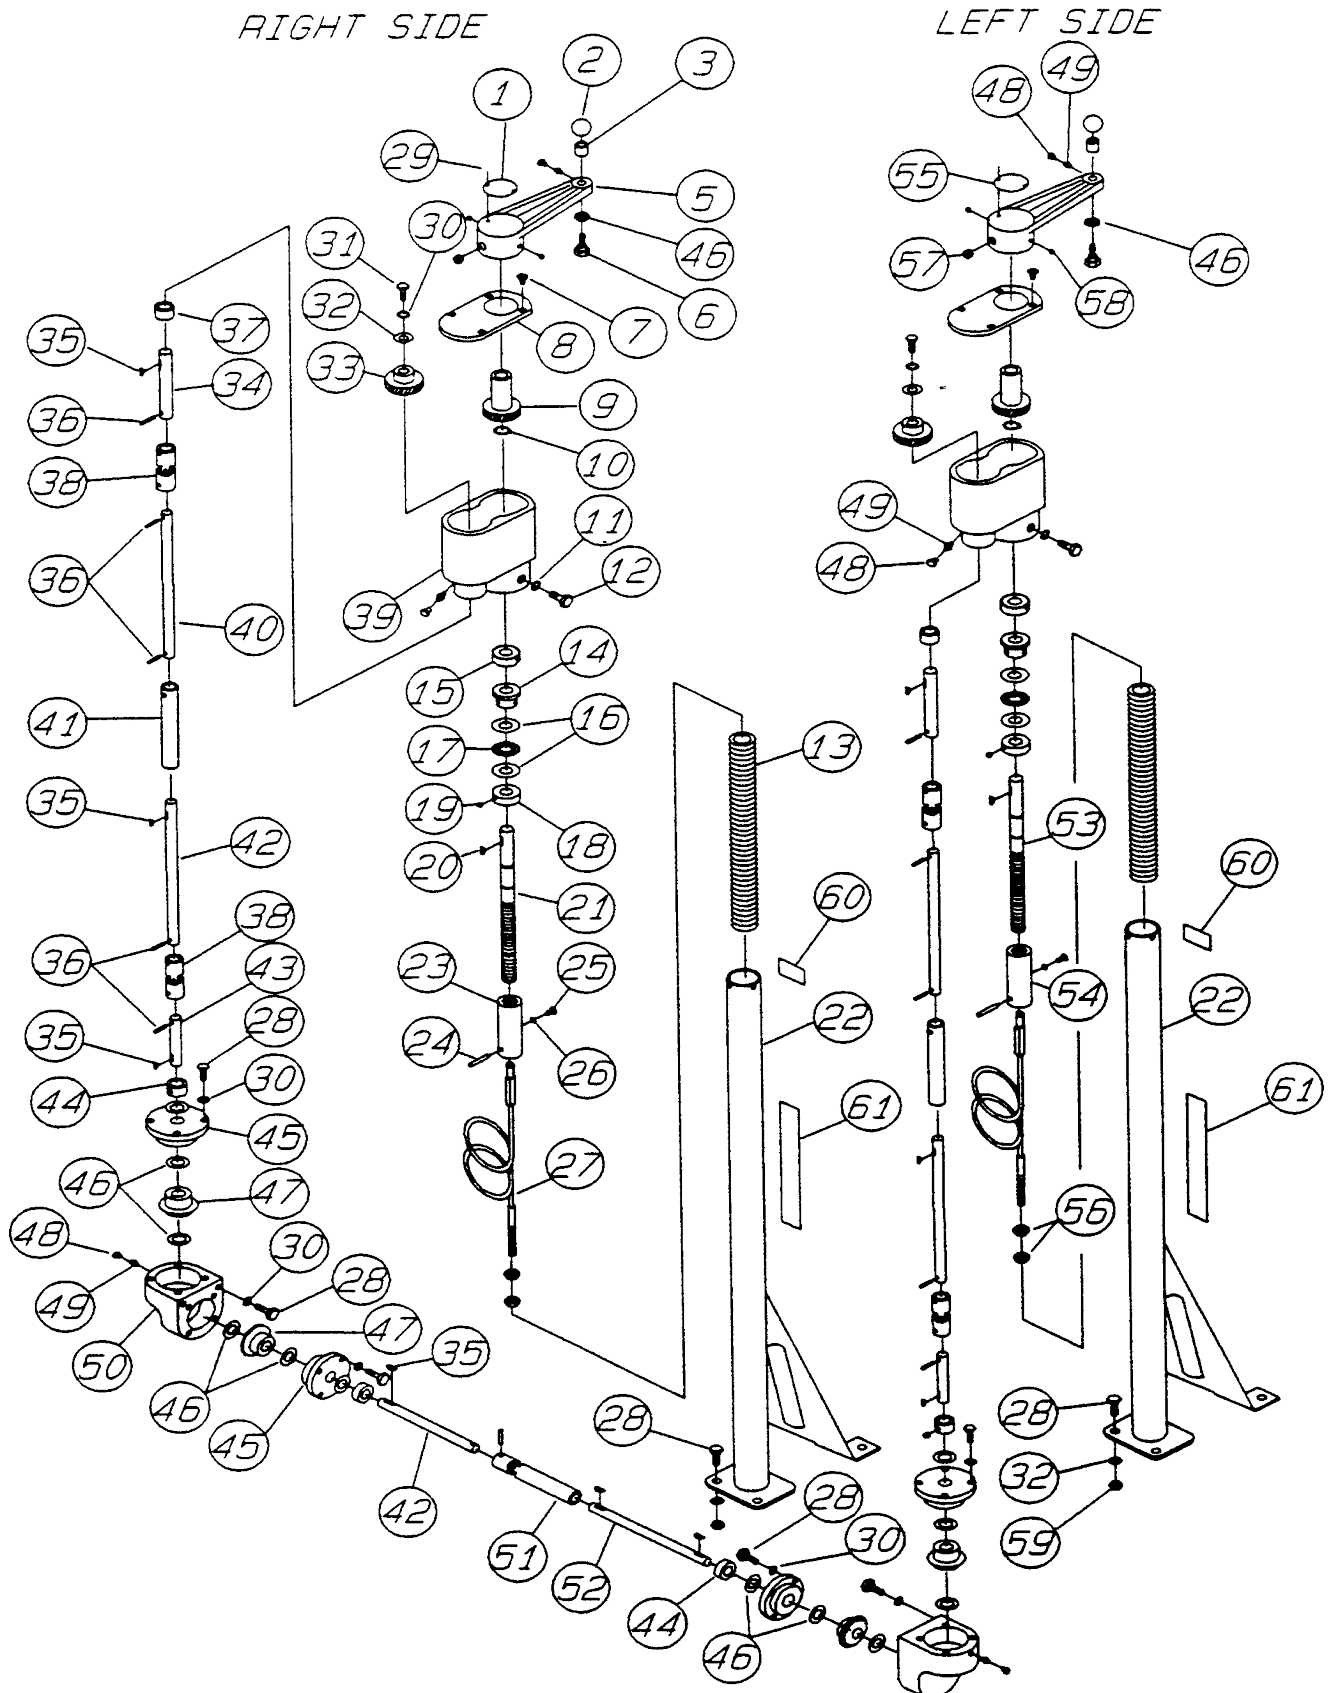


JRT RIDE-ON POWER TROWEL —TWIN PITCH CONTROL ASSY.

TWIN PITCH CONTROL ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
31	1579	HHCS 1/4- 20 X 1/2"	2	
32	0948	FLAT WASHER 1/4"	10	
33	1530	SLAVE GEAR	2	
34	2007	SHAFT	2	
35	1578	WOODRUFF KEY	9	
36	1586	ROLL PIN	11	
37	2311	SPACER	2	
38	1536	U- JOINT	4	
39	1523	HOUSING	2	
40	2023	SHAFT	2	
41	2012	SLEEVE	2	
42	2022	SHAFT	3	
43	2021	SHAFT	2	
44	1577	SET COLLAR	4	
45	1988	MITER BOX CAP	4	
46	1733	WASHER	14	
47	2062	MITER GEAR	4	
48	1162A	LUBRI- CAP	6	
49	2621	GREASE FITTING	6	
50	1987	MITER BOX		
51	2104	SLEEVE	1	
52	2026	SHAFT	1	
53	2010	LEFT SIDE PITCH CONTROL. SCREW	1	
54	2280	LEFT DIDE SLIDE BLOCK	1	
55	2332	LEFT SIDE DECAL	1	
56	1116	BRASS JAM NUT	4	
57	0185	SHSS 3/8- 16 X 3/8"	2	
58	1528	SHSS 1/4- 20 X 5/16"	4	
59	10024	LOCK NUT 1/4- 20	8	
60	2634	SPRING WARNING DECAL	2	
61	1499	WHITEMAN DECAL	2	

JRT RIDE-ON POWER TROWEL — ELECTRIC PITCH CONTROL ASSY.

ELECTRIC PITCH CONTROL ASSY.

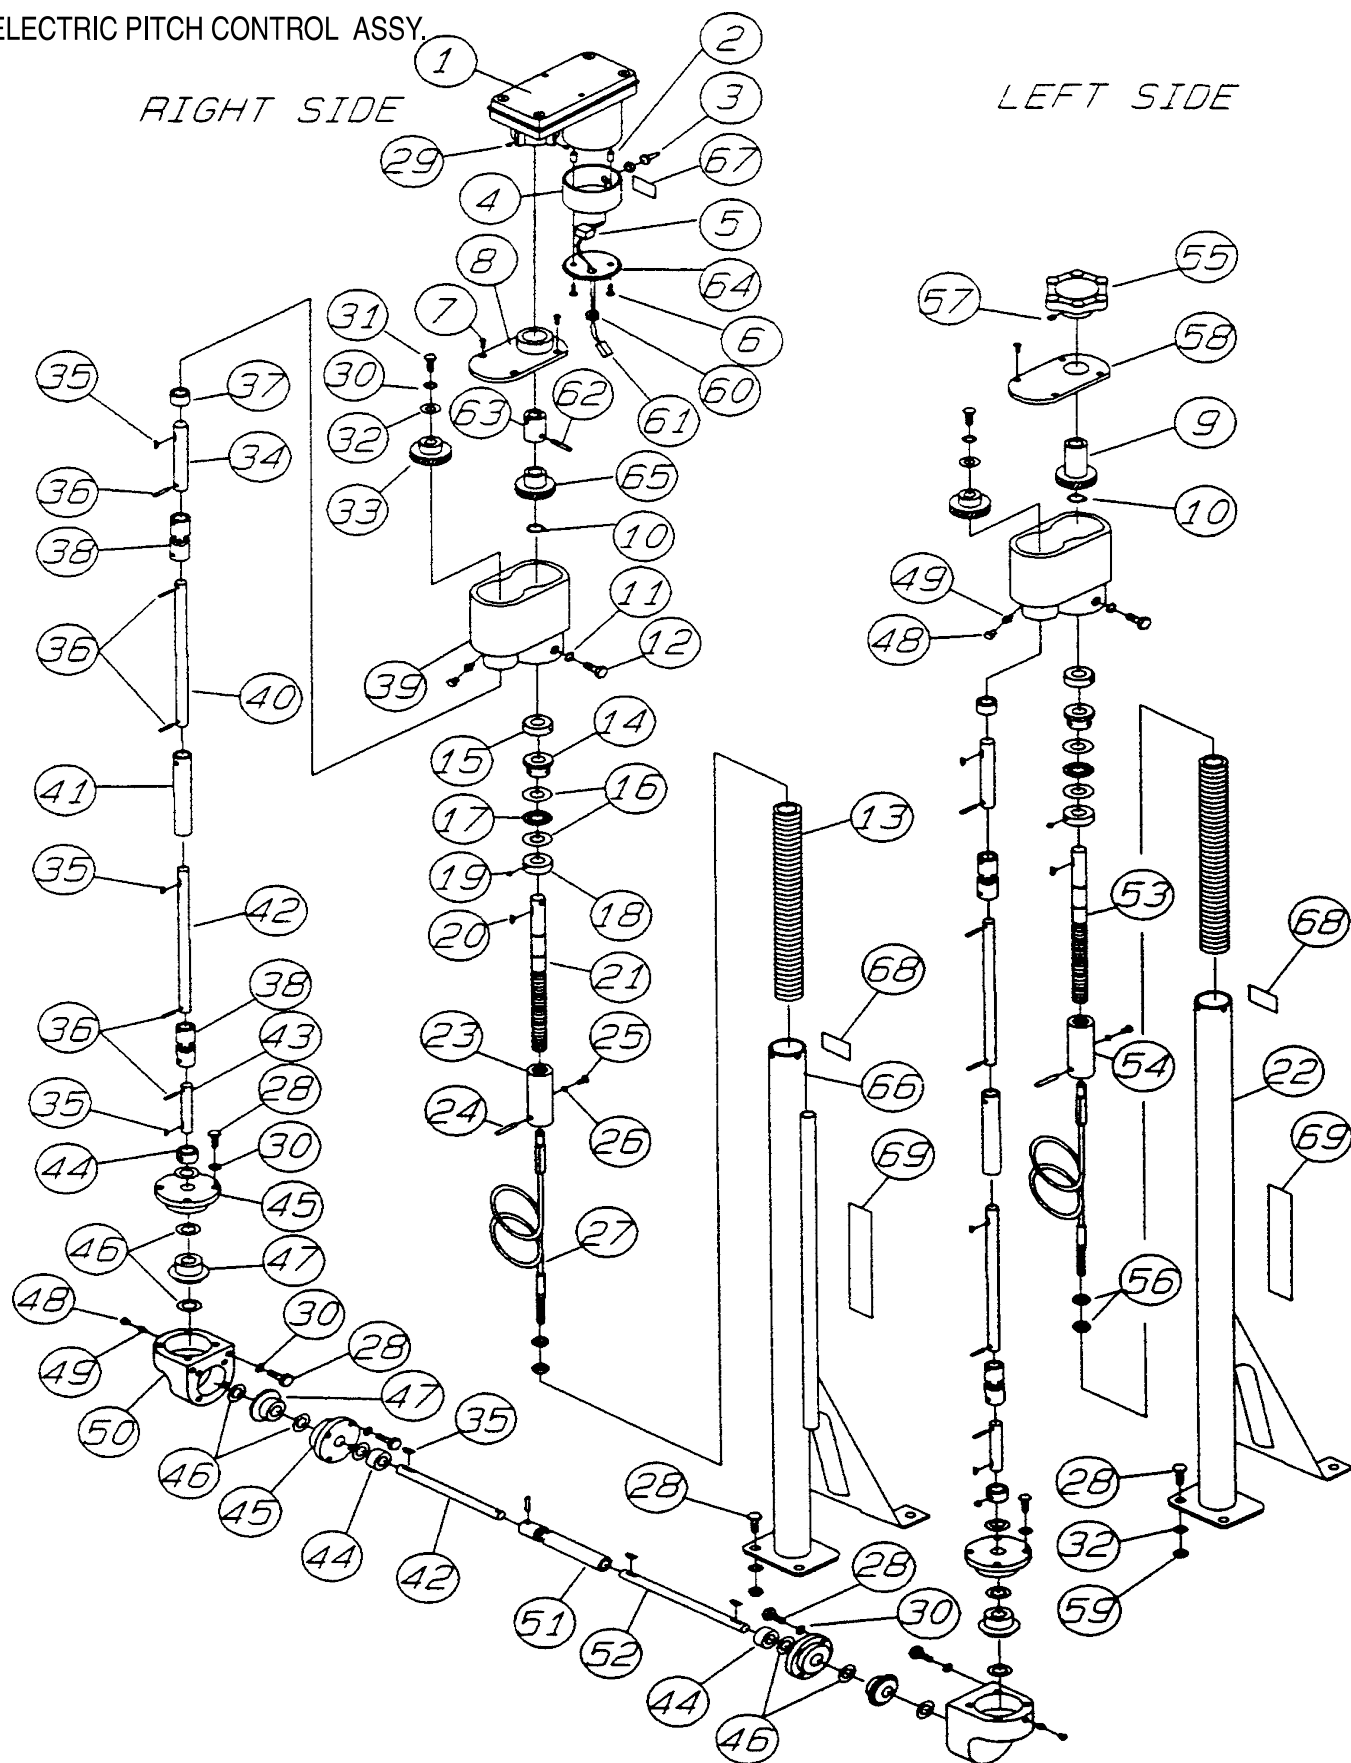


JRT RIDE-ON POWER TROWEL — ELECTRIC PITCH CONTROL ASSY.

ELECTRIC PITCH CONTROL ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	2595	POWER HEAD	1	
2	2675	BUSHING STAND OFF	2	
3	8381	BOOT SWITCH COVER	1	
4	2662	SWITCH HOUSING	1	
5	2596	SWITCH	1	
6	2699	RHMS 10- 32 X 1.1/2"	2	
7	2620	BHMS 10- 24 X 5/8"	8	
8	2592	COVER PLATE	2	
9	1529	MASTER GEAR	1	
10	1135	RETAINING RING	2	
11	161C	LOCK WASHER 5/16"	6	
12	655	HHCS 5/16- 18 X 3/4"	6	
13	2156	SPRING	2	
14	1612	BEARING	2	
15	1604	BEARING	2	
16	2170	THRUST WASHER	4	
17	2169	THRUST BEARING	2	
18	2367	SET COLLAR	2	
19	685	SHSS 5/16- 18 X 5/16"	6	
20	0126	WOODRUFF KEY	2	
21	2679	RIGHT SIDE PITCH CONTROL SCREW	1	
22	2131	LEFT SIDE PITCH CONTROL TUBE	2	
23	2281	RIGHT SIDE SLIDE BLOCK	1	
24	1114	ROLL PIN	2	
25	786	BUTTON HEAD CAP SCREW 1/4- 20 X 3/8"	2	
26	786A	SPACER	2	
27	2008	CABLE	2	
28	730	HHCS 1/4- 20 X 1"	28	
29	10138	SHSS 1/4- 20 X 1/2"	6	
30	181B	LOCK WASHER 1/4"	22	
31	1529	HHCS 1/4- 20 X 1/2"	2	
32	948	FLAT WASHER 1/4"	10	
33	1530	SLAVE GEAR	2	
34	2007	SHAFT	2	
35	1578	WOODRUFF KEY	9	

JRT RIDE-ON POWER TROWEL — ELECTRIC PITCH CONTROL ASSY.

ELECTRIC PITCH CONTROL ASSY.

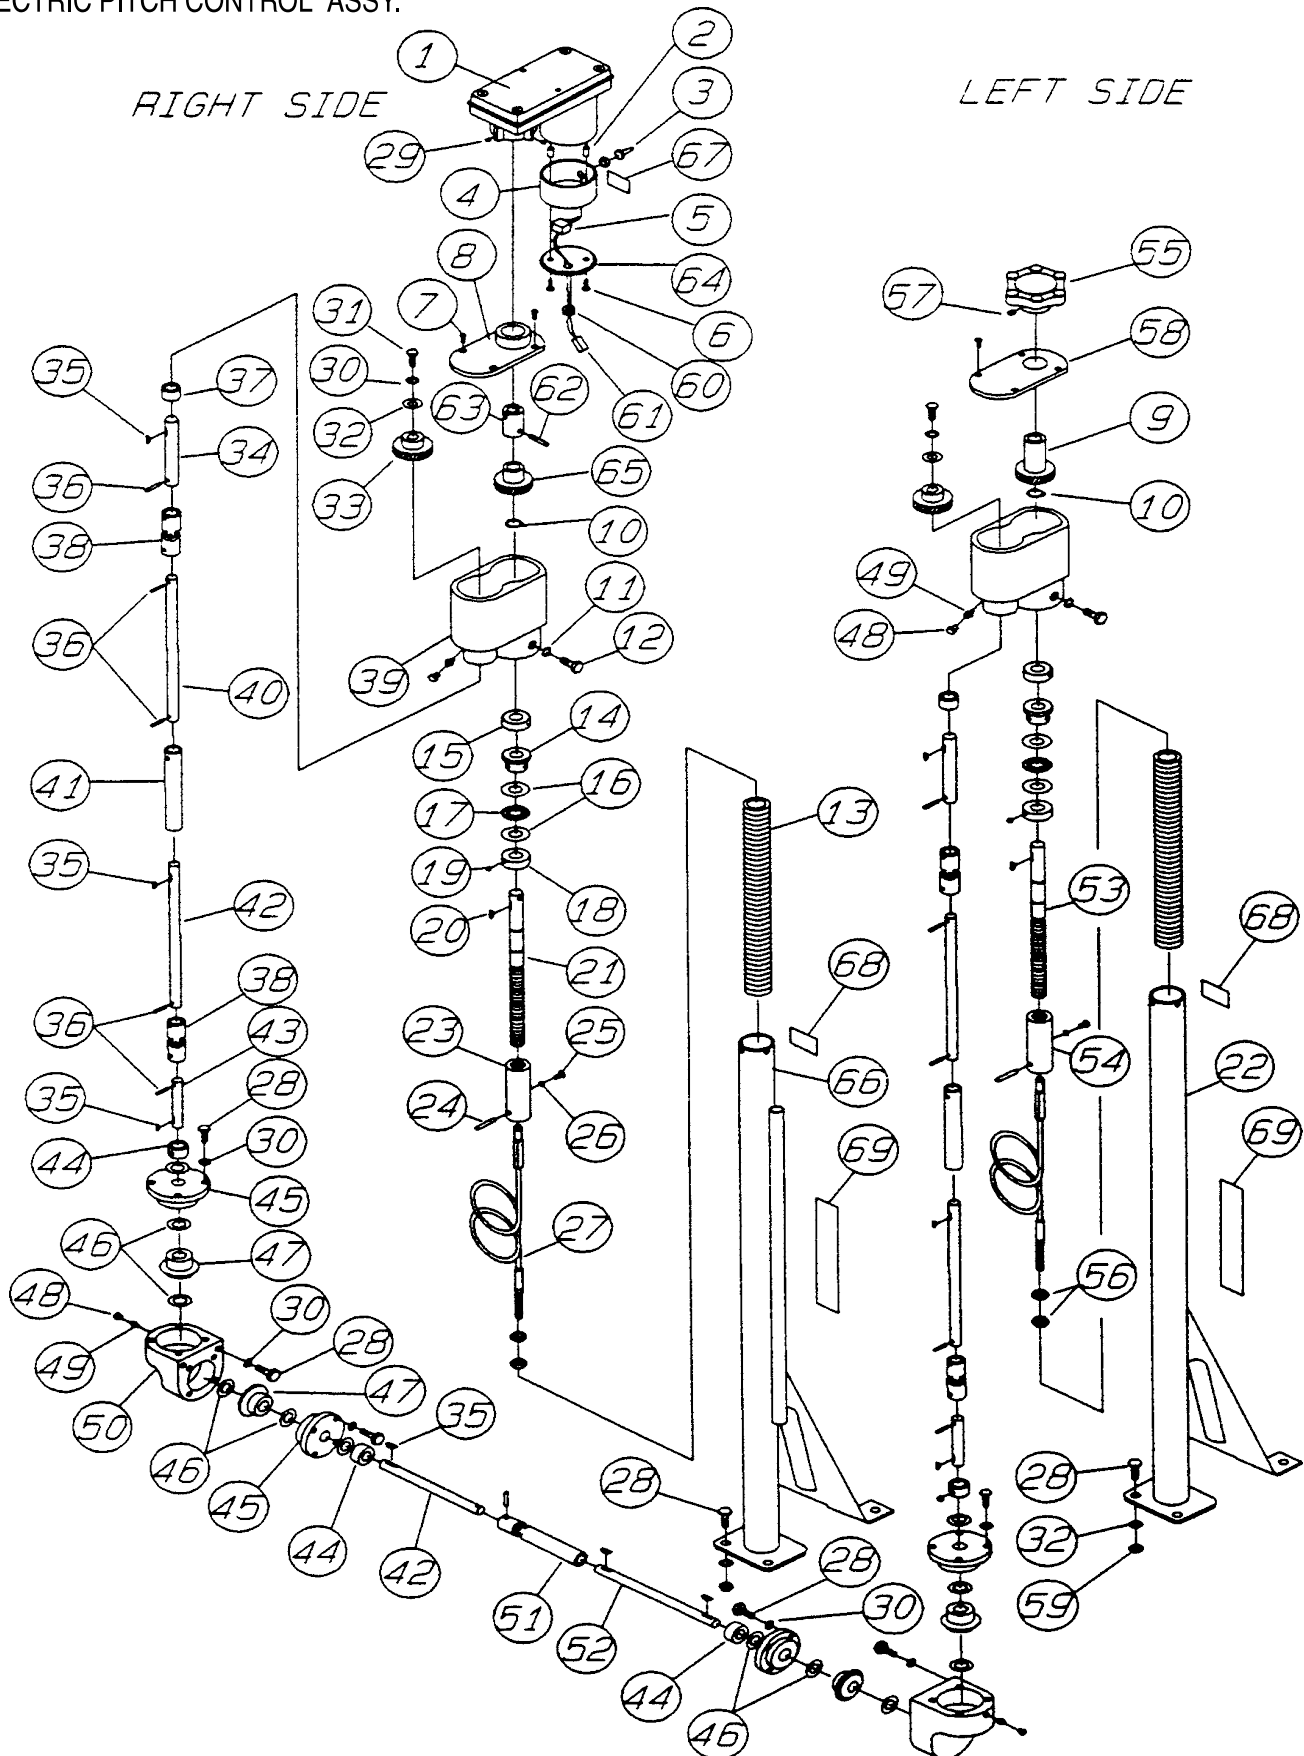


JRT RIDE-ON POWER TROWEL — ELECTRIC PITCH CONTROL ASSY.

ELECTRIC PITCH CONTROL ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
36	1586	ROLL PIN	11	
37	2311	SPACER	2	
38	1536	U- JOINT	4	
39	1523	HOUSING	2	
40	2023	SHAFT	2	
41	2012	SLEEVE	2	
42	2022	SHAFT	3	
43	2021	SHAFT	2	
44	1577	SET COLLAR	4	
45	1988	MITER BOX CAP	4	
46	1733	WASHER	12	
47	2062	MITER GEAR	4	
48	1162A	LUBRI- CAP	4	
49	2621	GREASE FITTING	4	
50	1978	MITER BOX	2	
51	2104	SLEEVE	1	
52	2821	SHAFT	1	
53	2010	LEFT SIDE PITCH CONTROL SCREW	1	
54	2280	LEFT SIDE SLIDE BLOCK	1	
55	2591	STAR WHEEL	1	
56	1116	BRASS JAM NUT	4	
57	1528	SHSS 1/4- 20 X 5/16"	2	
58	2649	COVER PLATE	1	
59	10024	LOCK NUT 1/4- 20	8	
60	2678	GROMMET	1	
61	2668	WIRE HARNESS	1	
62	2695	ROLL PIN 1/4" X 1.1/8"	1	
63	2593	SLEEVE ADAPTER	1	
64	2663	SWITCH HOUSING CAP	1	
65	2698	ELECTRIC PITCH GEAR	1	
66	2660	RIGHT SIDE PITCH CONTROL TUBE	1	
67	2881	BLADE PITCH DECAL	1	
68	2634	SPRING WARNING DECAL	2	
69	1499	WHITEMAN DECAL	2	

JRT RIDE-ON POWER TROWEL — SINGLE PITCH CONTROL ASSY.

SINGLE PITCH CONTROL ASSY.

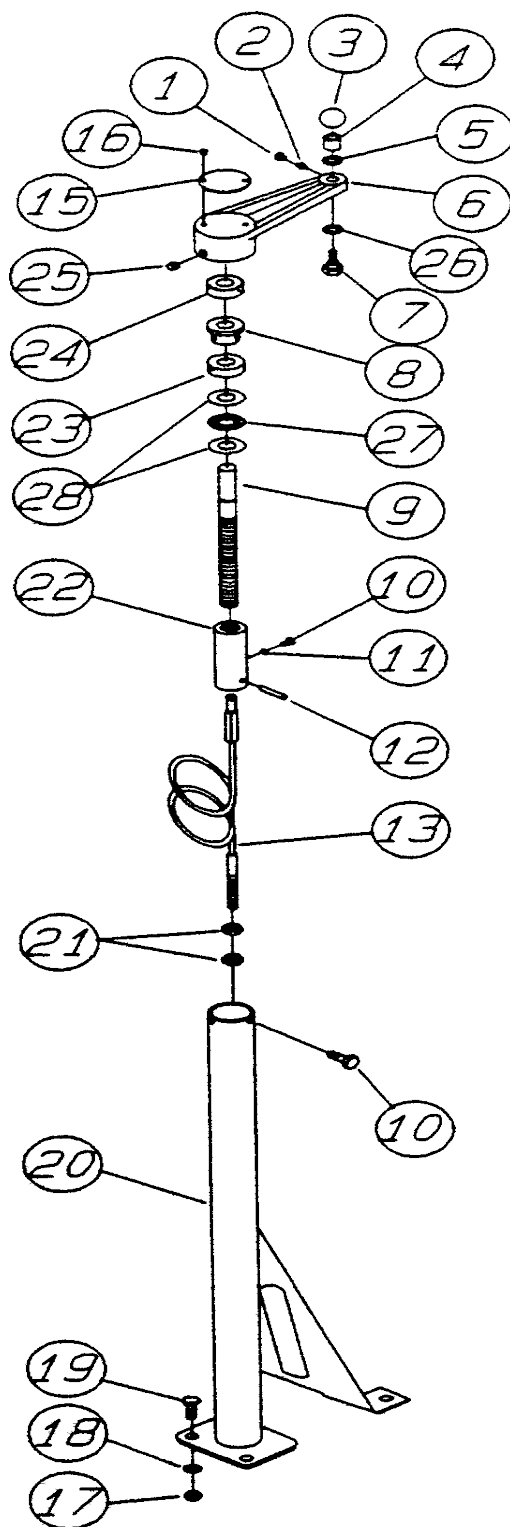


JRT RIDE-ON POWER TROWEL — SINGLE PITCH CONTROL ASSY.

SINGLE PITCH CONTROL ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	1162A	LUBRA- CAP	2	
2	2621	GREASE FITTING	2	
3	4403	CRANK KNOB	2	
4	1632	SPACER	2	
6	2575	CRANK LEVER	2	
7	1616	SHOULDER BOLT	2	
8	1111	BEARING	2	
9	2429	TROWEL CONTROL SCREW	2	
10	786	BHCS 1/4- 20 X 3/8"	4	
11	768A	SPACER	2	
12	1114	ROLL PIN	2	
13	2008	CABLE	2	
15	2300	PITCH CONTROL DECAL	2	
16	4014	SCREW	4	
17	10024	LOCK NUT 1/4- 20	8	
18	948	FLAT WASHER 1/4"	8	
19	730	HHCS 1/4- 20 X 1"	8	
20	2131	PITCH CONTROL TUBE	2	
21	1116	BRASS JAM NUT	4	
22	2281	SLIDE BLOCK	2	
23	2367	SET COLLAR	2	
24	0281	THRUST BEARING	2	
25	0185	SHSS 3/8- 16 X 3/8"	2	
26	1733	FLAT WASHER	2	
27	2169	THRUST BEARING	2	
28	2170	THRUST WASHER	4	

JRT RIDE-ON POWER TROWEL — FRAME ASSY.

FRAME ASSY.

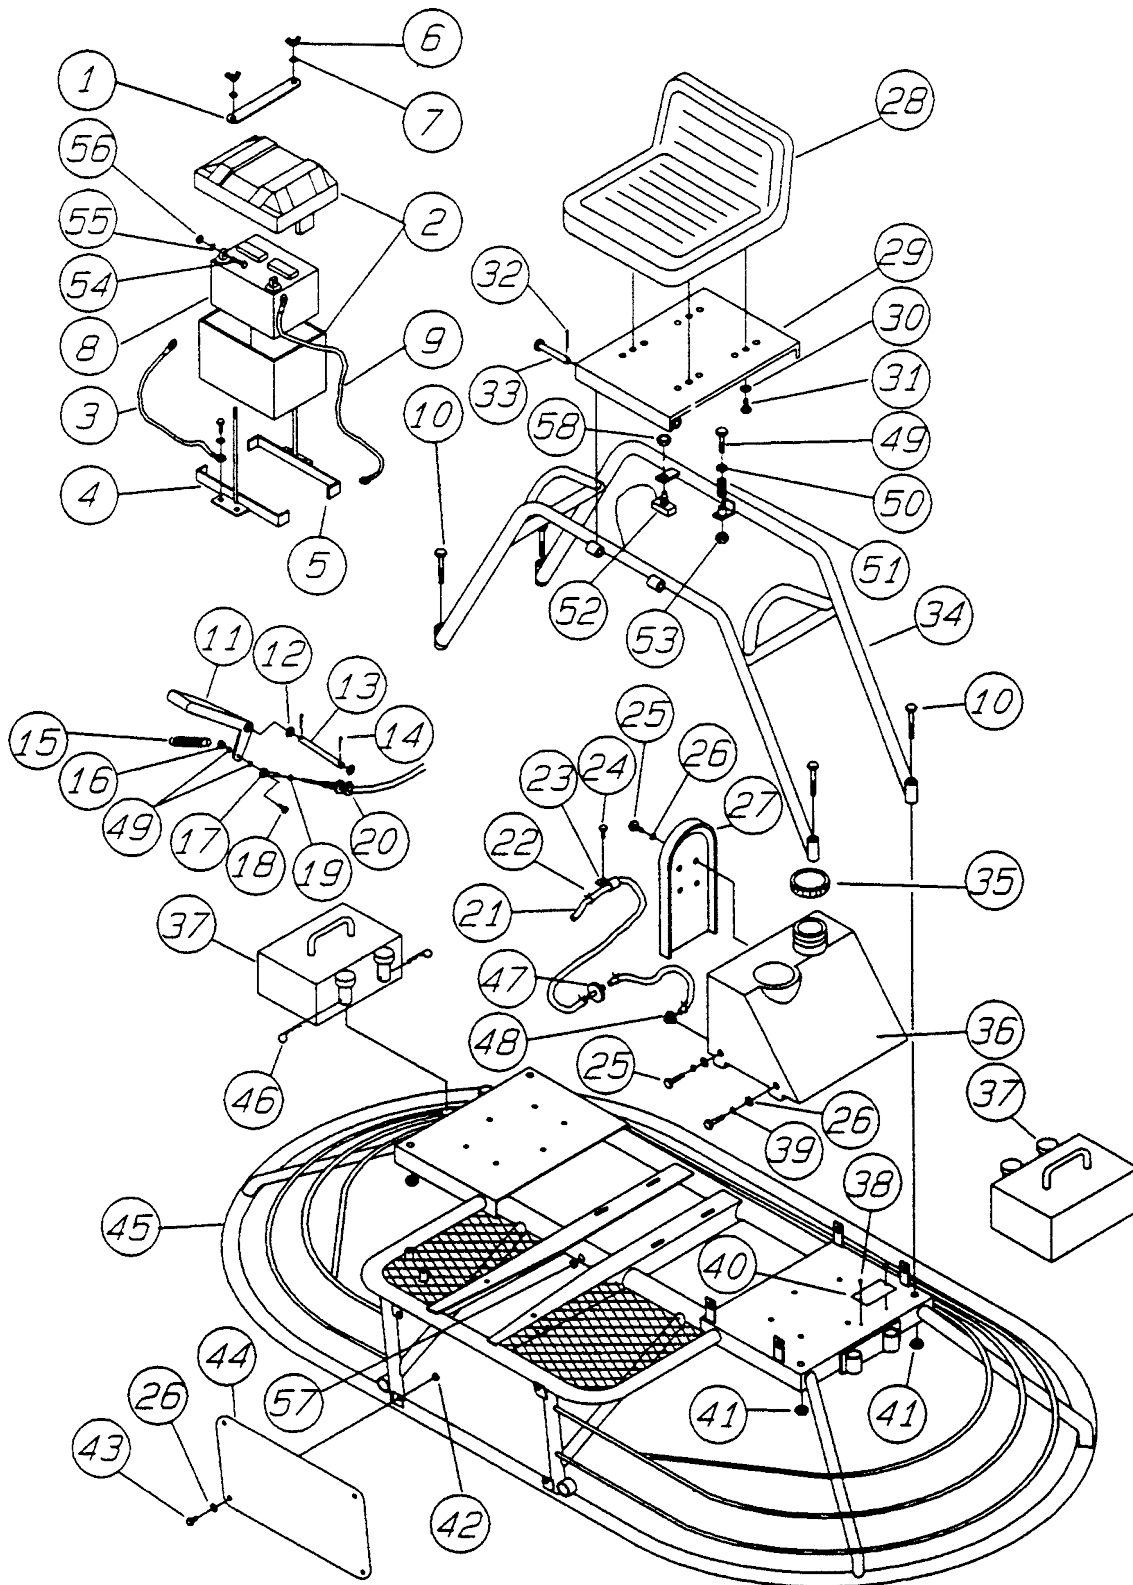


JRT RIDE-ON POWER TROWEL — FRAME ASSY.

FRAME ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	2482	BATTERY STRAP	1	FROM RB20721
2	2449	BATTERY BOX	1	FROM RB20721
3	1597	NEGATIVE BATTERY CABLE (BLACK)	1	
4	2484	FRONT BATTERY BRACKET (W /BATTERYBOX) ..	1	FROM RB20721
5	2483	REAR BATTERY BRACKET (W /BATTERY BOX) ...	1	FROM RB20721
6	2509	WING NUT 1/4- 20	2	
7	10031	EXT. SHAKEPROOF WASHER 1/4"	2	
8	4671	BATTERY 12V DRY (GROUP U- 1)	1	
9	2542	POSITIVE BATTERY CABLE (RED)	1	
10	2549	HHCS 1/2- 13 X 3"	4	
11	2086	ACCELERATOR PEDAL	1	
12	10136	FLAT WASHER 3/8"	2	
13	2016	PIN	1	
14	6014B	COTTER PIN	2	
15	2192	SPRING	1	
16	2194	THROTTLE NUT	1	
17	2153	SPHERICAL BEARING	1	
18	2154	HHCS 10- 32 X 1.1/4"	1	
19	937	HEX NUT 10- 32	1	
20	2124	THROTTLE CABLE	1	
21	2135	FUEL LINE	1	TRIM AS REQUIRED
22	2138	HOSE CLAMP	4	
23	8126	CLAMP	1	
24	2299	HHCS 8MM- 1.25 X 15MM	1	
25	4514	HHCS 1/4- 20 X 5/8"	6	
26	948	1/4" FLAT WASHER	10	
27	2313	SPARE BELT CARRIER	1	
28	2351	SEAT	1	FROM RD21635
29	2421	SEAT MOUNTING PLATE	1	FROM RD21635
30	161C	5/16" LOCK WASHER	4	FROM RD21635
31	1237	SHCS 5/16= 18 X 7/8"	4	
32	183	COTTER PIN	2	
33	8081	CLEVIS PIN	2	
34	2889	SEAT FRAME	1	FROM RB20721
34	2889	SEAT FRAME JRT92 MODEL	1	FROM PA2080
35	2712	FUEL CAP	1	

JRT RIDE-ON POWER TROWEL — FRAME ASSY.

FRAME ASSY.

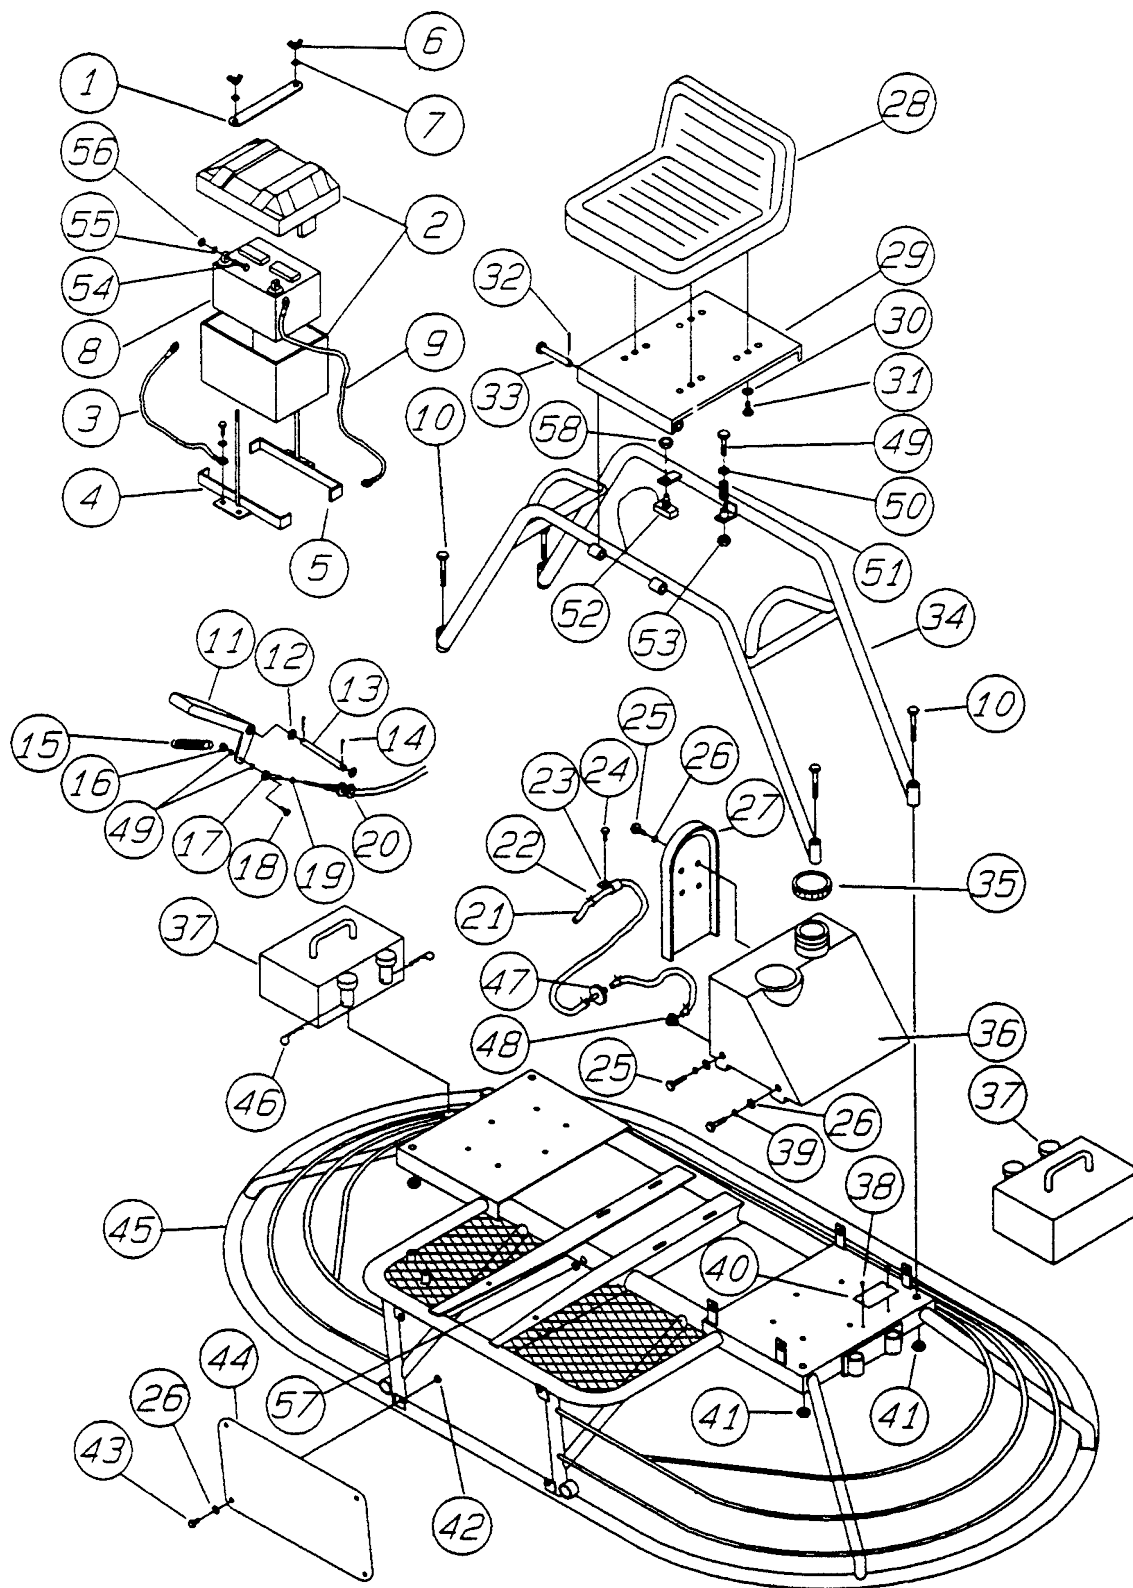


JRT RIDE-ON POWER TROWEL — FRAME ASSY.

FRAME ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
36	2028	FUEL TANK	1	
37	2493	WEIGHT (OPTIONAL)	2	FROM RD21635
38	4014	U- DRIVE SCREW	2	
39	181B	1/4" LOCK WASHER	4	
40	1491	SERIAL # PLATE	1	
41	10176	1/2- 13 HEX LOCK NUT	4	
42	10124	1/4- 20 HEX LOCK NUT	4	FROM QA24492
43	131A	HHCS 1/4- 20 X 3/4"	4	FROM QA24492
44	2535	FRONT PANEL	1	FROM QA24492
45	2347	MAIN FRAME	1	
46	7170	WEIGHT CLIP	4	FROM RD21635
47	2346	FUEL FILTER	1	
48	2161	FUEL VALVE	1	
49	8156	HHCS- 3/8- 16 X 2.1/2", MODEL JRT92	1	FROM PA2080
50	4001	FLAT WASHER, MODEL JRT92	1	FROM PA2080
51	2585	SPRING, COIL, MODEL JRT92	1	FROM PA2080
52	2584	SWITCH KILL, MODEL JRT92	1	FROM PA2080
53	10133	FLEXLOCK NUT 3/8- 16, MODEL JRT92	1	FROM PA2080
54	0131A	HHCS 1/4- 20 X 3/4"	2	
55	0181B	1/4" LOCK WASHER, MODEL JRT92	2	FROM PA2080
56	0949	1/4- 20 HEX NUT	2	
57	2574	RUBBER GROMMET	1	FROM PG20080
57	2923	RUBBER GROMMET	1	TO PG30041
58	2906	PANEL NUT, MODEL JRT92	1	FROM 2080

JRT RIDE-ON POWER TROWEL — LIGHTS & RETARDANT SPRAY ASSY.

LIGHTS & RETARDANT SPRAY OPTIONS ASSY.

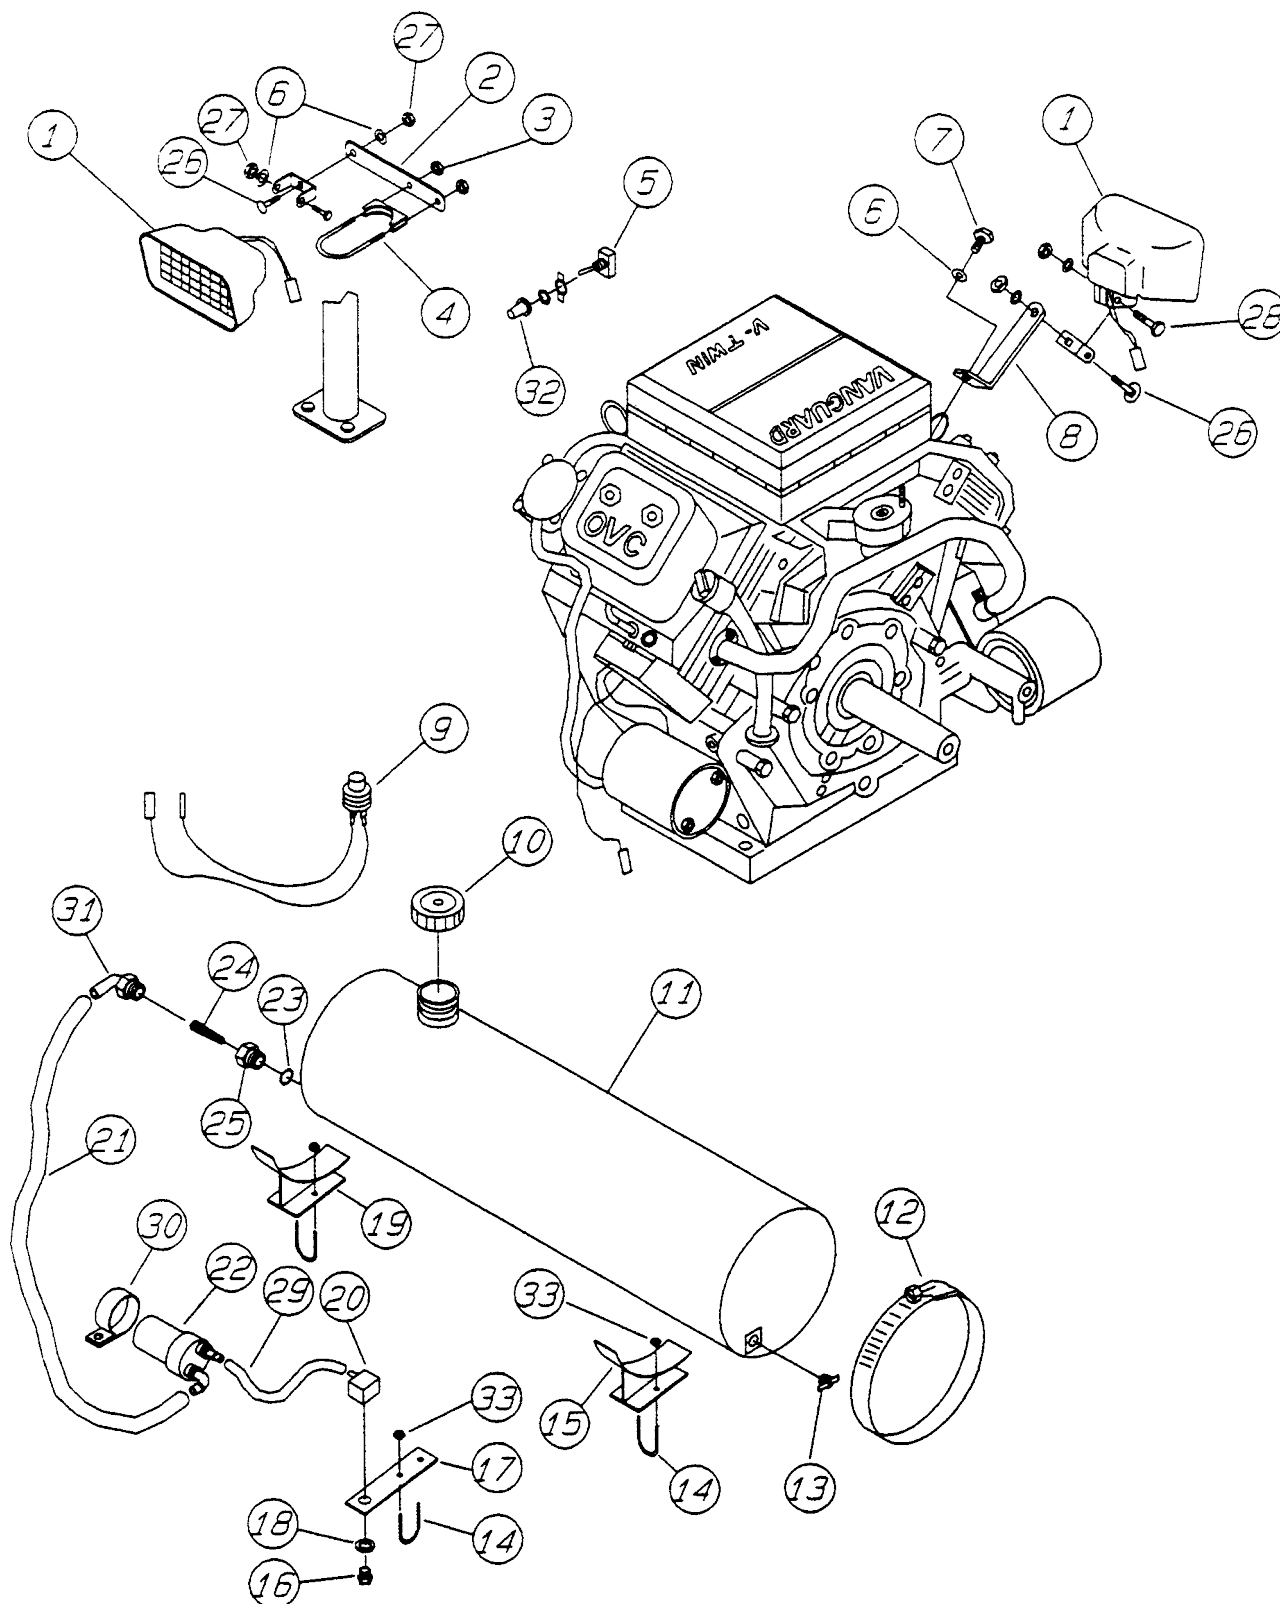


JRT RIDE-ON POWER TROWEL — LIGHTS & RETARDANT SPRAY ASSY.

LIGHTS & RETARDANT SPRAY OPTIONS ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	2896	LIGHT AND MOUNTING HARDWARE	3	
2	2531	FRONT MOUNTING BRACKET	2	
3	5283	NUT, LOCK 5/16- 18	4	
4	2534	CLAMP ASSEMBLY	2	
5	4682	SWITCH	1	
6	161C	WASHER, LOCK 5/16"	7	
7	2299	HHCS 8MM X 1.25 X 15MM	1	
8	2430	BRACKET, REAR MOUNTING	1	
9	2765	BUTTON, RETARDANT SPRAY	1	
10	2108	CAP, TANK	1	
11	2396	RETARDANT TANK.....	1	TO PG29038
11	2916	RETARDANT TANK.....	1	FROM PG29039
12	2398	CLAMP	2	
13	2478	DRAIN COCK	1	
14	2399	U- BOLT	2	
15	2887	MOUNTING BRACKET RIGHT	1	
16	392292	SPRAY NOZZLE	1	
17	2873	MOUNTING BRACKET	1	
18	2898	RUBBER WASHER	1	
19	2886	MOUNTING BRACKET LEFT	1	
20	2912	90 DEGREE FITTING	1	
21	2914	HOSE	1	
22	2924	PUMP ASSEMBLY	1	
23	2285	O- RING	2	TO PG29038
24	2926	STRAINER	1	
25	2557	FITTING	1	TO PG29038
26	0655	HHCS 5/16- 18 X 3/4"	3	
27	161D	HEX NUT 5/16- 18	6	
28	300A	HHCS 5/16- 18 X 2"	3	
29	2913	LOWER HOSE	1	
30	2904	CLAMP	1	
31	2925	ELBOW 90 DEGREE	1	
32	8381	SWITCH BOOT	1	
33	2656	LOCK NUT 5/16- 24	6	

JRT RIDE-ON POWER TROWEL — E-Z MOVER & LIFT HANDLE ASSY.

E-Z MOVER & LIFT HANDLE ASSY.

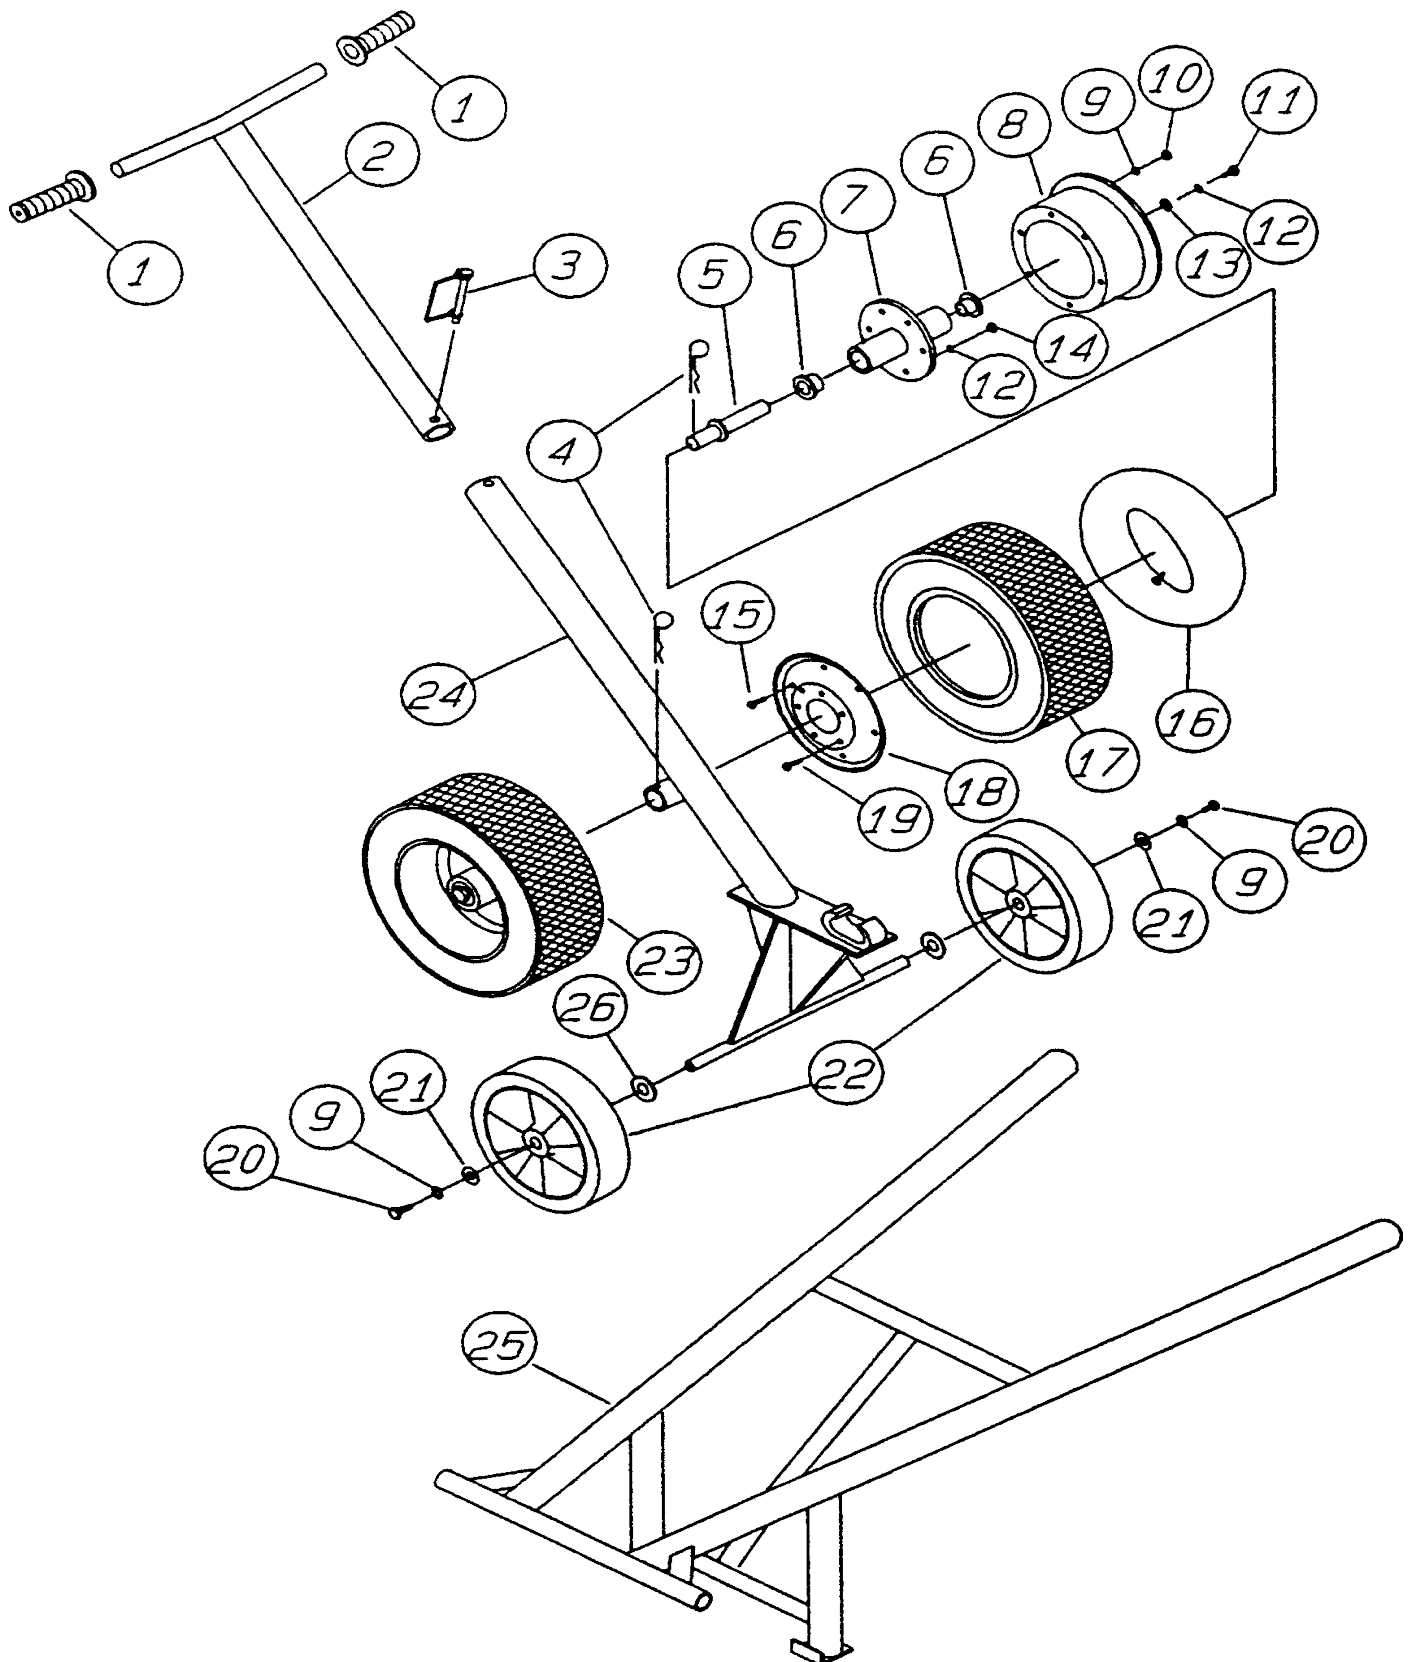

JRT RIDE-ON POWER TROWEL — E-Z MOVER & LIFT HANDLE ASSY.

E-Z MOVER & LIFT HANDLE ASSY.

E- Z MOVER & LIFT HANDLE ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	189	HAND GRIP	2	
2	2336	E- Z MOVER HANDLE	1	
3	1869	SNAP PIN	1	
4	7170	CLIP	2	
5	2340	DOLLY AXLE	2	
6	1671	BEARING	2	
7	2341	DOLLY HUB	2	
8	5050A	WHEEL BODY	2	
9	161C	LOCK WASHER 5/16"	14	
10	6014C	NUT 5/16- 24	12	
11	205	HHCS 3/8- 16 X 1"	2	
12	166A	LOCK WASHER 3/8"	14	
13	4001	FLAT WASHER 3/8"	2	
14	5023B	HEX NUT 3/8- 24	12	
15	5050C	HHCS 5/16- 24 X 3/4"	12	
16	5051A	INNER TUBE	2	
17	5051	TIRE	2	
18	5050B	WHEEL COVER	2	
19	1672	HHCS 3/8- 24 X 1"	12	
20	655	HHCS 5/16- 18 X 1/2"	2	
21	300B	FLAT WASHER 5/16"	2	
22	2364	WHEEL	2	
23	5049	DOLLY WHEEL ASSEMBLY	2	ITEMS, 8,9,10,15,16,17,18
24	2337	E- Z MOVER FRAME	1	
25	2210	LIFT HANDLE	2	OPTIONAL
26	4684	FLAT WASHER 5/8"	2	