

MT 3500 (EPA2) Chainsaw

Documents

Motor

Starter assy

Handle and air filter

Crankcase

Clutch and brake

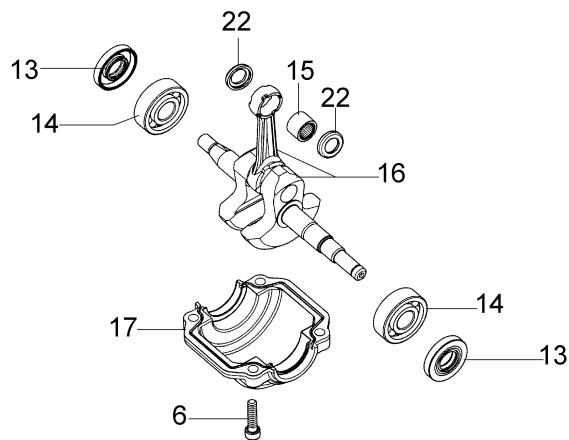
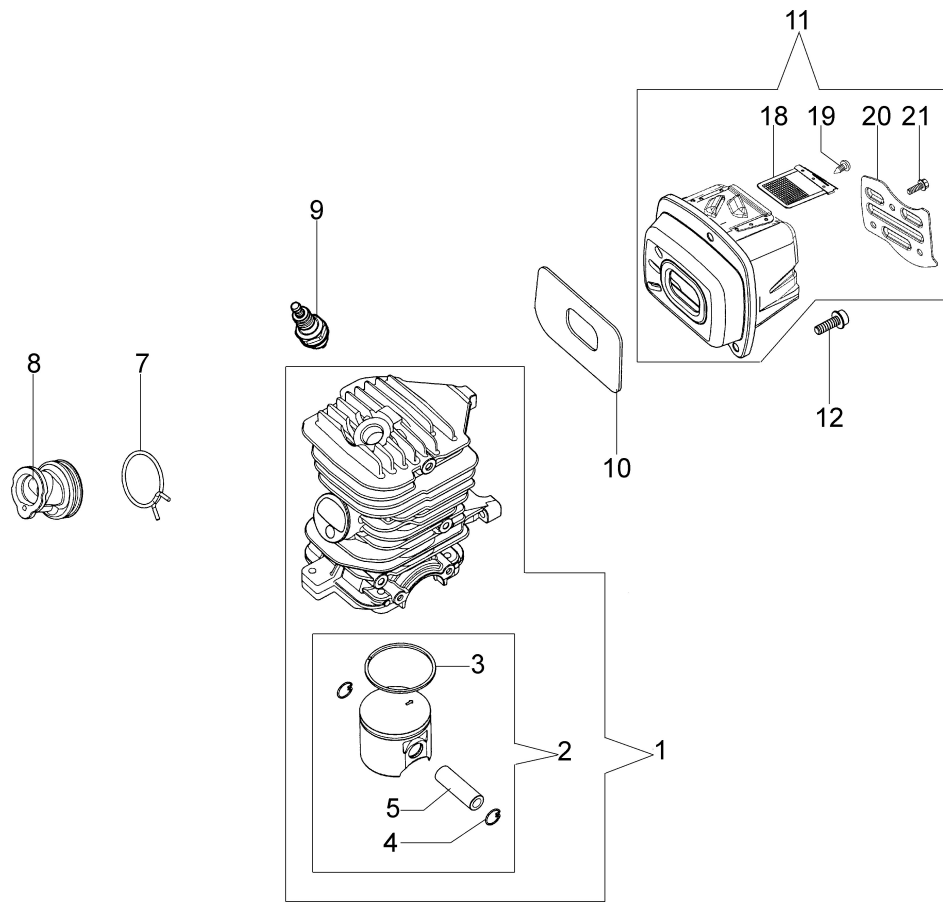


Illustration Motor

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50240166	Complete cylinder				
2	1	50240164	Piston assy Ø40				
3	1	074000405R	Piston ring				
4	2	004900061R	Ring				
5	1	50110047R	Piston pin				
6	4	3801047	Screw				
7	1	094600103	Band				
8	1	50170010R	Manifold				
9	1	3055101	Spark plug				
10	1	50170031R	Gasket				
11	1	50240105R	Muffler				
12	3	3860117R	Screw				
13	2	3050024AR	Seal ring				
14	2	094000006R	Bearing				
15	1	3037026R	Thrust bearing				
16	1	50240081R	Crankshaft				
17	1	50240016R	Cover				
18	1	50240155R	Flame screen				
19	1	012000028	Screw				
20	1	50170175R	Guard				
21	3	50170223R	Screw				
22	2	50110043AR	Spacer				

Illustration Starter Assy

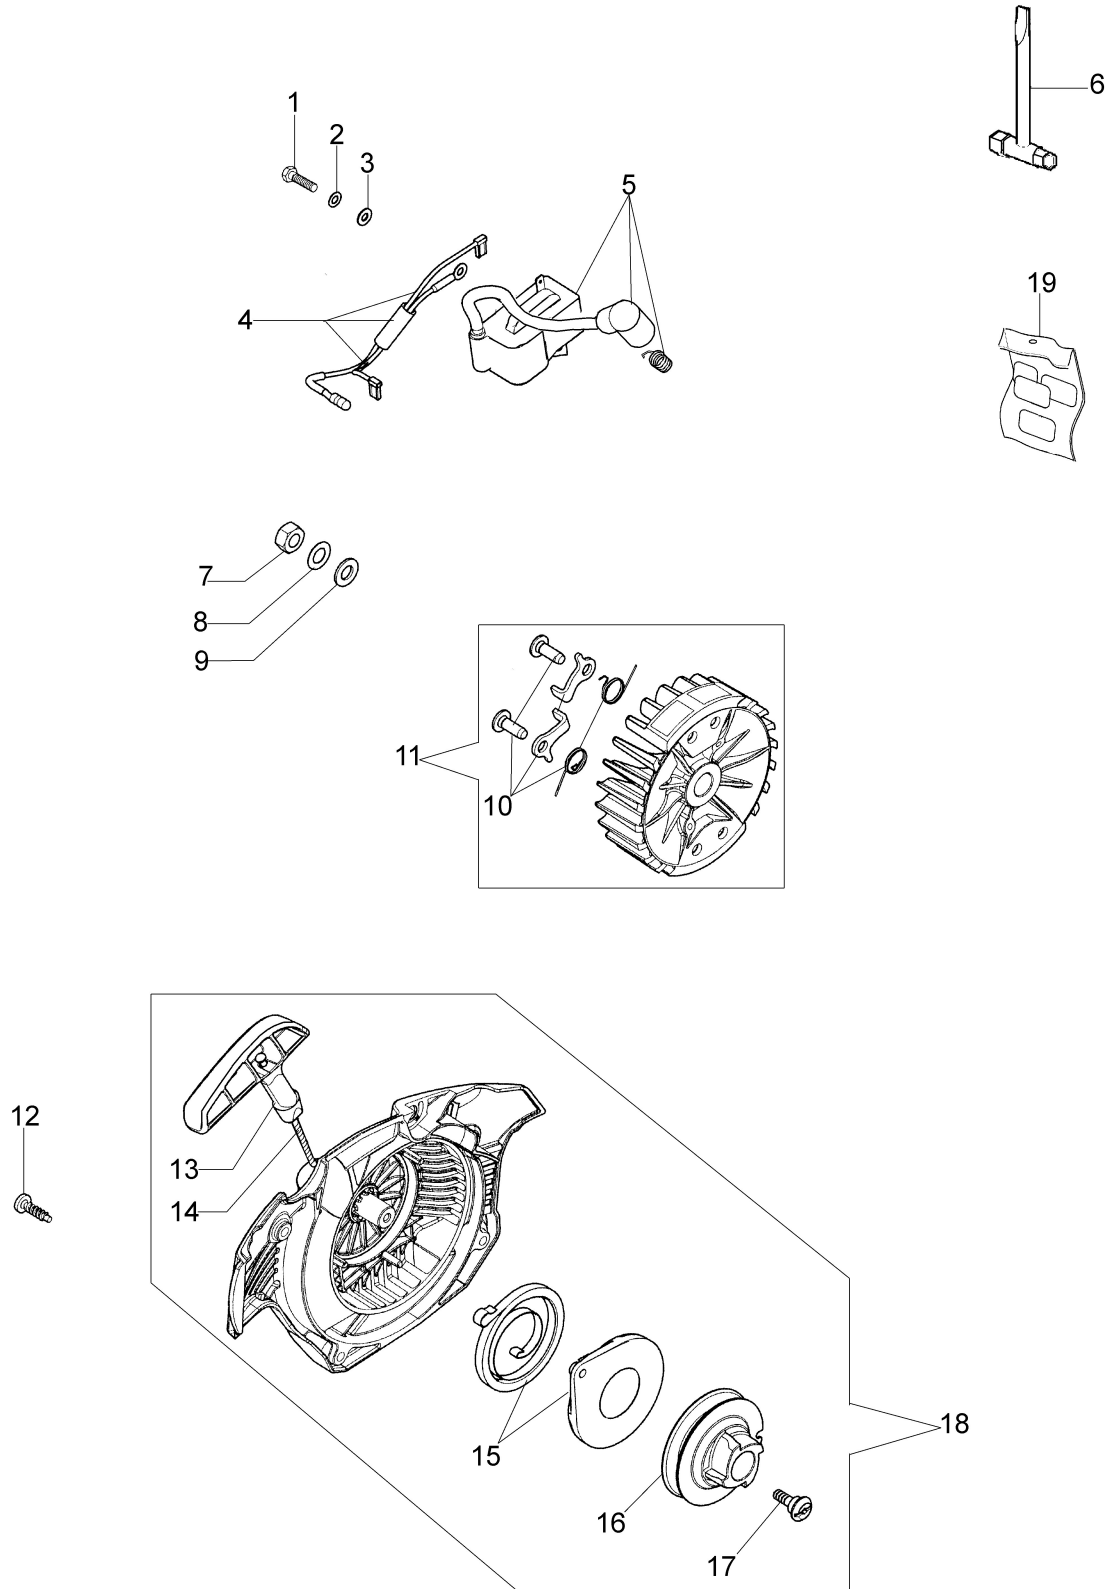


Illustration Starter assy

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	3960075R	Screw				
2	1	006000315R	Washer				
3	1	3916004R	Washer				
4	1	50240087R	Cable				
5	1	50240042R	Ignition coil				
6	1	2304073	Wrench 13x19				
7	1	004000142	Nut		matr. 9841303821		BT4-110-09/11
7	1	50240186	Nut	matr. 9841303822			BT4-110-09/11
8	1	3833080	Washer				
9	1	005000361	Washer				
10	1	50072029	Pawl				
11	1	50170015R	Flywheel				
12	4	3960115R	Screw				
13	1	50170017R	Starter handle				
14	1	50070123R	Starter rope				
15	1	50050073R	Spring				
16	1	50170050R	Starter pulley				
17	1	50160024	Screw				
18	1	50242006BR	Starter assy				
19	1	50242013	Labels kit				

Illustration Handle and air filter

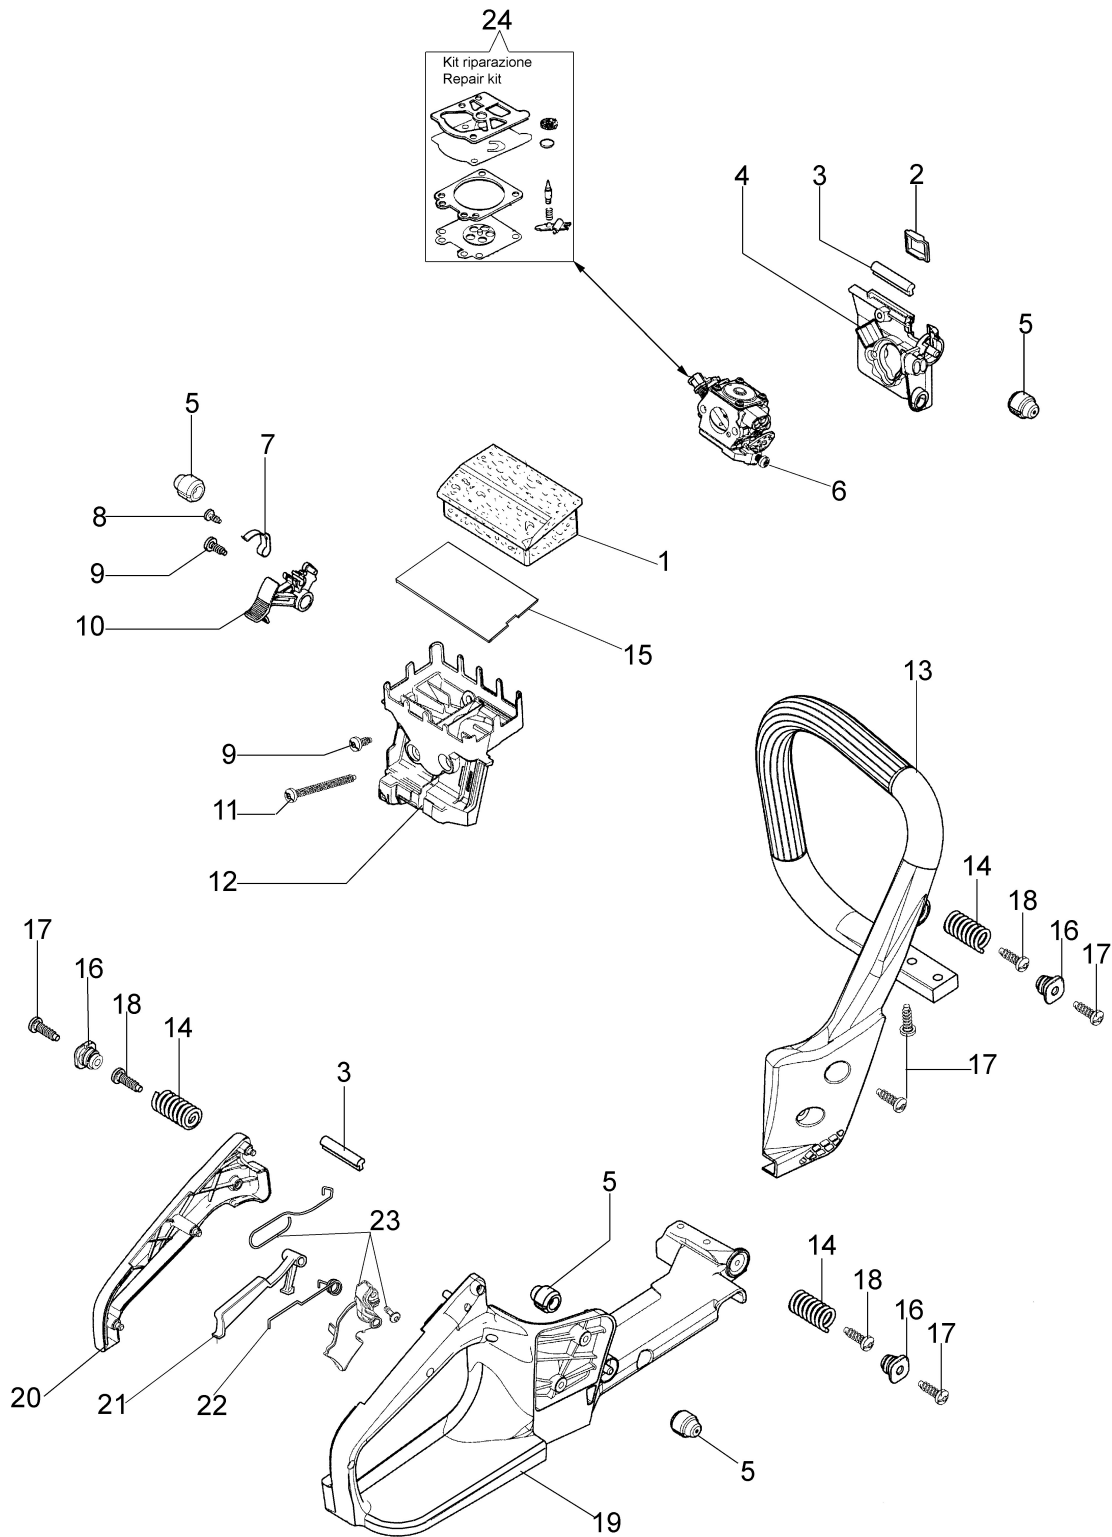


Illustration Handle and air filter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50240036R	Air filter				
2	1	50240062R	Deflector				
3	2	50240011R	AV-mount				
4	1	50240043R	Support				
5	1	50010061R	AV-mount				
6	1	50240045R	Carburetor				
7	1	50240061R	Spring				
8	1	3960109AR	Screw				
9	2	3960070AR	Screw				
10	1	50240060R	Lever				
11	2	3993083R	Screw				
12	1	50240035R	Support				
13	1	50240026R	Handle				
14	1	50050047AR	Spring				
15	1	50240150R	Air filter				
16	1	50170034R	Support				
17	1	3960099R	Screw				
18	1	3960115R	Screw				
19	1	50240023R	Handle				
20	1	50240024R	Cover				
21	1	50050046AR	Lever				
22	1	097000028R	Spring				
23	1	50170248A	Throttle kit				
24	1	2318340	Repair kit				

Illustration Crankcase

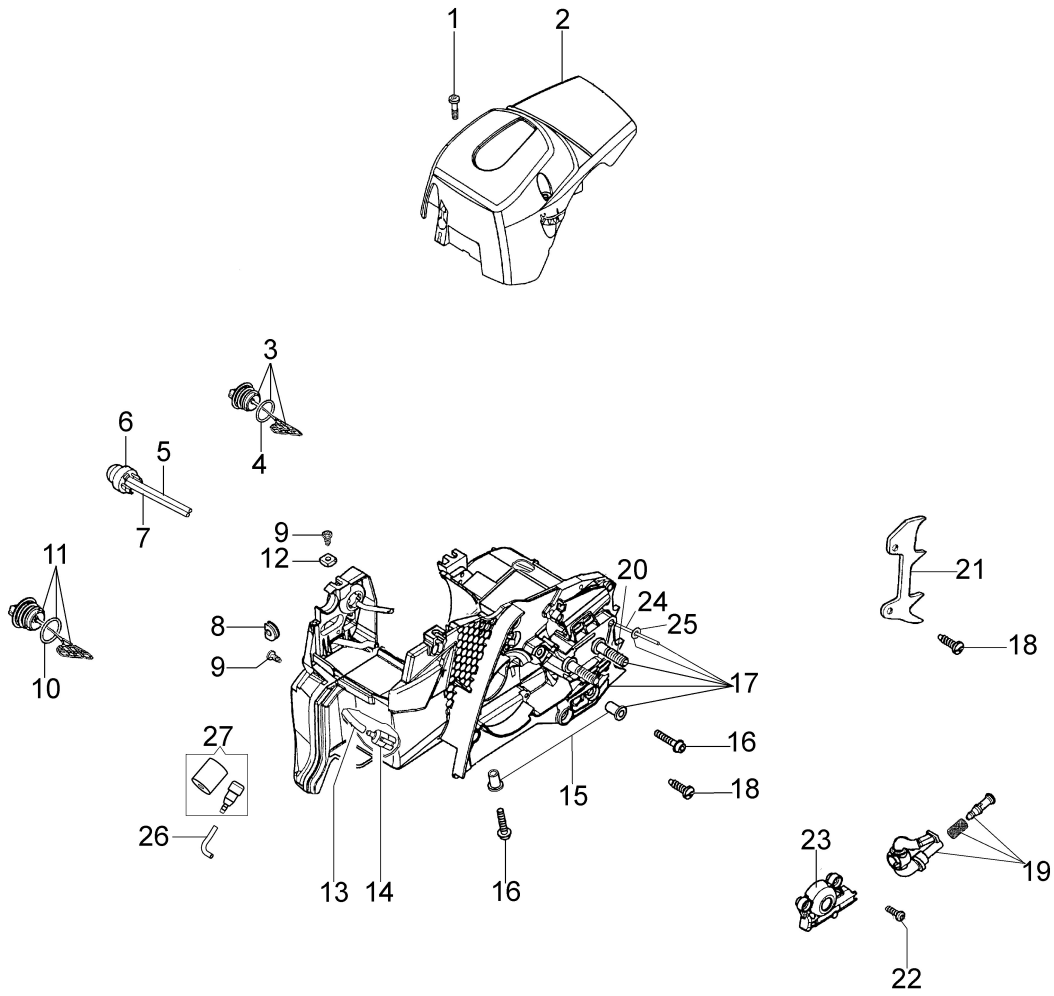


Illustration Crankcase

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	3991080R	Screw				
2	1	50240070R	Cover				
3	1	50052005R	Tank cap				
4	1	3049047R	O-ring				
5	1	50240049R	Tube				
6	1	50240175R	Air purge				
7	1	50170120R	Tube				
8	1	005000347A	Grommet				
9	2	3960109AR	Screw				
10	1	099900090R	O-ring				
11	1	50072009R	Cap				
12	1	50240027R	Nut				
13	1	50050070AR	Tube				
14	1	094600450R	Fuel filter				
15	4	50050067	Spacer				
16	4	3860097R	Screw				
17	1	50240165AR	Crankcase				
18	3	3960099R	Screw				
19	1	50240167	Oil filter				
20	2	50050052R	Stud				
21	1	50240110R	Spike				
22	1	3960074	Screw				
23	1	50240198AR	Oil pump				BT4-109-09/11
24	1	50240010R	Tube				
25	1	3049001R	O-ring				
26	1	50240067R	Breather fuel pipe				
27	1	50240148R	Breather valve kit				

Illustration Clutch and brake

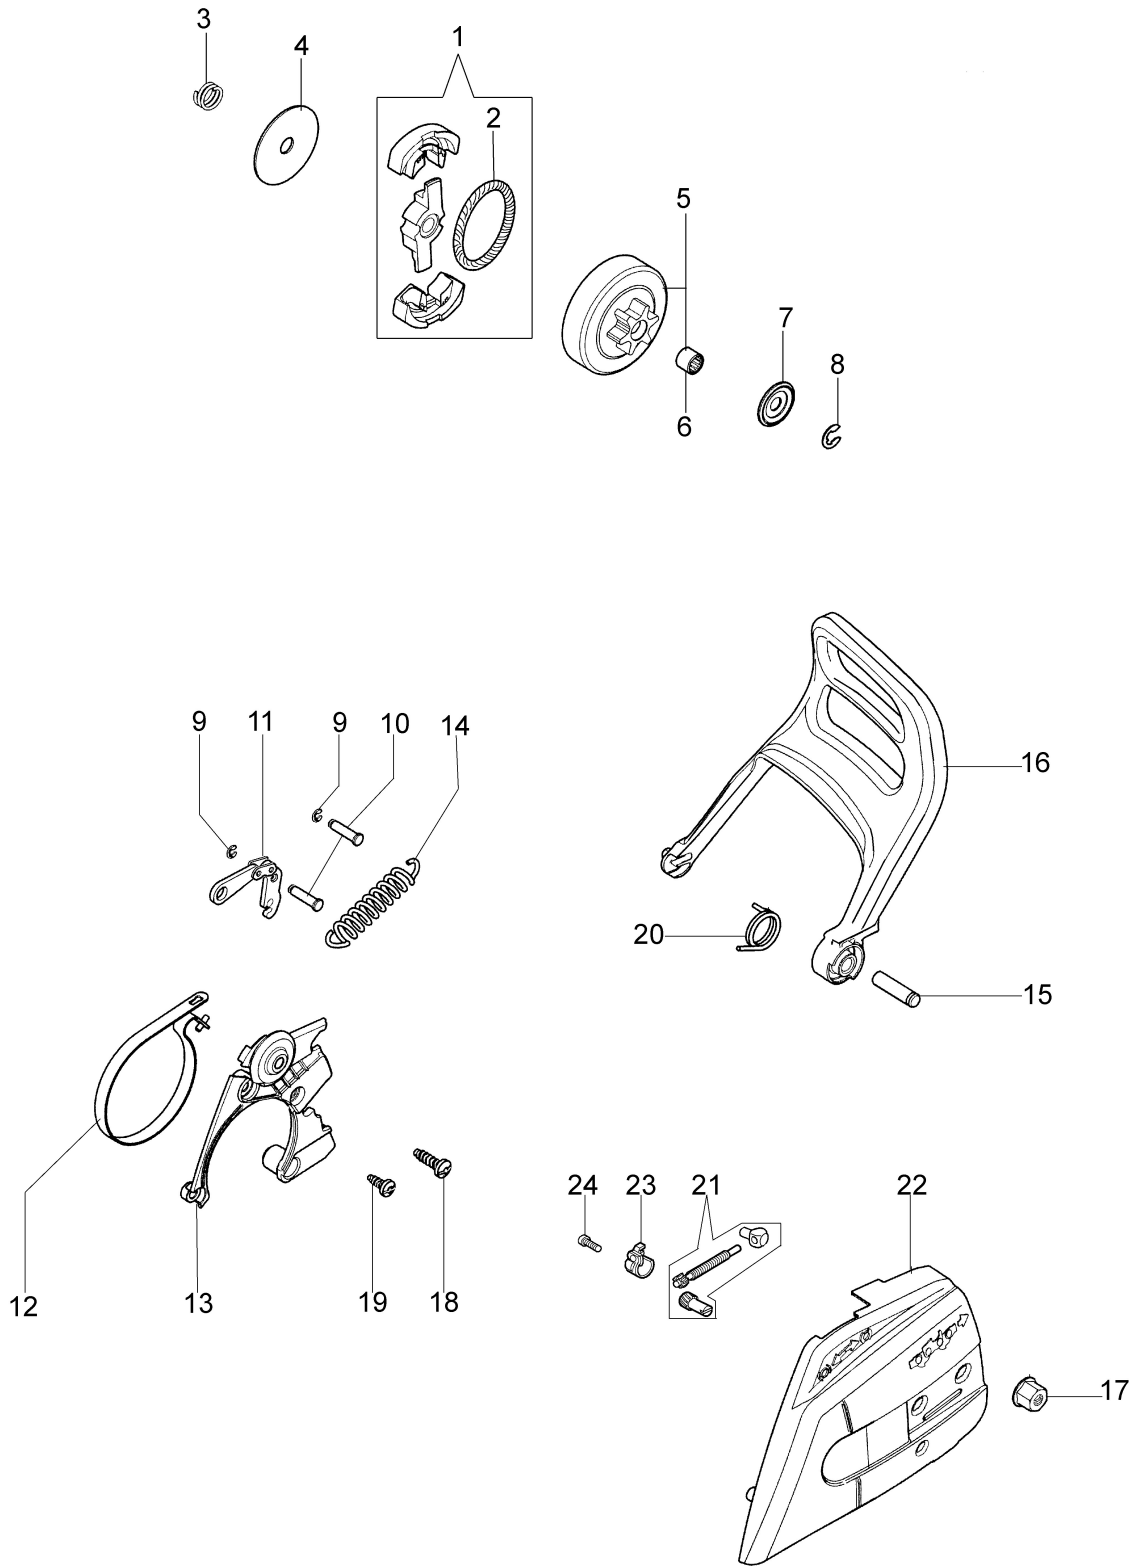


Illustration Clutch and brake

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50240031R	Clutch				
2	1	50240032R	Spring				
3	1	50240054R	Spring				
4	1	50240059R	Spacer				
5	1	50240065R	Clutch drum 3/8				
6	1	3037024R	Bearing				
7	1	50240028R	Spacer				
8	1	3026007R	Ring				
9	2	3026003	Ring				
10	2	097000106R	Plug				
11	1	097000146	Lever				
12	1	50240037R	Brake band				
13	1	50240044R	Guard				
14	1	095000219AR	Spring				
15	1	50050066	Plug				
16	1	50240040R	Guard				
17	2	50010148R	Nut				
18	1	3960099R	Screw				
19	1	3960070AR	Screw				
20	1	50240048R	Spring				
21	1	50242010	Chain tensioner kit				
22	1	50240144R	Chain cover				
23	1	50170044R	Cover				
24	1	3960141R	Screw				