




On-A-Roll Lifter®

Service Guide for Low Profile Models

This guide provides information on some common problems that may occur and steps to resolve them.

It is the user's responsibility to exercise good judgment, common sense, safety measures and reasonable limits regarding the use of the On-A-Roll Lifter® so as not to incur risk to the user or damage to the materials being carried. In order to obtain maximum benefit from your machine, please read these instructions carefully before using the On-A-Roll Lifter®.

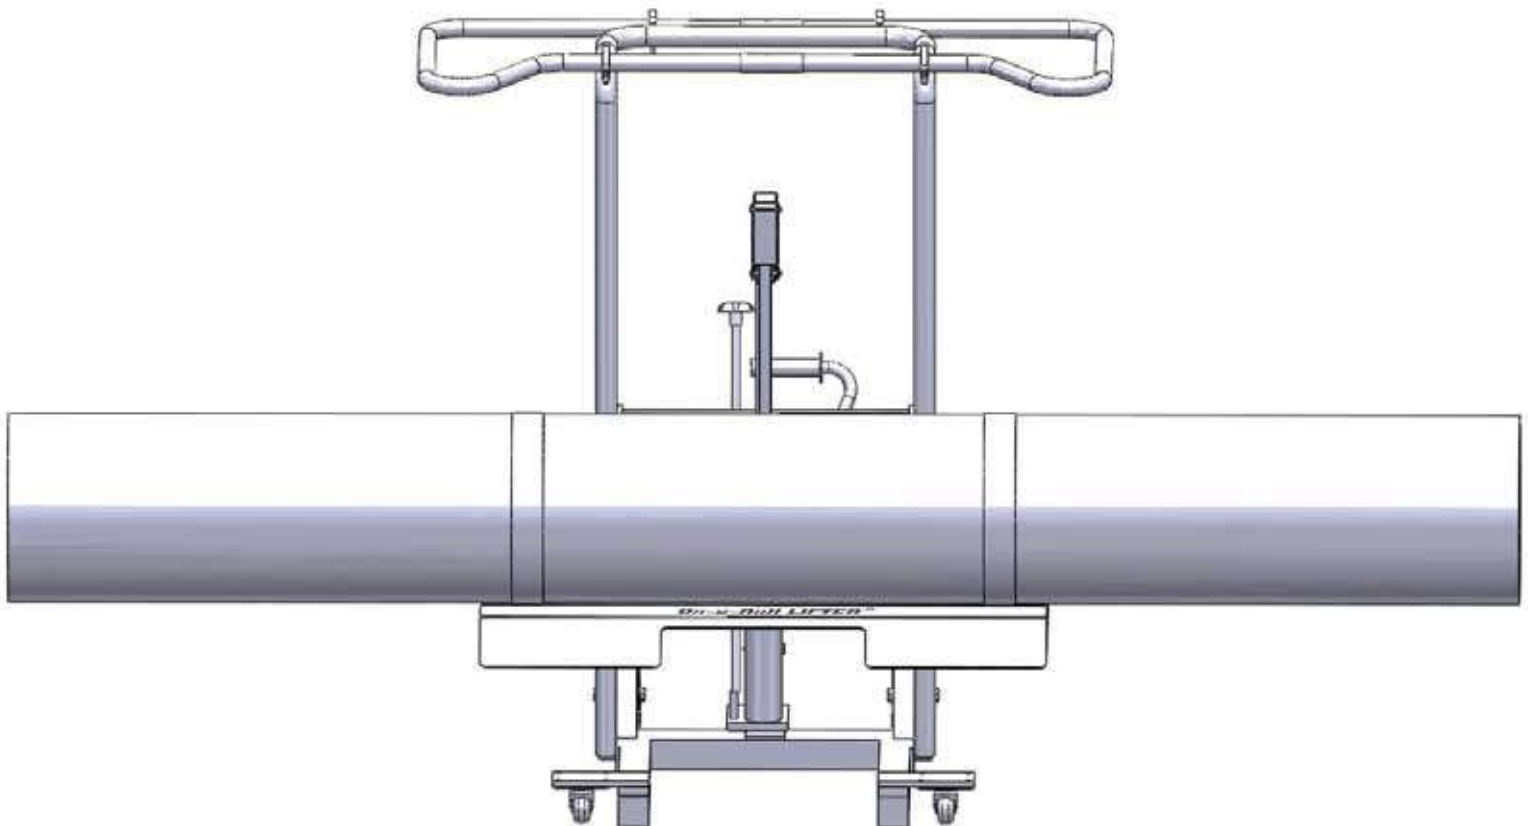

Parts Diagram


1 Parts diagram and list of components

- 1.1 Contact Foster before replacing any components or performing any adjustments that aren't currently mentioned in this instruction manual.

Item #	Description	Item #	Description	Item #	Description
63001	Support frame	63042	Hydraulic pump chain	63076	Pump- foot pump pin
63002	"U" bolt nut	63043	Pump front chain guard	63077	Pump- foot pump roller
63003	"U" bolt washer	63044	Pump chain wheel connector	63078	Pump- foot pump tube
63004	"U" bolt	63045	Pump chain wheel	63079	Pump- foot pump washer
63005	17 x 3mm Support hex bolt	63046	Pump chain wheel tube	63080	Pump- foot pump top bracket
63006	Support/caster frame nut	63047	Pump chain wheel lock	63081	Hydraulic foot pump
63007	Lifter frame guide block	63048	Pump rear chain guard	63082	Hydraulic foot pump cover
63008	Axel & bearing wheel bolt	63050	Pump chain guard screw	63083	Hydraulic pump pin
63009	Axel & bearing washer	63051	Pump chain support rod	63087	Allen key bolt nut
63010	Axel & bearing wheel	63052	Pump washer 1	63088	Allen key bolt washer
63011	Axel & bearing thick washer	63053	Pump washer 2	63090	Media tray strap clamp
63012	Axel & bearing connector	63054	Pump washer 3	63091	Media tray strap bolt
63019	Support strap for media tray	63055	Pump top support	63092	Media tray strap nut
63021	Rear caster wheel nut	63056	Pump top support tube	63093	M6 x 12mm Bolt
63022	Rear caster wheel washer	63057	Pump middle support	63094	LP Front Wheel Assy.
63023	Rear caster wheel	63058	Pump support washer 1	63095	Push Bar Assembly
63024	Pump screw (right)	63059	Pump support washer 2	63098	Low Profile Media Tray
63025	Pump seal (right)	63060	Pump spring	63100	Hydraulic Pump Assembly
63026	Pump coned spring (right)	63061	Pump top support	63105	Seal Kit for HP Assembly
63027	Pump steel ball (right)	63062	Pump pin	63108	Pressure Release Assembly
63028	Pump screw (left)	63063	Pump connector	63110	Chain Assembly
63029	Pump seal (left)	63064	Pump rubber ring	63140	Guide Bearing Assembly
63030	Pump rubber screw (left)	63065	HP Small support block	63170	Low Profile Tray Assembly
63031	Pump coned spring (left)	63066	Hydraulic pump	63181	Low Profile Caster Frame
63032	Pump pin (left)	63067	Hydraulic pump base	63182	Frame Bolt M14 x 16mm
63033	Pump support	63068	Pump washer 1	63183	Caster Frame Split Washer
63034	Pump lift/lower support	63069	Pump washer 2	63184	Caster Frame Washer
63035	Pump lift/lower spring	63070	Pump washer 3	63185	Low Profile Lifter Frame
63036	Pump lift/lower tension bolt & nut	63071	HP Large support block	63186	Strap Pin
63037	Pump lift/lower tension connector	63072	Pump foot pump bolt	63187	Pull Bar Bolts M6 x 45mm
63038	Pump lift/lower rod & knob	63073	Pump foot pump bolt 2	63203	Push Bar Rubber Sleeves
63040	Pump chain cotter pin	63074	Pump- foot pump bracket		
63041	Pump chain bolt	63075	Pump- foot pump nut		


1 Parts diagram and list of components

- 1.1 Contact Foster before replacing any components or performing any adjustments that aren't currently mentioned in this instruction manual.

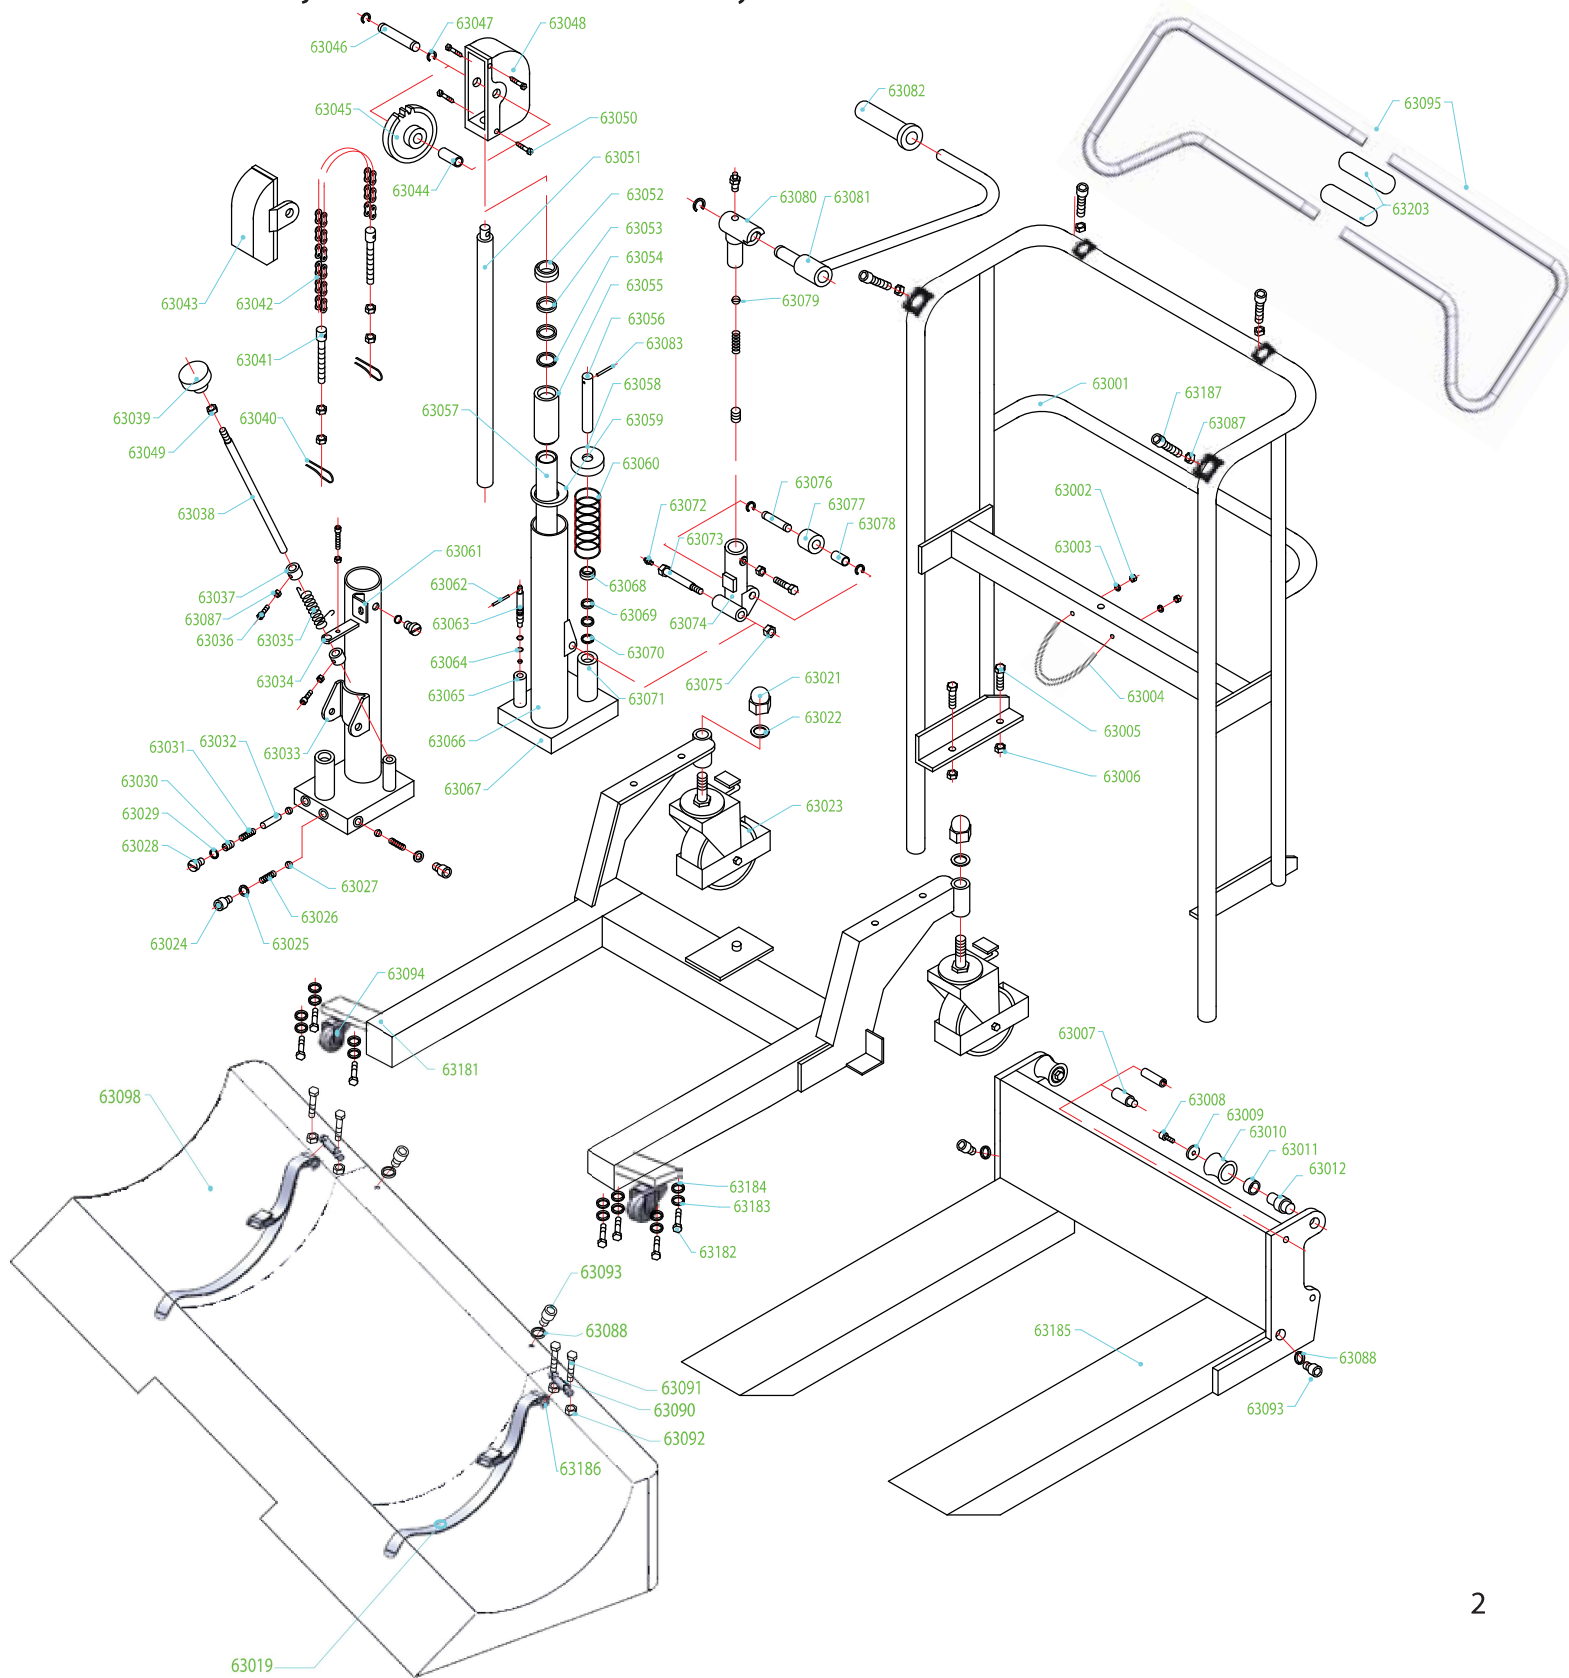


Parts Diagram

1.2 Parts diagram: Chain & Media Tray Assembly

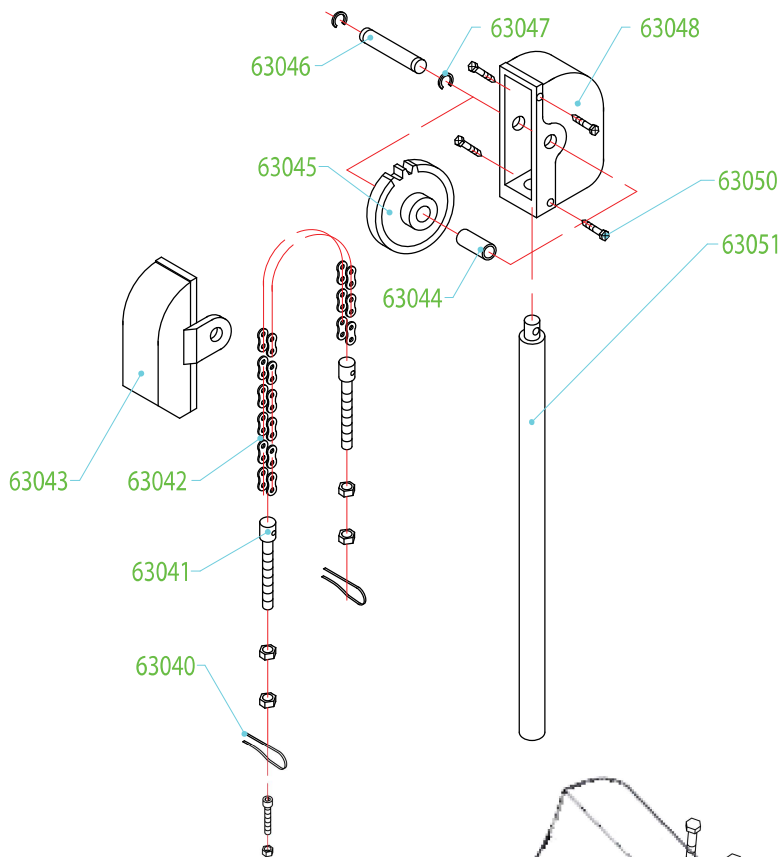

**Chain Assembly
63110
(Contains:
63024-63039 &
63052-63083)**

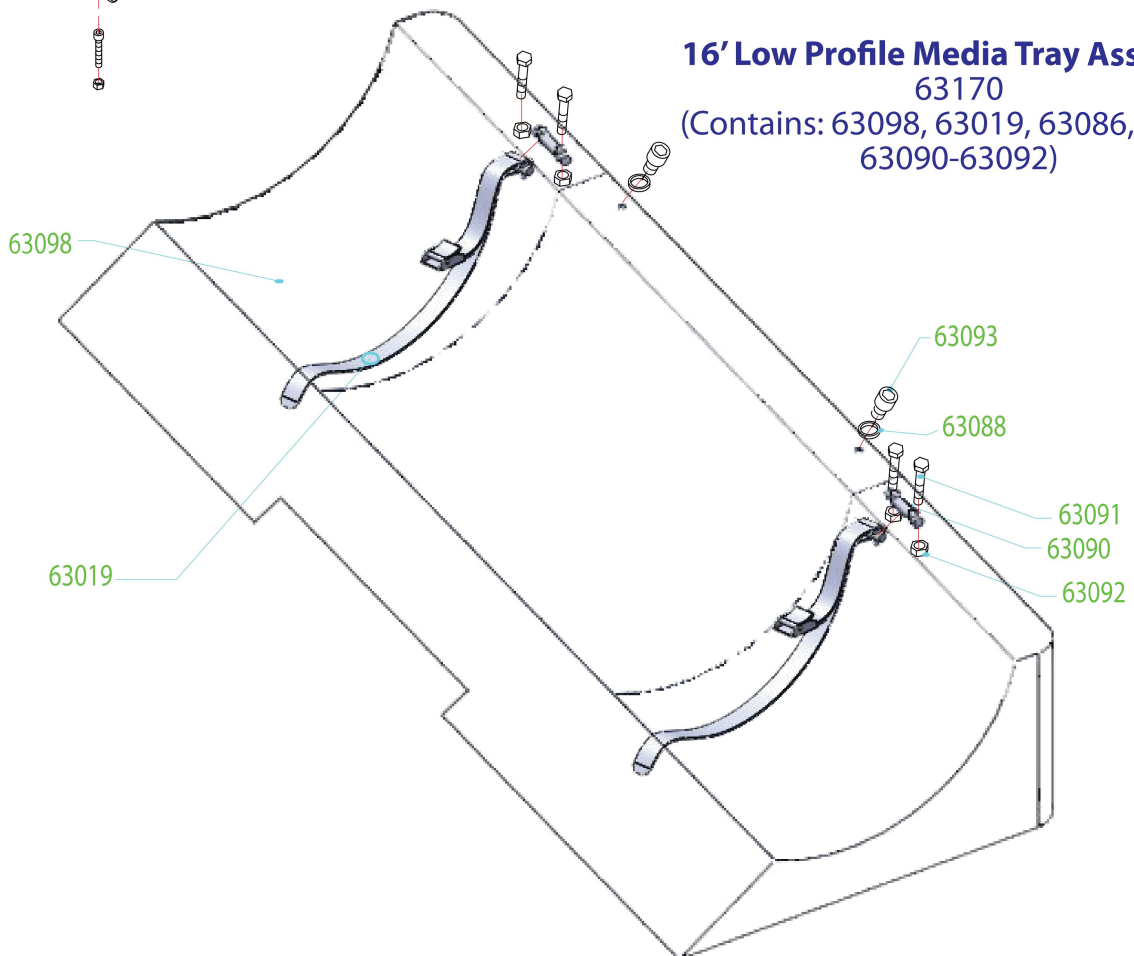


**16' Low Profile Media Tray Assembly
63170
(Contains: 63098, 63019, 63086, 63088,
63090-63092)**

Parts Diagram

1.3 Parts diagram: Hydraulic & Handle Bar Assembly

Complete Hydraulic Assembly
63100
(Contains: 63024-63039 &
63052-63083)

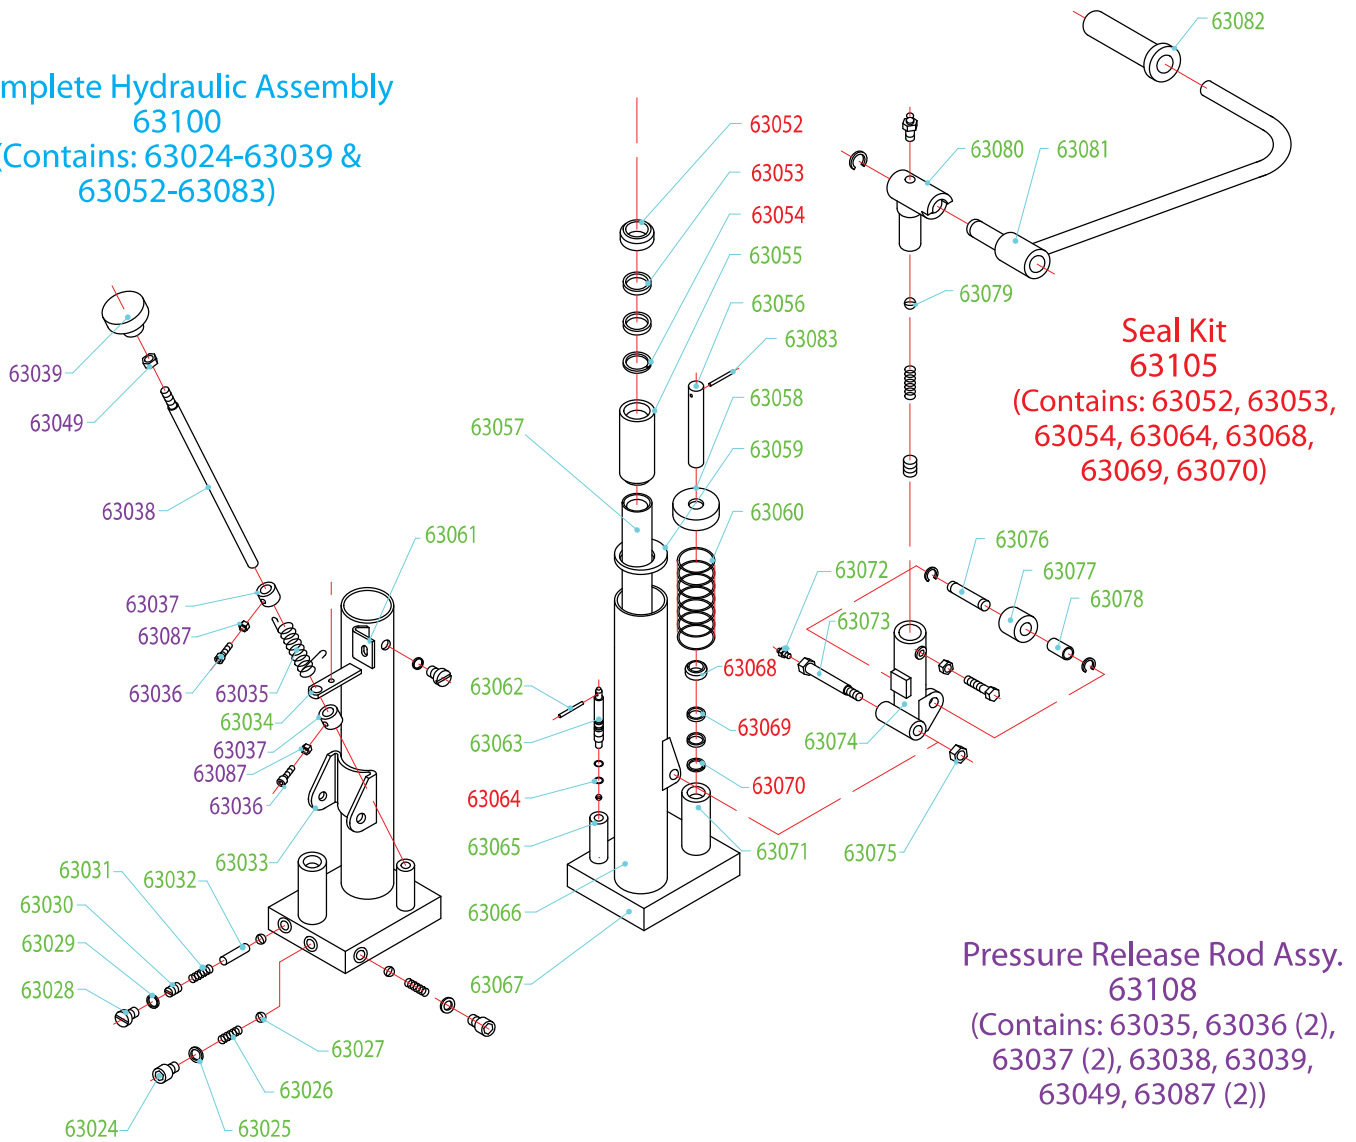

Push Bar Assembly
63095

